


Verify the BIOS Settings before entering the AMT Menu to change settings.


- 1) Power on the system, when the screen show Lenovo ThinkCentre BIOS then press "F1" to enter the BIOS setup menu,




- 2) Confirm the Lan Card is Enabled

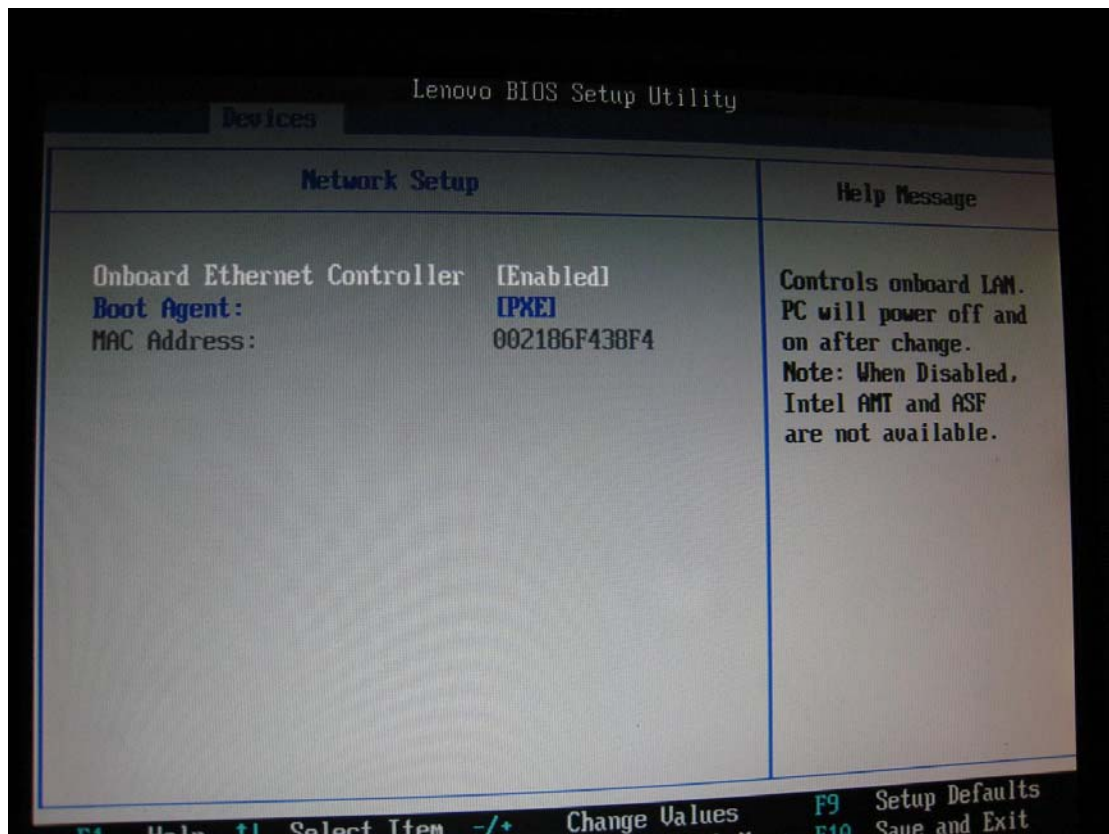

3) Enter the AMT Menu to verify to setting

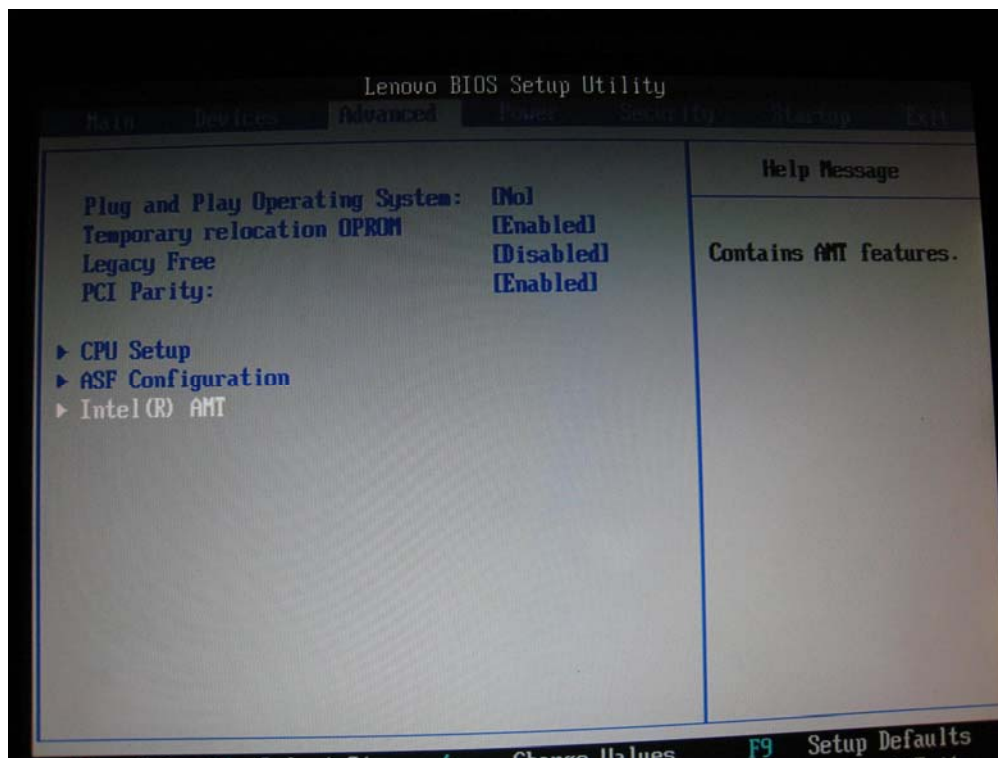

4) Confirm the AMT Function is Enabled

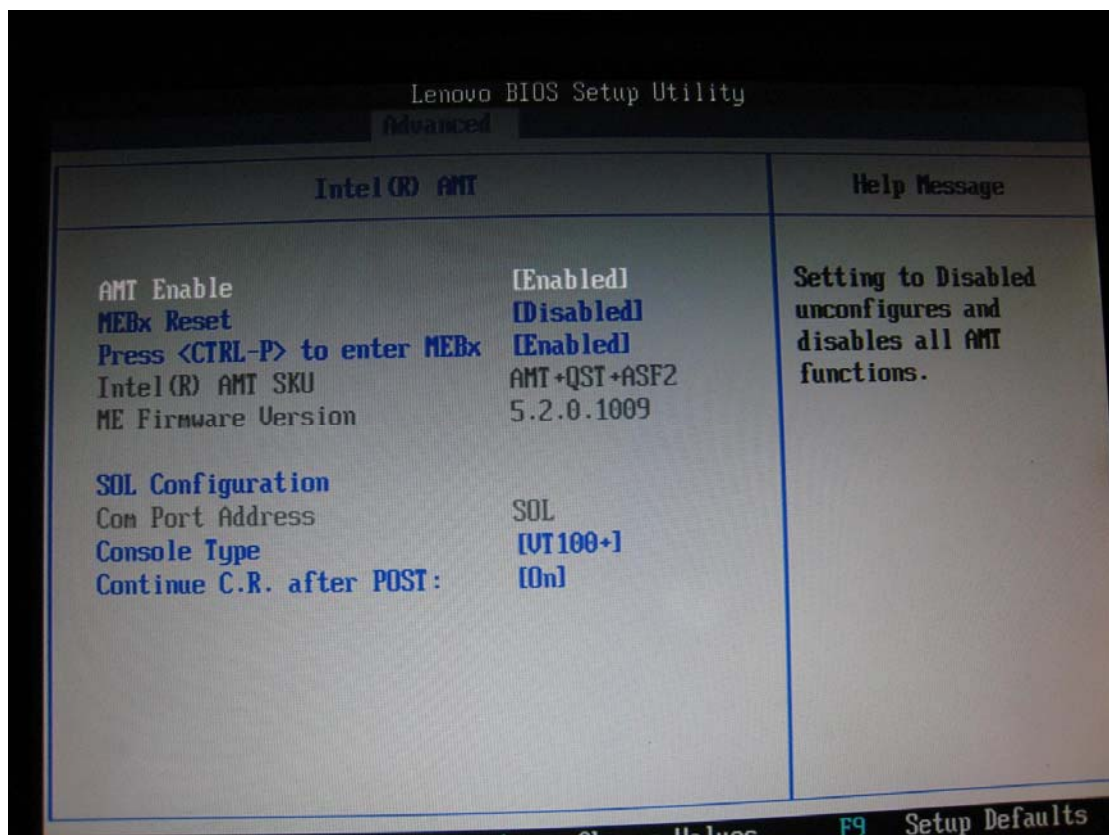


Disable the DHCP Client on AMT

- 1) Power on the system, when the screen show Lenovo ThinkCentre BIOS then press "CTRL-P" to enter the AMT setup menu,



- 2) Press "1" to enter the AMT setup menu

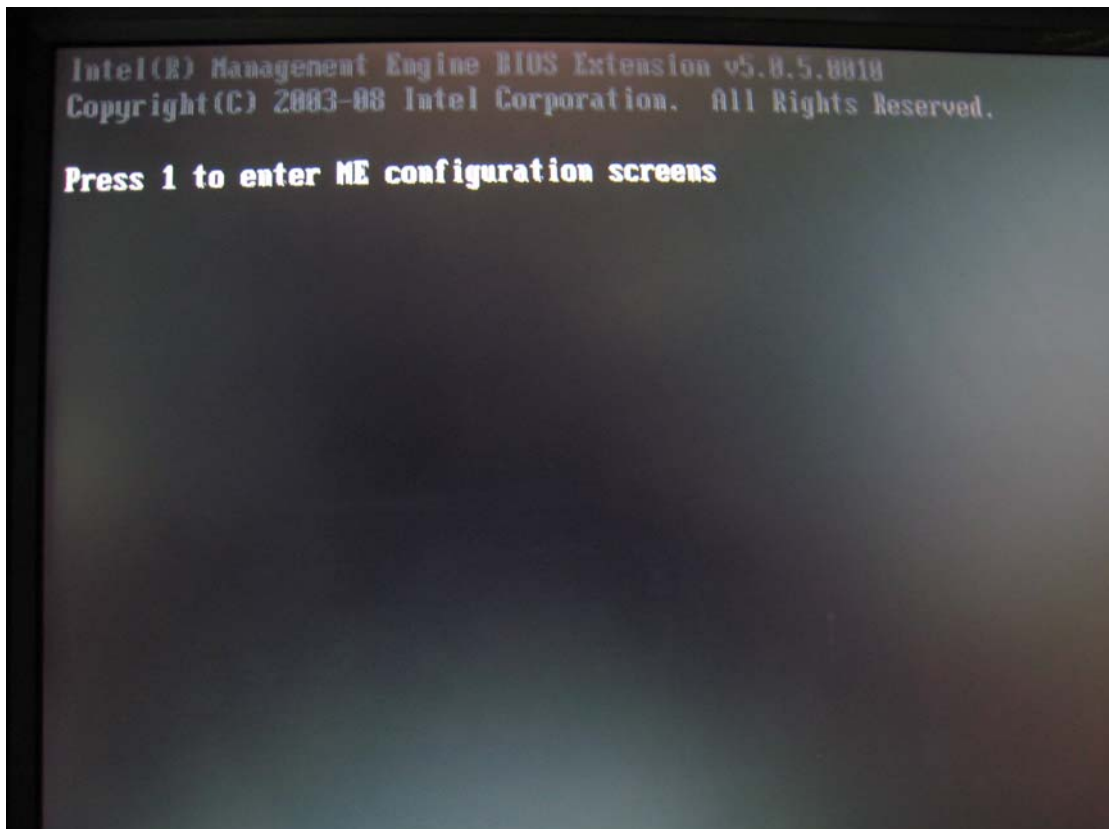

- 3) Enter the password and press enter (Default password is **admin**)




- 4) AMT will requires the user to enter a new password.  
(Remark: password must at least 6 character with the combinations of numeric value / upper and lower case character / special character)







- 5) AMT will require to re-enter the new password to confirm the password changed

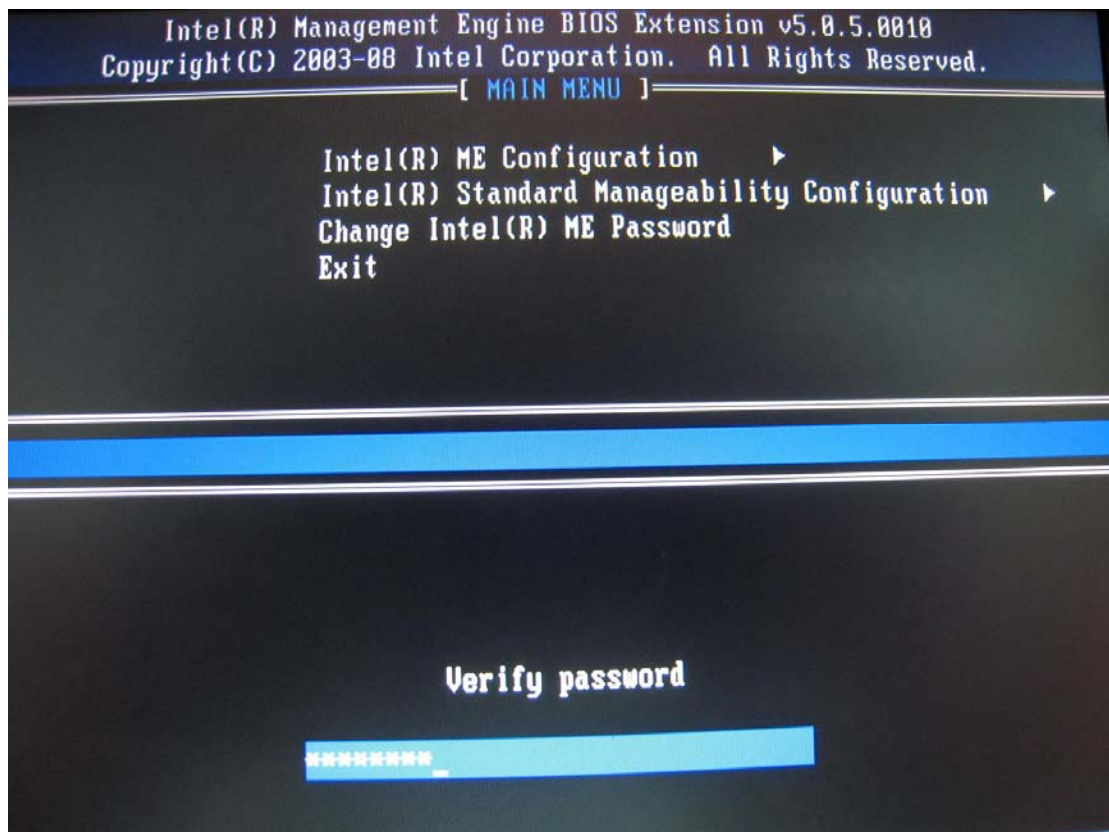

- 6) Choose "Intel® Standard Manageability Configuration" and press "enter"

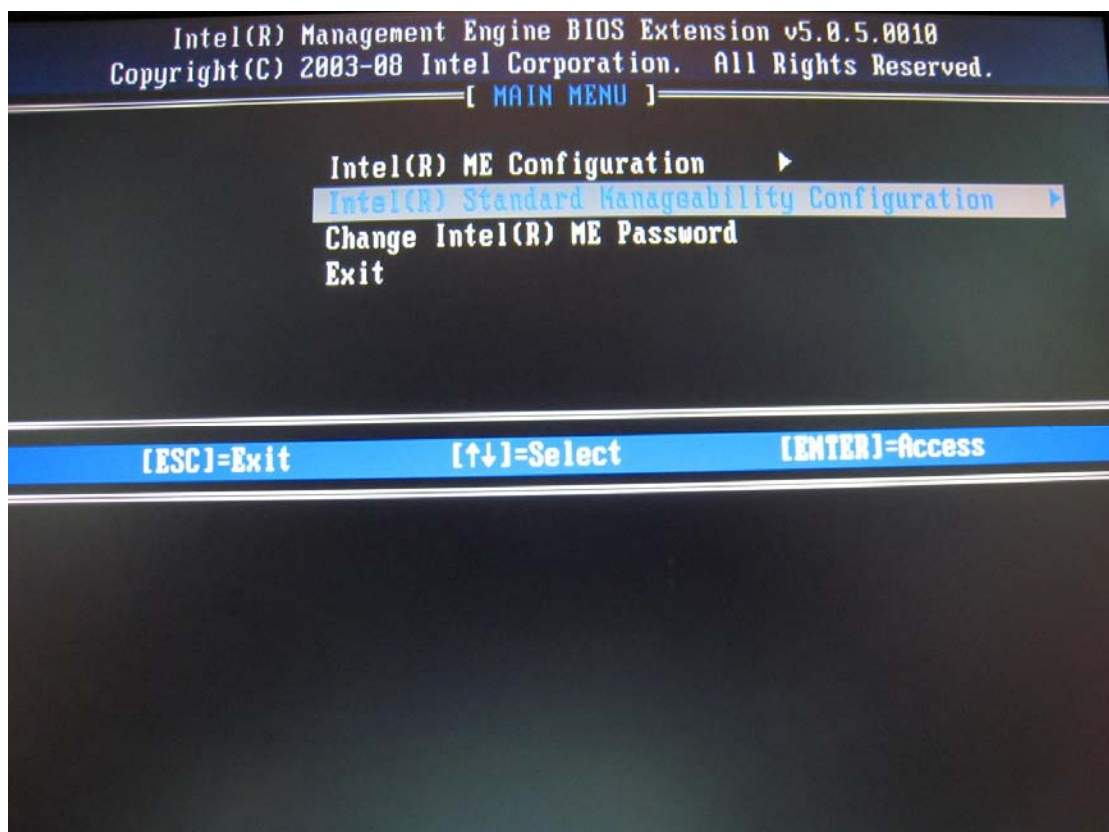


7) Choose "TCP/IP" and press "enter"

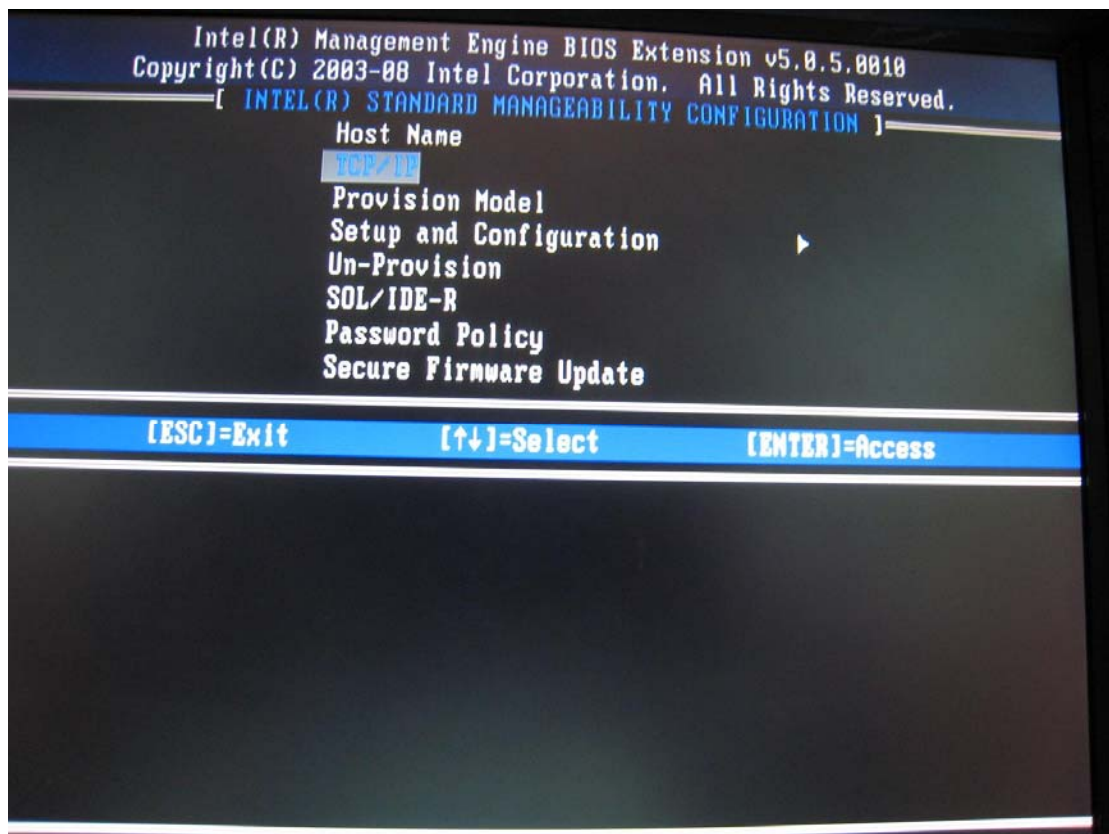


8) Disable the DHCP Client by press "Y"



9) Enter the IP Address for this computer

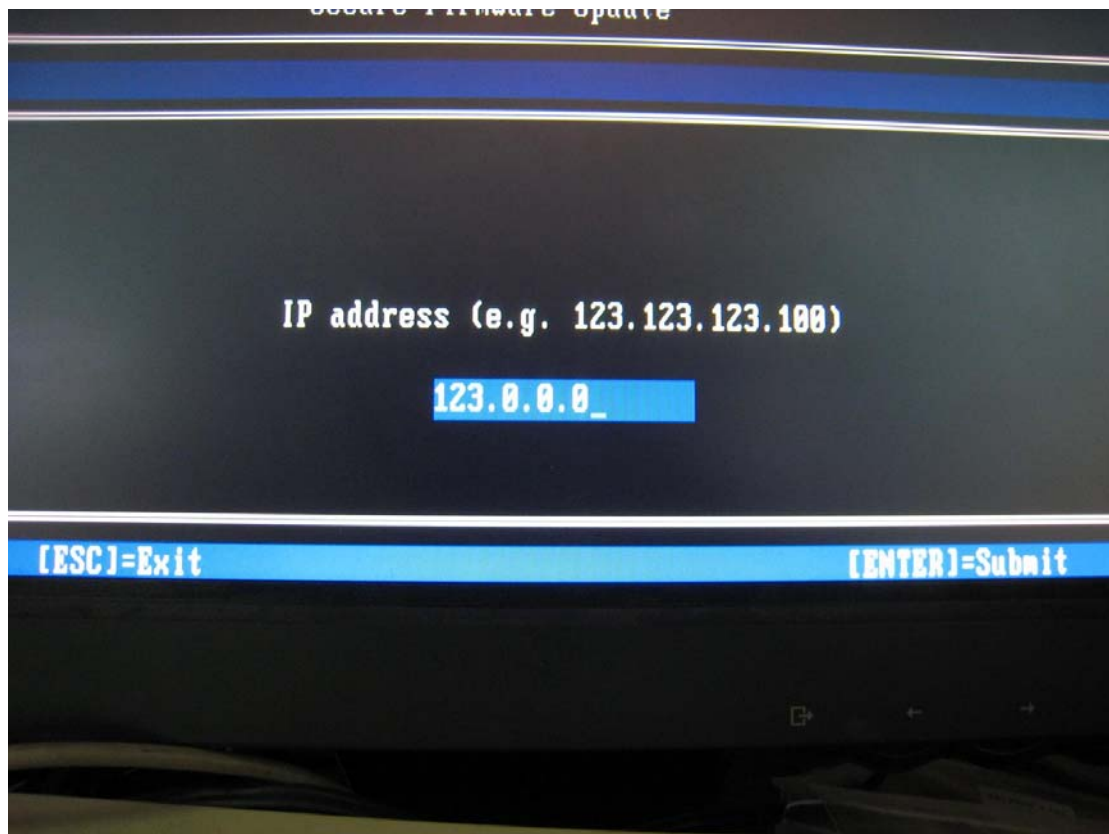


10) Enter the Subnet Mask for this computer

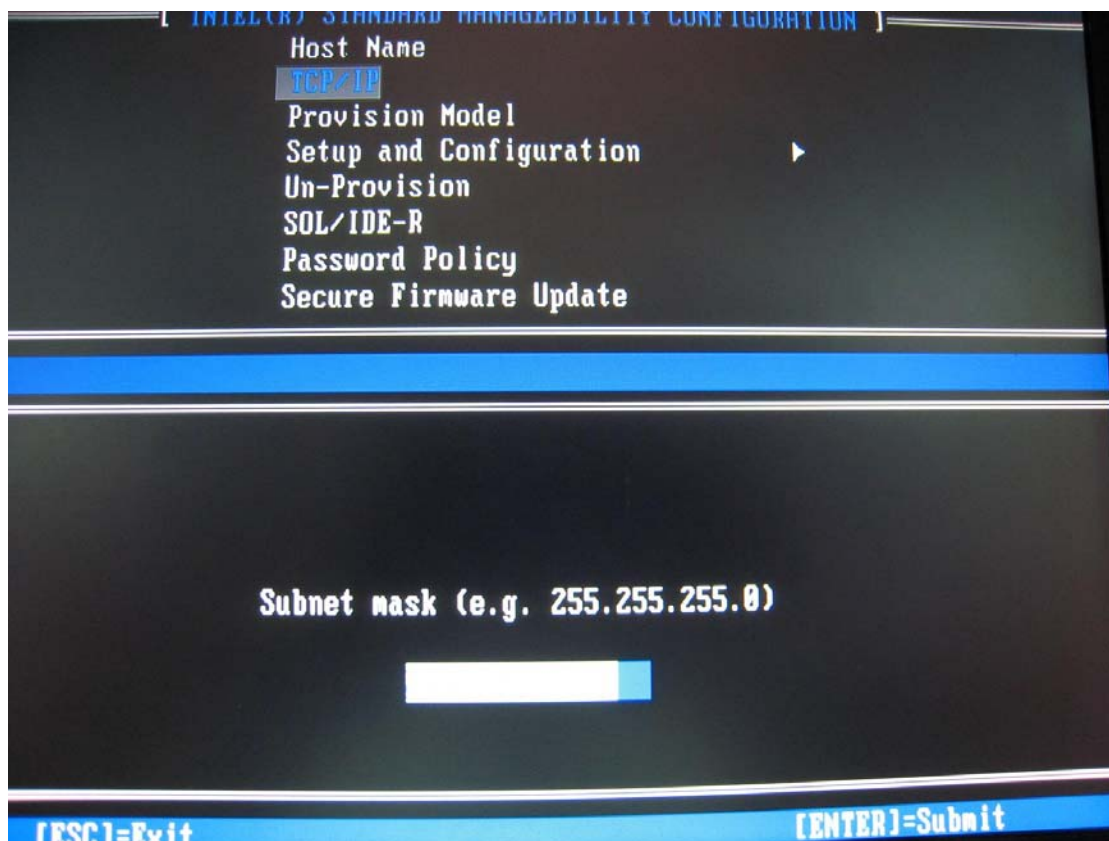

11) Enter Default Gateway address for this network




12) Enter the Primary DNS Server Address for this Network

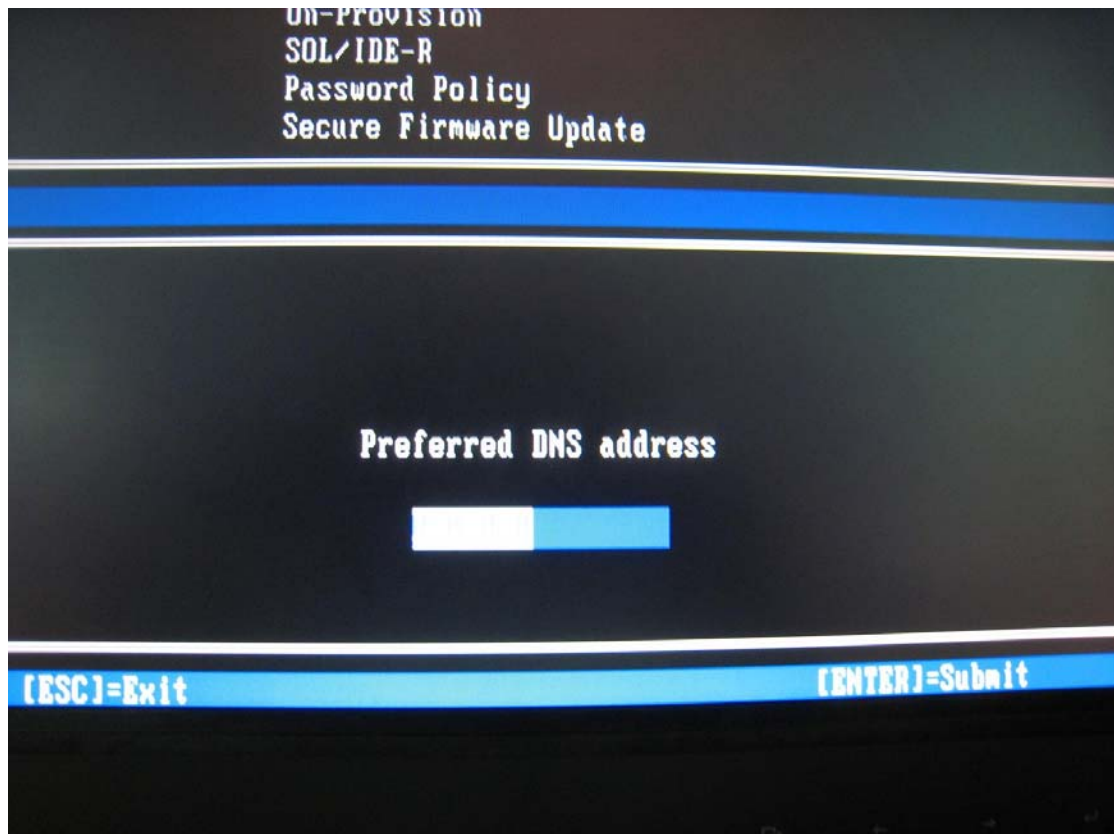





13) Enter Secondary DNS Server Address for this Network

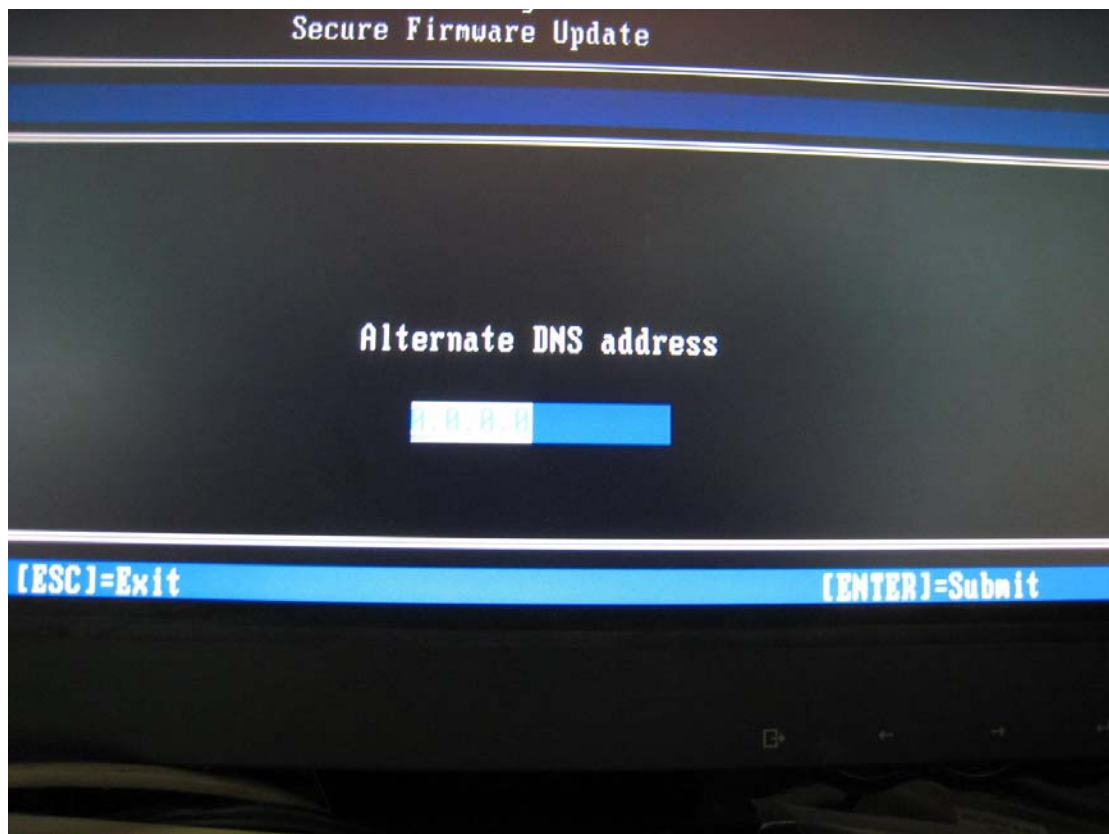

14) Enter the Domain Name of this Network

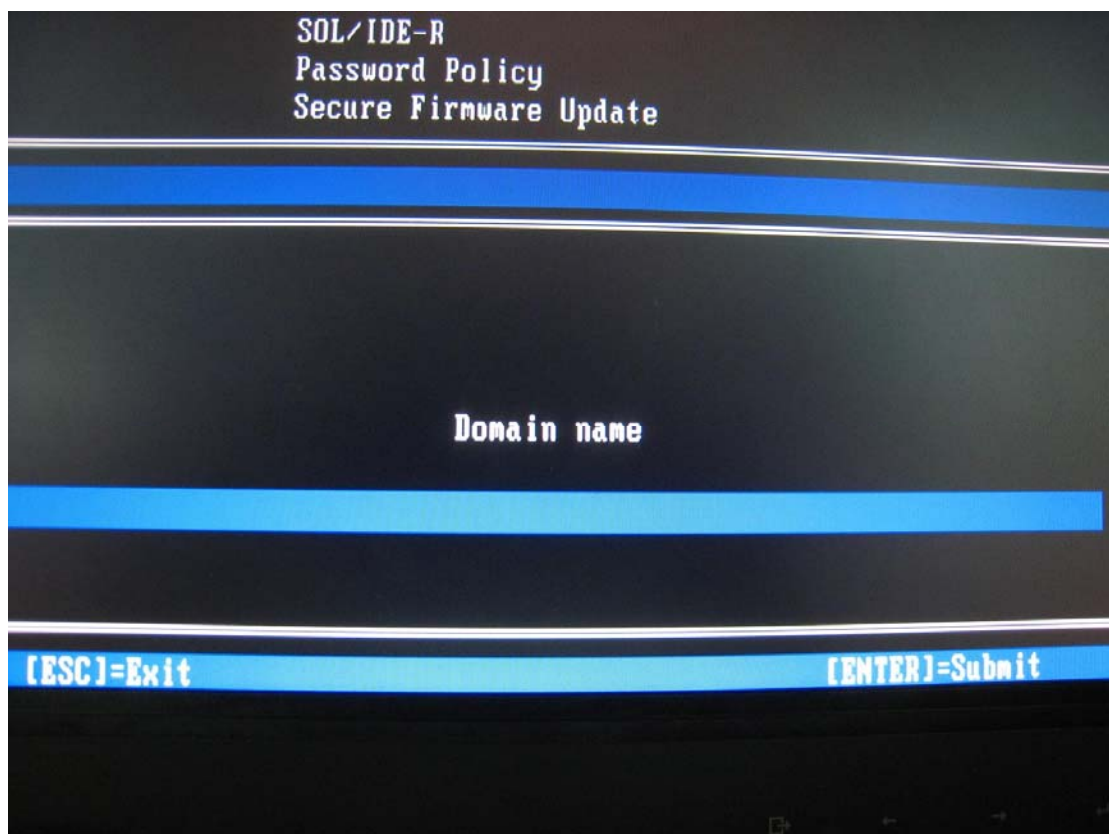

- 15) After complete the settings, then it will return to the Main Menu. Choose "Exit" and press enter to save the settings and exit the AMT Menu

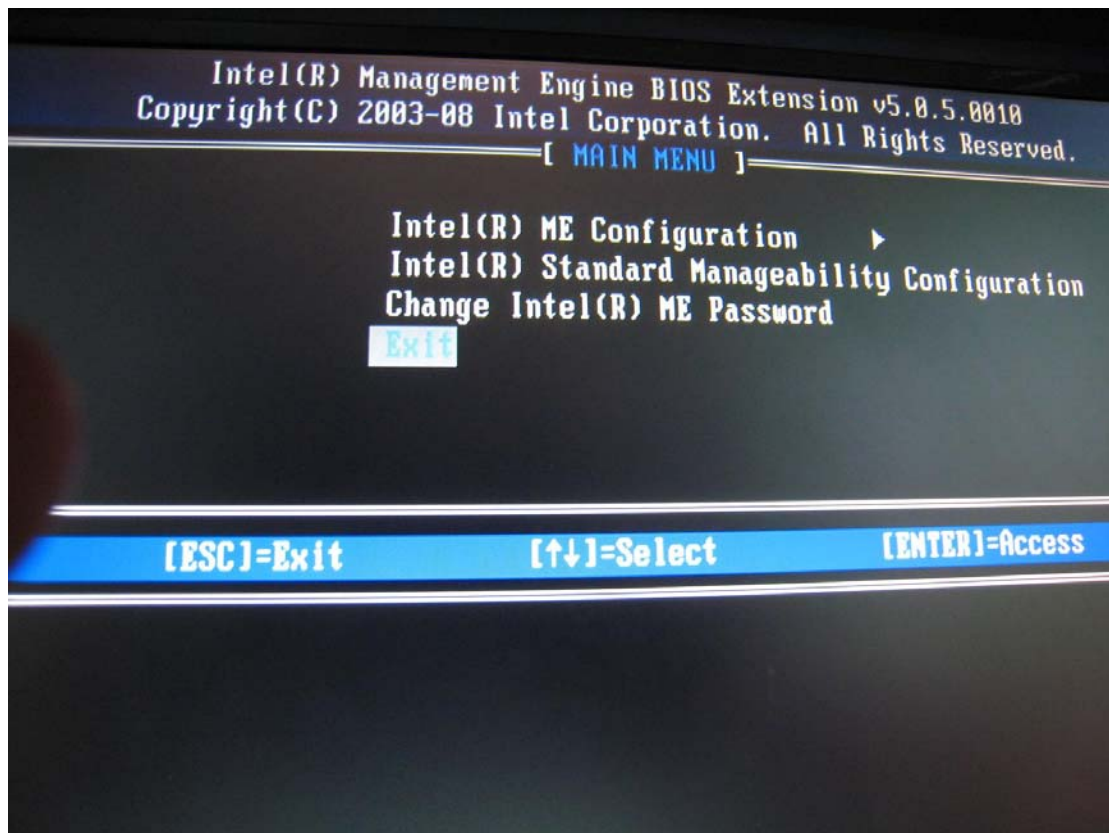

- 16) Press "Y" to confirm exit the AMT Menu

