

LENOVO DIAGNOSTICS V4.33

USER GUIDE

LSBD - Laboratório de Sistemas e Banco de Dados

LENOVO DIAGNOSTICS **USER GUIDE**

Title: Lenovo Diagnostics Linux Bootable User Guide
Author: Helano Rocha
E-mail: Helano.rocha@lsbd.ufc.br
Date: January 17th, 2020
Platform: Linux

REVISION HISTORY

Revision	Author	Revision History	Date
1.0	Elsa Martins	First version	Mar 18, 2019
1.1	Elsa Martins	Updated according to LDiag 4.30.0	May 23, 2019
1.2	Helano Rocha	Updated according to LDiag 4.31.0	July 30, 2019
1.3	Helano Rocha	Updated according to LDiag 4.32	Oct, 15, 2019
1.4	Helano Rocha	Updated according to LDiag 4.33	Jan 17, 2020

TABLE OF CONTENTS

LENOVO DIAGNOSTICS V4.33 USER GUIDE	1
Lenovo Diagnostics User Guide	2
Revision History	3
TABLE OF Contents	4
LENOVO DIAGNOSTICS V4.33 USER GUIDE	6
1. Lenovo Diagnostics BOOTABLE overview	7
1.1 What is Lenovo Diagnostics Bootable?	7
1.2 Understanding the diagnostics	7
2. Performing diagnostics in Lenovo Diagnostics	9
2.1 Lenovo Diagnostics Main screen	9
2.2 Run diagnostic for a module	10
2.2.1 <i>Select Devices and Tests</i>	10
2.2.3 <i>Run Tests</i>	12
2.3 See Execution Log	14
3. Lenovo Diagnostics Modules and Tests	16
3.1 Audio	16
3.2 Audio Controller	17
3.3 Battery	17
3.4 Fan	18
3.5 Processor	19
3.6 Display	20
3.7 Display Interface	21
3.8 Keyboard	21
3.9 Memory	22
3.10 Motherboard	25
3.11 Optical Drive	26
3.12 PCI Express	27
3.13 Mouse Devices	28
3.14 RAID	29
3.15 Storage	30

3.16 Video Card	32
3.17 Wired Ethernet	34
3.18 Sensors	34
3.19 Bluetooth	35
3.20 Fingerprint	35
3.21 Touchpad Devices	36
3.22 Camera	38
3.23 Touchscreen	38
3.24 Wireless	40
4. EXPLORING LENOVO RUN ALL OPTION	41
4.1 Quick tests	41
4.2 Quick tests (customized option)	41
4.3 Full tests	42
4.4 Full tests (customized option)	42
5. EXPLORING LENOVO DIAGNOSTICS TOOLS	43
5.1 Diagnostic Script	43
5.1.1 <i>Create a diagnostic script</i>	44
5.1.2 <i>Edit a diagnostic script</i>	45
5.1.3 <i>Execute a diagnostic script</i>	45
5.2 System Information	47
5.3 Log History	48
5.4 Recover Bad Sectors	48
5.5 SMART Tool	49
6. Glossary	50

LENOVO DIAGNOSTICS V4.33 **USER GUIDE**


Note

Before using this information, be sure to read and understand the [Lenovo Privacy Statement](#).

1. LENOVO DIAGNOSTICS BOOTABLE **OVERVIEW**

1.1 What is Lenovo Diagnostics Bootable?

Lenovo Diagnostics Bootable is a pre-boot diagnostic tool that tests various devices in Lenovo computers providing feedback to the users about their machines health. The tool runs without need an operational system, via USB drive or optical media. Lenovo Diagnostics is composed by Modules that allows performing diagnostics for a group of devices and by Tools to create custom executions (diagnostic script), see detailed information about each device (system information) and consult the results for the tests performed in a machine.

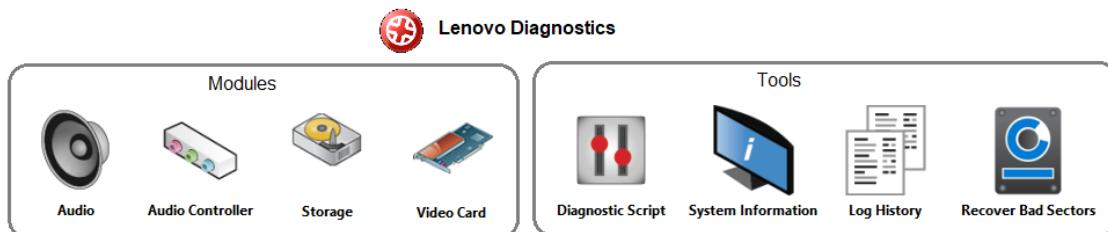

1.2 Understanding the diagnostics

Each module contains one or more tests that may be performed under one or more devices resulting in a diagnostic. This structure is displayed in the image below:



When a diagnostic is finished, Lenovo Diagnostics displays the results for each performed test and create two results codes resuming the test execution.

The tests on Lenovo Diagnostics may have the following statuses:

Passed	When the test algorithm is executed and no failure is found.
Failed	When the test identifies the diagnosed device is defective.
Warning	When the test indicates the diagnosed device may have some defect but the result is not conclusive.
Canceled	When the test is canceled in the middle of test execution.
Not Applicable	When the test is not applicable for the selected device.

The generated codes are:

Result Code	Contains information about the machine serial number, system platform and test execution status and date. This code is generated for each tested device.
Final Result Code	Contains information about the machine serial number, system platform and execution date. This code reports also the module where the tests were performed and the tests with failed status.


On the next section, you will learn how to use Lenovo Diagnostics to perform the diagnostics.

2. PERFORMING DIAGNOSTICS IN **LENOVO DIAGNOSTICS**

2.1 Lenovo Diagnostics Main screen

By opening the Lenovo Diagnostics, you will see the main screen with the tabs Diagnostics and Tools.

Diagnostics: here, you can see the modules provided by Lenovo Diagnostics and select one of them to perform tests. The modules with not supported devices are disabled, like the modules RAID, Sensors and Wireless on the image below. On this tab, you can also select the option “Run All” to perform the diagnostic for all available modules.

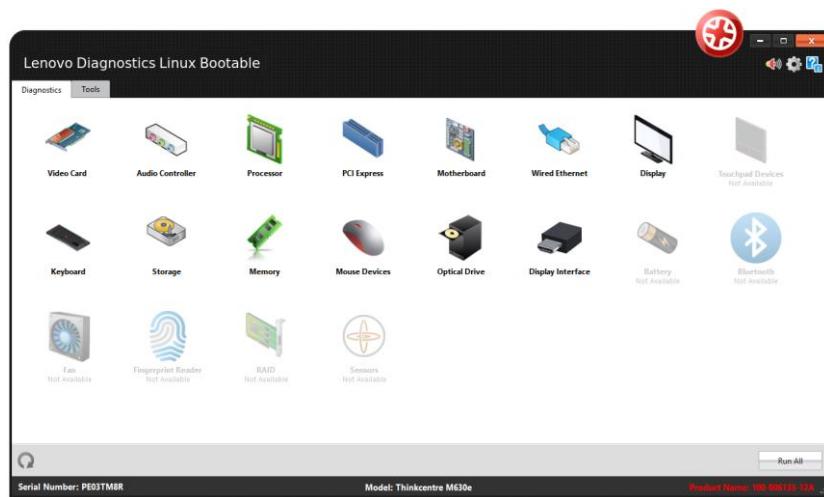


Refresh button : you may update the modules after plug or unplug any device.

Machine Information: you may verify if machine information are valid in application footer. Information in red are not valid and need to be fixed.

Sound Notice button : you may choose if you want to be advised regarding tests execution.

Tools: By selecting this option, you can access additional Lenovo Diagnostic's features like Diagnostic Script, System Information, Log History screen, Recover Bad Sectors tool, etc.

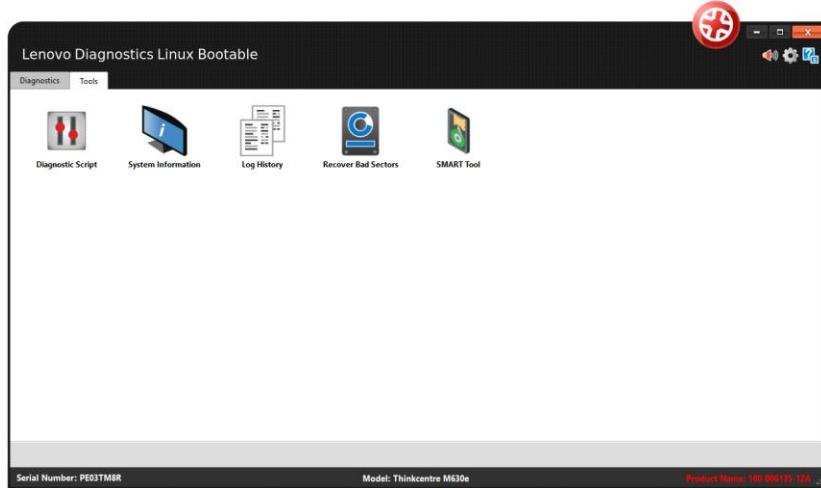


2.2 Run diagnostic for a module


The diagnostic for a module in Lenovo Diagnostics is based on the following steps:

2.2.1 Select Devices and Tests


By selecting a module in the Diagnostics tab, you will be directed to a screen where you can select which devices and tests will be performed. On this step, all devices and tests supported by the selected module are displayed and you may select one or more of them to perform the tests. It is also possible to select the number of times to run the set of tests in a range from 1 to 20 times.

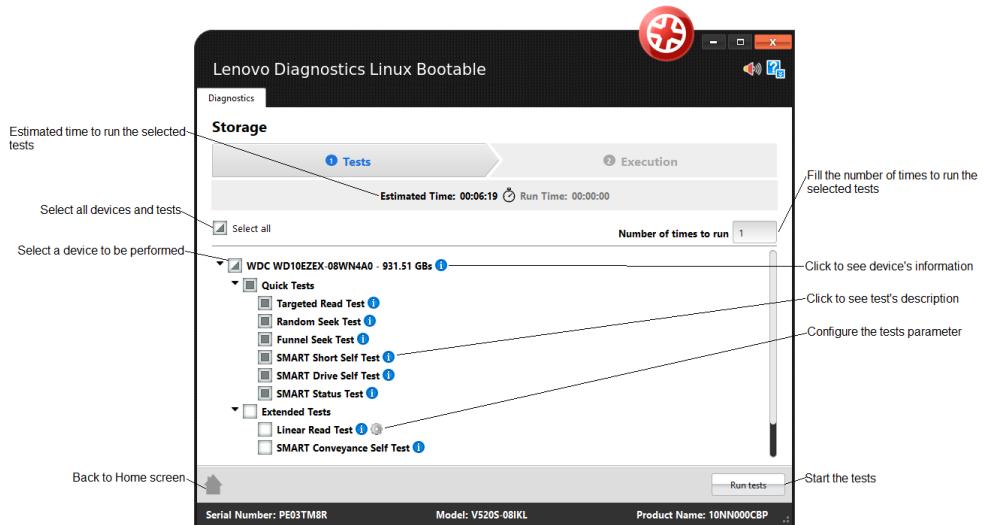


By clicking to **See Device Information**, you can view detailed information about the device. The properties displayed depends on the selected module.

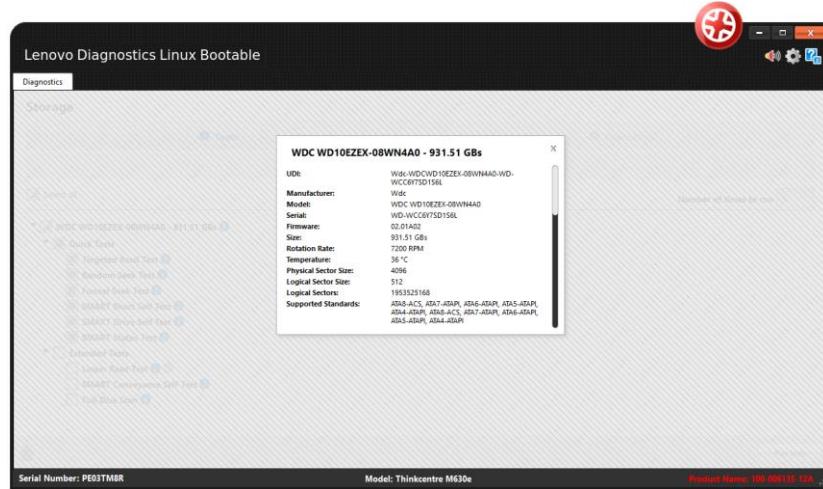

By clicking to **See test description**, you can view a brief description of the test and the estimated time to run the test, as the screen below.

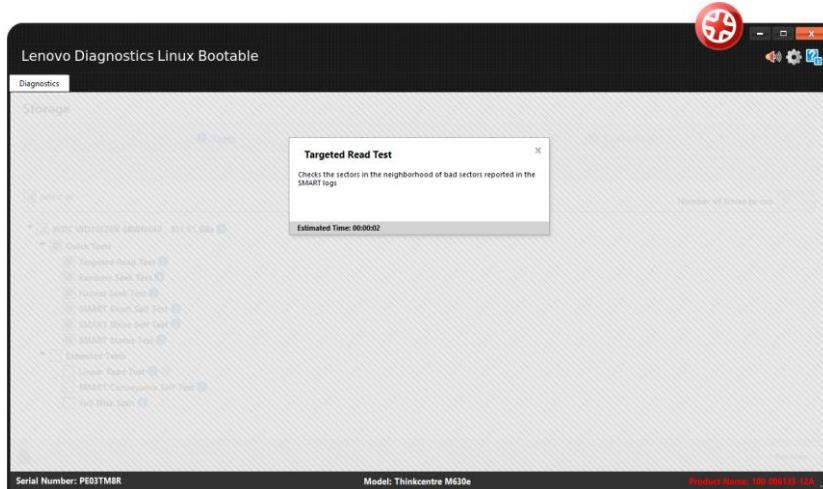

If a test supports parameters customization, the icon is displayed next to the test name. By clicking on this icon, a popup to set the values is displayed. See in the image below the customization for the Linear Read Test from Storage module:

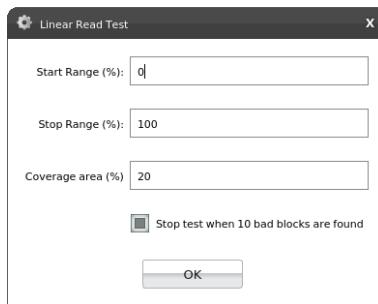


After the devices and test selection, you are able to run the diagnostic. The test execution is detailed in the next section.

2.2.3 Run Tests


After configure the tests execution and clicking to **Run Test**, you will be directed to the Execution screen. This screen is displayed for both Recommended and Custom tests.

In the image below, you can see a screen of the test execution. See the popup advising you to refrain from using your computer unless requested by some tests. Follow this advisement is important because some tests may not be performed correctly if the needed machine resources are in use.

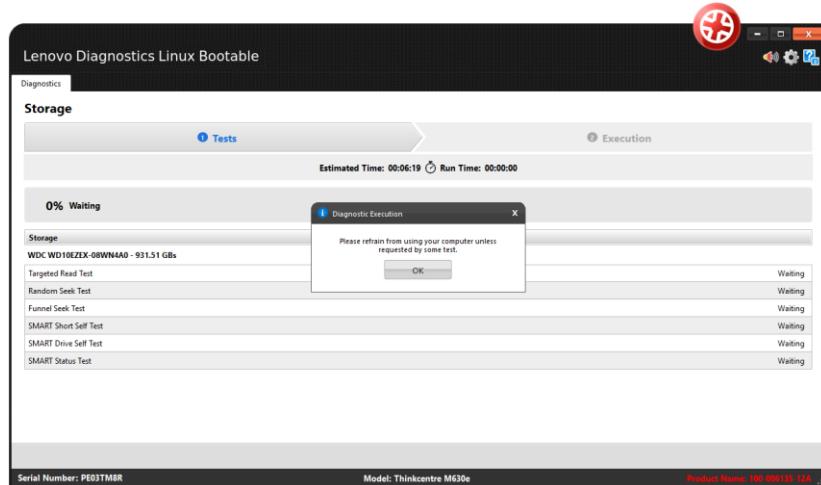


Once you have pressed OK, the tests execution begins. See in the image below that all devices selected in the previous steps are displayed with their respective tests. You can follow each test execution by tracking the individual test progress and see the test status of each one. In addition, you can see the overall test progress and time that reports the progress for all devices and tests selected.

If you have selected **Custom Tests** with more than one iteration, you will be able to navigate around these iterations in order to see the executions already finished and the executions not started yet.

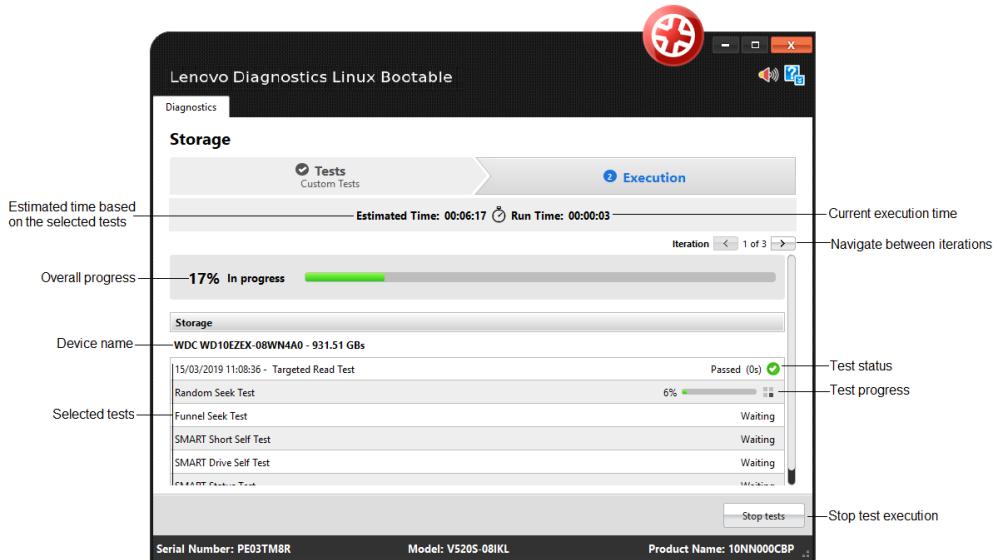


Some tests have specific guidelines that should be followed by the user to assure the correct execution. In this case, before to begin the execution of these tests, the application displays a popup with the test instructions. For instance, the Audio Playback test asks the user to make sure the output device is working correctly and advises a probably loud sound will be played.

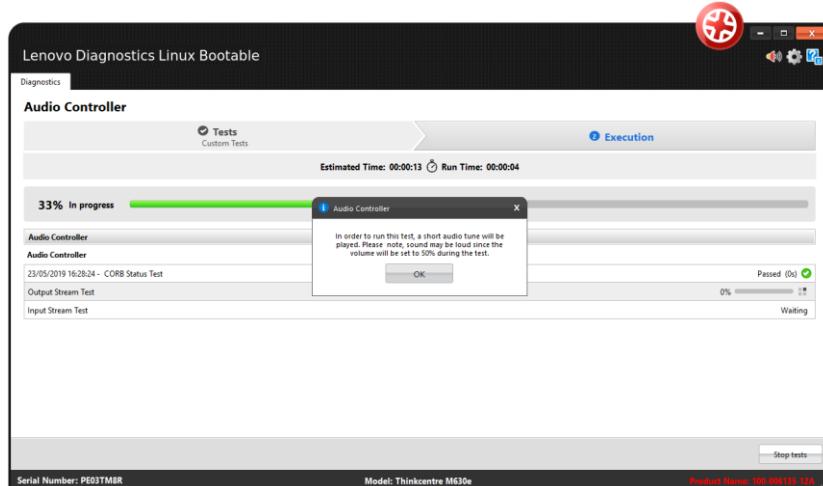

If you chose to continue by pressing the **OK** button, the execution continues normally. If you click on **Cancel**, the current test is canceled and the execution proceeds to the other tests not executed yet.

If you want abort the whole test execution, you can click on **Stop tests**. In this case, the current test and all tests waiting for execution are canceled, including those from the next iterations. At the same way, the overall status for the current iteration and for all next iterations are changed to Canceled.

After all tests to be finished, system displays the screen below where is possible to analyze the test results.

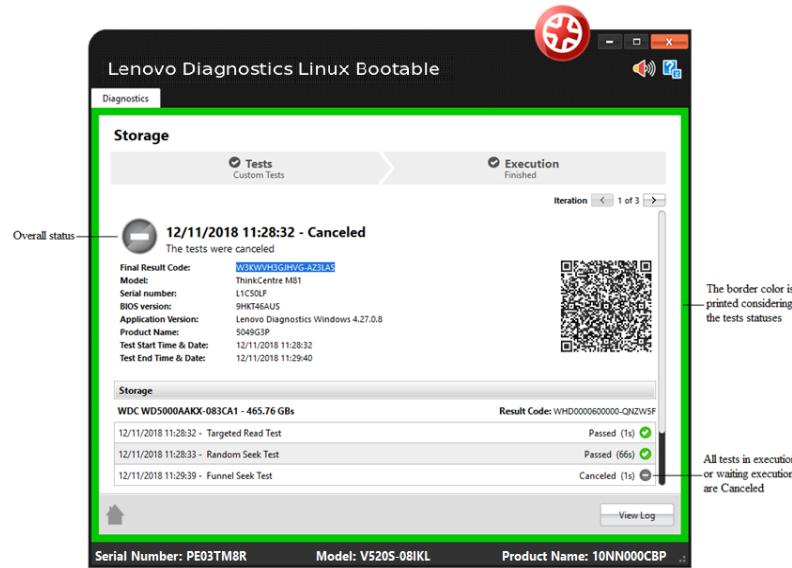


In this above image, you can see each test results, information about machine, final result code and test date. This section also display a QR Code that containing all those information.

2.3 See Execution Log

After a diagnostic execution, Lenovo Diagnostics generates a log with detailed information about the devices and their test results. This log is composed by the following sections:

General information: contains information about machine, test date and final result. This section also display a QR Code containing those information.

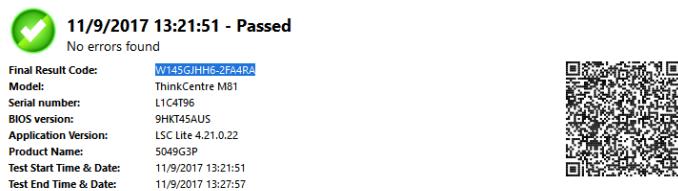

Device information: displays the technical details of each tested device and their respective result codes.

Storage		Result Code: WHDG1V000-QMZWL
ST3500418AS - 465.76 GBs		
UDI:	Seagate	
Manufacturer:	Seagate	
Model:	ST3500418AS	
Serial:	S2A1NCX1	
Firmware:	CC68	
Size:	465.76 GBs	
Rotation Rate:	7200 RPM	
Cache:	16.00 MBs	
Temperature:	29 °C	
Physical Sector Size:	512	
Logical Sector Size:	512	
Logical Sectors:	976773168	
Supported Standards:	ATA8-ACS, ATA7-ATAPI, ATA6-ATAPI, ATA5-ATAPI, ATA4-ATAPI, ATA8-ACS, ATA7-ATAPI, ATA6-ATAPI, ATA5-ATAPI, ATA4-ATAPI	

Test Results: displays the results and execution time of each performed test.

11/9/2017 13:21:51 - SMART Status Test	Passed (0s)
11/9/2017 13:21:51 - Targeted Read Test	Passed (1s)
11/9/2017 13:21:52 - Random Seek Test	Passed (78s)
11/9/2017 13:23:10 - Funnel Seek Test	Passed (59s)
11/9/2017 13:24:09 - SMART Short Self Test	Passed (61s)
11/9/2017 13:25:10 - SMART Drive Self Test	Passed (162s)
11/9/2017 13:27:52 - SMART Health Test	Passed (0s)
11/9/2017 13:27:52 - Message: Disk's health: 100%	

3. LENOVO DIAGNOSTICS **MODULES AND TESTS**

This section provides information about all modules available in Lenovo Diagnostics and their respective tests. Here, you will understand the approach implemented by each test and how these tests should be performed for assure the correct diagnostic of your machine.

3.1 Audio



The Audio module is composed by the following tests:

Test	Test type	Attendance
Audio Playback Test	Quick	Unattended
Microfone Interactive Test	Quick	Unattended


Audio Playback Test

This test checks the status of the Command Outbound Ring Buffer (CORB) mechanism.



Microfone Interactive Test

This test checks the status of the output streams. Before starting the test, Lenovo Diagnostics advises the user that a short audio tune will be played as displayed in the image below.

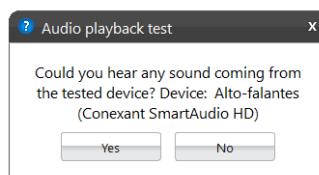

3.2 Audio Controller



The Audio Controller module is composed by the following tests:


Test	Test type	Attendance
CORB Status Test	Quick	Unattended
Output Stream Test	Quick	Unattended
Input Stream Test	Quick	Unattended
Bidirectional Stream Test	Quick	Unattended

CORB Status Test

This test checks the status of the Command Outbound Ring Buffer (CORB) mechanism.

Output Stream Test

This test checks the status of the output streams. Before starting the test, Lenovo Diagnostics advises the user that a short audio tune will be played as displayed in the image below.

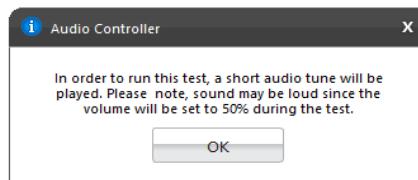

Input Stream Test

This test checks the status of the input streams.

Bidirectional Stream Test

This test checks the status of the bidirectional streams.

3.3 Battery



The Battery module is composed by the following tests:

Test	Test type	Attendance
------	-----------	------------


Battery Health Test	Quick	Unattended
Battery Discharge Test	Extended	Attended
Battery Charge Test	Extended	Attended
Battery Temperature Test	Quick	Unattended

Battery Health Test

Battery Health Test checks the device charge capacity and other important battery properties in order to evaluate device's health.


Battery Discharge Test

Battery Health Test checks the device charge capacity and other important battery properties in order to evaluate device's health. If there is an AC cable plugged you will must to unplug it before proceeding to the test as displayed below.

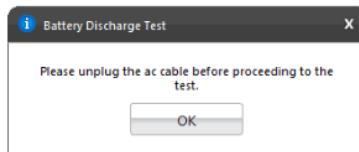

Battery Charge Test

The test checks if the battery charge increases while the AC cable is connected. If there is no AC cable plugged you should connect it before proceeding to the test.

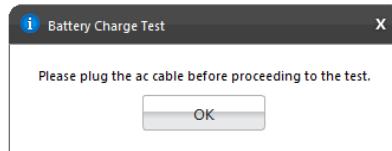

Battery Temperature Test

Temperature test evaluates if the battery temperature is too high, which may prevent it from charging properly.

3.4 Fan



The Fan module is composed by the following test:

Test	Test type	Attendance
Control Test	Quick	Unattended

Control Test

Check if the fan controller is able to work on higher speeds according to predefined levels (0-7) in the firmware.

3.5 Processor



The Processor module is composed by the following tests:

Test	Test type	Attendance
BT Instruction Test	Quick	Unattended
x87 Floating Point Test	Quick	Unattended
MMX Test	Quick	Unattended
3dnow! Test	Quick	Unattended
SSE Family Test	Quick	Unattended
AES Test	Quick	Unattended
Stress Test	Extended	Unattended

BT Instruction Test

The test checks the processor support for BT instruction.

x87 Floating Point Test

The test checks the processor support for x87 Floating Point instructions. If the processor does not support such feature, the test returns unsupported.

MMX Test

The test checks the processor support for MMX instructions. If the processor does not support such feature, the test returns unsupported.

3dnow! Test

The test checks the processor support for 3Dnow! Instructions. This test only runs in AMD processors. If the processor does not support such feature, the test returns unsupported

SSE Test

The test checks the processor support for SSE Family (SSE, SSE2, SSE3, SSSE3, SSE4.1, SSE4.2) instructions. If the processor does not support such feature, the test returns unsupported.

AES Test

The test checks the processor support for AES instructions. If the processor does not support such feature, the test returns unsupported.

Stress Test

The stress test performs a sequence of continuous check on all processor cores for 10 minutes. While running this test, the CPU temperature can increase considerably

3.6 Display



The Display module is composed by the following tests:

Test	Test type	Attendance
Red Purity test	Quick	Attended
Green Purity test	Quick	Attended
Blue Purity test	Quick	Attended
Black Purity test	Quick	Attended
White test	Quick	Attended
Color Transition Test	Quick	Attended
Monochromatic Mesh Test	Quick	Attended
Inverted Monochromatic Mesh Test	Quick	Attended
Sharpness Test	Quick	Attended
Resolution Fitting Test	Quick	Unattended

Red Purity test

This test identifies any dead pixel or burn-in problem within the red channel.

Green Purity test

This test identifies any dead pixel or burn-in problem within the green channel.

Red Purity test

This test identifies any dead pixel or burn-in problem within the red channel.

Blue Purity test

This test identifies any dead pixel or burn-in problem within the blue channel.

Black Purity test

This test identifies any dead pixel or burn-in problem within the black channel.

White Purity test

This test identifies any dead pixel or burn-in problem within the white channel.


Color Transition Test

This test identifies any problem with the display's color distinction.

Resolution Fitting Test

This test checks if the system can take full advantage of the display's native resolution.

All attended tests from Display module are performed according to the following workflow:

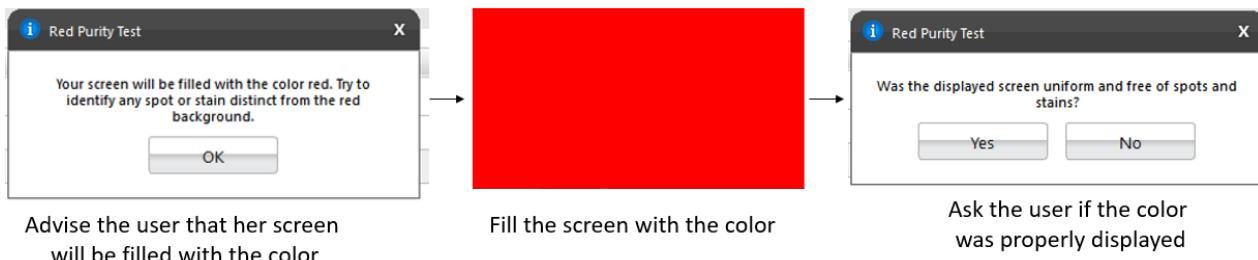

3.7 Display Interface



The Display module is composed by the following tests:

Test	Test type	Attendance
EDID Checksum Test	Quick	Unattended
Display Communication Test	Quick	Unattended

EDID Checksum Test

This test checks the integrity of the Extended Display Identification Data (EDID) checksum provided by the monitor.

Display Communication Test

This test checks the communication with the monitor.

3.8 Keyboard



The Keyboard module is composed by the following tests:

Test	Test type	Attendance
PS2 Keyboard Test	Quick	Unattended
USB Keyboard Test	Quick	Unattended
Keycode Verification Test	Quick	Attended
Advanced Test	Quick	Attended

PS2 Keyboard Test

This test tries to identify any defective PS/2 keyboard detected on this machine.


USB Keyboard Test

This test tries to identify any defective USB keyboard detected on this machine.

Keycode Verification Test

Presents the latest pressed key to the user in a legible format and the current state of the toggle keys.


If the user confirms the all keys that him have pressed was displayed, the test is finished as Passed. Otherwise the test is finished as Failed.

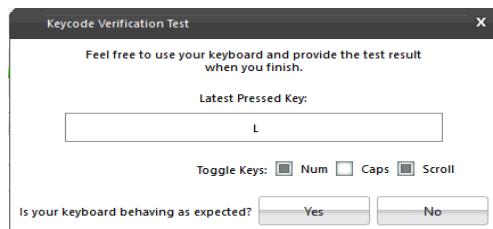

Advanced Test

Interactive test to verify the status of the keyboard keys.

The test will marking the pressed keys until you test all keys. You are able to select the most appropriate keyboard layout.

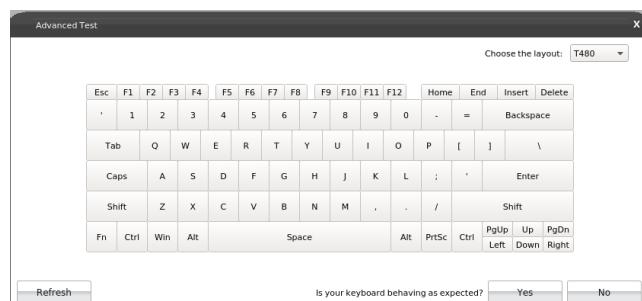

3.9 Memory



The Memory module is composed by the following tests:

Test	Test type	Attendance
Quick Random Pattern Test	Quick	Unattended
Advanced Integrity Test	Extended	Unattended
Address Test	Extended	Unattended
Bit Low Test	Extended	Unattended
Bit High Test	Extended	Unattended
Walking Ones Left Test	Extended	Unattended
Walking Ones Right Test	Extended	Unattended
Modulo-20 Test	Extended	Unattended
Moving Inversions 8Bit Test	Extended	Unattended

Moving Inversions 32 Bit Test	Extended	Unattended
Random Pattern Test	Extended	Unattended
Random Number Sequence Test	Extended	Unattended
Block Move Test	Extended	Unattended
Nibble Move Test	Extended	Unattended

Quick Random Pattern Test

The test consists of filling the memory with a random generated pattern and then checking that the pattern was correctly written. When checking, it writes the pattern's binary complement and checks again. The test is repeated twice. By default, 15 random patterns are used, therefore, the test runs once for each of these patterns.

Advanced Integrity Test

The test is based on the March C- enhanced algorithm. This test consists of filling the accessible memory with a pattern, checking it, and writing its complement in an 8 bytes block size (64 bits) and then checking it again. This procedure is repeated twice, being the first one addressing the accessible memory from the highest position to the lowest and the second time by doing the inverse path. This test is intended to cover Stuck-At Faults and some Coupling Faults and Transition Faults.

Address Test

This test consists of writing each memory address its own address. After that, the algorithm reads the memory previously written and checks if they still store their own address. This test is intended to cover any addressing fault in the accessible memory range.

Bit Low Test

This test consists of filling the memory buffer with a pattern where all bits are 0 and then checking it. When checking for this pattern, it writes its binary complement, and finally checks if the complement was stored accordingly. Such process is repeated 4 times. This test is intended to identify the most serious Stuck-At Faults, some cases of Transition Faults and some cases of Read Random Faults.

Bit High Test

This test consists of filling the memory buffer with a pattern where all bits are 1 and then checking it. When checking for this pattern, it writes its binary complement, and finally checks if the complement was stored accordingly. Such process is repeated 4 times. This test is intended to identify the most serious Stuck-At Faults, some cases of Transition Faults and some cases of Read Random Faults.

Walking Ones Left Test

The Walking Ones Left Test consists of writing a pattern where only the rightmost bit is set (e.g. 00000001), then shift this pattern to the left (e.g. 00000010) until the end of the size of a byte, writing it again at the same memory address each time such pattern is shifted. Therefore, the test is intended to cover most of the Stuck-

At Faults and some cases of Coupling Faults, and also testing the data bus by confirming that every bit can be written.

Walking Ones Right Test

The Walking Ones Right Test consists of writing a pattern where only the leftmost bit is set (e.g. 10000000), then shift this pattern to the right (e.g. 01000000) until the end of the size of a byte, writing it again at the same memory address each time such pattern is shifted. Therefore, such test is intended to cover most of the Stuck-At Faults and some cases of Coupling Faults, and also testing the data bus by confirming that every bit can be written.

Modulo-20 Test

The test consists of writing into an interval of 20 memory locations for each block with a pattern and filling all other locations with its complement 6 times. Unlike the other tests, the Modulo-20 test is not affected by buffering or caching, so it is able to detect most of the Stuck-At Faults, Coupling Faults, Transition Faults and Read Random Faults that are not detected by other testing approaches.

Moving Inversions 8Bit Test

The test consists of filling the memory with the 8 bit wide pattern: 10000000 and then checking that the pattern was correctly written. When checking, it writes the pattern's binary complement (01111111) and checks it again. The procedure described earlier is repeated 8 times, one for each pattern right shifted: 10000000, 01000000, 00100000, 00010000, 00001000, 00000100, 00000010, 00000001.

Moving Inversions 32 Bit Test

This test fills all the accessible memory with a shifting pattern, that is, a value which is binary left shifted as it is written out through the accessible memory of every memory block. Once the pattern reaches 0x80000000 (a value with the left most bit set to 1 only) then the pattern is reset to 0x00000001. After that, it checks the written values and writes their binary complements, starting from the first memory address to the last one. Finally, the algorithm checks the memory for the complements written in the previous step, being this checking starting from the last element down to the first one. Such process is repeated 2 times. This test presents a more thorough approach intended to cover most of the Stuck-At Faults and Transition Faults and some cases of Coupling Faults and Read Random Faults...

Random Pattern Test

The test consists of filling the memory with a random generated pattern and then checking that the pattern was correctly written. When checking, it writes the pattern's binary complement and checks it again. This process is repeated twice. By default, 50 random patterns are used, therefore the test runs once for each of these patterns...

Random Number Sequence Test

The test consists of filling the memory with one different random generated pattern for each memory address and then checking that the pattern was correctly written. In order to check it, the test must generate these numbers based on a seed that may be reset to reproduce the sequence. When checking, it writes the pattern's binary complement and it checks again. Such process is repeated several times. This test is intended to cover most of the Stuck-At Faults, Coupling Faults, and some cases of Transition Faults and Read Random Faults.

Block Move Test

The test consists of moving memory data around within memory blocks. It repeats the movements described above 80 times. Finally, the test checks every memory address to verify if it is consistent.

Nibble Move Test

This test consists of writing to a nibble (a nibble is a group of four bits) a pattern value in each memory address, then it validates every nibble individually. It repeats this process until all nibbles in every address are checked.

3.10 Motherboard



The Motherboard module is composed by the following tests:

Test	Test type	Attendance
Chipset Test	Quick	Unattended
PCI/PCI-e Test	Quick	Unattended
RTC Test	Quick	Unattended
USB Test	Quick	Unattended
CMOS Pattern	Quick	Unattended

Chipset Test

The test checks the status registers of the controllers that form the foundation of the motherboard chipset. These controllers are: EHCI, OHCI, xHCI and SATA.

PCI/PCI-e Test

The PCI/PCI-e Test checks the status registers of the PCI Express onboard devices for unexpected errors or power failure.

RTC Test

The test checks the following RTC (Real Time Clock) properties: accuracy and rollover. The test attempts to guarantee the correct operation of these properties.

USB Test

The test checks the status of USB devices. If any errors are indicated, the test fails.

CMOS Pattern Test

This test backup the CMOS and attempts to write predefined pattern values on CMOS and verify if the written values are consistent. Then, the backup is restored.

3.11 Optical Drive



The Optical Drive module is composed by the following tests:

Test	Test type	Attendance
Media-Less Optical Self-Test	Quick	Attended
Linear Seek Test	Quick	Attended
Random Seek Test	Quick	Attended
Funnel Seek Test	Quick	Attended
Read and Compare Test	Quick	Attended
Write Test	Quick	Attended

Media-Less Optical Self-Test

Checks the optical drive's internal components. This test requires that no media is inserted into the drive. Therefore if any media was detected into the drive the application displays the following message:



Linear Seek Test

Checks the integrity of the optical drive's mechanism by continuously moving the drive's head all around the media. For execute this test the user must have a media containing at least the following amount of date written on it according to its type: CD (210 MB), DVD (1000 MB), Blu-Ray (4000 MB).

Random Seek Test

Checks the integrity of the optical drive's transmission mechanism by moving the drive's head through random positions on the media. For executing this test the user must have a media containing at least the following amount of date written on it according to its type: CD (210 MB), DVD (1000 MB), Blu-Ray (4000 MB).

Funnel Seek Test

Checks the integrity of the optical drive's mechanism by moving the drive's head in a funnel pattern. For executing this test the user must have a media containing at least the following amount of date written on it according to its type: CD (210 MB), DVD (1000 MB), Blu-Ray (4000 MB).


Read and Compare Test

Checks the drive's ability to make correct read operations. Performs two linear read operations and compares the information obtained from the two reads. For executing this test the user must have a media containing at least the following amount of date written on it according to its type: CD (210 MB), DVD (1000 MB), Blu-Ray (4000 MB).

Write Test

Checks the capability of the drive to write correctly to an optical media. For executing this test you must have a blank media (CDR, CD-RW, DVD-R, DVD-RW, BD-R, BD-RE).

Linear Seek Test, Random Seek Test, Funnel Seek Test, Read and Compare Test and Write Test are performed according the following workflow:

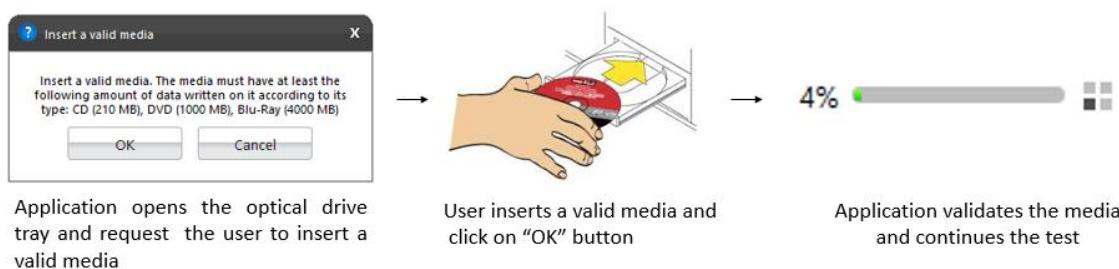

3.12 PCI Express



The PCI Express module is composed by the following tests:

Test	Test type	Attendance
Status Test	Quick	Attended

Status Test

Verifies that all of the PCI Express devices are recognized and communicating with the system.

3.13 Mouse Devices




The Mouse Devices module is composed by the following tests:

Test	Test type	Attendance
Click Test	Quick	Attended
Precision Test	Quick	Attended
Press Precision Test	Quick	Attended

Click Test


It does a check on the device's buttons, issuing the user to perform some actions regarding them. The Click Test execution is based on the workflow below.

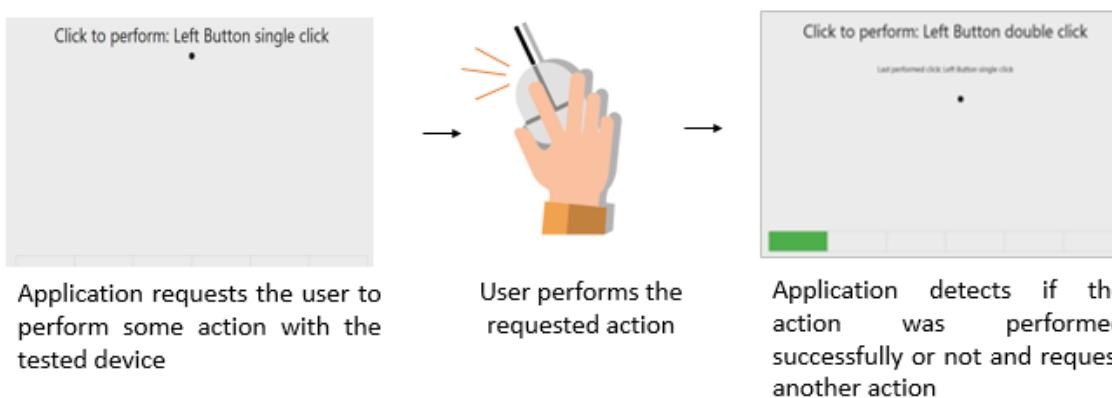

The user must perform one by one, the actions issued by the test. Note that the actions requested depends on the numbers and types of buttons present in your pointing device.

The user has two attempts to execute each requested action. If the requested action was detected by the application, it is considered as passed. Otherwise the action is considered as "Failed". The Click Test is considered as "Passed" if all actions required are passed.


If the user does not perform any action for 30 seconds, the following popup is displayed:

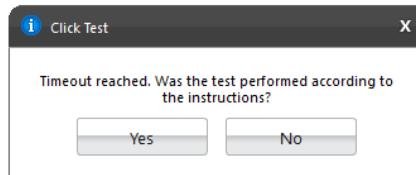

If the user select "Yes", reporting that the test was performed according to the instructions the test will fail. In this case, the application assumes that it was not possible to detect the device, indicating a bad working of it. If the user selects "No", the test is canceled because the actions required were not properly executed.

Precision Test and Press Precision Test

Tests the device movement precision. The Precision Test execution is based on the following workflow:

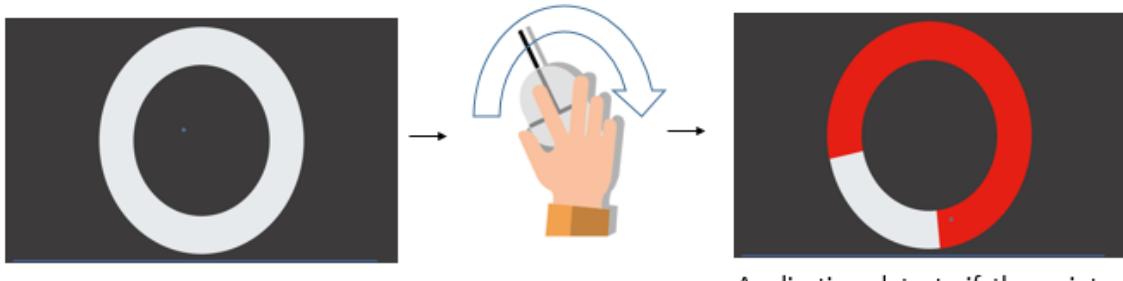


Application requests the user to move the pointer through the depicted area.

User performs the requested action

Application detects if the pointer was moved without to reach the outside area

If the user gets to move the pointer through the entire depicted area without to reach the outside area the test is finished as passed. If the outside area was reached two times the test will fail. If the pointer is not moved for more than 30 seconds the test windows is going to be closed and the following message is displaying to the user:

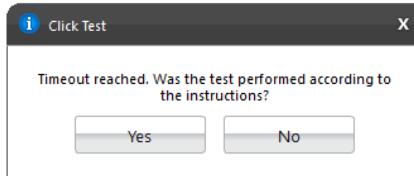

If the user select "Yes", reporting the test was performed according to the instructions, the test will be finished as "failed". In this case, the application assumes that it was not possible to detect the device movement, indicating a bad working of the device. If the user selects "No", the test is canceled because the required actions were not properly executed.

Note: For executing Press Precision test, you must press any button from mouse and move the pointer.

3.14 RAID



The RAID module is composed by the following tests:

Test	Test type	Attendance
Battery Status Test	Quick	Unattended
Enclosure Status Test	Quick	Unattended
Logical Drive Status Test	Quick	Unattended
RAID Status Test	Quick	Unattended
Consistency Check	Extended	Attended

Battery Status Test

Checks the health of the controller's BBU (Battery Backup Unit)

Enclosure Status Test

Checks the status of the enclosures used by a RAID controller

Logical Drive Status Test

Checks the status of each logical drive in the RAID controller

RAID Status Test

Checks the status of each RAID volume in the RAID controller

Consistency Check

Checks the consistency of each controller's logical drive. This test might take a few hours to run depending on how many logical and physical drives are present in the RAID controller.

3.15 Storage



The Storage module is composed by the following tests:

Test	Test type	Attendance
SMART Status Test	Quick	Unattended
Targeted Read Test	Quick	Unattended
Random Seek Test	Quick	Unattended
Funnel Seek Test	Quick	Unattended
SMART Short Self Test	Quick	Unattended
SMART Drive Self Test	Quick	Unattended
Default Self Test	Quick	Unattended
Device Read Test	Quick	Unattended
SMART Wearout Test	Quick	Unattended
Controller Status Test	Quick	Unattended
SMART Temperature Test	Quick	Unattended
SMART Reliability Test	Quick	Unattended
SMART Spare Space Test	Quick	Unattended
Extended Random Seek Test	Extended	Unattended
Extended Funnel Seek Test	Extended	Unattended
Extended Self Test	Extended	Unattended
Device Write Test	Extended	Unattended
Linear Read Test	Extended	Unattended
SMART Conveyance Test	Extended	Unattended
Full Disk Scan Test	Extended	Unattended

SMART Status Test

Checks the status reported by SMART to quickly identify whether a device is defective or not.

Targeted Read Test

Checks the sectors in the neighborhood of bad sectors reported in the SMART logs.

Random Seek Test

Checks the integrity of the servo mechanism of a device by checking sectors at several randomly chosen addresses.

Funnel Seek Test

Checks the integrity of the servo mechanism of a device by checking sectors following a "funnel" or "butterfly" pattern.

SMART Short Self Test

Checks electrical and mechanical component status as well as the reading ability of the device.

SMART Drive Self Test

Proprietary Lenovo Drive Self-Test (DST) that mixes sequential and random reads to the disk.

Default Self Test

Vendor specific test that runs a quick check.

Device Read Test

Tests if it is possible to correctly read sectors in different areas of the storage device.

SMART Wearout Test

SMART Wearout Test checks the wearout level of the attached SSD device by reading SMART attributes and informs whether the device is in good condition or has reached its wearout limit.

Controller Status Test

This test detects if the device behaves as expected.

SMART Temperature Test

This test detects if the current temperature for the device is in critical state.

SMART Reliability Test

This test detects if the device is still reliable based on SMART metrics.

SMART Spare Space Test

This test detects if the spare space in the device is critically low.

Extended Random Seek Test

Works similar to quick random test, but the number of checked sectors is larger and it does not stop when the first bad sector is found.

Extended Funnel Seek Test

Works similar to quick funnel test, but the number of checked sectors is larger and it does not stop when the first bad sector is found.

Extended Self Test

Works similar to a quick short self test, but checks more sectors.

Device Write Test

The Storage Device Write Test will verify if it is possible to write data on different areas of the device and then read the data correctly."

Linear Read Test

Checks the integrity of the storage device by reading its sectors following a linear pattern.

SMART Conveyance Test

Checks the device's integrity through the status returned by SMART Conveyance test.

Full Disk Scan Test

This test performs a full verification of the disk.

3.16 Video Card



The Video Card module is composed by the following tests:

Test	Test type	Attendance
Video Memory Test	Quick	Unattended

Mathematical Operation Test	Quick	Unattended
Texture Pipeline Test	Quick	Unattended
Extended Video Memory Test	Extended	Unattended
Stress Test	Extended	Unattended
Framebuffer Address Test	Quick	Unattended
Framebuffer Block Moving Test	Quick	Unattended
Framebuffer Walking Ones Test	Quick	Unattended
Framebuffer Deterministic Filling Test	Quick	Unattended
Framebuffer Random Filling Test	Quick	Unattended

Video Memory Test

Verifies if some data patterns are consistently read from and written to video card memory.

Mathematical Operation Test

Performs several mathematical operations in order to test that the video board processing units are in good condition

Texture Pipeline Test

Sends texture patterns to be rendered by the graphics pipeline and checks for loss of data when comparing input and output

Extended Video Memory Test

Similar to Video Memory Test, but performs an extended analysis with more data patterns

Stress Test

Executes heavy operations on the video card for the purpose of stressing the GPU and verifying that the results remain reliable under stress.

Framebuffer Address Test

This test checks the video card framebuffer integrity by filling its data with its own addresses and then trying to access them.

Framebuffer Block Moving Test

This test checks the video card framebuffer integrity by filling it with patterns of moving blocks and then trying to read them.

Framebuffer Walking Ones Test

This test checks the video card framebuffer integrity by filling it with patterns of walking bits and then trying to read them.

Framebuffer Determinist Filling Test

This test checks the video card framebuffer integrity by filling it with deterministic patterns and then trying to read them.

Framebuffer Random Filling Test

This test checks the video card framebuffer integrity by filling it with random patterns and then trying to read them.

3.17 Wired Ethernet



The Wired Ethernet module is composed by the following tests:

Test	Test type	Attendance
Self-Test	Quick	Unattended

Self Test

Checks the device's integrity by performing its driver's built-in self-tests.

3.18 Sensors



The Sensors module is composed by the following tests:

Test	Test type	Attendance
Lid Closure Test	Quick	Attended

Lid Closure Test

This test verifies if the lid sensor is capturing the events of closing and opening the lid. The test will fail if these events are not captured.

The test will ask to the user open and close the notebook lid.



3.19 Bluetooth




The Bluetooth module is composed by the following tests:

Test	Test type	Attendance
Scan Test	Quick	Attended

Scan Test

Scan for nearby active Bluetooth devices.

The test starts by asking you to make sure the Bluetooth device is enabled and there is another Bluetooth close and active.

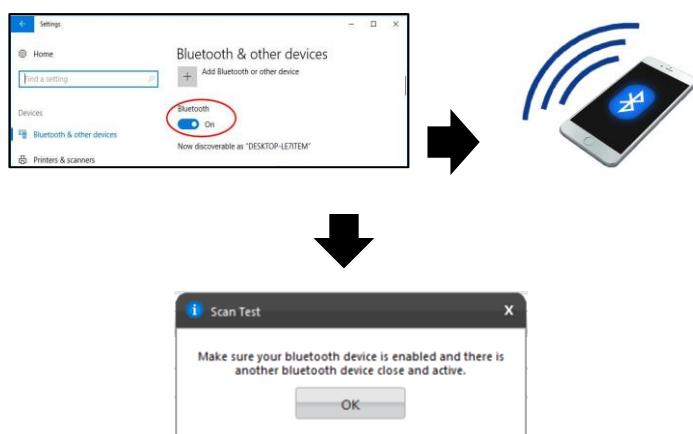

3.20 Fingerprint




The Fingerprint module is composed by the following tests:


Test	Test type	Attendance
Recognition Test	Quick	Attended

Recognition Test

The test prompts the user to swipe or touch a finger on the fingerprint device. The test starts by asking you to swipe or touch in your device.

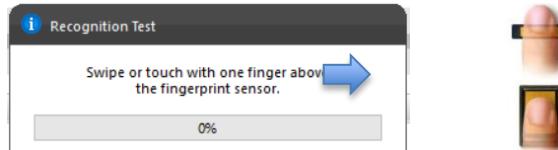

If the user does not perform any action for 30 seconds, the following popup is displayed:

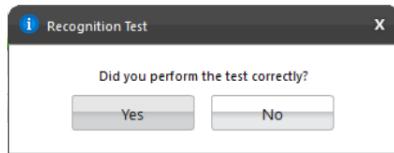

If the user select "Yes", reporting that the test was performed according to the instructions, the test will fail. In this case, the application assumes that it was not possible to detect the device, indicating a bad working of it. If the user selects "No", the test is canceled because the actions required were not properly executed.

3.21 Touchpad Devices




The Touchpad Devices module is composed by the following tests:

Test	Test type	Attendance
Click Test	Quick	Attended
Precision Test	Quick	Attended
Press Precision Test	Quick	Attended

Click Test


It does a check on the device's buttons, issuing the user to perform some actions regarding them. The Click Test execution is based on the workflow below.

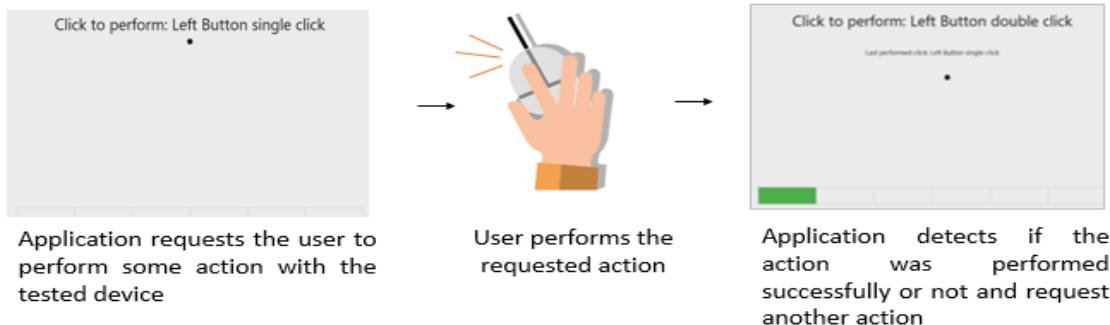

The user must perform one by one, the actions issued by the test. Note that the actions requested depends on the numbers and types of buttons present in your touchpad device.

The user has two attempts to execute each requested action. If the requested action was detected by the application, it is considered as passed. Otherwise the action is considered as "Failed". The Click Test is considered as "Passed" if all actions required are passed.


If the user does not perform any action for 30 seconds, the following popup is displayed:

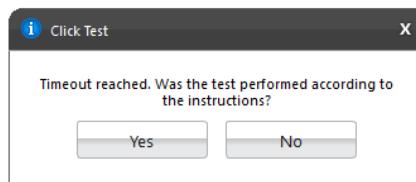


If the user select "Yes", reporting that the test was performed according to the instructions the test will fail. In this case, the application assumes that it was not possible to detect the device, indicating a bad working of it. If the user selects "No", the test is canceled because the actions required were not properly executed.

Precision Test and Press Precision Test

Tests the device movement precision. The Precision Test execution is based on the following workflow:

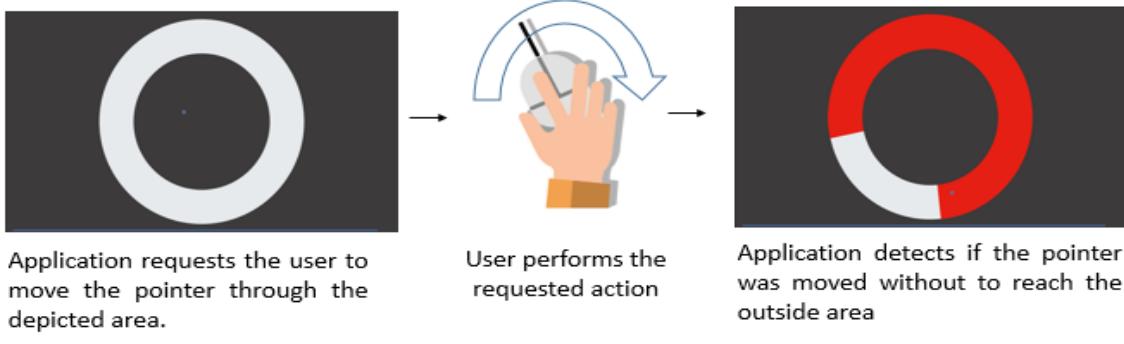

If the user gets to move the pointer through the entire depicted area without to reach the outside area the test is finished as passed. If the outside area was reached two times the test will fail. If the pointer is not moved for more than 30 seconds the test windows is going to be closed and the following message is displaying to the user:

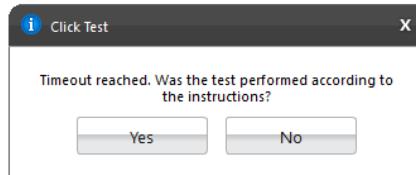

If the user select "Yes", reporting the test was performed according to the instructions, the test will be finished as "failed". In this case, the application assumes that it was not possible to detect the device movement, indicating a bad working of the device. If the user selects "No", the test is canceled because the required actions were not properly executed.

Note: For executing Press Precision test, you must press any button from touchpad and move the pointer.

3.22 Camera



The Camera module is composed by the following tests:

Test	Test type	Attendance
Camera Capture Test	Quick	Attended

Camera Capture Test

Verifies if the camera device is working properly based on the user's feedback for the captures images. This test is performed according to the following workflow:



3.23 Touchscreen




The Touchscreen module is composed by the following tests:

Test	Test type	Attendance
Basic Touch Test	Quick	Attended
Accuracy Test	Quick	Attended
Diagonal Test	Quick	Attended
Grid Test	Quick	Attended
Multi-touch Test	Quick	Attended


Basic Touch Test

The Basic touch test will verify if the system is receiving touch events. This test is based on the following workflow:

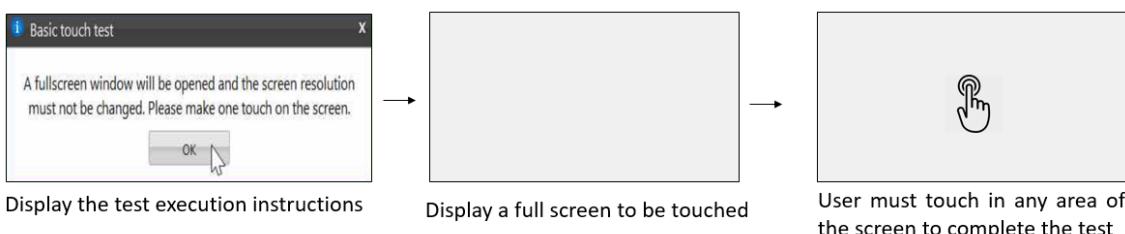


Accuracy test

The Accuracy test will verify if the touchpoints are accurate with the screen mapping. This test is based on the following workflow:

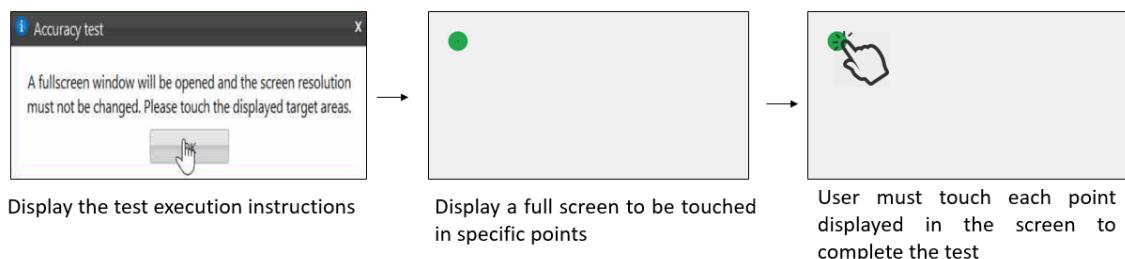


Diagonal Test

The Diagonal test will verify if rows and columns of the touchscreen are sensing through a diagonal gesture on the screen. This test is based on the following workflow:

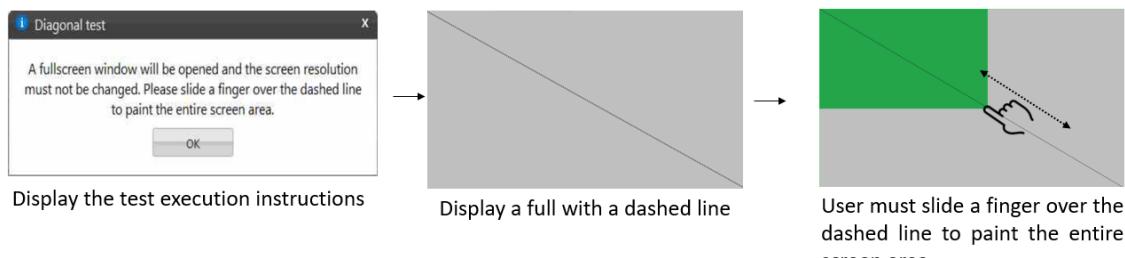


Grid test

The Grid test will verify if any areas of touchscreen are not able to receive touch events.

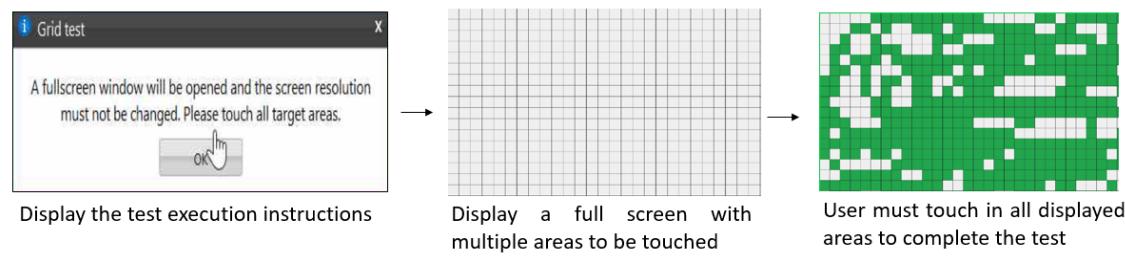

Multi-touch Test

The Multi-touch test will verify if the system is receiving multi-touch events.

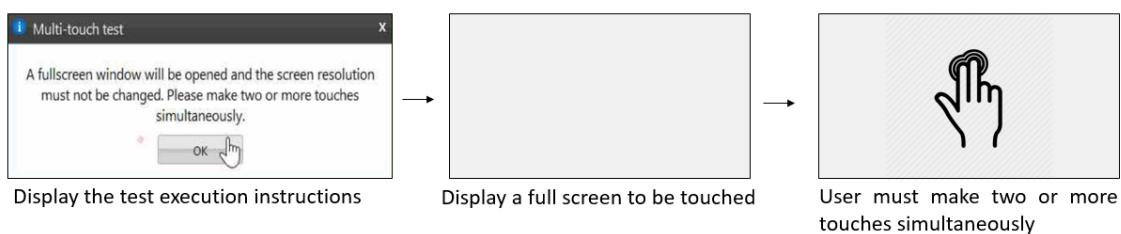

3.24 Wireless



The Wired Ethernet module is composed by the following tests:

Test	Test type	Attendance
Radio Enabled Test	Quick	Unattended
Network Scan Test	Quick	Unattended
Signal Strength Test	Quick	Unattended

Radio Enabled Test

Verifies that the wireless is turned on.

Network Scan Test

Verifies that the wireless adapter can detect available networks. Make sure that there is a properly configured router or access point nearby before running this test.

Signal Strength Test

Verifies that the wireless adapter can detect available networks. Make sure that there is a properly configured router or access point nearby before running this test.


4. EXPLORING LENOVO **RUN ALL OPTION**

Run All option allow to perform all supported tests from all supported modules at the same execution. In this flow is not possible to select devices, thus all devices will be tested. It is possible to choose if the Attended tests should be performed or not.

When the checkbox is marked, the application will run Unattended + Attended tests from the test execution option selected.


4.1 Quick tests

Click on Quick tests button to perform all quick tests.

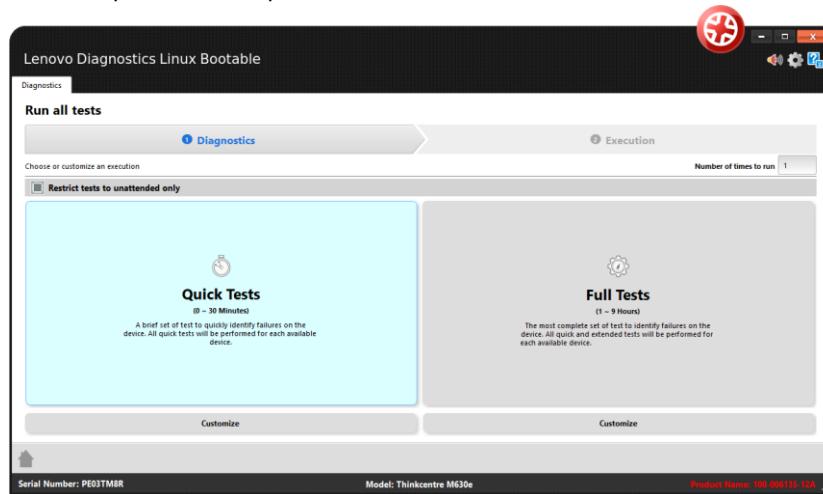


4.2 Quick tests (customized option)

Click to Customize to remove any module or test from the list of tests that will be performed.

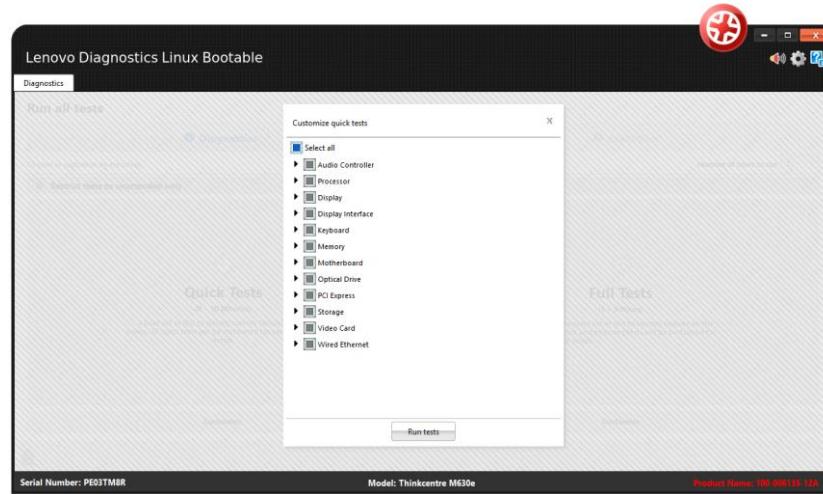


4.3 Full tests

Click on Quick tests button to perform all tests quick and extended.

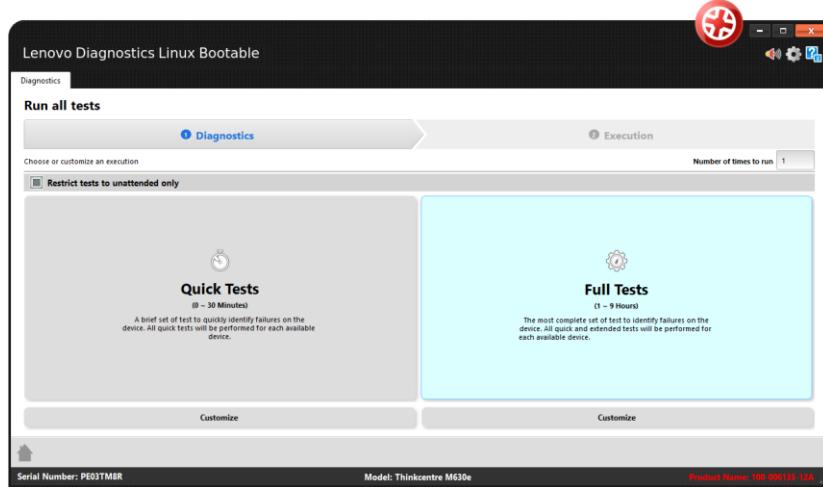

4.4 Full tests (customized option)

Click to Customize to remove any module or test from the list of tests that will be performed.

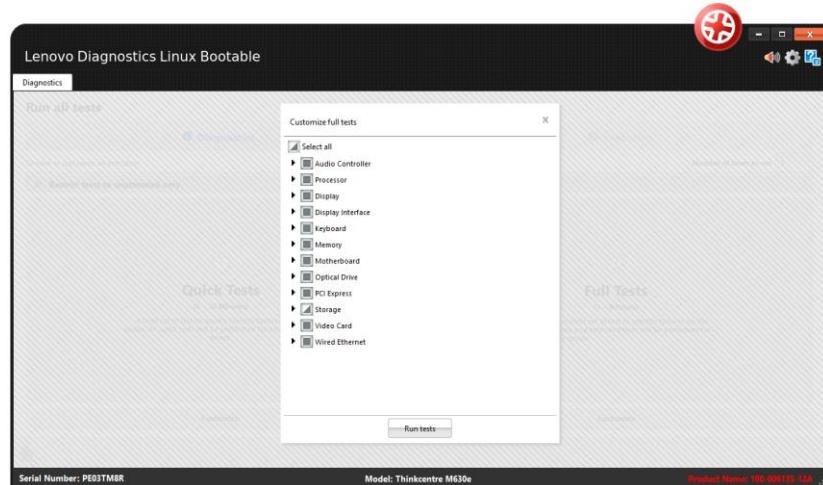

5. EXPLORING LENOVO **DIAGNOSTICS TOOLS**


This section provides information about:



5.1 Diagnostic Script

The Diagnostic Script is a tool that allows user to create a custom list of tests from any module. By selecting this tool, the following options are displayed:

- **Create:** allows to create a new diagnostic script
- **Edit:** allows editing a diagnostic script saved previously.
- **Execute:** allows to perform the tests configures in a diagnostic script

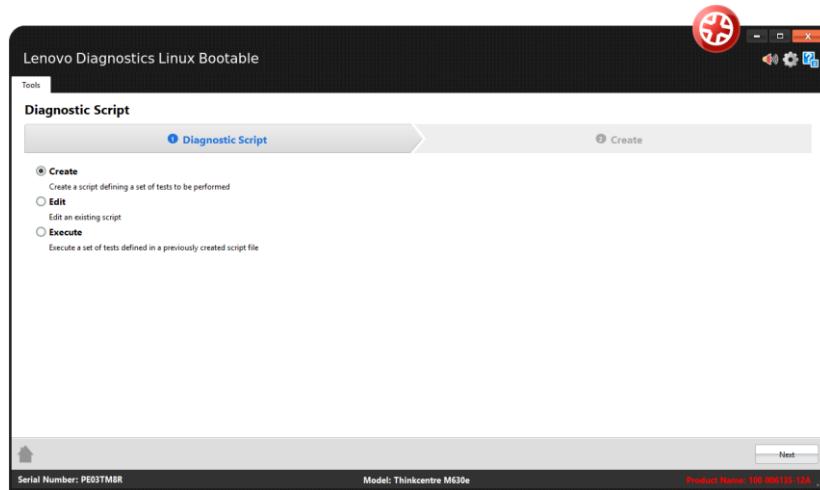


5.1.1 Create a diagnostic script

By selecting the option “Create” and clicking on the Next button, the screen below will be displayed. This screen allows selecting a set of tests to be performed from a list with all tests present in Lenovo Diagnostics. The tests not supported by the tested machine are marked with the icon .

It is also possible to configure the execution of this tests according one of the following parameters:


Number of executions: allows performing the tests according to a specific number of executions in a range from 1 to 999999999. In this case, the diagnostic will be finished when all iterations are completed.

Test duration in minutes: allows performing the tests according to a specific number of minutes in a range from 1 to 999999999. In this case, the diagnostic will be finished when this time is reached and all tests from the current iteration are finished. Notice that even if the time is reached the tests will be performed until the end in the current iteration.

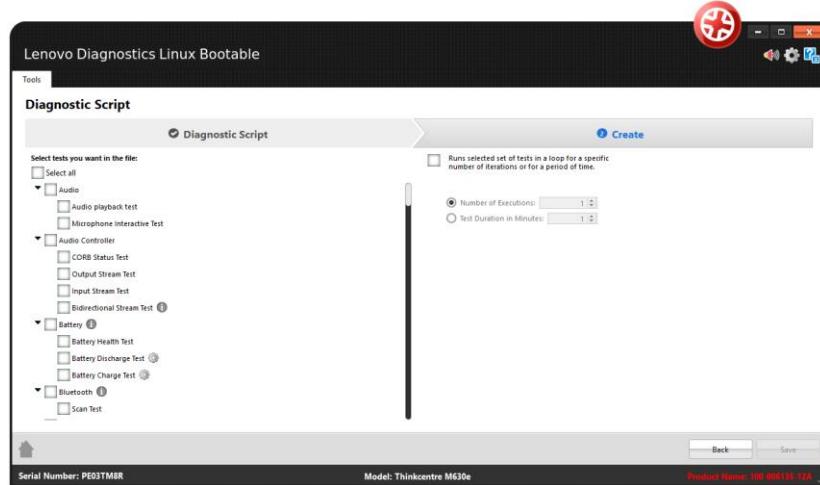


5.1.2 Edit a diagnostic script

By selecting the option “Edit”, the Lenovo Diagnostics displays a field where is possible to select an existing diagnostic script to be edited.

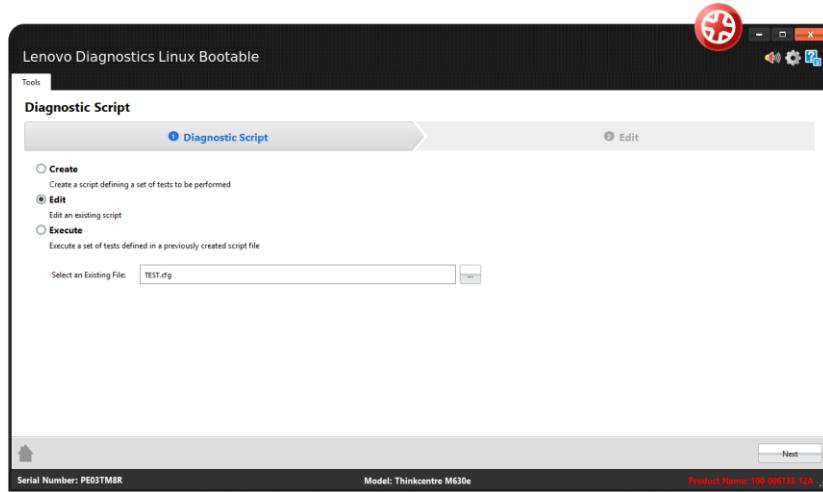


By selecting this file and clicking on the Next button, a screen is displayed with the configuration from the selected diagnostic script. Here it is possible to modify this configuration by changing the list of tests and modify the number of executions or duration minutes. By clicking on Save button all changes are saved in the current file and clicking on Save as it is possible to create a new file with the current configuration.

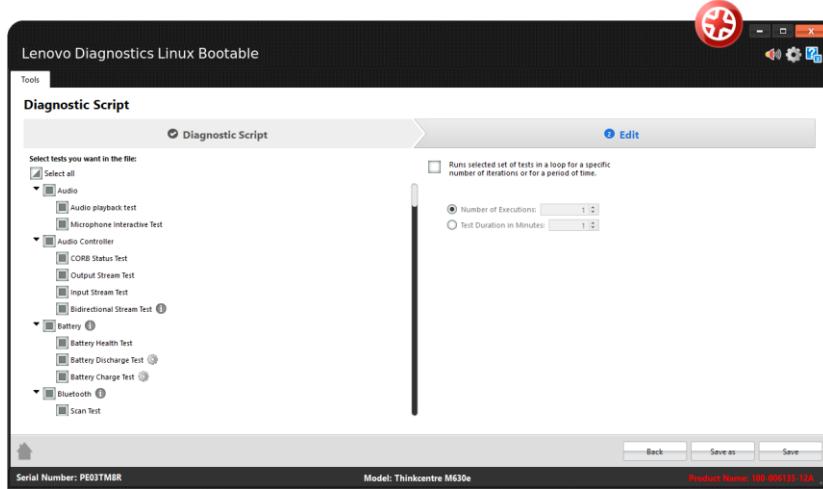


5.1.3 Execute a diagnostic script

By selecting the option “Execute”, the Lenovo Diagnostics displays a field where is possible to select an existing diagnostic script to be performed.

By selecting a valid diagnostic script file and clicking on the Next button, a screen is displayed with the configuration from the selected diagnostic script. All selected tests are listed and the not supported one are marked with the icon .

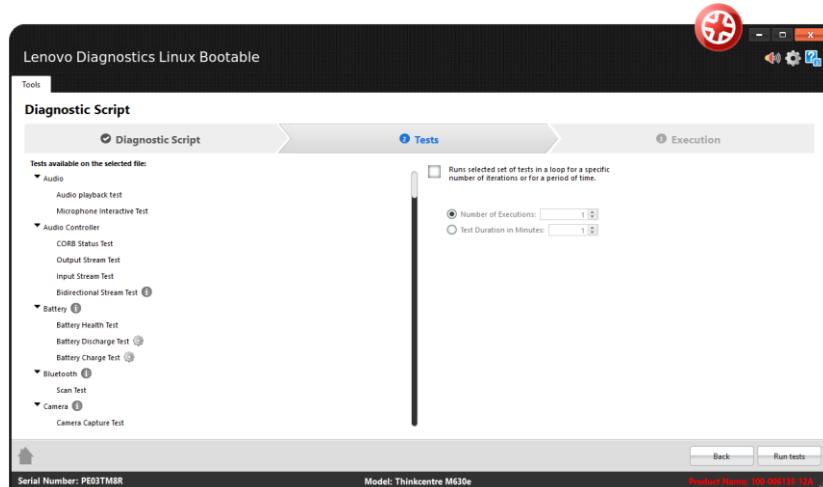


By clicking to Run Tests, the diagnostic script execution screen is displayed and all supported tests are performed. The not supported tests are filtered on this execution. It is possible to finish the execution anytime by clicking on Stop Test.

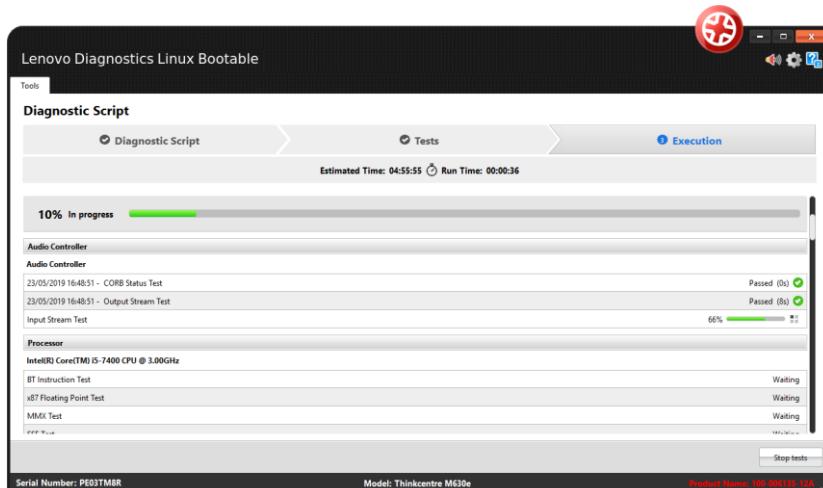

When the diagnostic is finished, the following popup is displayed with the execution summary.




It is also possible to export the diagnostic results to a pdf file by clicking on Export Log. This file contains an execution log for each iteration performed.

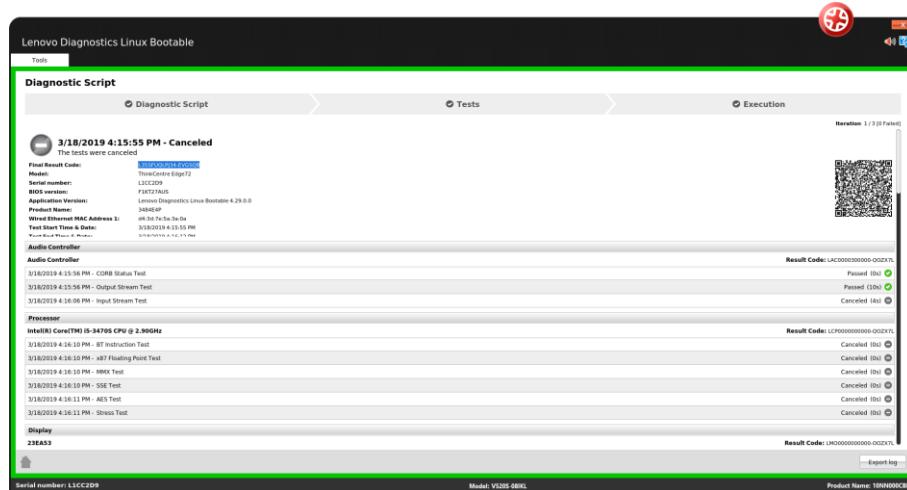


5.2 System Information

The system information tool allows the user to see general information about the system and the available module's devices. See in the screen below that is possible navigating between the modules and export the information by module or export all information at the same time.

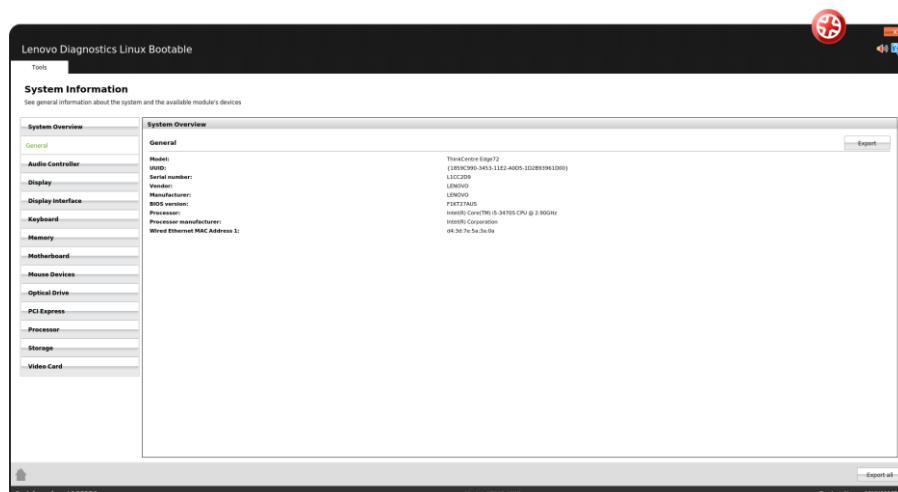


5.3 Log History

The Log History tool allows the user to see the logs of all executions performed in a machine. See in the image below it is possible to find logs by informing a period and export all logs.

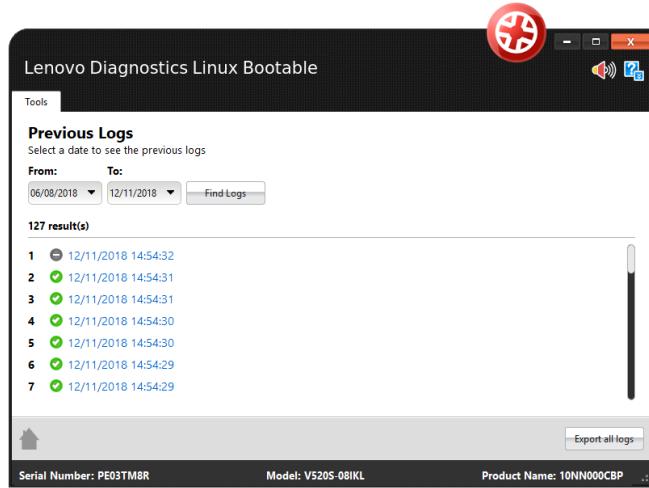


5.4 Recover Bad Sectors

The Recover Bad Sectors tool allows the user to scan HDD/SSD devices for bad sectors and fix them whenever possible.

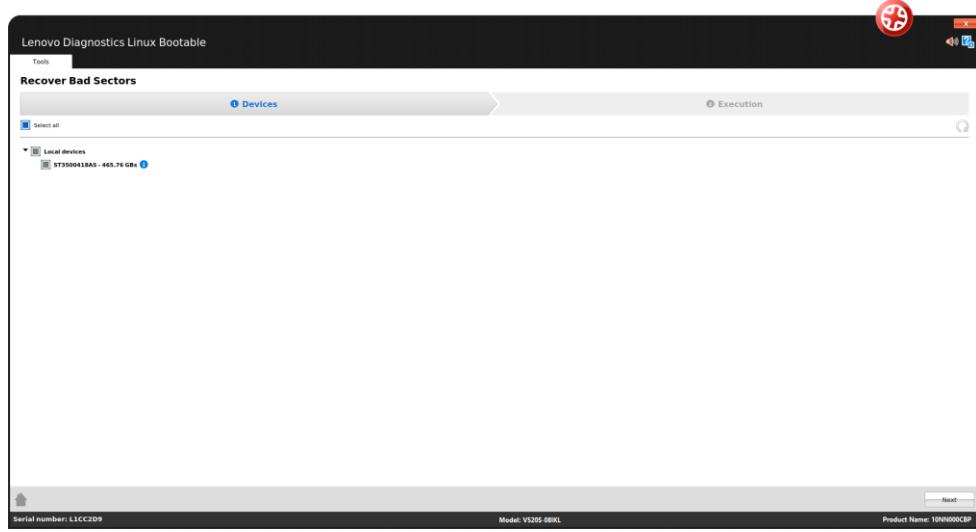

Be aware to perform a backup of your disk before performing this operation. The recovery operation can cause data loss and requires your confirmation.

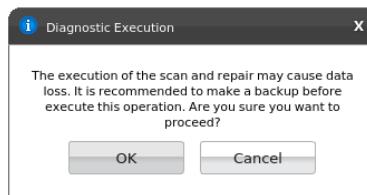

5.5 SMART Tool

SMART tool provides a list of storage devices and shows, for each one, the SMART attributes and its information. You are able to export those information to a PDF or HTML file. It is possible to export information for each storage device separately or for all available devices in the same file.

ID	Attribute Description	Threshold	Value	Worst	Data
1	Raw Read Error Rate	114	95	95	59015410
3	Spin Up Time	0	97	97	0
4	Start Stop Count	20	98	98	2168
5	Reallocated Sector Count	36	100	100	0
7	Seek Error Rate	30	85	60	339886745
9	Power On Hours	0	88	88	10674
10	Spin Standby Count	97	100	100	0
32	Power Cycle Count	20	99	99	1084
183	Runtime Bad Block	0	100	100	0
184	End-to-End Error	99	100	100	0
187	Reported Uncorrected	0	100	100	0
188	Command Timeout	0	100	99	2
189	High Fly Write	0	100	100	0
200	Actual Power Consumption Cell	45	69	61	58890527
194	Temperature Celsius	0	31	40	31
195	Hardware ECC Recovered	0	45	25	59015410
197	Current Power Sector	0	100	100	0
198	Offline Uncorrectable	0	100	100	0
199	UDMA CRC Error Count	0	200	200	0
240	Head Error Rate	0	100	100	0
241	Total LBAs Written	0	100	253	2265692436
242	Total LBAs Read	0	100	253	3168517391

Attribute Description	Data
Signature	LEN
Revision	32
Manufacturing BS-bar code	85550L25150R1S2895103L
Manufacturing Supplier Model Number	UMIS RPJT1J28MED1MWX
Manufacturing Supplier Serial Number	SS0L25150R1S2895103L
Current BS label	85550L25150R1S2895103L
Sectors Written	2161197
CRC Errors	0
Sectors Written SLC	2629009

6. GLOSSARY

Extended Test: type of test that is performed in some hours.

Quick test: type of test that is performed in some minutes.

Unattended test: It is a test that does not depends from the user actions to be executed. All step are performed automatically by the application.

Attended test: It is a test that depends on some user action to be executed.

Module: a module contains a set of tests that can be performed for a type of devices. It is enabled in the application only if the tested machine has at least one device supported by the module.