


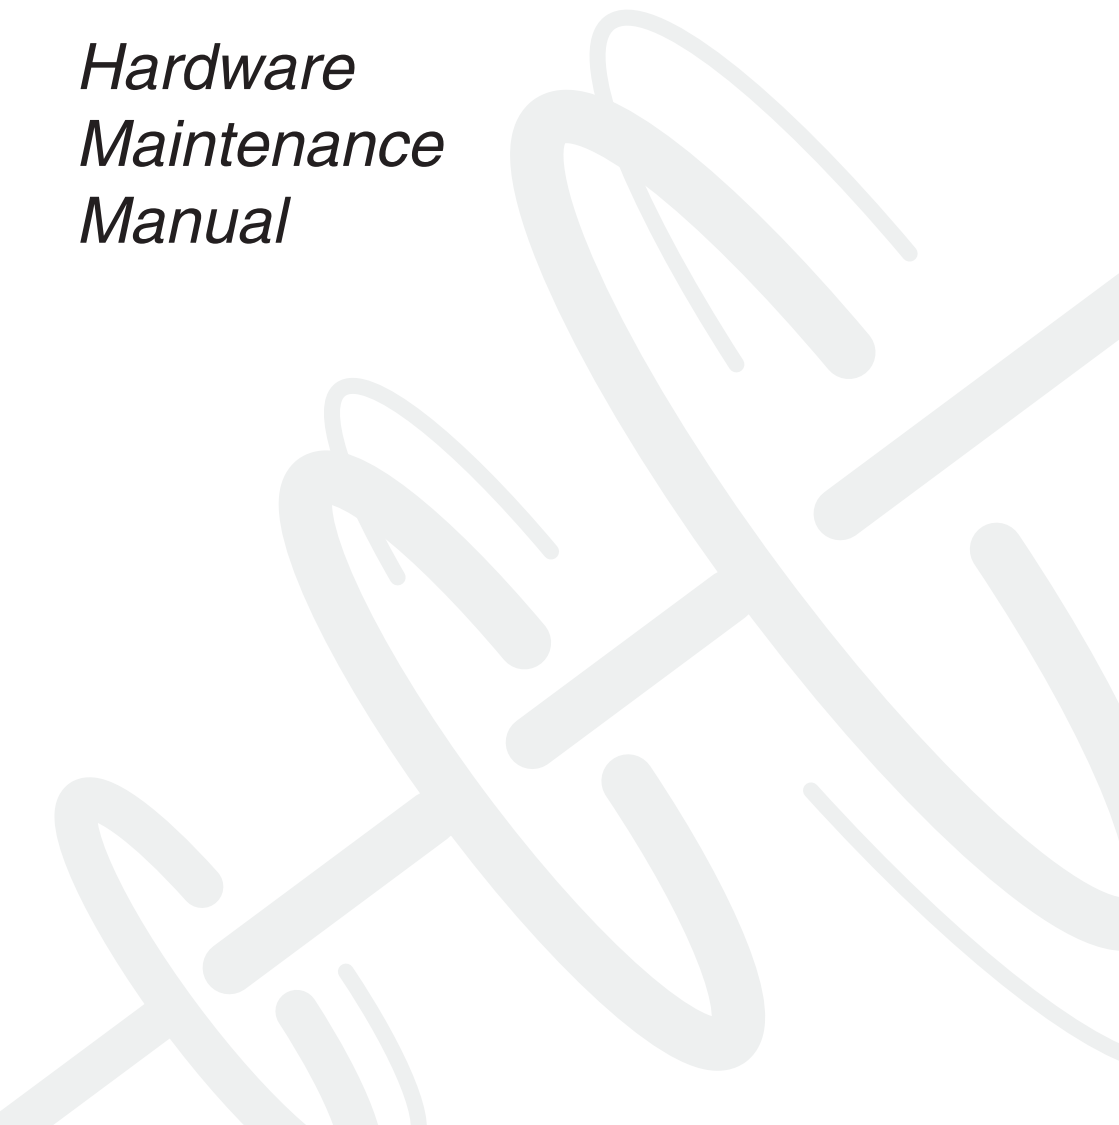

Lenovo ZhaoYang K2450

Hardware Maintenance Manual



Note:

Before using this information and the product it supports, be sure to read the general information under “Notices” on page 78.

First Edition (August 2013)

© Copyright Lenovo 2013. All rights reserved.

LENOVO products, data, computer software, and services have been developed exclusively at private expense and are sold to governmental entities as commercial items as defined by 48 C.F.R. 2.101 with limited and restricted rights to use, reproduction and disclosure.

LIMITED AND RESTRICTED RIGHTS NOTICE: If products, data, computer software, or services are delivered pursuant a General Services Administration “GSA” contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

© 2013 Lenovo

Contents

About this manual.....iv

Safety information.....1

General safety 2

Electrical safety 3

Safety inspection guide 5

Handling devices that are sensitive to
electrostatic discharge..... 6

Grounding requirements 6

Safety notices: multilingual translations 7

Laser compliance statement..... 14

Important service information16

Strategy for replacing FRUs..... 16

 Strategy for replacing a hard disk
 drive 17

 Important notice for replacing a system
 board 17

Important information about replacing RoHS
compliant FRUs 18

General checkout.....19

What to do first 20

Power system checkout 21

 Checking the AC adapter 21

 Checking operational charging 21

 Checking the battery pack 22

Related service information.....23

Restoring the factory contents by using

Recovery Disc Set 23

 Start Recovery Disc (one disc)..... 23

 Operating System Recovery Disc (one or
 more discs) 23

 Applications and Drivers Recovery Disc
 (one or more discs)..... 23

 Supplemental Recovery Disc 23

Passwords 24

 Using passwords 24

Power management 25

 Power management 25

 Checking the battery status 25

 Using the ac power adapter 25

 Charging the battery 26

 Maximizing the battery life..... 26

 Power-saving modes..... 26

 Sleep mode 26

 Hibernation mode 27

 Shutting down the computer..... 27

Lenovo Zhao Yang K245028

Specifications 28

 Features 28

 Specifications 29

Status indicators.....30

Special keys and buttons 32

 Function key combinations 32

FRU replacement notices 34

 Screw notices 34

Removing and replacing an FRU 35

 1010 Keyboard 36

 1020 Battery pack 38

 1030 Dummy card..... 41

 1040 Hard disk drive 42

 1050 DIMM 44

 1060 PCI Express Mini Card for wireless

 LAN/WAN and SSD card..... 45

 1070 System board 47

 1080 Fan assembly and Heat Sink
 assembly..... 51

 1090 LCD unit..... 53

 1100 Speaker, base cover, finger printer
 board, power assembly and LED board... 55

 1110 LCD front bezel 58

 1120 LCD panel, LCD cable and hinges ... 59

 1130 Integrated camera 61

 1140 Antenna assembly and LCD cover... 62

Locations 63

 Front view 63

 Bottom view 64

 Left-side view 65

 Right-side view 66

Parts list 67

 Overall 68

 LCD FRUs 72

 Keyboard 74

 AC adapters 76

 Power cords 77

Notices78

Trademarks 79

About this manual

This manual contains service and reference information for the following Lenovo product:

Lenovo ZhaoYang K2450

Use this manual to troubleshoot problems.

The manual is divided into the following sections:

- The common sections provide general information, guidelines, and safety information required for servicing computers.
- The product-specific section includes service, reference, and product-specific parts information.

Important:

This manual is intended only for trained servicers who are familiar with Lenovo products. Use this manual to troubleshoot problems effectively.

Before servicing a Lenovo product, make sure to read all the information under “Safety information” on page 1 and “Important service information” on page 16.

Safety information

This chapter presents the following safety information that you need to get familiar with before you service a Lenovo computer:

- “General safety” on page 2
- “Electrical safety” on page 3
- “Safety inspection guide” on page 5
- “Handling devices that are sensitive to electrostatic discharge” on page 6
- “Grounding requirements” on page 6
- “Safety notices: multilingual translations” on page 7
- “Laser compliance statement” on page 14

General safety

Follow these rules below to ensure general safety:

- Observe a good housekeeping in the area where the machines are put during and after the maintenance.
- When lifting any heavy object:
 1. Make sure that you can stand safely without slipping.
 2. Distribute the weight of the object equally between your feet.
 3. Use a slow lifting force. Never move suddenly or twist when you attempt to lift it.
 4. Lift it by standing or pushing up with your leg muscles; this action could avoid the strain from the muscles in your back. Do not attempt to lift any object that weighs more than 16 kg (35 lb) or that you think is too heavy for you.
- Do not perform any action that causes hazards to the customer, or that makes the machine unsafe.
- Before you start the machine, make sure that other service representatives and the customer are not in a hazardous position.
- Please remove covers and other parts in a safe place, away from all personnel, while you are servicing the machine.
- Keep your toolcase away from walk areas so that other people will not trip it over.
- Do not wear loose clothing that can be trapped in the moving parts of the machine. Make sure that your sleeves are fastened or rolled up above your elbows. If your hair is long, fasten it.
- Insert the ends of your necktie or scarf inside clothing or fasten it with the nonconductive clip, about 8 centimeters (3 inches) from the end.
- Do not wear jewelry, chains, metal-frame eyeglasses, or metal fasteners for your clothing.

Attention: Metal objects are good electrical conductors.
- Wear safety glasses when you are hammering, drilling, soldering, cutting wire, attaching springs, using solvents, or working in any other conditions that may be hazardous to your eyes.
- After service, reinstall all safety shields, guards, labels, and ground wires. Replace any safety device that is worn or defective.
- Reinstall all covers correctly before returning the machine to the customer.
- Fan louvers on the machine help to prevent the overheating of internal components. Do not obstruct fan louvers or cover them with labels or stickers.

Electrical safety

Observe the following rules when working on electrical equipments.

Important:

Use only approved tools and test equipments. Some hand tools have handles covered with a soft material that does not insulate you when working with live electrical currents.

Many customers have rubber floor mats near their machines that contain small conductive fibers to decrease electrostatic discharges. Do not use such kind of mat to protect yourself from electrical shock.

- Find the room emergency power-off (EPO) switch, disconnecting switch, or electrical outlet. If an electrical accident occurs, you can then operate the switch or unplug the power cord quickly.
- Do not work alone under hazardous conditions or near the equipment that has hazardous voltages.
- Disconnect all power before:
 - Performing a mechanical inspection
 - Working near power supplies
 - Removing or installing main units
- Before you start to work on the machine, unplug the power cord. If you cannot unplug it, ask the customer to power-off the wall box that supplies power to the machine, and to lock the wall box in the off position.
- If you need to work on a machine that has exposed electrical circuits, observe the following precautions:
 - Ensure that another person, familiar with the power-off controls, is near you.

Attention: Another person must be there to switch off the power, if necessary.

- Use only one hand when working with powered-on electrical equipment; keep the other hand in your pocket or behind your back.

Attention: An electrical shock can occur only when there is a complete circuit. By observing the above rule, you may prevent a current from passing through your body.

- When using testers, set the controls correctly and use the approved probe leads and accessories for that tester.
- Stand on suitable rubber mats (obtained locally, if necessary) to insulate you from grounds such as metal floor strips and machine frames.

Observe the special safety precautions when you work with very high voltages; instructions for these precautions are in the safety sections of maintenance information. Be extremely careful when you measure the high voltages.

- Regularly inspect and maintain your electrical hand tools for safe operational condition.
- Do not use worn or broken tools and testers.
- Never assume that power has been disconnected from a circuit. First, check it to make sure that it has been powered off.

- Always look carefully for possible hazards in your work area. Examples of these hazards are moist floors, nongrounded power extension cables, power surges, and missing safety grounds.
- Do not touch live electrical circuits with the reflective surface of a plastic dental mirror. The surface is conductive; such touching can cause personal injury and machine damage.
- Do not service the following parts with the power on when they are removed from their normal operating places in a machine:
 - Power supply units
 - Pumps
 - Blowers and fans
 - Motor generatorsand similar units. (This practice ensures correct grounding of the units.)
- If an electrical accident occurs:
 - Use caution: do not become a victim yourself.
 - Switch off the power.
 - Send the victim to get medical aid.

Safety inspection guide

The purpose of this inspection guide is to assist you in identifying potential unsafe conditions. As each machine was designed and built, required safety items were installed to protect users and service personnel from injury. This guide addresses only those items. You should use good judgment to identify potential safety hazards due to attachment of non-Lenovo features or options not covered by this inspection guide.

If any unsafe conditions are present, you must determine how serious the apparent hazard could be and whether you can continue without first correcting the problem.

Consider these conditions and the safety hazards they present:

- Electrical hazards, especially primary power (primary voltage on the frame can cause serious or fatal electrical shock)
- Explosive hazards, such as a damaged CRT face or a bulging capacitor
- Mechanical hazards, such as loose or missing hardware

To determine whether there are any potential unsafe conditions, use the following checklist at the beginning of every service task. Begin the checks with the power off, and the power cord disconnected.

Checklist:

1. Check exterior covers for damage (loose, broken, or sharp edges).
2. Turn off the computer. Disconnect the power cord.
3. Check the power cord for:
 - a. A third-wire ground connector in good condition. Use a meter to measure third-wire ground continuity for 0.1 ohm or less between the external ground pin and the frame ground.
 - b. The power cord should be the type specified in the parts list.
 - c. Insulation must not be frayed or worn.
4. Check for cracked or bulging batteries.
5. Remove the cover.
6. Check for any obvious non-Lenovo alterations. Use good judgment as to the safety of any non-Lenovo alterations.
7. Check inside the unit for any obvious unsafe conditions, such as metal filings, contamination, water or other liquids, or signs of fire or smoke damage.
8. Check for worn, frayed, or pinched cables.
9. Check that the power-supply cover fasteners (screws or rivets) have not been removed or tampered with.

Handling devices that are sensitive to electrostatic discharge

Any computer part containing transistors or integrated circuits (ICs) should be considered sensitive to electrostatic discharge (ESD). ESD damage can occur when there is a difference in charge between objects. Protect against ESD damage by equalizing the charge so that the machine, the part, the work mat, and the person handling the part are all at the same charge.

Notes:

1. Use product-specific ESD procedures when they exceed the requirements noted here.
2. Make sure that the ESD protective devices you use have been certified (ISO 9000) as fully effective.

When handling ESD-sensitive parts:

- Keep the parts in protective packages until they are inserted into the product.
- Avoid contact with other people.
- Wear a grounded wrist strap against your skin to eliminate static on your body.
- Prevent the part from touching your clothing. Most clothing is insulative and retains a charge even when you are wearing a wrist strap.
- Use the black side of a grounded work mat to provide a static-free work surface. The mat is especially useful when handling ESD-sensitive devices.
- Select a grounding system, such as those listed below, to provide protection that meets the specific service requirement.

Notes:

The use of a grounding system to guard against ESD damage is desirable but not necessary.

- Attach the ESD ground clip to any frame ground, ground braid, or green-wire ground.
- When working on a double-insulated or battery-operated system, use an ESD common ground or reference point. You can use coax or connector-outside shells on these systems.
- Use the round ground prong of the ac plug on ac-operated computers.

Grounding requirements

Electrical grounding of the computer is required for operator safety and correct system function. Proper grounding of the electrical outlet can be verified by a certified electrician.

Safety notices: multilingual translations

The safety notices in this section are provided in English, French, German, Hebrew, Italian, Japanese, and Spanish.

Safety notice 1

Before the computer is powered on after FRU replacement, make sure all screws, springs, and other small parts are in place and are not left loose inside the computer. Verify this by shaking the computer and listening for rattling sounds. Metallic parts or metal flakes can cause electrical shorts.

Avant de remettre l'ordinateur sous tension après remplacement d'une unité en clientèle, vérifiez que tous les ressorts, vis et autres pièces sont bien en place et bien fixées. Pour ce faire, secouez l'unité et assurez-vous qu'aucun bruit suspect ne se produit. Des pièces métalliques ou des copeaux de métal pourraient causer un court-circuit.

Bevor nach einem FRU-Austausch der Computer wieder angeschlossen wird, muß sichergestellt werden, daß keine Schrauben, Federn oder andere Kleinteile fehlen oder im Gehäuse vergessen wurden. Der Computer muß geschüttelt und auf Klappergeräusche geprüft werden. Metallteile oder-splitter können Kurzschlüsse erzeugen.

לפני הפעלת המחשב לאחר החלפת FRU יש לוודא שכל הברגים, הקפיצים, וחלקים קטנים אחרים נמצאים במקומם ואינם חופשיים לזוז בתוך המחשב. כדי לוודא זאת, יש ללטלט את המחשב ולהקשיב לגילוי קולות שקשוק. חלקי או שבבי מתכת עלולים לגרום לקצרים חשמליים.

Prima di accendere l'elaboratore dopo che é stata effettuata la sostituzione di una FRU, accertarsi che tutte le viti, le molle e tutte le altre parti di piccole dimensioni siano nella corretta posizione e non siano sparse all'interno dell'elaboratore. Verificare ciò scuotendo l'elaboratore e prestando attenzione ad eventuali rumori; eventuali parti o pezzetti metallici possono provocare cortocircuiti pericolosi.

FRUの交換後、コンピュータの電源を入れる前に、ねじ、バネ、その他の小さな部品がすべて正しい位置にあり、またコンピュータの内部で緩んでいないことを確認してください。これを確認するには、コンピュータを振って、カチャカチャと音がしないか確かめます。金属部品や金属破片はショートの原因になることがあります。

Antes de encender el sistema despues de sustituir una FRU, compruebe que todos los tornillos, muelles y demás piezas pequeñas se encuentran en su sitio y no se encuentran sueltas dentro del sistema. Compruébelo agitando el sistema y escuchando los posibles ruidos que provocarían. Las piezas metálicas pueden causar cortocircuitos eléctricos.

Safety notice 2

DANGER

Some standby batteries contain a small amount of nickel and cadmium. Do not disassemble a standby battery, recharge it, throw it into fire or water, or short-circuit it. Dispose of the battery as required by local ordinances or regulations. Use only the battery in the appropriate parts listing. Use of an incorrect battery can result in ignition or explosion of the battery.

Certaines batteries de secours contiennent du nickel et du cadmium. Ne les démontez pas, ne les rechargez pas, ne les exposez ni au feu ni à l'eau. Ne les mettez pas en court-circuit. Pour les mettre au rebut, conformez-vous à la réglementation en vigueur. Lorsque vous remplacez la pile de sauvegarde ou celle de l'horloge temps réel, veillez à n'utiliser que les modèles cités dans la liste de pièces détachées adéquate. Une batterie ou une pile inappropriée risque de prendre feu ou d'exploser.

Die Bereitschaftsbatterie, die sich unter dem Diskettenlaufwerk befindet, kann geringe Mengen Nickel und Cadmium enthalten. Sie darf nicht zerlegt, wiederaufgeladen, kurzgeschlossen, oder Feuer oder Wasser ausgesetzt werden. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Bereitschafts- oder Systembatterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.

סוללות המתנה מסוימות מכילות כמות קטנה של ניקל וקדמיום. אין למפרק סוללת המתנה, לטעון אותה מחדש, להשליך אותה לאש או למים או לקצר אותה. יש לשלוק את הסוללה בנדרש על ידי התקנות והחוקים המקומיים. יש להשתמש רק בסוללה המופיעה ברשימת החלקים המתאימה. שימוש בסוללה לא מתאימה עלול לגרום להצתה או התפוצצות של הסוללה.

Alcune batterie di riserva contengono una piccola quantità di nichel e cadmio. Non smontarle, ricaricarle, gettarle nel fuoco o nell'acqua né cortocircuitarle. Smaltirle secondo la normativa in vigore (DPR 915/82, successive disposizioni e disposizioni locali). Quando si sostituisce la batteria dell'RTC (real time clock) o la batteria di supporto, utilizzare soltanto i tipi inseriti nell'appropriato Catalogo parti. L'impiego di una batteria non adatta potrebbe determinare l'incendio o l'esplosione della batteria stessa.

予備バッテリーの中には少量のニッケルとカドミウムが含まれているものがあります。したがって、予備バッテリーの分解、再充電、火または水の中への投棄、またはショートさせることは決して行わないでください。バッテリーを廃棄する場合は地方自治体の条例に従ってください。適切なパーツ・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。

Algunas baterías de reserva contienen una pequeña cantidad de níquel y cadmio. No las desmonte, ni recargue, ni las eche al fuego o al agua ni las cortocircuite. Deséchelas tal como dispone la normativa local. Utilice sólo baterías que se encuentren en la lista de piezas. La utilización de una batería no apropiada puede provocar la ignición o explosión de la misma.

Safety notice 3

DANGER

The battery pack contains small amounts of nickel. Do not disassemble it, throw it into fire or water, or short-circuit it. Dispose of the battery pack as required by local ordinances or regulations. Use only the battery in the appropriate parts listing when replacing the battery pack. Use of an incorrect battery can result in ignition or explosion of the battery.

La batterie contient du nickel. Ne la démontez pas, ne l'exposez ni au feu ni à l'eau. Ne la mettez pas en court-circuit. Pour la mettre au rebut, conformez-vous à la réglementation en vigueur. Lorsque vous remplacez la batterie, veillez à n'utiliser que les modèles cités dans la liste de pièces détachées adéquate. En effet, une batterie inappropriée risque de prendre feu ou d'exploser.

Akkus enthalten geringe Mengen von Nickel. Sie dürfen nicht zerlegt, wiederaufgeladen, kurzgeschlossen, oder Feuer oder Wasser ausgesetzt werden. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Batterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.

מארו הסוללה מכיל כמות קטנה של ניקל
וקדמיום. אין לפרק את מארו הסוללה, להשליך
אותו לאש או למים או לקצר אותו. יש לשלוק את
מארו הסוללה הסוללה כנדרש על ידי התקנות
והחוקים המקומיים. יש להשתמש רק בסוללה
המופיעה ברשימת החלקים המתאימה בזמן החלפת
מארו הסוללה. שימוש בסוללה לא מתאימה עלול
לגרום להצתה או התפוצצות של הסוללה.

La batteria contiene piccole quantità di nichel. Non smontarla, gettarla nel fuoco o nell'acqua né cortocircuitarla. Smaltirla secondo la normativa in vigore (DPR 915/82, successive disposizioni e disposizioni locali). Quando si sostituisce la batteria, utilizzare soltanto i tipi inseriti nell'appropriato Catalogo parti. L'impiego di una batteria non adatta potrebbe determinare l'incendio o l'esplosione della batteria stessa.

バッテリー・パックには少量のニッケルが含まれています。バッテリー・パックを分解したり、火または水の中に投げ込んだり、ショートさせないでください。バッテリー・パックの廃棄にあたっては、地方自治体の条例または規則に従ってください。バッテリー・パックを交換するときは、適切なパーツ・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。

Las baterías contienen pequeñas cantidades de níquel. No las desmonte, ni recargue, ni las eche al fuego o al agua ni las cortocircuite. Deséchelas tal como dispone la normativa local. Utilice sólo baterías que se encuentren en la lista de piezas al sustituir la batería. La utilización de una batería no apropiada puede provocar la ignición o explosión de la misma.

Safety notice 4

DANGER

The lithium battery can cause a fire, an explosion, or a severe burn. Do not recharge it, remove its polarized connector, disassemble it, heat it above 100°C (212°F), incinerate it, or expose its cell contents to water. Dispose of the battery as required by local ordinances or regulations. Use only the battery in the appropriate parts listing. Use of an incorrect battery can result in ignition or explosion of the battery.

La pile de sauvegarde contient du lithium. Elle présente des risques d'incendie, d'explosion ou de brûlures graves. Ne la rechargez pas, ne retirez pas son connecteur polarisé et ne la démontez pas. Ne l'exposez pas à une température supérieure à 100°C, ne la faites pas brûler et n'en exposez pas le contenu à l'eau. Mettez la pile au rebut conformément à la réglementation en vigueur. Une pile inappropriée risque de prendre feu ou d'exploser.

Die Systematterie ist eine Lithiumatterie. Sie kann sich entzünden, explodieren oder schwere Verbrennungen hervorrufen. Batterien dieses Typs dürfen nicht aufgeladen, zerlegt, über 100 C erhitzt oder verbrannt werden. Auch darf ihr Inhalt nicht mit Wasser in Verbindung gebracht oder der zur richtigen Polung angebrachte Verbindungsstecker entfernt werden. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Batterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.

סוללת הליתיום עלולה לגרום לשריפה, להתפוצצות או לכוויות קשות. אין לטעון אותה מחדש, לשלק את המחבר המקוטב שלה, לפרק אותה או לחמם אותה לטמפרטורה העולה על 100 מעלות צלזיוס. אין לשרוף את הסוללה ואין לחשוף את תוכן התא למים. יש לשלק את הסוללה כנדרש בתקנות ובחוקים המקומיים. יש להשתמש רק בסוללה המופיעה ברשימת החלקים המתאימים. שימוש בסוללה אחרת עלול לגרום לסכנת שריפה או התפוצצות.

La batteria di supporto e una batteria al litio e può incendiarsi, esplodere o procurare gravi ustioni. Evitare di ricaricarla, smontarne il connettore polarizzato, smontarla, riscaldarla ad una temperatura superiore ai 100 gradi centigradi, incendiarla o gettarla in acqua. Smaltirla secondo la normativa in vigore (DPR 915/82, successive disposizioni e disposizioni locali). L'impiego di una batteria non adatta potrebbe determinare l'incendio o l'esplosione della batteria stessa.

リチウム・バッテリーは、火災、爆発、または重症のやけどを引き起こすことがあります。バックアップ・バッテリーの充電、その極性コネクタの取り外し、バッテリー本体の分解、100℃(212°F)以上の加熱、焼却、電池の中身を水に浸すことはしないでください。バッテリーを廃棄する場合は地方自治体の条例に従ってください。適切なパーツ・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。

La batería de repuesto es una batería de litio y puede provocar incendios, explosiones o quemaduras graves. No la recargue, ni quite el conector polarizado, ni la desmonte, ni caliente por encima de los 100°C (212°F), ni la incinere ni exponga el contenido de sus celdas al agua. Deséchela tal como dispone la normativa local.

Safety notice 5

If the LCD breaks and the fluid from inside the LCD gets into your eyes or on your hands, immediately wash the affected areas with water at least for 15 minutes. Seek medical care if any symptoms caused by the fluid are present after washing.

Si le panneau d'affichage à cristaux liquides se brise et que vous recevez dans les yeux ou sur les mains une partie du fluide, rincez-les abondamment pendant au moins quinze minutes. Consultez un médecin si des symptômes persistent après le lavage.

Die Leuchtstoffröhre im LCD-Bildschirm enthält Quecksilber. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Der LCD-Bildschirm besteht aus Glas und kann zerbrechen, wenn er unsachgemäß behandelt wird oder der Computer auf den Boden fällt. Wenn der Bildschirm beschädigt ist und die darin befindliche Flüssigkeit in Kontakt mit Haut und Augen gerät, sollten die betroffenen Stellen mindestens 15 Minuten mit Wasser abgespült und bei Beschwerden anschließend ein Arzt aufgesucht werden.

אם מסך הנוזלי (LCD) נשבר והנוזל מתוך המסך בא במגע עם עיניים או ידיים, שטפו את האזורים הנוגעים מיד במים במשך 15 דקות לפחות. פנו לקבלת עזרה רפואית אם תסמינים הנובעים מהמגע עם הנוזל נמשכים לאחר השטיפה.

Nel caso che caso l'LCD si dovesse rompere ed il liquido in esso contenuto entrasse in contatto con gli occhi o le mani, lavare immediatamente le parti interessate con acqua corrente per almeno 15 minuti; poi consultare un medico se i sintomi dovessero permanere.

LCD が破損し、LCD 中の液体が目に入ったり、手に触れたりした場合は、液体が触れた部分を少なくとも 15 分間洗い流してください。洗い流した後に、液体によって何らかの症状が現れた場合は、医師の治療を受けてください。

Si la LCD se rompe y el fluido de su interior entra en contacto con sus ojos o sus manos, lave inmediatamente las áreas afectadas con agua durante 15 minutos como mínimo. Obtenga atención medica si se presenta algún síntoma del fluido despues de lavarse.

Safety notice 6

DANGER

To avoid shock, do not remove the plastic cover that protects the lower part of the inverter card.

Afin d'éviter tout risque de choc électrique, ne retirez pas le cache en plastique protégeant la partie inférieure de la carte d'alimentation.

Aus Sicherheitsgründen die Kunststoffabdeckung, die den unteren Teil der Spannungswandlerplatine umgibt, nicht entfernen.

כדי למנוע התחשמלות, אין להסיר את מכסה הפלסטיק המגן על חלקו התחתון של הכרטיס ההפוך.

Per evitare scosse elettriche, non rimuovere la copertura in plastica che avvolge la parte inferiore della scheda invertitore.

感電を防ぐため、インバーター・カードの下部を保護しているプラスチック・カバーを外さないでください。

Para evitar descargas, no quite la cubierta de plástico que rodea la parte baja de la tarjeta invertida.

Safety notice 7

DANGER

Though the main batteries have low voltage, a shorted or grounded battery can produce enough current to burn personnel or combustible materials.

Bien que le voltage des batteries principales soit peu élevé, le court-circuit ou la mise à la masse d'une batterie peut produire suffisamment de courant pour brûler des matériaux combustibles ou causer des brûlures corporelles graves.

Obwohl Hauptbatterien eine niedrige Spannung haben, können sie doch bei Kurzschluß oder Erdung genug Strom abgeben, um brennbare Materialien zu entzünden oder Verletzungen bei Personen hervorzurufen.

אף שהסוללות הראשיות הן בעלות מתח נמוך, סוללה מקוצרת או מוארקת עלולה להפיק זרם מספיק לגרימת כוויות או להצתת חומרים דליקים.

Sebbene le batterie di alimentazione siano a basso voltaggio, una batteria in corto circuito o a massa può fornire corrente sufficiente da bruciare materiali combustibili o provocare ustioni ai tecnici di manutenzione.

メイン・バッテリーの電圧は低くても、ショートしたり、接地したバッテリーが、作業者にやけどを負わせたり、可燃物を燃やすだけの電流を発生させる場合があります。

Aunque las baterías principales tienen un voltaje bajo, una batería cortocircuitada o con contacto a tierra puede producir la corriente suficiente como para quemar material combustible o provocar quemaduras en el personal.

Safety notice 8

⚠ DANGER

Before removing any FRU, turn off the computer, unplug all power cords from electrical outlets, remove the battery pack, and then disconnect any interconnecting cables.

Avant de retirer une unité remplaçable en clientèle, mettez le système hors tension, débranchez tous les cordons d'alimentation des socles de prise de courant, retirez la batterie et déconnectez tous les cordons d'interface.

Die Stromzufuhr muß abgeschaltet, alle Stromkabel aus der Steckdose gezogen, der Akku entfernt und alle Verbindungskabel abgenommen sein, bevor eine FRU entfernt wird.

לפני סילוק FRU כלשהו, יש לכבות את המחשב,
לנתק את כל כבלי החשמל מהשקע, להסיר את
אזני המארז הסוללה, ואז לנתק כבלי חיבור אחרים
אם יש כאלה.

Prima di rimuovere qualsiasi FRU, spegnere il sistema, scollegare dalle prese elettriche tutti i cavi di alimentazione, rimuovere la batteria e poi scollegare i cavi di interconnessione.

FRUを取り外す前に、ThinkPadの電源を切って、すべての電源コードをコンセントから外してください。次に、バッテリー・パックを外し、相互接続ケーブルを外してください。

Antes de quitar una FRU, apague el sistema, desenchufe todos los cables de las tomas de corriente eléctrica, quite la batería y, a continuación, desconecte cualquier cable de conexión entre dispositivos.

Laser compliance statement

Some models of Lenovo computer are equipped from the factory with an optical storage device such as a CD-ROM drive or a DVD-ROM drive. Such devices are also sold separately as options. If one of these drives is installed, it is certified in the U.S. to conform to the requirements of the Department of Health and Human Services 21 Code of Federal Regulations (DHHS 21 CFR) Subchapter J for Class 1 laser products. Elsewhere, the drive is certified to conform to the requirements of the International Electrotechnical Commission (IEC) 825 and CENELEC EN 60 825 for Class 1 laser products.

If a CD-ROM drive, a DVD-ROM drive, or another laser device is installed, note the following:

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.

O uso de controles, ajustes ou desempenho de procedimentos diferentes daqueles aqui especificados pode resultar em perigosa exposição à radiação.

凡未在这里指明的任何控制用法、调整、行为，都会导致严重后果。

Pour éviter tout risque d'exposition au rayon laser, respectez les consignes de réglage et d'utilisation des commandes, ainsi que les procédures décrites.

Werden Steuer- und Einstellelemente anders als hier festgesetzt verwendet, kann gefährliche Laserstrahlung auftreten.

Az itt előírt eljárásoktól, beállításoktól és vezérlésektől eltérni a lézersugárzás veszélye miatt kockázatos!

L'utilizzo di controlli, regolazioni o l'esecuzione di procedure diverse da quelle specificate possono provocare l'esposizione a.

Использование элементов настройки и выполнение процедур иных, чем указано здесь, может привести к опасному радиационному облучению.

Použitie kontrol, úprav alebo iných vykonaní od iných výrobcov, ako je v tomto špecifikované, mohlo by mať za následok nebezpečenstvo vystavenia sa vyžiarovaniu.

本書で指定された内容以外の、お客様による整備、調整、または手順を行った場合、レーザー光の放射の危険があります。

El uso de controles o ajustes o la ejecución de procedimientos distintos de los aquí especificados puede provocar la exposición a radiaciones peligrosas.

Opening the CD-ROM drive, the DVD-ROM drive, or any other optical storage device could result in exposure to hazardous laser radiation. There are no serviceable parts inside those drives. **Do not open.**

A CD-ROM drive, a DVD-ROM drive, or any other storage device installed may contain an embedded Class 3A or Class 3B laser diode. Note the following:

 DANGER

Emits visible and invisible laser radiation when open. Do not stare into the beam, do not view directly with optical instruments, and avoid direct exposure to the beam.

Radiação por raio laser ao abrir. Não olhe fixo no feixe de luz, não olhe diretamente por meio de instrumentos óticos e evite exposição direta com o feixe de luz.

开启时会有激光发射时，请勿直视激光束，请勿直接查看视觉仪器，并且避免直接接触在激光光束之中。

Rayonnement laser si carter ouvert. Évitez de fixer le faisceau, de le regarder directement avec des instruments optiques, ou de vous exposer au rayon.

Laserstrahlung bei geöffnetem Gerät. Nicht direkt oder über optische Instrumente in den Laserstrahl sehen und den Strahlungsbereich meiden.

Kinyitáskor lézersugár ! Ne nézzen bele se szabad szemmel, se optikai eszközökkel. Kerülje a sugárnyalábbal való érintkezést!

Aprendo l'unità vengono emesse radiazioni laser. Non fissare il fascio, non guardarlo direttamente con strumenti ottici e evitare l'esposizione diretta al fascio.

Открывая, берегитесь лазерного излучения. Не смотрите на луч, не разглядывайте его с помощью оптических инструментов, а также избегайте прямого воздействия лазерного луча.

Keď je laserová jednotka otvorená. Vyhnite sa priamemu pohľadu a neľadte priamo s optickými nástrojmi do lúča a vyhnite sa priamemu vystaveniu lúčov.

開けるとレーザー光が放射されます。光線を見つめたり、光学機械を使って直接見たりしないでください。

Radiación láser al abrir. No mire fijamente ni examine con instrumental óptico el haz de luz. Evite la exposición directa al haz.

Important service information

This chapter presents the following important service information:

- “Strategy for replacing FRUs” on page 16
 - “Strategy for replacing a hard disk drive” on page 17
 - “Important notice for replacing a system board” on page 17
- “Important information about replacing RoHS compliant FRUs” on page 18

Important:

BIOS and device driver fixes are customer-installable. The BIOS and device drivers are posted on the customer support site:

<http://support.lenovo.com>.

Strategy for replacing FRUs

Before replacing parts:

Make sure that all software fixes, drivers, and BIOS downloads are installed before replacing any FRUs listed in this manual.

After a system board is replaced, ensure that the latest BIOS is loaded to the system board before completing the service action.

To download software fixes, drivers, and BIOS, follow the steps below:

1. Go to <http://support.lenovo.com>.
2. Enter the serial number or select a product or use Lenovo smart downloading.
3. Select the BIOS/Driver/Applications and download.
4. Follow the directions on the screen and install the necessary software.

Use the following strategy to prevent unnecessary expense for replacing and servicing FRUs:

- If you are instructed to replace an FRU, but the replacement does not solve the problem, reinstall the original FRU before you continue.
- Some computers have both a processor board and a system board. If you are instructed to replace either of them, and replacing one of them does not solve the problem, reinstall that board, and then replace the other one.
- If an adapter or a device consists of more than one FRU, any of the FRUs may be the cause of the error. Before replacing the adapter or device, remove the FRUs one by one to see if the symptoms change. Replace only the FRU that changed the symptoms.

Attention: The setup configuration on the computer you are servicing may have been customized. Running Automatic Configuration may alter the settings. Note the current configuration settings (using the View Configuration option); then, when service has been completed, verify that those settings remain in effect.

Strategy for replacing a hard disk drive

Always try to run a low-level format before replacing a hard disk drive. This will cause all customer data on the hard disk to be lost. Make sure that the customer has a current backup of the data before performing this action.

Attention: The drive startup sequence in the computer you are servicing may have been changed. Be extremely careful during write operations such as copying, saving, or formatting. If you select an incorrect drive, data or programs can be overwritten.

Important notice for replacing a system board

Some components mounted on a system board are very sensitive. Improper handling can cause damage to those components, and may cause a system malfunction.

Attention: When handling a system board:

- Do not drop the system board or apply any excessive force to it.
- Avoid rough handling of any kind.
- Avoid bending the system board and hard pushing to prevent cracking at each BGA (Ball Grid Array) chipset.

Important information about replacing RoHS compliant FRUs

RoHS, The Restriction of Hazardous Substances in Electrical and Electronic Equipment Directive (2002/95/EC) is a European Union legal requirement affecting the global electronics industry. RoHS requirements must be implemented on Lenovo products placed on the market after June 2006. Products on the market before June 2006 are not required to have RoHS compliant parts. If the original FRU parts are non-compliant, replacement parts can also be non-compliant. In all cases if the original FRU parts are RoHS compliant, the replacement part must also be RoHS compliant.

Note: RoHS and non-RoHS FRU part numbers with the same fit and function are identified with unique FRU part numbers.

Lenovo plans to transit to RoHS compliance well before the implementation date and expects its suppliers to be ready to support Lenovo’s requirements and schedule in the EU. Products sold in 2005 and 2006 will contain some RoHS compliant FRUs. The following statement pertains to these products and any product Lenovo produces containing RoHS compliant FRUs.

RoHS compliant FRUs have unique FRU part numbers. Before or after the RoHS implementation date, failed RoHS compliant parts must always be replaced with RoHS compliant ones, so only the FRUs identified as compliant in the system HMM or direct substitutions for those FRUs may be used.

Products marketed before June 2006		Products marketed after June 2006	
Current or original part	Replacement FRU	Current or original part	Replacement FRU
Non-RoHS	Can be Non-RoHS	Must be RoHS	Must be RoHS
Non-RoHS	Can be RoHS		
Non-RoHS	Can sub to RoHS		
RoHS	Must be RoHS		

Note: A direct substitution is a part with a different FRU part number that is automatically shipped by the distribution center at the time of the order.

General checkout

This chapter presents the following information:

- “What to do first” on page 20
- “Power system checkout” on page 21

Before you go to the checkout, make sure to read the following important notes:

Important notes:

- **Only certified trained personnel can service the computer.**
- **Before replacing any FRU, read the entire page on removing and replacing FRUs.**
- **When you replace FRUs, use new nylon-coated screws.**
- **Be extremely careful during such write operations as copying, saving, or formatting.** Drives in the computer that you are servicing sequence might have been altered. If you select an incorrect drive, data or programs might be overwritten.
- **Replace an FRU only with another FRU of the correct model.** When you replace an FRU, make sure that the machine model and the FRU part number are correct by referring to the FRU parts list.
- **An FRU should not be replaced just because of a single, unreproducible failure.** Single failures can occur for a variety of reasons that have nothing to do with a hardware defect, such as cosmic radiation, electrostatic discharge, or software errors. Consider replacing an FRU only when a problem recurs. If you suspect that an FRU is defective, clear the error logs and run the test again. If the error does not recur, do not replace the FRU.
- **Be careful not to replace a nondefective FRU.**

What to do first

When you do return an FRU, you must include the following information in the parts exchange form or parts return form that you attach to it:

1. Name and phone number of servicer
2. Date of service
3. Date on which the machine failed
4. Date of purchase
5. Procedure index and page number in which the failing FRU was detected
6. Failing FRU name and part number
7. Machine type, model number, and serial number
8. Customer's name and address

Note for warranty: During the warranty period, the customer may be responsible for repair costs if the computer damage was caused by misuse, accident, modification, unsuitable physical or operating environment, or improper maintenance by the customer.

The following is a list of some common items that are not covered under warranty and some symptoms that might indicate that the system was subjected to stress beyond normal use.

Before checking problems with the computer, determine whether the damage is covered under the warranty by referring to the following list:

The following are not covered under warranty:

- LCD panel cracked from the application of excessive force or from being dropped
- Scratched (cosmetic) parts
- Distortion, deformation, or discoloration of the cosmetic parts
- Plastic parts, latches, pins, or connectors that have been cracked or broken by excessive force
- Damage caused by liquid spilled into the system
- Damage caused by the improper insertion of a PC Card or the installation of an incompatible card
- Improper disk insertion or use of an optical drive
- Diskette drive damage caused by pressure on the diskette drive cover, foreign material in the drive, or the insertion of a diskette with multiple labels
- Damaged or bent diskette eject button
- Fuses blown by attachment of a nonsupported device
- Forgotten computer password (making the computer unusable)
- Sticky keys caused by spilling a liquid onto the keyboard
- Use of an incorrect AC adapter on laptop products

The following symptoms might indicate damage caused by nonwarranted activities:

- Missing parts might be a symptom of unauthorized service or modification.
- If the spindle of a hard disk drive becomes noisy, it may have been subjected to excessive force, or dropped.

Power system checkout

To verify a symptom, follow the steps below:

1. Turn off the computer.
2. Remove the battery pack.
3. Connect the AC adapter.
4. Make sure that power is supplied when you turn on the computer.
5. Turn off the computer.
6. Disconnect the AC adapter and install the charged battery pack.
7. Make sure that the battery pack supplies power when you turn on the computer.

If you suspect a power problem, see the appropriate one of the following power supply checkouts:

- “Checking the AC adapter” on page 21
- “Checking operational charging” on page 21
- “Checking the battery pack” on page 22


Checking the AC adapter

You are here because the computer fails only when the AC adapter is used.

- If the power-on indicator does not turn on, check the power cord of the AC adapter for correct continuity and installation.
- If the computer does not charge during operation, go to “Checking operational charging”.

To check the AC adapter, follow the steps below:

1. Unplug the AC adapter cable from the computer.
2. Measure the output voltage at the plug of the AC adapter cable. See the following figure:

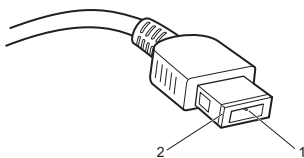

Pin	Voltage (V DC)
1	+20
2	0

Note: Output voltage for the AC adapter pin No. 2 may differ from the one you are servicing.

3. If the voltage is not correct, replace the AC adapter.
4. If the voltage is acceptable, do the following:
 - Replace the system board.
 - If the problem persists, go to “Lenovo ZhaoYang K2450” on page 28.

Note: Noise from the AC adapter does not always indicate a defect.

Checking operational charging

To check whether the battery charges properly during operation, use a discharged battery pack or a battery pack that has less than 50% of the total power remaining when installed in the computer.

Perform operational charging. If the battery status indicator or icon does not light on, remove the battery pack and let it return to room temperature. Reinstall the battery pack. If the charge indicator or icon is still off, replace the battery pack.

If the charge indicator still does not light on, replace the system board. Then reinstall the battery pack. If it is still not charged, go to the next section.

Checking the battery pack

Battery charging does not start until the Power Meter shows that less than 95% of the total power remains; under this condition the battery pack can charge to 100% of its capacity. This protects the battery pack from being overcharged or from having a shortened life.

To check your battery, move your cursor to the Power Meter icon in the icon tray of the Windows® taskbar and wait for a moment (but do not click it), and the percentage of battery power remaining is displayed. To get detailed information about the battery, double-click the Power Meter icon.

Note: If the battery pack becomes hot, it may not be able to be charged. Remove it from the computer and leave it at room temperature for a while. After it cools down, reinstall and recharge it.

Related service information

This chapter presents the following information:

- “Passwords” on page 24
- “Power management” on page 25

Restoring the factory contents by using Recovery Disc Set

When the hard disk drive or solid state drive is replaced because of a failure, no product recovery program is on the new drive. In this case, you must use the *Recovery Disc Set* for the computer. Order the *Recovery Disc Set* and the drive at the same time so that you can recover the new drive with the pre-installed software when they arrive.

The *Recovery Disc Set* consists of the following set of DVDs to restore the computer to the original factory configuration.

Start Recovery Disc (one disc)

This disc is used to format the hard disk drive and initiate the recovery process.

Operating System Recovery Disc (one or more discs)

This disc restores the Microsoft Windows operating system.

Applications and Drivers Recovery Disc (one or more discs)

This disc restores the pre-installed applications and drivers on the computer.

Supplemental Recovery Disc

This disc contains additional content, such as software for specific models and updates to the software that was preloaded on the computer. Not all recovery disc sets come with a *Supplemental Recovery Disc*.

To restore the computer to the original factory configuration using the recovery disc set, do the following:

1. Insert the bootable *Start Recovery Disc* into the optical drive.
2. Start the computer. When the Lenovo logo comes up, immediately press F12; on the boot sequence menu, select the optical drive as the first boot-up device. The computer will boot from the *Start Recovery Disc*. Follow the on-screen instructions to begin the recovery process.
3. Read the license. If you agree with the terms, select **I accept these terms and conditions** and then click **Next**.
4. Insert the **Operating System Recovery Disc** when prompted and click **Yes** to begin the operating system recovery process.
5. Insert the *Applications and Drivers Recovery Disc* when prompted and then click **OK** to begin the applications and drivers recovery process.
6. If you have a *Supplemental Recovery Disc*, insert it when prompted and click **Yes**. If you do not have a *Supplemental Recovery Disc*, click **No**.

7. When all of the data has been copied from the last disc in the set, remove the disc and restart the computer.

Note: The remainder of the recovery process is fully automated and no action is required by you. The computer will restart into the Windows desktop several times and you might experience periods when no activity is apparent on the screen for several minutes at a time. This is normal.

8. When the recovery process is complete, the Welcome to the Microsoft Windows screen is displayed. Follow the instructions on the screen to complete the Windows setup.

Passwords

Using passwords

Using passwords helps prevent your computer from being used by others. Once you set a password and enable it, a prompt appears on the screen each time you power on the computer. Enter your password at the prompt. The computer cannot be used unless you enter the correct password.

Note: This password can be a combination of one to seven alphanumeric characters.

For more information about how to set the password, refer to the online help information system on the right screen of the BIOS program.

Note: To enter the BIOS program, press F1 when the Lenovo logo is displayed on the screen while the computer is starting up.

Power management

Use your computer with ac power whenever ac power is available. Use your computer with battery power when ac power is not available.

Checking the battery status

The battery icon in the Windows notification area displays the percentage of battery power remaining. Different computer components consume power at different rates. The more you use the power-intensive components, the faster you consume battery power. Because each computer user has different habits and needs, it is difficult to predict how long a battery charge will last. There are two main factors:

- How much energy is stored in the battery when you begin to work.
- The way you use your computer:
 - How often you access the hard disk drive?
 - How bright you make the computer display?

Using the ac power adapter

When you use ac power, the battery charges automatically.

The ac power adapter that comes with your computer has two basic components:

- The transformer pack that converts ac power for use with the computer.
- The power cord that plugs into the ac outlet and into the transformer pack.

Attention: Using an improper power cord could cause severe damage to the computer.

Connecting the ac power adapter

To connect the ac power adapter, do the following:

1. Plug the power cord into an electrical outlet.
2. Connect the power cord to the transformer pack.
3. Connect the ac power adapter to the ac power connector of the computer.

Tips on using the ac power adapter

Observe the following guidelines when using the ac power adapter:

- When the ac power adapter is not in use, disconnect it from the electrical outlet.
- Do not bind the power cord tightly around the ac power adapter transformer pack when it is connected to the transformer.
- Before you charge the battery, make sure that its temperature is at least 10°C (50°F).
- You can charge the battery when the ac power adapter is connected to the computer and the battery is installed. Charge it in any of the following conditions:
 - When you purchase a new battery
 - If the battery meter at the bottom of your display indicates a low battery charge level
 - If the battery has not been used for a long time

Charging the battery

It is recommended that you charge the battery or replace it with a charged battery on any of the following conditions:

- The percentage of battery power remaining is low.
- The power alarm alerts you that the remaining power is low.

Maximizing the battery life

To maximize the battery life, do the following:

- Use the battery until the charge is depleted; that is, use the battery until the battery status indicator starts blinking orange.
- Fully recharge the battery before using it. The battery is fully charged if the battery indicator shows solid green when the ac power adapter is plugged in.
- Always use power management features such as power modes, sleep, and hibernation.

Power-saving modes

There are several modes that you can use at any time to conserve power. This topic introduces each mode and gives tips on the effective use of the battery power.

Sleep mode

If you are not going to use the computer for a short time, put the computer into sleep mode. When the computer is in sleep mode, you can wake it up to resume use and bypass the startup process.

To put the computer into sleep mode, do the following:

• **Windows 7:**

1. Click **Start**.
2. Click the triangle mark next to the **Shut down** icon, and then select **Sleep**.

• **Windows 8:**

1. Move the cursor to the top-right or bottom-right corner of the screen to display the charms.
 2. Click **Settings**.
 3. Select **Sleep** from the **Power** menu options.
- Press Fn + F1.

Attention: Wait until the power indicator starts blinking (indicating that the computer is in sleep state) before you move the computer. Moving the computer while the hard disk drive is spinning can damage the hard disk drive, causing loss of data.

To wake up the computer, do one of the following:

- Press the power button.
- Press the Fn key on the keyboard.

Hibernation mode

By using this mode, you can turn off the computer completely without saving files or exiting from any program that is running. When the computer enters hibernation mode, all open programs, folders, and files are saved to the hard disk drive, and then the computer turns off.

To put the computer into hibernation mode, do the following:

- **Windows 7:**

1. Click **Start**.
2. Click the triangle mark next to the **Shut down** icon, and then select **Hibernation**.

- **Windows 8:**

1. Move the cursor to the top-right or bottom-right corner of the screen to display the charms.
2. Click **Settings**.
3. Select **Hibernation** from the **Power** menu options.

Shutting down the computer

If you are not going to use the computer for a day or two, shut it down.

To shut down the computer, do the following:

- **Windows 7:**

Click **Start** → **Shut down**.

- **Windows 8:**

1. Move the cursor to the top-right or bottom-right corner of the screen to display the charms.
2. Click **Settings**.
3. Select **Shut down** from the **Power** menu options.

Lenovo ZhaoYang K2450

This chapter presents the following product-specific service references and product-specific parts information:

- “Specifications” on page 28
- “Status indicators” on page 30
- “FRU tests” on page 31
- “FRU replacement notices” on page 34
- “Removing and replacing an FRU” on page 35
- “Locations” on page 63
- “Parts list” on page 67

Specifications

Features

This topic provides information about the computer features.

Processor

- To view the processor information of your computer, do either of the following:
 - Windows® 7: Click **Start**, right-click **Computer**. Then click **Properties**.
 - Windows 8: From the desktop, move the cursor to the top-right or bottom-right corner of the screen to display the charms. Then click **Settings** → **PC info**.

Memory

- Double data rate 3 low-voltage (DDR3L) synchronous dynamic random access memory (SDRAM)

Storage device

- 2.5-inch hard disk drive with a height of 7 mm / 9.5 mm (0.28 inch / 0.37 inch)
- 2.5-inch solid-state drive with a height of 7 mm (0.28 inch)

Note: If your computer is equipped with both a hard disk drive and an M.2 solid-state drive, you are not recommended to use the M.2 solid-state drive as a bootable device. The M.2 solid-state drive is designed and developed for “cache” function purpose only. If you use the M.2 solid-state drive as a bootable device, its reliability is not guaranteed.

Display

- Size: 317.5 mm (12.5 inches)
- Resolution:
 - LCD: 1366-by-768
 - External monitor: Maximum 2048-by-1536
- Camera
- Built-in microphones

Keyboard

- 6-row Lenovo keyboard

Interface

- Combo audio jack
- External monitor connector
- HDMI connector
- RJ45 Ethernet connector
- USB 2.0 connector
- USB 3.0 connector
- 4-in-1 digital media card reader slot

Wireless features

- Integrated wireless LAN
- 100/1000 Mbps Ethernet communication

Specifications

This topic lists the physical specifications for your computer.

Heat output

- 45 W (222 Btu/hr)

Power source (ac power adapter)


- Sine-wave input at 50 to 60 Hz
- Input rating of ac power adapter: 100 to 240 V ac, 50 to 60 Hz

Battery pack

- Lithium-ion (Li-ion) battery pack

Status indicators

The system status indicators below show the computer status:

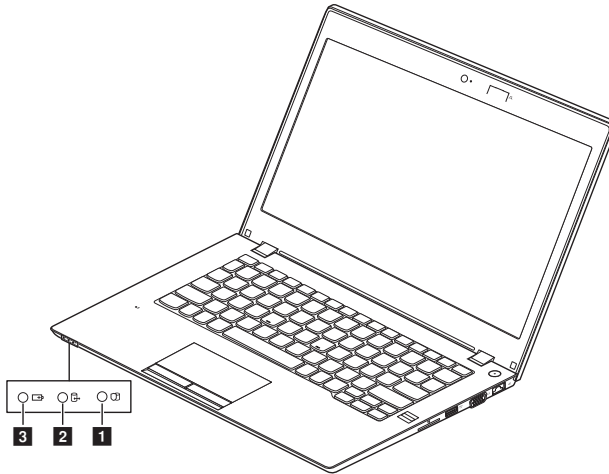

1 Active Protection System™ (APS) status indicator

- **Green:** Impact shock has been detected, so the hard disk drive is temporarily locked.
- **Off:** No impact shock has been detected, and the hard disk drive is operating normally.

2 Device access status indicator

When this indicator is on, the hard disk drive is reading or writing data.

Attention:

- When the indicator is on, do not put the computer into sleep mode or turn off the computer.
- When the indicator is on, do not move the computer. Sudden physical shock might cause drive errors.

3 Battery status indicator

- **Green:** The battery charge level is between 80% and 100%, or the battery discharge level is between 20% and 100%.
- **Slow-blinking green:** The battery charge level is between 20% and 80%, and charging is continuing. When the battery charge level reaches 80%, the battery status indicator stops blinking, but the charging might continue until the battery is 100% charged.
- **Slow-blinking amber:** The battery charge level is between 5% and 20%, and the charging is continuing. When the battery charge level reaches 20%, the blinking color changes to green.
- **Amber:** The battery discharge level is between 5% and 20%.
- **Fast-blinking amber:** The battery charge or discharge level is 5% or less.
- **Off:** The battery is detached or the computer is powered off.


Special keys and buttons

Your computer has several special keys and buttons to help you work more easily and effectively.

Function key combinations

The following illustration shows the locations of the special keys on your computer. To use the function key combinations, press the Fn key **1**, then press one of the function keys **2**.

Your computer might look different from the following illustration.

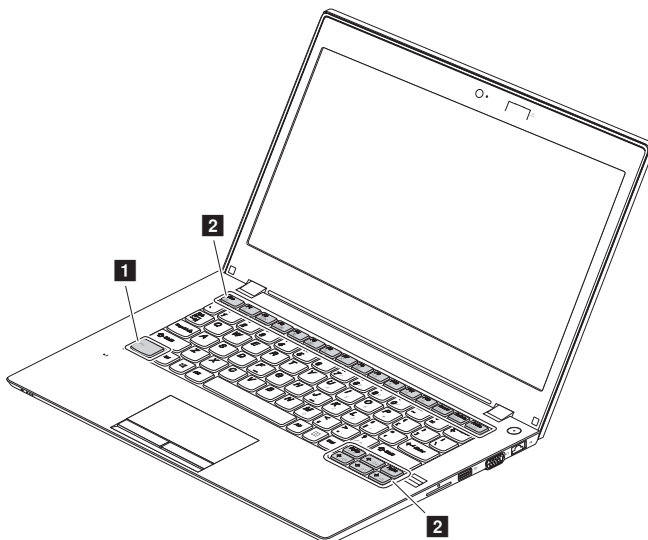

The following is a brief introduction to the function key combinations.

Configuring Keyboard light (Fn + Esc)

Enables or disables the keyboard light.

Power conservation (Fn + F1)

Puts your computer into sleep mode.

Display backlight feature (Fn + F2)

Enables or disables the display backlight feature.

Switching the display output location (Fn + F3)

Switches between the computer display and an external monitor. The following options will be displayed:

- **PC screen only**
- **Duplicate**
- **Extend**

- **Second screen only**

Note: You can also press the Windows key + P combination to switch between the computer display and an external monitor.

Configuring camera settings (Fn + F4)

- Windows 7: Press Fn + F4 to open the camera and audio settings window. The camera preview is turned on. Change the camera and audio settings as desired.
- Windows 8: Press Fn + F4 to enable or disable the camera.

Wireless radio control (Fn + F5)

Enables or disables the built-in wireless networking features.

Muting/Unmuting volume (Fn + F6)

Cuts off or turns on the volume.

Enabling/Disabling built-in microphone (Fn + F7)

Enables or disables the built-in microphone.

Touch pad control (Fn + F8)

Enables or disables the touch pad function.

Multimedia controls

- Fn + F9: Play or Pause
- Fn + F10: Stop
- Fn + F11: Previous track or scene
- Fn + F12: Next track or scene

Volume controls (Fn + left or right arrow)

To adjust the sound volume from your computer, do the following:

- **Fn + left arrow:** Decreases the sound volume.
- **Fn + right arrow:** Increases the sound volume.

Adjusting display brightness (Fn + up or down arrow)

To adjust the display brightness, do the following:

- **Fn + up arrow:** Increases the display brightness.
- **Fn + down arrow:** Decreases the display brightness.

Other functions

- **Fn + Insert:** Has the same function as the Numeric Lock key on a conventional keyboard.
- **Fn + PrtSc:** Has the same function as the SysRq key on a conventional keyboard.
- **Fn + PgUp:** Has the same function as the Home key on a conventional keyboard.
- **Fn + PgDn:** Has the same function as the End key on a conventional keyboard.

FRU replacement notices

This section presents notices related to removing and replacing parts. Read this section carefully before replacing any FRU.

Screw notices

Loose screws can cause a reliability problem. In the Lenovo computer, this problem is addressed with special nylon-coated screws that have the following characteristics:

- They maintain tight connections.
- They do not easily come loose, even with shock or vibration.
- They are harder to tighten.
- Each one should be used only once.


Do the following when you service this machine:

- Keep the screw kit in your tool bag.
- Remove screws carefully for reuse.
- Use a torque screwdriver if you have one.

Tighten screws as follows:


- **Plastic to plastic**

Turn an additional 90° after the screw head touches the surface of the plastic part:

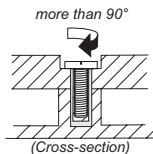

- **Logic card to plastic**

Turn an additional 180° after the screw head touches the surface of the logic card:

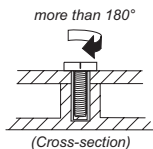

- **Torque driver**

If you have a torque screwdriver, refer to the "Torque" column for each step.

- Make sure that you use the correct screws. If you have a torque screwdriver, tighten all screws firmly to the torque shown in the table. **Never use a screw that you removed. Use a new one. Make sure that all screws are tightened firmly.**
- Ensure torque screwdrivers are calibrated correctly following country specifications.

Removing and replacing an FRU

This section presents exploded figures with the instructions to indicate how to remove and replace the FRU. Make sure to observe the following general rules:

1. Do not attempt to service any computer unless you have been trained and certified. An untrained person runs the risk of damaging parts.
2. Before replacing any FRU, review “FRU replacement notices” on page 34.
3. Begin by removing any FRUs that have to be removed before the failing FRU. Any of such FRUs are listed at the top of the page. Remove them in the order in which they are listed.
4. Follow the correct sequence in the steps to remove the FRU, as given in the figures by the numbers in square callouts.
5. When turning a screw to replace an FRU, turn it in the direction as given by the arrow in the figure.
6. When removing the FRU, move it in the direction as given by the arrow in the figure.
7. To put the new FRU in place, reverse the removal procedures and follow any of the notes that pertain to replacement. For information about connecting and arranging internal cables, see “Locations” on page 63.
8. When replacing an FRU, use the correct screw as shown in the procedures.

DANGER

Before removing any FRU, turn off the computer, unplug all power cords from electrical outlets, remove the battery pack, and then disconnect any of the interconnecting cables.


Attention: After replacing an FRU, do not turn on the computer until you have made sure that all screws, springs, and other small parts are in place and none are loose inside the computer. Verify this by shaking the computer gently and listening for rattling sounds. Metallic parts or metal flakes can cause electrical short circuits.

Attention: The system board is sensitive to, and can be damaged by, electrostatic discharge. Before touching it, establish personal grounding by touching a ground point with one hand or using an electrostatic discharge (ESD) strap (P/N 6405959) to remove potential shock reasons.

1010 Keyboard

Figure 1. Removal steps of keyboard

Remove screws **1**.

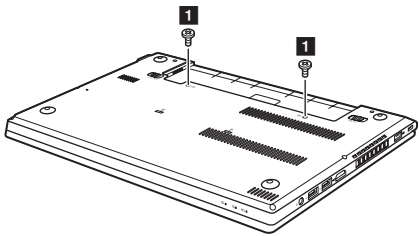


Step	Screw (quantity)	Color	Torque	P/N
1	M2 × 5 mm, flat-head, nylok-coated (2)	Black	1.85+/-0.15 kgfcm	101500414

Loosen the keyboard with a flat blade in the direction shown by arrow **2**.



Figure 1. Removal steps of keyboard (continued)

Lift the keyboard a little **3**, and then detach the connector in the direction shown by arrows **4** **5**.

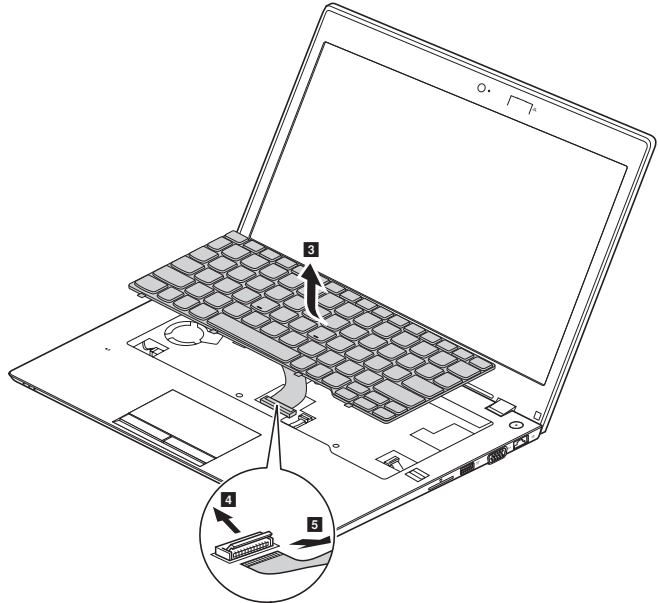

When installing: Make sure that the FPC connector is attached firmly.

1020 Battery pack

For access, remove this FRU:


- “1010 Keyboard” on page 36

⚠ DANGER


- Only use the battery specified in the parts list for your computer. Any other battery could ignite or explode.

Figure 2. Removal steps of battery pack

Unlock the manual battery latch **1**. Holding the spring-loaded battery latch in the unlocked position **2**, remove the battery pack in the direction shown by the arrow **3**.

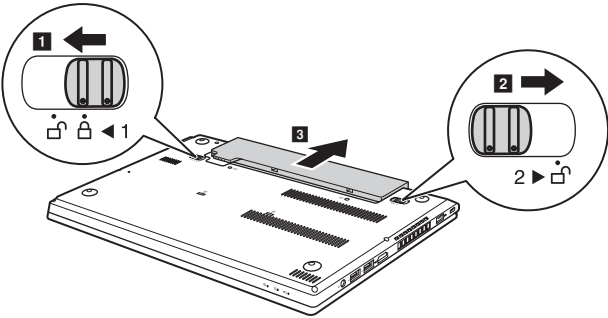


Remove six screws **4**.

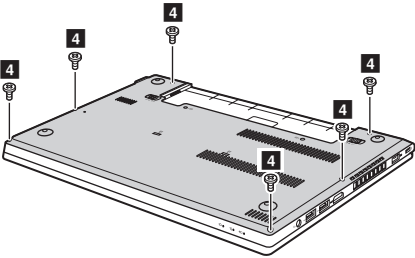

Step	Screw (quantity)	Color	Torque
1	M2 × 5 mm, flat-head, nylok-coated (6)	Black	1.85+/-0.15 kgfcm

Figure 2. Removal steps of battery pack (continued)

Remove three screws **5** .

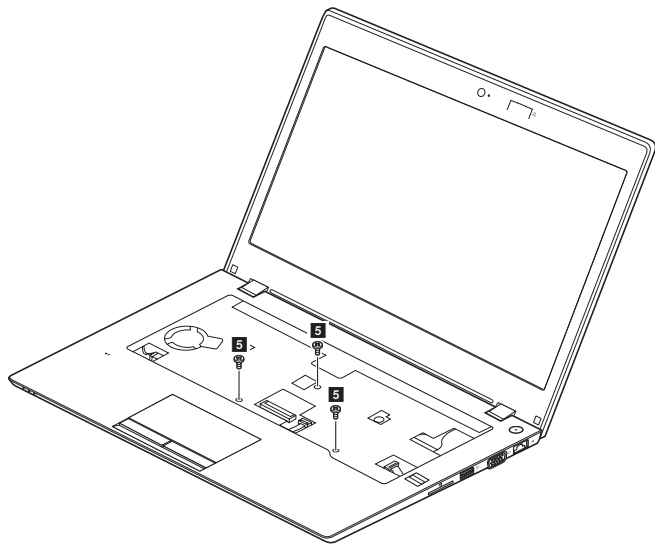

Step	Screw (quantity)	Color	Torque
1	M2.0 × 5 mm, flat-head, nylok-coated (3)	Black	1.85+/-0.15 kgfcm

Insert the thin flat blade between the frame join near the ventilation slots, then carefully move the blade along the join to remove the back cover.


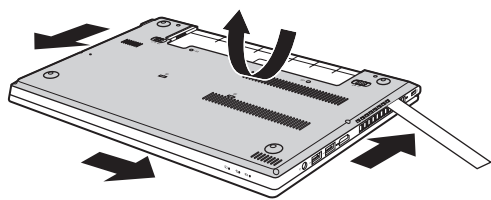



Figure 2. Removal steps of battery pack (continued)

Unplug the battery connector in the direction shown by arrow **1** first, then remove three screws **2**.

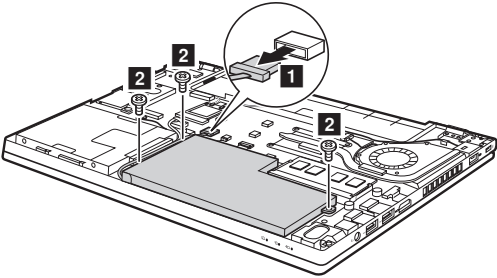

Step	Screw (quantity)	Color	Torque
3	M2 × 5 mm, flat-head, nylok-coated (3)	Black	1.85+/-0.15 kgfcm


Remove the battery in the direction shown by arrow **3**.

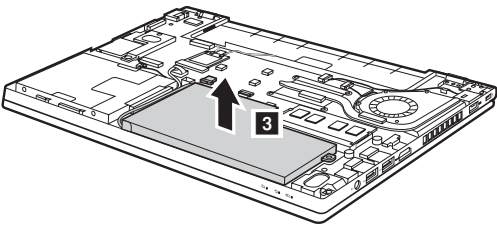

1030 Dummy card

Figure 3. Removal steps of dummy cards

Remove the dummy card in the direction shown by arrows **1** **2** .

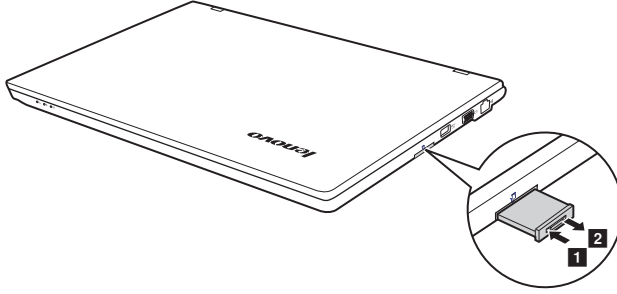

1040 Hard disk drive

For access, remove these FRUs in order:


- “1010 Keyboard” on page 36
- “1020 Battery pack” on page 38

Attention:

- **Do not drop the hard disk drive or apply any physical shock to it.**
The hard disk drive is sensitive to physical shock. Improper handling can cause damages and permanent loss of data.
- Before removing the drive, suggest the customer to backup all the information on it if possible.
- Never remove the drive while the system is operating or is in suspend mode.

Figure 4. Removal steps of hard disk drive

Disconnect the hard disk drive connector **1**.

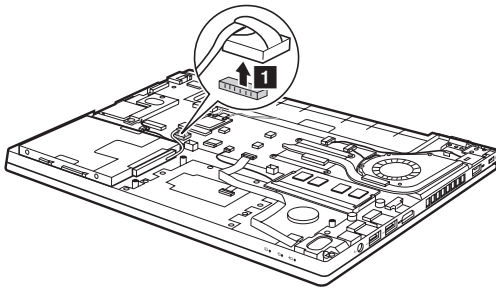

Take out the hard disk drive secured in a metal frame in the direction shown by arrow **2**.



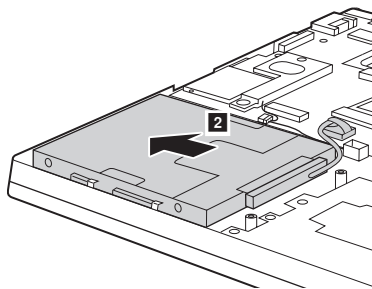


Figure 4. Removal steps of hard disk drive (continued)

Hold the SATA receptacle connector with one hand and pull the hard disk drive (secured in the metal frame) in the direction shown below to detach the connector.

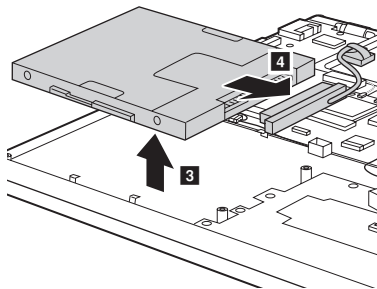

Remove four screws **5** and detach the metal frame from the hard disk drive.

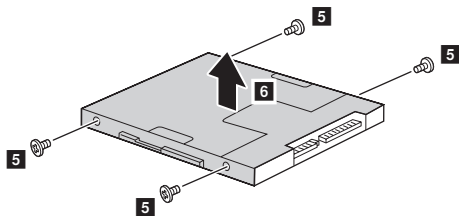

Step	Screw (quantity)	Color	Torque	P/N
3	M3.0 × 3 mm, flat-head, nylok-coated (4)	Black	3.0+/-0.15 kgfcm	101500323

When installing: Make sure that the HDD connector is attached firmly.


1050 DIMM

For access, remove these FRUs in order:

- “1010 Keyboard” on page 36
- “1020 Battery pack” on page 38

Figure 5. Removal steps of DIMM

Release the two latches on both edges of the socket at the same time in the direction shown by arrows **1**, and then unplug the DIMM in the direction shown by arrow **2**.

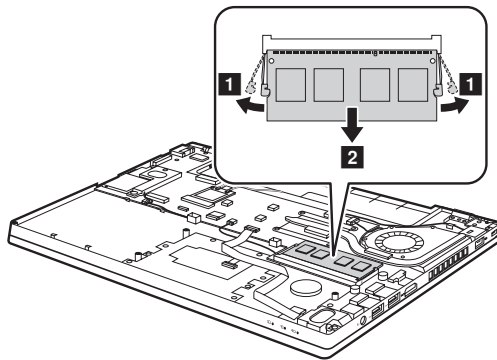


When installing: Insert the notched end of the DIMM into the socket. Push the DIMM firmly, and pivot it until it snaps into the place. Make sure that it is firmly fixed in the slot and difficult to be moved.

1060 PCI Express Mini Card for wireless LAN/WAN and SSD card

- For access, remove these FRUs in order:
- “1010 Keyboard” on page 36
 - “1020 Battery pack” on page 38

Figure 6. Removal steps of PCI Express Mini Card for wireless LAN/WAN and SSD card

Disconnect the two wireless LAN cables (black,white) **1**, and then remove the screw **2**.

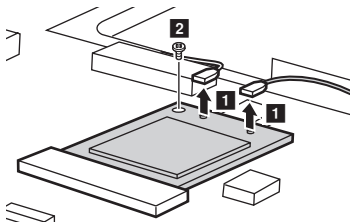


In step **1**, unplug the jacks by using the removal tool antenna RF connector (P/N: 08K7159), or pick up the connectors with your fingers and gently unplug them in the direction shown by arrows.

Notes: wireless LAN card has 2 cables in step **1**.
wireless LAN card in some models may have 3 cables in step **1**.

Step	Screw (quantity)	Color	Torque	P/N
1	M2.0 × 3.0 mm, flat-head, nylok-coated (1)	Black	1.85+/-0.15 kgfcm	101500325

Figure 6. Removal steps of PCI Express Mini Card for wireless LAN/WAN and SSD card (continued)


Remove the card in the direction shown by arrow **3**.

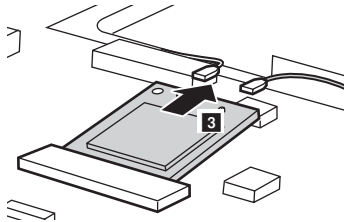


When installing:

- In models with a wireless LAN card that has two antenna connectors, plug the black cable (1st) (MAIN) into the jack labeled **1**, and the white cable (2nd) (AUX) into jack labeled **2** on the card.
- In models with a wireless LAN card that has three antenna connectors, plug the black cable (1st) (MAIN) into the jack labeled **1**, the grey cable (3rd) into jack labeled **3**, and the white cable (2nd) (AUX) into jack labeled **2** on the card.

Remove the screw **4**.

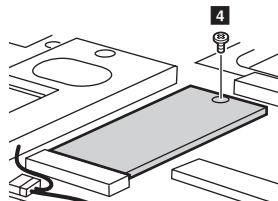

Remove the card in the direction shown by arrow **5**.

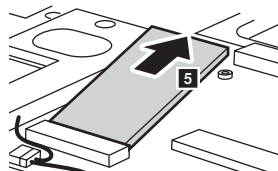

Step	Screw (quantity)	Color	Torque	P/N
1	M2.0 × 3 mm, flat-head, nylokcoated (1)	Black	1.85+/-0.15 kgfcm	101500325

1070 System board

Important notices for handling the system board:

When handling the system board, bear the following in mind.


- Be careful not to drop the system board on a bench top that has a hard surface, such as metal, wood, or composite.
- Avoid rough handling of any kind.
- In the whole process, make sure not to drop or stack the system board.
- If you put a system board down, make sure to put it only on a padded surface such as an ESD mat or conductive corrugated material.

For access, remove these FRUs in order:

- “1010 Keyboard” on page 36
- “1020 Battery pack” on page 38
- “1030 Dummy card” on page 41
- “1040 Hard disk drive” on page 42
- “1050 DIMM” on page 44
- “1060 PCI Express Mini Card for wireless LAN/WAN and SSD card” on page 45


Figure 7. Removal steps of system board (continued)

Remove two screws **1**, and then remove the speaker in the direction shown by arrow **2**.

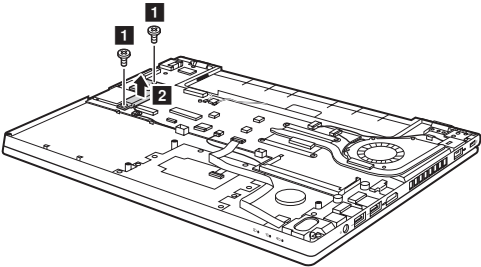

Step	Screw (quantity)	Color	Torque
1	M2 × 3 mm, flat-head, nylok-coated (2)	Black	1.85+/-0.15 kgfcm


Remove four screws **1**.

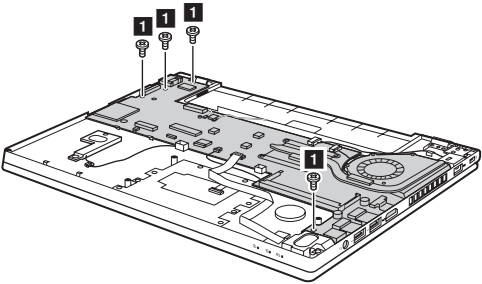

Step	Screw (quantity)	Color	Torque
2	M2 × 5 mm, flat-head, nylok-coated (2)	Black	1.85+/-0.15 kgfcm

Figure 7. Removal steps of system board (continued)


Unplug DC-IN cable connector in the direction **1**, back-up battery connector in the direction **2**, speaker connector in the direction **5**, microphone connector in the direction **6**, detach LED board connector in the directions **3** **4**, touch pad connector in the directions **7** **8**, finger printer connector in the directions **9** **10**, disconnect the LCD connector in the direction **11**.

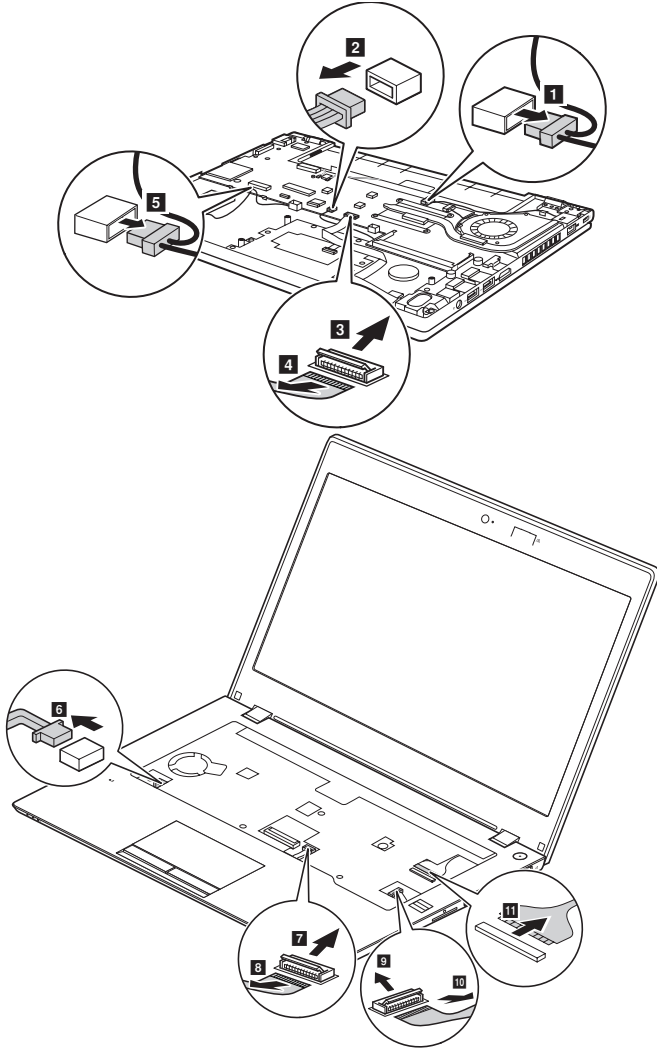

When installing: Make sure that all the connectors are attached firmly.

Figure 7. Removal steps of system board (continued)

Remove the system board in the direction shown by arrow **12**.

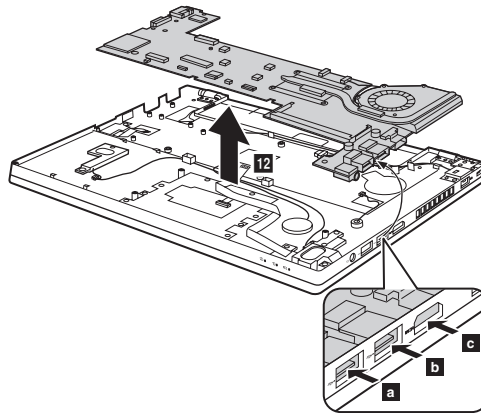

When installing: When attaching the system board to the base cover, adjust the placement of the USB, HDMI ports as shown in **a b c**, and make sure that they are attached to the holes on the base cover as shown. Improper placement of those jacks might cause a damage.


1080 Fan assembly and Heat Sink assembly

For access, remove these FRUs in order:

- “1010 Keyboard” on page 36
- “1020 Battery pack” on page 38
- “1070 System board” on page 47

Figure 8. Removal steps of fan assembly and heat sink assembly

Unplug the fan connector in the direction shown by arrow **1**.

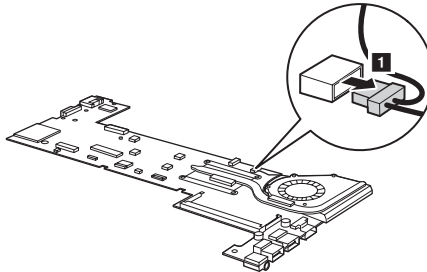

When installing: Make sure that the fan connector is attached firmly to the system board.

Loosen four screws **2**.


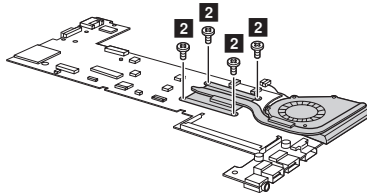


Figure 8. Removal steps of fan assembly and heat sink assembly (continued)

Lift the fan assembly and heat sink assembly in the direction shown by arrow

3. Be careful not to damage the connector.

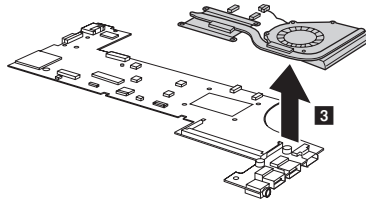


1090 LCD unit

For access, remove these FRUs in order:

- “1010 Keyboard” on page 36
- “1020 Battery pack” on page 38
- “1040 Hard disk drive” on page 42
- “1050 DIMM” on page 44
- “1060 PCI Express Mini Card for wireless LAN/WAN and SSD card” on page 45
- “1080 Fan assembly and Heat Sink assembly” on page 51
- “1070 System board” on page 47

Figure 9. Removal steps of LCD unit

Remove five screws **1**.

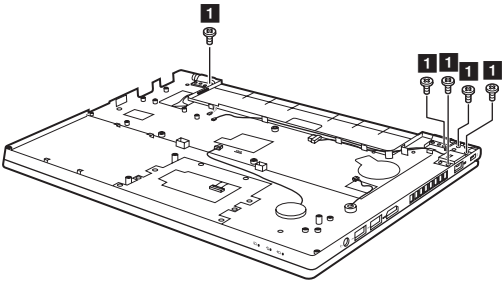


Step	Screw (quantity)	Color	Torque
1	M2 × 5 mm, flat-head, nylok-coated (5)	Black	1.85+/-0.15 kgfcm

When installing:

- Route the antenna cables along the cable guides. As you route the cables, make sure that they are not subjected to any tension. Tension could cause the cables to be damaged by the cable guides, or a wire to be broken.
- Make sure that the LCD connector is attached firmly and make sure that you do not pinch the antenna cables when you attach the LCD assembly. Route the LCD cable along the cable guides.

Figure 9. Removal steps of LCD unit (continued)

Detach the LCD unit from the upper case.

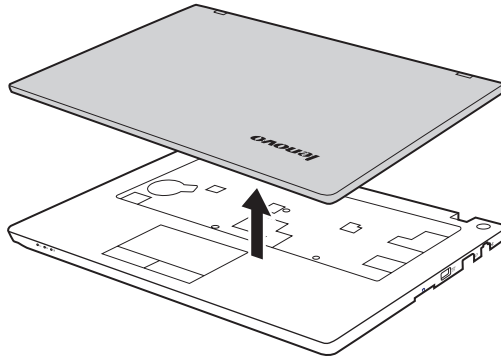


1100 Speaker, base cover, finger printer board, power assembly and LED board

For access, remove these FRUs in order:


- “1010 Keyboard” on page 36
- “1020 Battery pack” on page 38
- “1040 Hard disk drive” on page 42
- “1050 DIMM” on page 44
- “1060 PCI Express Mini Card for wireless LAN/WAN and SSD card” on page 45
- “1080 Fan assembly and Heat Sink assembly” on page 51
- “1070 System board” on page 47
- “1090 LCD unit” on page 53

Figure 10. Speaker, base cover, finger printer board, power assembly and LED board
Remove three screws **1**, and then remove the speaker in the direction shown by arrow **2**.

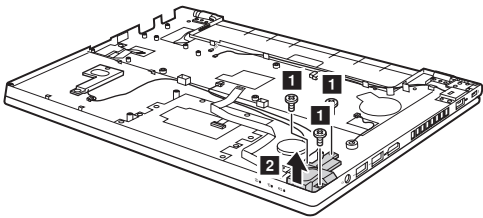

Step	Screw (quantity)	Color	Torque
1	M2 × 3 mm, flat-head, nylok-coated (3)	Black	1.85+/-0.15 kgfcm


Remove the power assembly in the direction shown by arrow **3**.

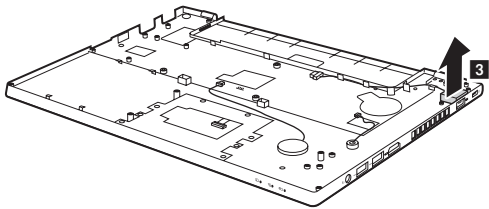

When installing: Make sure that the power connector is attached firmly.


Figure 10. Speaker, base cover, finger printer board, power assembly and LED board (continued)

Remove screw **3**, and then remove the finger printer board in the direction shown by arrow **4**.

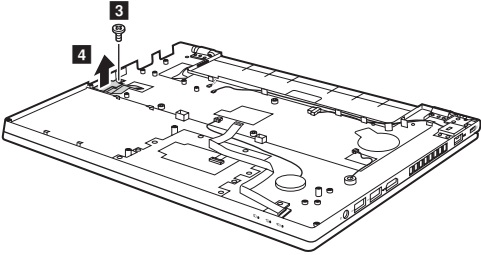

Step	Screw (quantity)	Color	Torque
1	M2 × 2 mm, flat-head, nylok-coated (1)	Black	1.85+/-0.15 kgfcm


Remove screw **5**. Detach the LED board connector to lift the LED board in the direction shown by arrow **6**.

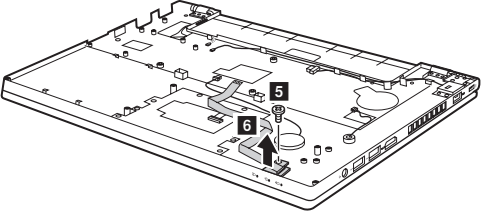

Applying labels to the base cover

The new base cover FRU is shipped with a kit containing labels of several kinds. Apply those labels when you replace the base cover. For labels which are not shipped with the new base cover, peel them from the replaced base cover and adhere them to the new one.

Note: If the Certificate of Authenticity (COA) label (b) is attached to a replaced part, return the replaced part to the customer, or provide a letter to the customer stating the original label part number, serial number, and product key.

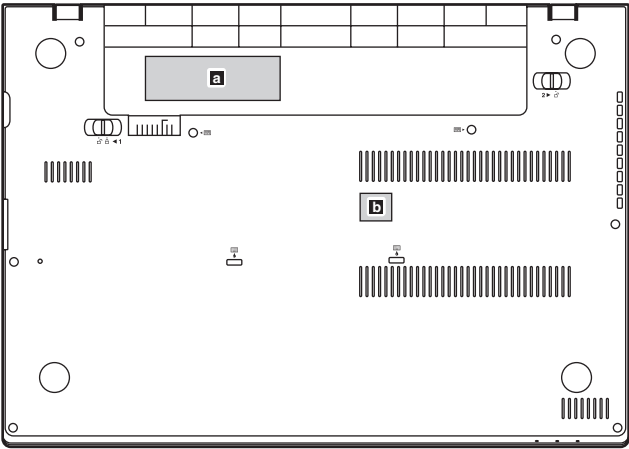

The following letter shows the correct location of each label. Not all labels are attached on the part you are servicing.

- a** Rating label
- b** GML label


1110 LCD front bezel

For access, remove these FRUs in order:


- “1010 Keyboard” on page 36
- “1020 Battery pack” on page 38
- “1040 Hard disk drive” on page 42
- “1050 DIMM” on page 44
- “1060 PCI Express Mini Card for wireless LAN/WAN and SSD card” on page 45
- “1080 Fan assembly and Heat Sink assembly” on page 51
- “1070 System board” on page 47
- “1090 LCD unit” on page 53
- “1100 Speaker, base cover, finger printer board, power assembly and LED board” on page 55

Figure 11. Removal steps of LCD front bezel

Remove screws **1**.

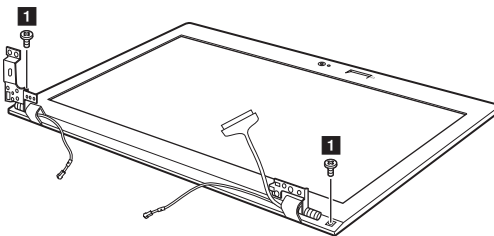

Remove the LCD front bezel in the direction shown by arrows **2**.

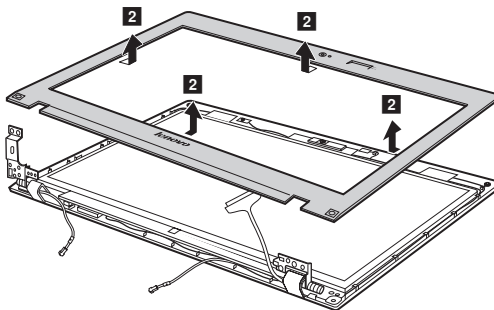


1120 LCD panel, LCD cable and hinges

For access, remove these FRUs in order:

- "1010 Keyboard" on page 36
- "1020 Battery pack" on page 38
- "1040 Hard disk drive" on page 42
- "1050 DIMM" on page 44
- "1060 PCI Express Mini Card for wireless LAN/WAN and SSD card" on page 45
- "1080 Fan assembly and Heat Sink assembly" on page 51
- "1070 System board" on page 47
- "1090 LCD unit" on page 53
- "1100 Speaker, base cover, finger printer board, power assembly and LED board" on page 55
- "1110 LCD front bezel" on page 58

Figure 12. LCD panel, LCD cable and hinges

Disconnect the connector **1**.

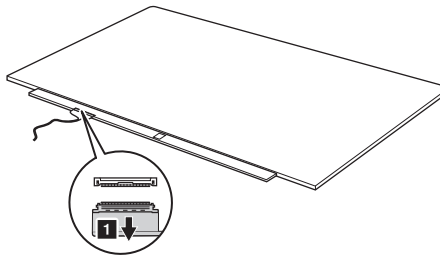

When installing: Make sure that the connector is attached firmly.

Lift the LCD panel in the direction shown by arrow **2**.


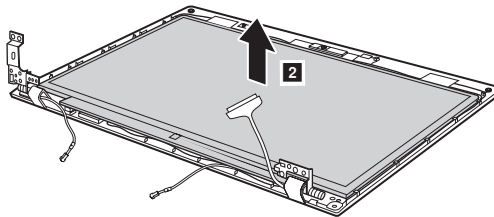


Figure 12. LCD panel, LCD cable and hinges (continued)

Remove screws **3** and the hinges in the direction shown by arrows **4**.

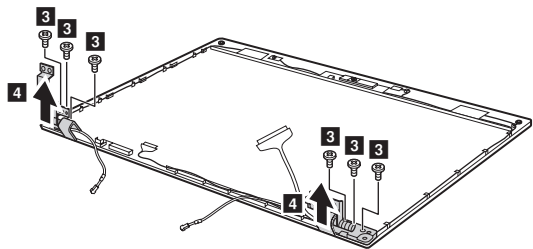

Step	Screw (quantity)	Color	Torque
1	M2.5 × 3 mm, flat-head, nylok-coated (6)	Black	3.0+/-0.15 kgfcm

1130 Integrated camera


For access, remove these FRUs in order:

- “1010 Keyboard” on page 36
- “1020 Battery pack” on page 38
- “1040 Hard disk drive” on page 42
- “1050 DIMM” on page 44
- “1060 PCI Express Mini Card for wireless LAN/WAN and SSD card” on page 45
- “1080 Fan assembly and Heat Sink assembly” on page 51
- “1070 System board” on page 47
- “1090 LCD unit” on page 53
- “1100 Speaker, base cover, finger printer board, power assembly and LED board” on page 55
- “1110 LCD front bezel” on page 58
- “1120 LCD panel, LCD cable and hinges” on page 59

Figure 13. Removal steps of integrated camera

Note: The integrated camera is stuck on the top center of the LCD cover.

Disconnect the connector **1**, remove the integrated camera from the LCD cover in the direction **2**.

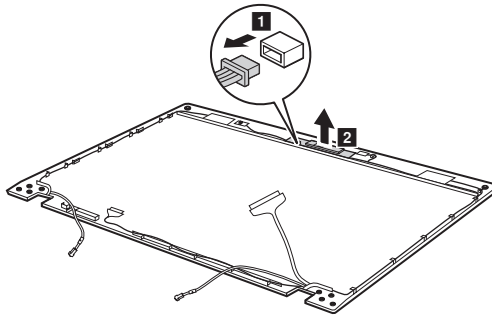

When installing: Stick the integrated camera to the top center of the LCD cover and adjust the placement of it to make sure the connector is attached firmly.


1140 Antenna assembly and LCD cover

For access, remove these FRUs in order:

- “1010 Keyboard” on page 36
- “1020 Battery pack” on page 38
- “1040 Hard disk drive” on page 42
- “1050 DIMM” on page 44
- “1060 PCI Express Mini Card for wireless LAN/WAN and SSD card” on page 45
- “1080 Fan assembly and Heat Sink assembly” on page 51
- “1070 System board” on page 47
- “1090 LCD unit” on page 53
- “1100 Speaker, base cover, finger printer board, power assembly and LED board” on page 55
- “1110 LCD front bezel” on page 58
- “1120 LCD panel, LCD cable and hinges” on page 59
- “1130 Integrated camera” on page 61

Figure 14. Removal steps of antenna assembly and LCD cover

Peel off the adhesive tapes securing the antenna boards, release the cables from the cable guide, and then remove the antenna assembly in the direction shown by arrows **1**.

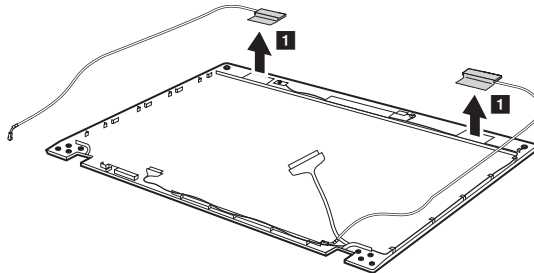


When installing: Route the antenna cables along the cable guides and secure the antenna boards with adhesive tapes. As you route the cables, make sure that they are not subjected to any tension. Tension could cause the cables to be damaged by the cable guides, or a wire to be broken.

Locations


Front view

- 1** Camera
- 2** Camera indicator
- 3** Keyboard light
- 4** Power button
- 5** Fingerprint reader
- 6** Right-click button
- 7** Touch pad
- 8** Left-click button
- 9** Status indicators
- 10** Microphones

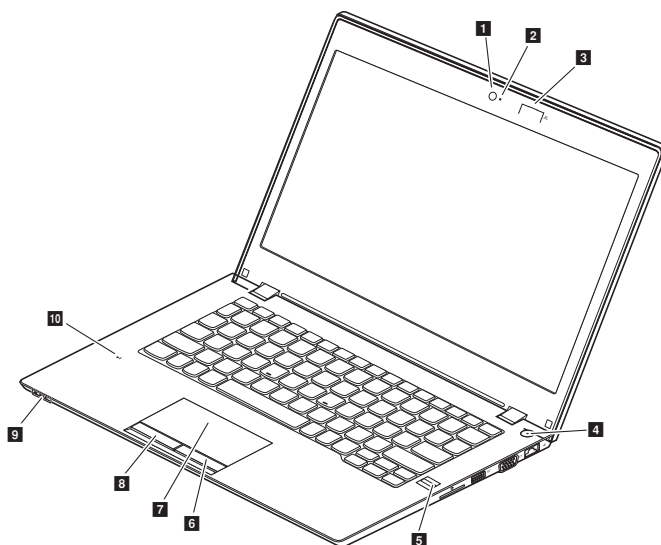


Bottom view

- 1** Battery lock
- 2** Battery
- 3** Battery latch
- 4** Speakers

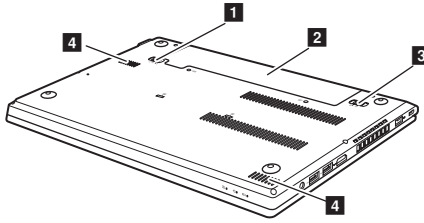


Left-side view

- 1 Security keyhole
- 2 ac power connector
- 3 Fan louvers
- 4 HDMI connector
- 5 USB 2.0 connectors
- 6 Combo audio jack

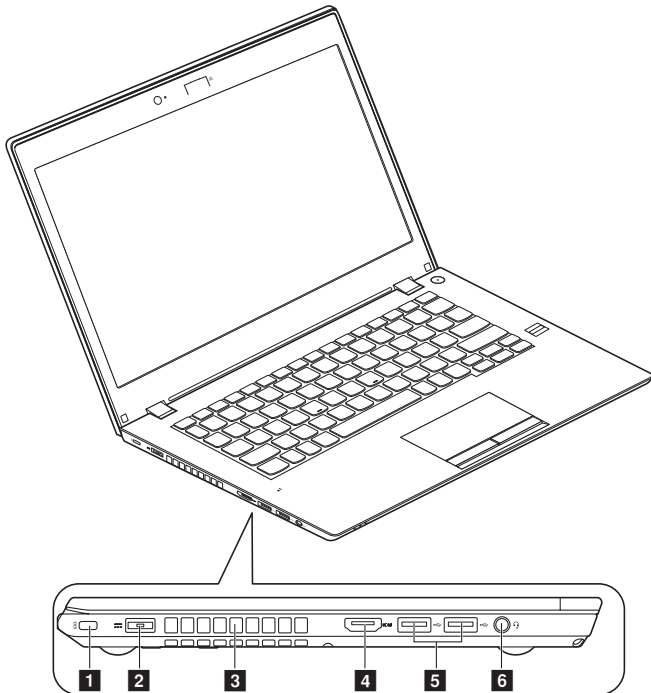

Right-side view

- 1** Media card reader slot
- 2** USB 3.0 connector
- 3** Monitor connector
- 4** Ethernet connector

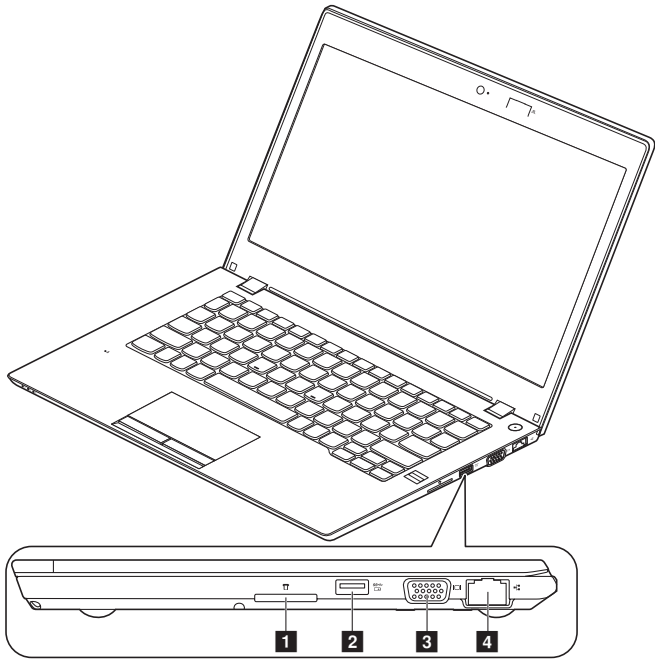

Parts list

This section presents the following service parts:

- “Overall” on page 68
- “LCD FRUs” on page 72
- “Keyboard” on page 74
- “Miscellaneous parts” on page 75
- “AC adapters” on page 76
- “Power cords” on page 77

Notes:

- Each FRU is available for all types or models, unless specific types or models are specified.

Overall

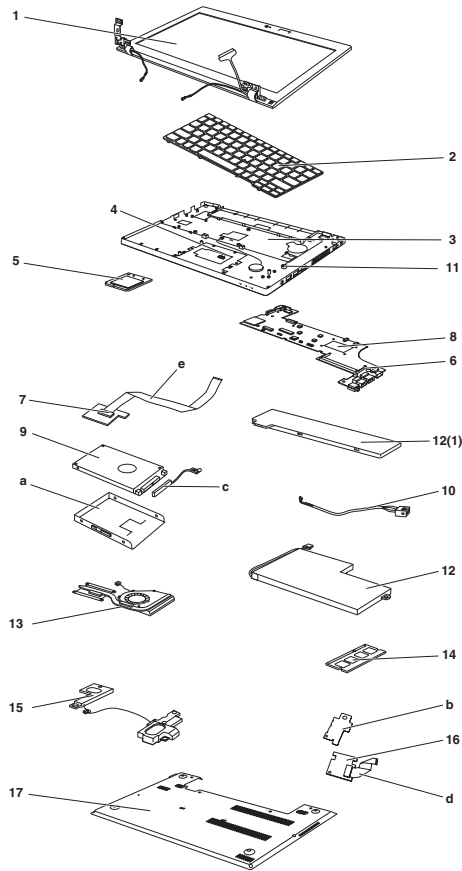


Table 1. Parts list—Overall

No.	FRU	FRU no.	CRU ID
1	LCD unit (see “LCD FRUs” on page 72.)		
2	Keyboard (see “Keyboard” on page 74.)		
3	LK290S Upper Case W/TP/Mylar	90203899	N
4	LK290S TP Button Board W/Bracket/Cable	90004301	N
5	WLAN, Intel 7260BN Wilkins Peak2 2x2 11bgn + BT Combo (HMC) 7260BN Wilkins Peak2 2x2 11bgn + BT Combo (HMC)	20200412	**
5	WLAN, Intel 7260 Wilkins Peak2 2x2 11ac + BT Combo (HMC) Intel 7260 Wilkins Peak2 2x2 11ac + BT Combo (HMC)	20200388	N
5	WLAN, Non Intel 1X1 BGN, BT 4.0 Combo Realtek RTL8723BE 1x1 11n + BT HMC Combo	20200439	N
5	WLAN, Non Intel 1X1 BGN, BT 4.0 Combo Realtek RTL8723BE 1x1 11n + BT HMC Combo	20200440	N
6	LK290S MB UMA I3-4010U	90003780	*
6	LK290S MB UMA I5-4200U	90003779	N
6	LK290S MB UMA I7-4500U	90003778	N
6	LK290S MB W8S UMA I3-4010U	90003785	N
6	LK290S MB W8P UMA I3-4010U	90003786	N
6	LK290S MB W8S UMA I5-4200U	90003783	N
6	LK290S MB W8P UMA I5-4200U	90003784	N
6	LK290S MB W8S UMA I7-4500U	90003781	N
6	LK290S MB W8P UMA I7-4500U	90003782	N
7	LK290S LED Board	90004300	N
8	Processor, Sharkbay Intel I7-4500U 1.8G 2cBGA CPU	102500572	**
8	Processor, Sharkbay Intel I5-4200U 1.6G 2cBGA CPU	102500568	N
8	Processor, Sharkbay Intel I3-4010U 1.7G 2cBGA CPU	102500569	**
8	Processor, Sharkbay i7-4550U (Async)	102500567	**
8	Processor, Sharkbay i5-4250U (Async)	102500565	**
8	Processor, Sharkbay i3-4100U (Async)	102500571	**
9	Hard disk drive, 320GB/5400rpm/7mm (SATA) Jaguar B7 (6G)	16200405	*
9	Hard disk drive, 320GB/5400rpm/7mm (SATA) Aquarius-B Slim	16200330	*
9	Hard disk drive, 320GB/5400rpm/7mm (SATA) Yarra (1D) R	16200384	*
9	Hard disk drive, 320GB/5400rpm/7mm (SATA) MN500S (WD3200LPVX-08V0T)	16200378	*
9	Hard disk drive, 500GB/5400rpm/7mm (SATA) MN500S	16200379	*
9	Hard disk drive, 500GB/5400rpm/7mm (SATA) Jaguar B7 (6G)	16200404	*
9	Hard disk drive, 500GB/5400rpm/7mm (SATA) Aquarius-B Slim	16200329	**
9	Hard disk drive, 500GB/5400rpm/7mm (SATA) Yarra (1D) BP (6G)	16200383	**

Table 1. Parts list—Overall (continued)

No.	FRU	FRU no.	CRU ID
9	Hard disk drive, 500GB/5400rpm/9.5mm (SATA) M8 BP2 (6G)	16200387	**
9	Hard disk drive, 1TB/5400rpm/9.5mm (SATA) ML500M (6G)	16200377	**
9	Hard disk drive, 1TB/5400rpm/9.5mm (SATA) Jaguar B (6G)	16200375	*
9	Hard disk drive, 1TB/5400rpm/9.5mm (SATA) M8 BP2	16200385	*
9	Hard disk drive, 1TB/5400rpm/9.5mm (SATA) Aquarius-BS	16200325	*
9	Hard disk drive, 320GB/7200rpm/7mm (SATA) Jaguar C7	16200194	*
9	Hard disk drive, 320GB/7200rpm/7mm (SATA) Aquarius-C Slim	16200510	*
9	Hard disk drive, 500GB/7200rpm/7mm (SATA) Jaguar C7	16200195	*
9	Hard disk drive, 500GB/7200rpm/7mm (SATA) Aquarius-C Slim	16200511	*
9	SSD, 16G SSD U110-16 (SDSA6MM-016G-1001)	16200336	**
9	SSD, 16G SSD L6G-16 (LSS-16L6G) Async	16200480	**
9	SSD, 16G SSD CM851-16 (MZAPF016HCDD-000L1) Async	16200443	**
9	SSD, 128G SSD PM841	16200315	**
9	SSD, 128G SSD HG5d	16200347	**
9	SSD, 128G SSD C500 (Async)	16200357	**
9	SSD, 128G SSD M6S	16200352	**
9	SSD, 180GB SSD SATA Gen-3 (2.5" Only) - 6Gbps Sierra Star SSDSC2BF180A4 (Async)	16200470	**
10	LK290S DC-IN Cable	90203892	*
11	LK290S Microphone	90203903	**
12	Battery, 3 cell (23.2Wh), Front of system Prismatic	121500143	N
12	Battery, 3 cell (23.2Wh), Front of system Polymer	121500144	N
12	Battery, 3 cell (23.2Wh), Front of system Prismatic	121500145	N
12	Battery, 3 cell (23.2Wh), Front of system TBD (Async)	TBD	N
12	Battery, 3 cell (23.2Wh), back of system w/painting SA 11.1v 23Wh 3cell bty Zhujiang	121500213	N
12	Battery, 3 cell (23.2Wh), back of system w/painting LG 11.1v 23Wh 3cell bty Zhujiang	121500214	*
12	Battery, 6 cell Cylindrical (48 Wh), back of system SA 10.8v 48Wh 6cell bty Zhujiang	121500210	**
12	Battery, 6 cell Cylindrical (48 Wh), back of system LG 10.8v 48Wh 6cell bty Zhujiang	121500211	**
12	Battery, 6 cell Cylindrical (48 Wh), back of system SM 10.8v 48Wh 6cell bty Zhujiang	121500212	*
12(1)	Battery, Dummy battery pack, back of system Prismatic shape	121500186	**


Table 1. Parts list—Overall (continued)

No.	FRU	FRU no.	CRU ID
13	LK290S UMA Thermal Module W/FAN	90203902	**
14	2GB DDRIIIL 1600 M471B5773DH0-YK0 (D/ 2Gb/35nm)	11200502	**
14	2GB DDRIIIL 1600 HMT425S6AFR6A-PB (D/4Gb/29nm)	11201299	*
14	2GB DDRIIIL 1600 MT8KTF25664HZ-1G6M1 (V79D/2Gb/42nm)	11200346	**
14	4GB DDRIIIL 1600 M471B5273DH0-YK0 (D/ 2Gb/35nm)	11200503	*
14	4GB DDRIIIL 1600 HMT451S6AFR8A-PB (D/4Gb/29nm)	11201300	*
14	4GB DDRIIIL 1600 MT8KTF51264HZ-1G6J1 (V80B/4Gb/30nm)	11201342	*
14	8GB DDRIIIL 1600 M471B1G73BH0-YK0	11200504	*
14	8GB DDRIIIL 1600 HMT41GS6AFR8A-PB	11201301	*
14	8GB DDRIIIL 1600 MT16KTF1G64HZ-1G6E1	11201304	*
15	LK290S Speaker	90203906	*
16	LK290S Finger Printer Board	90004299	*
17	LK290S Lower Case	90203894	*

LCD FRUs

In Lenovo ZhaoYang K2450, there are following types of LCDs.

- “12.5 -in. HD TFT”

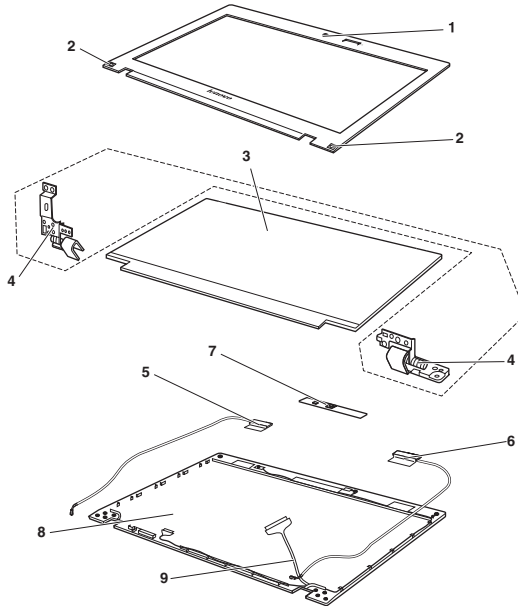

12.5-in. HD TFT

Table 2. Parts list—12.5-in. HD TFT

No.	FRU	FRU no.	CRU ID
1	LK290S LCD Bezel	90203896	
2	LCD Bezel Screw Pad	90203904	N
3	Panel, 3.0mm 12.5inch panel eDP slim flat B125XTN01.0	18200970	N
3	Panel, 3.0mm 12.5inch panel eDP slim flat LP125WH2-TPH1	18200971	N
3	Panel, 3.0mm 12.5inch panel eDP slim flat M125NWN1R0	18200972	N
3	Panel, 3.0mm 12.5inch panel eDP slim flat HB125WX1-200	18201071	N
4	LK290S Hinge Left/Right	90203898	N
5	LK290S Antenna WLAN Aux L	90203900	N
6	LK290S Antenna WLAN Main R	90203901	N
8	LK290S LCD Cover W/Camera 1.0M	90203895	N
9	LK290S LCD Cable	90203888	N

Keyboard

Table 3. Parts list—Keyboard

Language			P/N	CRU ID
keyboard K2450	Chicony blackframe Windows8	English	25212754	**
	Darfon blackframe Windows8	English	25212753	

Miscellaneous parts

Table 4. Parts list—Miscellaneous parts

FRU	P/N	CRU ID
System miscellaneous parts: <ul style="list-style-type: none">• (a) LK290S HD Bracket• (a) HDD bracket w /rubber• (b) LK290S Finger Printer Board Bracket	90203897 101500412 90203893	N
Cable miscellaneous parts: <ul style="list-style-type: none">• (c) LK290S HDD Cable• (c) HDD converter cable• (d) LK290S LED Board Cable• (e) LK290S Finger Printer Board Cable <p>Note: Italicized letters in parentheses are references to the exploded view in “Overall” on page 71.</p>	90203889 101500413 90203891 90203890	N

AC adapters

Table 5. Parts list—3-pin AC adapters

FRU	P/N	CRU ID
45W, AC Adapter (3Pin) 20V w/Rectangle plug ADP-45TD BA	36200245	N
45W, AC Adapter (3Pin) 20V w/Rectangle plug PA-1450-12LC	36200246	N
45W, AC Adapter (3Pin) 20V w/Rectangle plug A045R005L	36200247	N

Table 6. Parts list—Screw

FRU	P/N	CRU ID
K2450 M2*5 screw for C/D/Keyboard	101500414	N
HDD bracket screws	101500323	N
Screw for 16G SSD	101500325	N
WLAN	101500325	N
LK290S Screw Pack	90203905	N

Power cords

A Lenovo power cord for a specific country or region is usually available only in that country or region:

Table 7. Parts list—3-pin power cords

Region	P/N	CRU ID
CCC <ul style="list-style-type: none">LINETEK PC323+RVV300/300+LS15 1m	145000600	*
CCC <ul style="list-style-type: none">Longwell LSG-31+RVV300/300+LS-18 1m	145000568	
CCC <ul style="list-style-type: none">VOLEX GB10S3+RVV 300/500+VAC5S 1m	145000538	
CCC <ul style="list-style-type: none">lux 0036+RVV 300/300 0.75/3C+0002 1m	145500003	

Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area. Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service.

Lenovo may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents.

LENOVO GROUP LTD. PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Lenovo may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary.

Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk.

Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

Trademarks

The following terms are trademarks of Lenovo in the United States, other countries, or both:

Active Protection System

Lenovo

OneKey

Microsoft and Windows are trademarks of the Microsoft group of companies.

The following items are trademarks of Apple Inc., registered in the U.S. and other countries:

iPod

iPhone

Other company, products, or service names may be trademarks or service marks of others.