

How to use Lenovo Intelligent Cooling feature



Intelligent cooling

The Intelligent Cooling feature helps you adjust fan speed, computer temperature and performance.

For models with Windows 10

Intelligent Cooling feature is adjusted through Windows power slider bar. Do the following to select the preferred mode:

1. Click the battery status icon in the Windows notification area.
2. Move the slider to the left or right to select your preferred mode.
 -  Quiet mode: fan speed and performance are lowered to get your computer cooler and quieter, and to get the best battery life.
 -  Balanced mode: fan speed and performance are dynamically balanced for better experience.
 -  Performance mode: The performance is prioritized, allowing higher temperature and fan speed.
 -  Ultra-performance mode: the ultra performance is prioritized, allowing maximum temperature and fan speed.

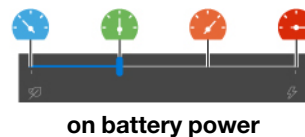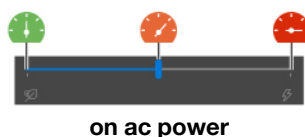

For models with Windows 11

Intelligent Cooling feature is adjusted through Windows Settings. Do the following to select the preferred power mode:

1. Right-click the battery icon in the task bar to access power, sleep and battery settings.
2. Locate power section and choose one of the following power modes.
 - **Best Power efficiency:** fan speed and performance are lowered to get your computer cooler and quieter, and to get the best battery life.
 - **Balanced:** fan speed and performance are dynamically balanced for better experience.
 - **Best Performance:** the ultra performance is prioritized, allowing maximum temperature and fan speed.