

IBM ServerGuide Scripting Toolkit, Linux Edition



Altiris Deployment Solution User's Reference

Version 2.10

IBM ServerGuide Scripting Toolkit, Linux Edition



Altiris Deployment Solution User's Reference

Version 2.10

Note:

Before using this information and the product it supports, read the information in "Notices".

Contents

Chapter 1. Introducing the ServerGuide Scripting Toolkit, Linux Edition for Altiris Deployment Solution	1
Chapter 2. Installing the ServerGuide Scripting Toolkit, Linux Edition	3
Extracting the Linux Scripting Toolkit	3
Adding the Altiris Linux x64 Automation Environment	3
Adding the IBM Linux Pre-installation Environment for x64	4
Adding System Enablement Packs	4
Adding System Enablement Packs without Internet connectivity	5
Integrating with Altiris Deployment Solution	6
Reinstalling the Linux Scripting Toolkit	7
Chapter 3. Adding and sharing content on the Linux Scripting Toolkit source server	9
Adding UpdateXpress System Packs	9
Adding Systems Director Agent files	9
Adding operating system installation files	10
Sharing operating system files on your network	11
Chapter 4. Quick start deployment scenarios	13
Validating the Altiris environment	13
Modular deployment tools	13
Pre-installation tasks	14
Operating system installation	18
Post installation tasks	19
Deployment solutions	20
Chapter 5. Customizing deployment scenarios	23
Customizing sample jobs	23
Sample job definitions	28
Customizing Fibre HBA boot configuration	28
Capture and Deploy RAID Configuration and Linux image	30
Configure RAID + Install Linux OS	31
Configuring RAID with a policy file	31
Capture and deploy RAID configuration	32
Server data disposal	32
Linux and VMware unattended scripted installation	33
Capture and deploy a Linux image	33
Linux Pre-Boot Test	34
Chapter 6. Supported hardware and software	35
Operating system support	35
RAID controller support	40
Fibre Channel HBA support	45
Advanced Settings Utility Support	46
Chapter 7. Linux Scripting Toolkit utilities and tools	49
altiris_sgtklinux.cmd	49
acquire_seps.cmd	49
Linux Scripting Toolkit utilities	50
HWDetect	50
SAVESTAT.SH	53
PRAID	54

INVRAID	72
VALRAID	76
Tools included with the Linux Scripting Toolkit	78
Advanced Settings Utility	79
SCLI.	79
septool200	81
UpdateXpress System Pack Installer	81
Chapter 8. Incorporating the Scripting Toolkit with your existing process	85
Chapter 9. IBM ServerProven compatibility	87
Chapter 10. Hints and tips	89
Known problems and limitations	92
Appendix A. Getting help and technical assistance	97
Before you call	97
Using the documentation	97
Getting help and information from the World Wide Web	98
Software service and support	98
Hardware service and support	98
Appendix B. Notices	99
Edition notice	99
Trademarks	99
Important notes.	99
Index	101

Chapter 1. Introducing the ServerGuide Scripting Toolkit, Linux Edition for Altiris Deployment Solution

The ServerGuide Scripting Toolkit, Linux Edition for Altiris Deployment Solution (Linux Scripting Toolkit) enables you to tailor and build custom hardware deployment solutions. It provides hardware configuration and Linux operating system (OS) installation for IBM System x, BladeCenter, and iData-Plex hardware.

When integrated with the Altiris Deployment Solution, the Linux Scripting Toolkit simplifies the steps in creating and customizing jobs to deploy hardware configurations and Network Operating System (NOS) deployments. The Linux Scripting Toolkit supports the following types of deployment:

- Policy-based RAID configuration using PRAID
- Cloning of RAID configuration
- Configuration of System settings using the ASU (ASU)
- Configuration of Fibre Channel Host Bus Adapters (HBAs)
- Firmware updates using the UpdateXpress System Pack Installer (UXSPi)
- UpdateXpress System Pack installation integrated with automated deployment of a Network Operating System (NOS)
- IBM Systems Director Agent installation integrated with automated deployment of a NOS
- Automated deployment of the following Network Operating Systems (NOSs):
 - SUSE Linux Enterprise Server 9 32 bit SP4
 - SUSE Linux Enterprise Server 9 x64 SP4
 - SUSE Linux Enterprise Server 10 32 bit SP1/SP2/SP3
 - SUSE Linux Enterprise Server 10 x64 SP1/SP2/SP3
 - SUSE Linux Enterprise Server 11 32 bit Base/SP1
 - SUSE Linux Enterprise Server 11 x64 Base/SP1
 - Red Hat Enterprise Linux 4 AS/ES 32 bit U6/U7/U8
 - Red Hat Enterprise Linux 4 AS/ES x64 U6/U7/U8
 - Red Hat Enterprise Linux 5 32 bit U1/U2/U3/U4/U5
 - Red Hat Enterprise Linux 5 x64 U1/U2/U3/U4/U5
 - VMware ESX Server 3.5 U4/U5
 - VMware ESX Server 4.0/4.0u1/4.0u2
- Remote Supervisor Adapter II (RSA II) and BladeCenter Management Module and Advanced Management Module remote disk scenarios
- Integration with Altiris Deployment Solution
- Cloning of NOS images
- Installation of IBM Systems Director Agent integrated with scripted NOS deployment
- Post UXSP installation using the Altiris Agent
- Post IBM Systems Director Agent installation using the Altiris Agent
- Remote deployment via the Integrated Management Module (IMM).

The Toolkit provides sample jobs for Altiris Deployment Solution for hardware configuration and operating system deployment using Linux PE. The Linux Scripting Toolkit supports Altiris Deployment Solution 6.9 SP1-SP4, and the Hewlett-Packard Rapid Deployment Pack (RDP) 3.80, 3.81, 3.82, 3.83, and 6.0.

Chapter 2. Installing the ServerGuide Scripting Toolkit, Linux Edition

This section describes the steps to install the Linux Scripting Toolkit. It includes information on the prerequisites, instructions for installation, and instructions for removal.

Prerequisites

The ServerGuide Scripting Toolkit, Linux Edition for Altiris Deployment Solution has three components:

1. The IBM Pre-boot environment
2. The IBM Scripting Toolkit Scripts and Utilities
3. The IBM Scripting Toolkit Altiris jobs within the Altiris Deployment Solution console

When you install or reinstall the ServerGuide Scripting Toolkit, Linux Edition for Altiris Deployment Solution, these components are updated as a group. After the update, the Altiris Deployment Solution jobs associated with the previous version of the ServerGuide Scripting Toolkit, Linux Edition for Altiris Deployment Solution will no longer work.

The Linux Scripting Toolkit requires the following components in order to install and create the IBM Linux x64 PE environment:

- Altiris Linux Automation Environment for Deployment Solution
BDCgpl_6.9.xxxx.frm, where xxxx is the version number
- IBM Linux Pre-installation Environment boot files for x64
ibm_utl_boot_tools-xxx_anyos_x64-full.zip where xxx is the version number.

The Linux Scripting Toolkit also requires that the target server on which the deployment is to be executed have at least 1 GB of memory.

Extracting the Linux Scripting Toolkit

This section describes the steps for extracting the Linux Scripting Toolkit zip file into the Altiris Deployment Server folder.

Procedure

1. Right-click the Linux Scripting Toolkit zip archive and select **Extract All...**
2. Extract the files to the Altiris Deployment Server directory. By default this directory is C:\Program Files\Altiris\Express\Deployment Server.
3. Verify that the Linux Scripting Toolkit is extracted. If the files extracted properly, they are located in ...\\Altiris\\Express\\Deployment Server\\sgdeploy\\sgtklinux\\

Adding the Altiris Linux x64 Automation Environment

This section describes how to add the Altiris Linux Automation Environment for Linux x64, if it is not already installed.

Before you begin

Acquire the Linux Automation Environment file. You can acquire this file from the Altiris Deployment Solution or from the Hewlett-Packard Rapid Deployment Pack.

You can get the Altiris Deployment Solution file from <http://www.altiris.com>. The filename is BDCgpl_6.9.xxxx.frm where xxxx is the version number of the file.

The Hewlett-Packard Rapid Deployment Pack version is located on the DVD at: \ds\BDCgpl_6.9.xxxx.frm, where xxxx is the version number of the file.

Procedure

There are two ways to install the Altiris Linux x64 Automation Environment:

- Use the Altiris PXE Configuration Utility to install the pre-boot environment manually.
- Copy the file BDCgpl_6.9.xxxx.frm to ... \sgdeploy\sgtklinux\boot\, retaining the original filename. When the altiris_sgtklinux.cmd installation script runs, it will integrate the environment as part of the installation.

Adding the IBM Linux Pre-installation Environment for x64

If the Altiris Deployment Server is connected to the web and can reach <http://www.ibm.com> then the install process will automatically download the IBM Linux PE zip file.

Before you begin

This procedure requires access to the Internet. This topic describes the process for acquiring the files when the Altiris Deployment Server does not have Internet connectivity.

Procedure

1. Copy the file sgdeploy\sgtklinux\altiris\bin\win32\ibm_utl_bomc_2.10_windows_i386.exe from the Altiris Deployment Server to a system connected to the Internet.
2. Run the following command to acquire the pre-installation environment zip file and save it in C:\temp:

```
ibm_utl_bomc_2.10_windows_i386.exe --function=linuxtk -l C:\temp
```

The Bootable Media Creator tool acquires the pre-installation environment zip file ibm_utl_boot_tools-130_anyos_x86-64-full.zip and saves it in C:\temp\ on the workstation.

3. Copy C:\temp\ibm_utl_boot_tools-130_anyos_x86-64-full.zip to the Altiris Deployment Server at .. \sgdeploy\sgtklinux\boot\, preserving the original filename.

Adding System Enablement Packs

System Enablement Packs (SEPs) allow you to add support for hardware released after the current release of the ServerGuide Scripting Toolkit, Linux Edition for Altiris Deployment Solution. This section describes the process for adding SEPs to the Altiris Deployment Server.

Before you begin

If the Altiris Deployment Server is connected to the Web and can reach www.ibm.com, use the `acquire_seps.cmd` command to acquire System Enablement Packs (SEPs) as described here. If the Altiris Deployment Server does not have Internet connectivity, see “Adding System Enablement Packs without Internet connectivity” for information on using a system other than the Altiris Deployment Server to acquire SEPs.

Procedure

1. Modify the default settings for acquiring SEPs as required by editing the file `acquire_seps.ini` and modifying the appropriate values. The default location of this file is `C:\Program Files\Altiris\Express\Deployment Server\sgdeploy\sgtklinux\altiris\acquire_seps.ini`. The following table describes the values you can modify.

Value	Description
TK_SEP_OS	A comma-separated list of operating systems for which to download SEPs. Valid values are: <i>none</i> , <i>all</i> . The default value is <i>none</i>
TK_SEP_Arch	A comma-separated list of processor architectures for which to download SEPs. Valid values are: <i>x86</i> , <i>x64</i> , <i>all</i> .
TK_SEP_PKG_TGT	The target directory on the local system for storing SEPs.
TK_SEPTOOL_OptionalParams	Allows you to specify additional parameters to be used when downloading SEPs.

2. Open a command window and change to the directory containing the `acquire_seps.cmd` file. By default, this file is located at `C:\Program Files\Altiris\Express\Deployment Server\sgdeploy\sgtklinux\altiris\acquire_seps.cmd`.
3. Enter the `acquire_seps.cmd` command, followed by a comma-delimited list of machine types. `acquire_seps.cmd 7979,4199` You can also acquire SEPs for all available machine types by specifying *all* instead of a machine type:
`acquire_seps.cmd all`.

Adding System Enablement Packs without Internet connectivity

System Enablement Packs (SEPs) allow you to add support for hardware released after the current release of the ServerGuide Scripting Toolkit, Linux Edition for Altiris Deployment Solution. This section describes the process for adding SEPs to the Altiris Deployment ServerToolkit Source Server when the server does not have Internet connectivity.

Before you begin

If the Altiris Deployment Server is not connected to the Web, use the following procedure to acquire SEPs.

Procedure

1. Copy the file win_septool200.zip from the Altiris Deployment Server to a system with Internet connectivity. The default location for this file is C:\Program Files\Altiris\Express\Deployment Server\sgdeploy\sgtklinux\altiris\bin\win32\win_septool200.zip.
2. On the system where you have copied the zip file, extract all of the files in the archive.
3. From the directory where you extracted the zip file, run the following command to acquire the SEP and save it in C:\temp:

```
septool200.exe acquire -l C:\temp -m machine_type -o none -a x64
```

where *machine_type* is the machine type of the system for which you want to download SEPs.

4. Copy the files from C:\temp and place them in the updates folder of the Linux Scripting Toolkit directory tree. The default location is C:\Program Files\Altiris\Express\Deployment Server\sgdeploy\updates\uxsp.

Integrating with Altiris Deployment Solution

This section describes the requirements and method for integrating the Linux Scripting Toolkit into your existing Altiris Deployment Solution console.

Prerequisites

Installation

To integrate the Linux Scripting Toolkit into the Altiris Deployment Solution console, follow these steps:

1. If you want to suppress prompts or suppress the display of user settings before installing the Scripting Toolkit into the Altiris Deployment Solution console, open the altiris_sgtklinux.ini file and modify the appropriate values shown in the table below.

Value	Description
Section: [altiris_SGTKLinux Build Settings]	
TK_Build_SuppressPrompts	Suppress interactive prompts which pause the process to enable the user settings to be read after they are displayed. Valid values are: <ul style="list-style-type: none">• Yes• No Note: : Interactive prompts regarding required removal of jobs during upgrade or reinstall scenarios are always displayed.
TK_Build_DisplayBuildSettings	Display the user settings before installing the Toolkit into Altiris Deployment Solution. Valid values are: <ul style="list-style-type: none">• Yes• No

2. Open a command window and change the current directory to the directory containing the `altiris_sgtklinux.cmd` file. The default file location is `C:\Program Files\Altiris\Express\Deployment Server\sgdeploy\sgtklinux\altiris\altiris_sgtklinux.cmd`.
3. At the command window enter the `altiris_sgtklinux.cmd` command. It will automatically process the Toolkit settings in the `altiris_sgtklinux.ini` file. This process can take between 5 and 15 minutes to complete depending on the server setup.
4. When the `altiris_sgtklinux.cmd` command completes, restart the server and all Altiris services to complete the integration.

Once the Toolkit is installed, there will be a new folder with the product name, version, and buildID under the Jobs frame in the Altiris Deployment Solution console. For example: **IBM Scripting Toolkit, Linux Edition 2.10**

Reinstalling the Linux Scripting Toolkit

This section describes the process for reinstalling the Linux Scripting Toolkit.

The ServerGuide Scripting Toolkit, Linux Edition for Altiris Deployment Solution has three components:

1. The IBM Pre-boot environment
2. The IBM Scripting Toolkit Scripts and Utilities
3. The IBM Scripting Toolkit Altiris jobs within the Altiris Deployment Solution console

When you install or reinstall the ServerGuide Scripting Toolkit, Linux Edition for Altiris Deployment Solution, these components are updated as a group. After the update, the Altiris Deployment Solution jobs associated with the previous version of the ServerGuide Scripting Toolkit, Linux Edition for Altiris Deployment Solution will no longer work.

To reinstall the Linux Scripting Toolkit, follow these steps:

1. Follow the instructions from the “Installation” on page 6 section of “Integrating with Altiris Deployment Solution” on page 6.
2. The installer displays the following message to indicate that a previous installation has been detected:

The following installed items were detected:

IBM Scripting Toolkit, Linux Edition 2.00

This must be uninstalled before this process can continue. Please select an option below:

- 1) Exit The Reinstaller.
- 2) Automatically Reinstall The Scripting Toolkit, Linux Edition.

Select an above option:

Follow the steps below for the appropriate removal method.

Manually removing the Linux Scripting Toolkit

To manually remove the Linux Scripting Toolkit, follow these steps:

1. Select option number 1 from the prompt to exit the installation process.

2. Remove all jobs associated with the IBM® Linux Toolkit image in the Altiris Deployment Solution console.
3. Open the PXE configuration utility from the Tools menu within the Altiris Deployment Solution Console.
4. Select the IBM Linux Toolkit image.
5. Make certain that the column labeled **In Use By DS** does not say **Yes** for that image. If it does, there are additional jobs associated with that image. Find and remove them.
6. Click the **Delete** button to remove the PXE image.
7. Click **Save** to save the changes
8. Click **OK** to exit the PXE Configuration utility.

Automatically removing the Linux Scripting Toolkit

To automatically remove the Linux Scripting Toolkit, follow these steps:

1. Select option 2 from the prompt. You will receive the following prompt:

```
*****
You have chosen to reinstall the following:
```

```
IBM Scripting Toolkit, Linux Edition 2.00
```

```
You may keep the jobs associated with the currently installed
Scripting Toolkit, however, they will be moved to a folder labeled
IBM Scripting Toolkit, Linux Edition (Archived w/ver. 2.00).
```

```
*****
```

```
Would you like to keep those jobs?<Y/N>
```

2. Select **Y** to remove the current Linux PE image and move the current IBM ServerGuide Toolkit, Linux Edition jobs to a folder named IBM ServerGuide Toolkit, Linux Edition (Archive). Select **N** to remove all previously installed jobs, not including any user-created jobs.

Chapter 3. Adding and sharing content on the Linux Scripting Toolkit source server

This section describes how to add to the source server, and how to share content on your network with the source server.

You can add the following types of files to the source server:

UpdateXpress System Pack (UXSP) files

to the sgdeploy/updates/uxsp/ directory.

Application files, such as the IBM Systems Director Agent

to the sgdeploy/apps/ directory.

Operating system files

to the sgdeploy/os/ directory.

The remaining topics in this section describe the process for adding these files, and for sharing them across the network.

Adding UpdateXpress System Packs

To add UpdateXpress System Packs (UXSPs) to the source tree, you must download them to the sgdeploy\updates\uxsp directory on the source server.

About this task

Follow this procedure to add UXSPs to the source server:

Procedure

1. Start the UpdateXpress System Pack Installer, uxspi410.exe. The default location is C:\Program Files\Altiris\Express\Deployment Server\sgdeploy\updates\uxsp\uxspi410.exe.
2. Use the UpdateXpress System Pack Installer to download the updates for the machine types and operating systems you need into the source tree. Download the files to sgdeploy/updates/uxsp

Note: Do not manually create directories under sgdeploy/updates/uxsp/. Doing so will prevent the UpdateXpress System Pack Installer from locating the update files.

3. Click **OK** if you are prompted to overwrite existing files.

What to do next

If the Altiris Deployment Server is not connected to the Internet, you can download the updates to an internet-connected machine and copy them to the sgdeploy/updates/uxsp/ directory.

Adding Systems Director Agent files

To include the IBM Systems Director Agent in a deployment, you must first add the files to the Altiris Deployment Server by following this process.

Procedure

1. Download the latest version of the IBM Systems Director Agent installation files from <http://www.ibm.com/systems/management/director/downloads.html>.
2. Unzip the files in a convenient location.
3. Start the Toolkit Configuration Utility, tkconfig.exe. The default location is C:\Program Files\Altiris\Express\Deployment Server\sgdeploy\sgtklinux\tkconfig.exe
4. Select **Add Operating System Application Files** from the task list. The Operating System Application files wizard starts.
5. Select **IBM Director 6.x or IBM Director 6.1.x for Linux**.
6. Select **Core Services Agent (Level 1) or Common Agent (Level 2)**.
7. Browse to the location where you unzipped the Director Agent files and click **Next** to begin copying the files.
8. When the copy is complete, exit the wizard.

What to do next

You can now include installation of the IBM Systems Director Agent in your deployments.

Adding operating system installation files

To include operating system files in your deployment image, you must make the files accessible to the deployment server. You can share the location of the files with the server, or you can copy the files to the server by following these steps.

Before you begin

If the operating system files you want to use in your deployments are already in a location accessible to the deployment server, you do not have to add them to the deployment server itself.

Note: The Linux Scripting Toolkit supports only Service Pack 4 for SuSE Linux Enterprise Server (SLES) 9. In order to add Service Pack 4 to the source server, you must first add all 6 CDs of base SLES 9. After adding these files, you can add the service pack following the same procedure. You must select the same target directory you used for the base when adding the service pack.

About this task

If the operating system files are not already in a location accessible to the deployment server, add them to the server by following these steps.

Procedure

1. Start the Toolkit Configuration Utility, tkconfig.exe. The default location is C:\Program Files\Altiris\Express\Deployment Server\sgdeploy\sgtklinux\tkconfig.exe.
2. Select **Add Operating System Application Files** from the task list. The Operating System Application files wizard starts.
3. Select the operating system you want to add from the top panel.
4. Select the version of the operating system to import from the lower panel.
5. Select the location of the files.

6. Click **Next** to copy the files to the source server.
7. Repeat steps 3 on page 10 through 6 for each operating system you want to add.

Sharing operating system files on your network

The operating system files you are using for your deployments must be shared over the network to be accessible to the target server during deployment. Follow these steps to share the files.

About this task

In order to complete a deployment, the operating system files used for the deployment must be shared with the target system using one of the following protocols:

- FTP
- HTTP
- NFS

In order to share the files from the Altiris Deployment Server, you must configure the server to share the `sgdeploy/` directory.

The operating system installation jobs provided by the Linux Scripting Toolkit use the FTP protocol. Follow the steps below to configure the an Altiris Deployment Server running Windows Internet Information Server (IIS) to share the `sgdeploy/` directory.

Note: Please consult the IIS documentation for more options and security considerations.

Procedure

1. Start the Internet Information Services Manager.
2. Select **Default FTP Site**.
3. Right click and select **New → Virtual Directory...**
4. Set the alias name to **sgdeploy**.
5. Set the home directory to `C:\Program Files\Altiris\Deployment Server\sgdeploy\`.
6. Allow Read access.
7. Start the FTP Site Service.

What to do next

You can now use the operating system files in the `sgdeploy` directory in your deployments.

Chapter 4. Quick start deployment scenarios

This section contains basic information on deployment scenarios to allow you to begin using the Linux Scripting Toolkit with Altiris Deployment Solution as quickly as possible.

The Linux Scripting Toolkit provides a collection of sample jobs for use by the Altiris Deployment solution. The following topics provide additional information on the most commonly used jobs. For more information on the sample jobs provided by the Scripting Toolkit, see “Sample job definitions” on page 28

The Linux Scripting Toolkit for use with Altiris Deployment Solution provides two types of jobs:

- “Modular deployment tools”
- “Deployment solutions” on page 20

For more information on tailoring deployments to your needs, see Chapter 5, “Customizing deployment scenarios,” on page 23.

Validating the Altiris environment

After installing the Linux Scripting Toolkit for use with Altiris Deployment Solution, you should validate that the environment is operating properly. This topic describes the process for doing so, using the sample job provided.

Before you begin

Complete the installation method appropriate for your environment as described in Chapter 2, “Installing the ServerGuide Scripting Toolkit, Linux Edition,” on page 3.

About this task

When the installation steps are complete:

Procedure

1. Open the Altiris Deployment Solution console.
2. Run the job **Linux Pre-Boot Test**, located in the Pre-Boot OS Connectivity Test folder, in the **IBM Scripting Toolkit, Linux Edition 2.10** folder. The job boots into the Linux PE x64 environment on the target server. Once connectivity is established, it performs a wait task.

Results

If the task is successful, you can then right-click on the computer icon and select **Power Option** → **Shutdown**. Execution of any subsequent job will use Wake on LAN to wake the system.

Modular deployment tools

The sample jobs provided in the **Modular Deployment Tools** folder are designed to be used individually to complete common deployment tasks. This section describes how and in what order to use the modular deployment tools.

The modular deployment tools provided by the Linux Scripting Toolkit are each designed to complete one step in the deployment process. The following sections will provide information on using the sample jobs for:

- Pre-installation hardware configuration
- Operating system installation
- Post-installation configuration

Pre-installation tasks

This section provides information on the tasks available before you install an operating system using the modular tools.

Before installing an operating system using the modular tools, you can perform the following tasks:

- Replicate system settings
- Configure RAID
- Replicate RAID
- Configure Fibre HBAs
- Update firmware using UpdateXpress System Packs
- Server disk analysis
- Server data disposal

The following sections describe how to perform these tasks using the modular tools.

Replicate system settings

Before installing an operating system, you can capture system settings from a compatible server to a file and deploy them to your new server using the sample jobs provided by the Linux Scripting Toolkit and the Advanced Settings Utility.

The Toolkit provides sample jobs to capture and deploy settings using ASU. These jobs are located in the **IBM Scripting Toolkit, Linux Edition 2.10 → Modular Deployment Tools → Step 1 - Pre-installation Hardware Configuration → System Settings Replication** folder.

Capture system settings

The **Capture System Settings** sample job captures the system settings of the server and stores them in a file named `ASU_Capture`. By default all captured System Settings are stored in `sgdeploy/sgtklinux/ini/asu/PlatformID` where *PlatformID* is the machine type of the captured system.

Deploy system settings

The **Deploy System Settings** sample job deploys the system settings from the `ASU_Capture.ini` file located in the specified directory.

You can customize the following variables for these jobs from the Altiris Console. The values shown are the defaults.

- `TK_ASU_File=sgdeploy/sgtklinux/ini/asu/^{BIOS_Build_Level:0:2}/asu_capture`
- `TK_ASU_Mode=save`

RAID configuration

Before installing an operating system, you can configure RAID on the target server using the Linux Scripting Toolkit and the PRAID utility.

Linux Scripting Toolkit provides sample jobs to perform a number of RAID configurations. These jobs are located in the **IBM Scripting Toolkit, Linux Edition**

2.10 → Modular Deployment Tools → Step 1 - Pre-installation Hardware Configuration → RAID Configuration folder, and are named according to the RAID configuration they will create. For example, **Configure RAID [RAID 0]**, and **Configure RAID [RAID 1 + Hot Spare]**.

To perform RAID configuration using the modular tools:

1. Start the Altiris Deployment Solution console.
2. Navigate to the **IBM Scripting Toolkit, Linux Edition 2.10 → Modular Deployment Tools → Step 1 - Pre-installation Hardware Configuration → RAID Configuration** folder.
3. Run the appropriate job against the target system to create the RAID configuration you want.

RAID replication

If you have an existing RAID configuration that you want to replicate to other systems, you can use the sample jobs **RAID Capture** and **RAID configuration** to capture and deploy the settings to a new target server.

The sample jobs are located in the **IBM Scripting Toolkit, Linux Edition 2.10 → Modular Deployment Tools → Step 1 - Pre-installation Hardware Configuration → RAID Replication** folder in the Altiris Deployment Solution console.

To capture an existing RAID configuration, follow these steps:

1. Start the Altiris Deployment Solution console.
2. Navigate to the **IBM Scripting Toolkit, Linux Edition 2.10 → Modular Deployment Tools → Step 1 - Pre-installation Hardware Configuration → RAID Replication** folder.
3. Run the **Capture RAID configuration** job against the system whose RAID configuration you want to replicate.

You can customize the following variables for these jobs from the Altiris Deployment Solution console. The values shown are the defaults:

- **TK_pRAID_File**=sgdeploy/sgtklinux/ini/praid/*Machine_Type*/raid_capture.ini where *Machine_Type* is the machine type of the system being captured.
- **TK_pRAID_Flags**=

When you have captured the RAID configuration, you can deploy it using the **Deploy RAID configuration** job in the **IBM Scripting Toolkit, Linux Edition 2.10 → Modular Deployment Tools → Step 1 - Pre-installation Hardware Configuration → RAID Replication** folder.

Configure a Fibre HBA

You can use this pre-installation task to configure your Fibre Channel Host Bus Adapter (HBA) to boot from your Storage Area Network (SAN).

Before you begin

In order to boot from the SAN, it must be configured with a logical drive mapped to a Logical Unit Number (LUN). The HBA you are configuring must have permission to access the logical drive and the LUN.

About this task

Note that the default settings configure the first drive mapped to LUN 0 as a boot device (for QLogic Fibre HBAs only. For information Emulex Fibre HBAs, see “Known problems and limitations” on page 92.). To avoid errors, ensure that your SAN configuration includes at least one logical drive mapped to LUN 0.

Procedure

1. Start the .Altiris Deployment Solution console
2. Navigate to the **IBM Scripting Toolkit, Linux Edition 2.10 → Modular Deployment Tools → Step 1 - Pre-installation Hardware Configuration → Fibre Configuration** folder.
3. Run the **Configure Fibre HBA for Boot** job against the target system. You can customize the following variables for these jobs from the Altiris Deployment Solution console. The default values are shown.
 - TK_FIBRE_COUNT="1"
 - TK_FIBRE_1_HBA_ID="0"
 - TK_FIBRE_1_BOOT_DISABLE="No"
 - TK_FIBRE_1_BOOT_PRIM="0 0 0"
 - TK_FIBRE_1_BOOT_ALT1=""
 - TK_FIBRE_1_BOOT_ALT2=""
 - TK_FIBRE_1_BOOT_ALT3=""

Update Firmware

You can use the **Update Firmware (UXSP)** job to update all of the firmware on a target server from the IBM Preboot environment.

About this task

To update the firmware on a server using the **Update Firmware (UXSP)** job, follow these steps:

Procedure

1. Acquire UpdateXpress System Packs (UXSPs) for SUSE Linux Enterprise Server 10 for all of the systems to be updated.
2. Start the .Altiris Deployment Solution console
3. Navigate to the **IBM Scripting Toolkit, Linux Edition 2.10 → Modular Deployment Tools → Step 1 - Pre-installation Hardware Configuration → Update Firmware (UXSP)** folder.
4. Run the **Update System Firmware** job against the target system. You can customize the following variables for these jobs from the Altiris Deployment Solution console. The default values are shown.
 - TK_UXSP_UpdateXpressSystemPacks="/sgdeploy/updates/uxsp"
 - TK_UXSP_ApplyLatest="No"
 - TK_UXSP_UXSPIUpdateFlags="update --unattended --firmware"

Server disk analysis

This sample job captures the disk information for all disks attached to a given server. You can use this job after performing RAID configuration to ensure that when you install a supported operating system, you install to disk /dev/sda on the target server.

Before you begin

You must perform RAID configuration before running this job, as the disk information collected during analysis is changed during RAID configuration.

About this task

To capture disk information, follow these steps:

Procedure

1. Start the Altiris Deployment Solution console.
2. Navigate to the **IBM Scripting Toolkit, Linux Edition 2.10 → Modular Deployment Tools → Step 1 - Pre-installation Hardware Configuration → Server Disk Analysis** folder.
3. Run the **Capture Disk Data** job against the target system. You can customize the following variables for these jobs from the Altiris Deployment Solution console. The default values are shown.
 - TK_DISK_File=/mnt/ds/Temp/ID/disk_info.txt

Server data disposal

The Linux Scripting Toolkit provides sample jobs to destroy data from drives and optionally to delete or reset RAID configuration. These jobs are located in the **IBM Scripting Toolkit, Linux Edition 2.10 → Modular Deployment Tools → Step 1 - Pre-installation Hardware Configuration → Server Data Disposal** folder.

The following topics describe the process for using these sample jobs.

Server data disposal with RAID reset:

Use this job to remove data from the drives and reset the RAID configuration of the target system.

Procedure

1. Start the Altiris Deployment Solution console.
2. Navigate to the **IBM Scripting Toolkit, Linux Edition 2.10 → Modular Deployment Tools → Step 1 - Pre-installation Hardware Configuration → Server Data Disposal** folder.
3. Run the **Server Data Disposal and Reset RAID** job against the target system. You can customize the following variables for these jobs from the Altiris Deployment Solution console. The default values are shown.
 - TK_Wipe_Disk=1
 - TK_Wipe_Repeat_Number=00
 - TK_Wipe_Level=quick

Server data disposal without RAID reset:

Use this job to remove data from the drives without resetting the RAID configuration of the target system.

Procedure

1. Start the Altiris Deployment Solution console.

2. Navigate to the **IBM Scripting Toolkit, Linux Edition 2.10 → Modular Deployment Tools → Step 1 - Pre-installation Hardware Configuration → Server Data Disposal** folder.
3. Run the **Server Data Disposal non-RAID** job against the target system. You can customize the following variables for these jobs from the Altiris Deployment Solution console. The default values are shown.
 - TK_Wipe_Disk=1
 - TK_Wipe_Repeat_Number=00
 - TK_Wipe_Level=quick

Operating system installation

After you have configured RAID on the target server, you can use the jobs provided by the Linux Scripting Toolkit to install a supported operating system. This section describes that process.

The Linux Scripting Toolkit provides two types of jobs for deploying operating systems:

- Operating system cloning
- Scripted operating system installation

The following sections describe how to perform each type of installation.

Operating system cloning

The Linux Scripting Toolkit provides sample jobs to capture and deploy supported Linux operating systems.

Before you begin

In order to run the **Capture Linux Image** sample job, the Altiris agent must first be installed on the donor system. The scripted operating system installation jobs provided by the Linux Scripting Toolkit install the Altiris agent automatically. If you are cloning an operating system that was not installed using the Toolkit, you must install the Altiris agent manually.

About this task

To capture a supported operating system from one server and deploy it to another, follow these steps:

Procedure

1. Start the Altiris Deployment Solution console.
2. Navigate to the **IBM Scripting Toolkit, Linux Edition 2.10 → Modular Deployment Tools → Step 2 - Operating System Installation → Operating System Imaging** folder.
3. Open the **Capture Linux Image** job.
4. Select the **Create Disk Image** task and click **Modify**.
5. Change the path and filename for the captured image and click **Finish** to save your changes.
6. Open the **Deploy Linux Image** job.
7. Select the **Distribute Disk Image** task and click **Modify**.
8. Change the path and filename to match the ones you entered for the captured image and click **Finish** to save your changes.

9. Run the **Capture Linux Image** job against the donor server.
10. When the capture job is complete, run the **Deploy Linux Image** job against the target server.

Scripting operating system installation

If you do not want to deploy a clone of an existing operating system installation, the Linux Scripting Toolkit provides sample jobs to deploy each of the supported operating systems. Use the following procedure to install a supported operating system using the sample jobs provided:

Before you begin

Before you can install an operating system, the operating system installation files must be available to the source server. See “Adding operating system installation files” on page 10 for more information.

Procedure

1. Start the Altiris Deployment Solution console.
2. Navigate to the **IBM Scripting Toolkit, Linux Edition 2.10 → Modular Deployment Tools → Step 2 - Operating System Installation → Scripted Operating System Installation** folder.
3. Select the job that corresponds to the operating system you want to install and run it against the target server.

Post installation tasks

When you have completed RAID configuration and operating system installation, you can perform post installation tasks. This section describes the methods for installing the IBM Systems Director Agent and applying UpdateXpress System Pack (UXSP) updates.

The Linux Scripting Toolkit provides sample jobs for installing the IBM Systems Director Agent and applying UpdateXpress System Pack updates to a target system on which RAID has been configured and a supported operating system installed. Please note that in order to complete these jobs, the Altiris agent must be installed on the target system. The Altiris agent is installed automatically by the operating system installation tasks provided by the Linux Scripting Toolkit. If the operating system on the target system was not installed using these jobs, you might have to install the Altiris agent manually. See “Operating system installation” on page 18 for more information on using the modular deployment tools to install operating systems.

The following sections describe the process for using the modular deployment tools to install the IBM Director Agent and apply UXSP updates to a target system.

Installing the IBM Systems Director Agent

After you have configured RAID and installed a supported operating system, use the Linux Scripting Toolkit to install the IBM Systems Director Agent.

Procedure

1. Ensure that the IBM Systems Director Agent source files have been added to the source tree on the source server. For more information, see “Adding Systems Director Agent files” on page 9.

2. Open the Altiris Deployment Solution console and navigate to the **IBM Scripting Toolkit, Linux Edition 2.10 → Modular Deployment Tools → Step 3 - Post-Installation Configuration → Application Installation** folder.
3. Run the **IBM Director Agent for Linux nstall** job against the target system.

Installing UpdateXpress System Pack updates

You can ensure that your target server has current firmware fixes by using the Linux Scripting Toolkit to install UpdateXpress System Pack (UXSP) updates.

Before you begin

Before you can install UXSPs, you must have added the latest updates for your target server machine type to the source server. See “Adding UpdateXpress System Packs” on page 9 for more information.

About this task

Follow these steps to apply UXSPs to your target system:

Procedure

1. Open the Altiris Deployment Solution console.
2. Navigate to the **IBM Scripting Toolkit, Linux Edition 2.10 → Modular Deployment Tools → Step 3 - Post-Installation Configuration → IBM UpdateXpress System Packs** folder.
3. Run the **Run UpdateXpress System Pack Installer** job against the target server.

Deployment solutions

The sample jobs provided in the **Combined Deployment Solutions** folder are designed to consolidate multiple deployment elements in a single Altiris job. This section describes how to use these jobs to perform complete deployments.

The deployment solutions provided by the Linux Scripting Toolkit are designed to perform a combination of deployment steps in a single job. The following sections will provide information on using the sample jobs for:

- Image based deployment (image cloning)
- Scripted deployment

Image based deployment

The Linux Scripting Toolkit provides a set of tools to capture and deploy an existing system configuration, including RAID configuration, operating system, and installed applications and updates. These jobs require the Altiris agent to be installed on the donor system. The Altiris agent is installed automatically as part of the Scripting Toolkit operating system installation jobs. If the donor system operating system was not installed using the Scripting Toolkit, you might need to install the Altiris agent manually.

Follow these steps to capture and deploy a system configuration:

1. Open the Altiris Deployment Solution console and navigate to the **IBM Scripting Toolkit, Linux Edition 2.10 → Combined Deployment Solutions → Image-based Deployment** folder.
2. Run the **Capture RAID Configuration and Linux Image** job against the donor system.

3. When that job completes, run the **Deploy RAID Configuration and Linux Image** against the target system.

Scripted deployment

The scripted deployment sample jobs provided by the ServerGuide Scripting Toolkit are designed to integrate all of the steps in deploying a system configuration in a single Altiris job. To use a scripted deployment job to configure RAID, install an operating system, install the IBM Director Agent, and install UpdateXpress System Pack updates on the target system, follow these steps:

1. Ensure that the necessary operating system, Director Agent, and UXSP files are properly included in the source tree. See Chapter 3, “Adding and sharing content on the Linux Scripting Toolkit source server,” on page 9 for more information.
2. Open the Altiris Deployment Solution console and navigate to the **IBM Scripting Toolkit, Linux Edition 2.10 → Combined Deployment Solutions → Scripted Deployment** folder.
3. In this folder, select the job to deploy the operating system of your choice. Modify the following job variables:

TK_DirAgent_DirectorAgent=dirlin

To install the IBM Systems Director Agent. Uncomment this variable and assign the folder under /sgdeploy/apps/ where the IBM Systems Director Agent files are located.

TK_UXSP_UpdateXpressSystemPacks=uxsp

To install UpdateXpress System Pack updates.

See Chapter 5, “Customizing deployment scenarios,” on page 23 for more information on configuring job variables.

4. Run the job against the target server.

Chapter 5. Customizing deployment scenarios

This section provides information on customizing deployment scenarios.

You can customize your deployment scenarios in the following ways:

- Customize source server settings
- Add PRAID policy files
- Add ASU files
- Customize Fibre HBA boot configuration
- Customize your Linux installation
- Add installation of the IBM Systems Director Agent to your deployment
- Add installation of UpdateXpress System Packs to your deployment

Customizing sample jobs

This section provides information on customizing the sample Altiris jobs provided with the ServerGuide Scripting Toolkit, Linux Edition.

Each sample job provided within the Altiris Deployment Solution console that contains customizable settings begins with a task that sets all variables for the job. This task is labeled **Customize Job Variables**. The variables that you can modify are contained within a block that is similar to the following:

```
[User_Customizable_Variables]
```

Variables

```
[End_User_Customizable_Variables]
```

You cannot modify variables outside this block. When you modify a job, it is a good practice to create a copy of the job and modify the copy, rather than modifying the original job.

Table 1 provides a list of the variables in the sample Altiris jobs that you can customize. Note that all values for variables must be enclosed in quotation marks.

Table 1. Customizable variables in Altiris sample jobs

Variable	Description
[PRAID Settings]	
TK_pRAID_File	Specifies the pRAID policy file to be used for the job. Default: Varies per job, see next section.
TK_pRAID_Flags	Specifies any additional flags to be passed to the pRAID utility. Default: -r
[Fibre Settings]	

Table 1. Customizable variables in Altiris sample jobs (continued)

Variable	Description
TK_FIBRE_COUNT	<p>Specifies the number of HBA ports to configure.</p> <p>Valid values are 1–n, where n is the number of HBA ports available.</p> <p>This variable affects the use of the following variables:</p> <ul style="list-style-type: none"> TK_FIBRE_N_HBA_ID TK_FIBRE_N_BOOT_DISABLE TK_FIBRE_N_BOOT_PRIM TK_FIBRE_N_BOOT_ALT1 TK_FIBRE_N_BOOT_ALT2 TK_FIBRE_N_BOOT_ALT3 <p>Where N is the HBA number to be configured.</p> <p>Note: You must complete one of each of these variables for every HBA port you configure. So if TK_FIBRE_COUNT=2, you must complete one set of these variables for the first port and one for the second.</p>
TK_FIBRE_N_HBA_ID	<p>Identifies the Qlogic HBA to be configured, where N is the HBA number to be configured.</p> <p>Valid values are:</p> <p><i>hba_instance</i></p> <p>the instance number of an HBA port. Valid values are integers from 0 to $n-1$, where n is the number of HBAs in the system.</p> <p>For example, to configure HBA instance 0: TK_FIBRE_1_HBA_ID=0</p> <p><i>hba_wwpn</i></p> <p>the World Wide Port Name of an HBA port, in the format xx-xx-xx-xx-xx-xx-xx-xx or xxxxxxxxxxxxxxxx.</p> <p>For example, to configure HBA: 90-87-AA-BB-65-34-BB-E0: TK_FIBRE_1_HBA_ID= 90-87-AA-BB-65-34-BB-E0</p> <p>Default: 0</p>

Table 1. Customizable variables in Altiris sample jobs (continued)

Variable	Description
TK_FIBRE_N_BOOT_DISABLE	<p>Disable the selected current boot device settings on the specified HBA port, where <i>N</i> is the HBA number to be configured.</p> <p>Valid values are</p> <p>No Does not clear or disable any boot settings.</p> <p>All Disables the primary and all alternate boot settings - Prim, Alt1, Alt2, and Alt3.</p> <p>Prim Disables only the primary boot setting.</p> <p>Alt1 Disables the Alternative 1 boot setting.</p> <p>Alt2 Disables the Alternative 2 boot setting.</p> <p>Alt3 Disables the Alternative 3 boot setting.</p> <p>Default: No.</p>
TK_FIBRE_N_BOOT_PRIM = <i>target_wwnn target_wwpn lun_id</i>	<p>Defines the primary boot target settings, where <i>N</i> is the HBA number to be configured, and:</p> <ul style="list-style-type: none"> <i>target_wwnn</i> - is the World Wide Node Name of a device, in the format xx-xx-xx-xx-xx-xx-xx-xx or xxxxxxxxxxxxxx. <i>target_wwpn</i> - is the World Wide Port Name of a device, in the format xx-xx-xx-xx-xx-xx-xx-xx or xxxxxxxxxxxxxx. <i>lun_id</i> - is the Logical Unit Number of a device. <p>Default: 0 0 0</p> <p>Example:</p> <p>TK_FIBRE_1_BOOT_PRIM= BB-CC-AA-BB-65-34-BB-F1 BB-CC-AA-BB-FF-34-BB-F1 9</p>
TK_FIBRE_N_BOOT_ALT1 = <i>target_wwnn target_wwpn lun_id</i>	<p>Configures the operating system to use the indicated target as the first alternate boot device, where <i>N</i> is the HBA number to be configured, and</p> <ul style="list-style-type: none"> <i>target_wwnn</i> - is the World Wide Node Name of a device, in the format xx-xx-xx-xx-xx-xx-xx-xx or xxxxxxxxxxxxxx. <i>target_wwpn</i> - is the World Wide Port Name of a device, in the format xx-xx-xx-xx-xx-xx-xx-xx or xxxxxxxxxxxxxx. <i>lun_id</i> - is the Logical Unit Number of a device. <p>Default: blank.</p> <p>Example:</p> <p>TK_FIBRE_1_BOOT_ALT1= BB-CC-AA-BB-65-34-BB-FD BB-CC-AA-BB-FF-40-BB-F1 5</p>

Table 1. Customizable variables in Altiris sample jobs (continued)

Variable	Description
TK_FIBRE_N_BOOT_ALT2 = <i>target_wwnn target_wwpn lun_id</i>	<p>Configures the operating system to use the indicated target as the second alternate boot device, where <i>N</i> is the HBA number to be configured, and</p> <ul style="list-style-type: none"> <i>target_wwnn</i> - is the World Wide Node Name of a device, in the format xx-xx-xx-xx-xx-xx-xx-xx or xxxxxxxxxxxxxx. <i>target_wwpn</i> - is the World Wide Port Name of a device, in the format xx-xx-xx-xx-xx-xx-xx-xx or xxxxxxxxxxxxxx. <i>lun_id</i> - is the Logical Unit Number of a device. <p>Default: blank.</p> <p>Example:</p> <pre>TK_FIBRE_1_BOOT_ALT2= BB-CC-AA-BB-65-34-BB-FD BB-CC-AA-BB-FF-40-BB-F1 5</pre>
TK_FIBRE_N_BOOT_ALT3 = <i>target_wwnn target_wwpn lun_id</i>	<p>Configures the operating system to use the indicated target as the third alternate boot device, where <i>N</i> is the HBA number to be configured, and</p> <ul style="list-style-type: none"> <i>target_wwnn</i> - is the World Wide Node Name of a device, in the format xx-xx-xx-xx-xx-xx-xx-xx or xxxxxxxxxxxxxx. <i>target_wwpn</i> - is the World Wide Port Name of a device, in the format xx-xx-xx-xx-xx-xx-xx-xx or xxxxxxxxxxxxxx. <i>lun_id</i> - is the Logical Unit Number of a device. <p>Default: blank.</p> <p>Example:</p> <pre>TK_FIBRE_1_BOOT_ALT3= BB-CC-AA-BB-65-34-BB-FD BB-CC-AA-BB-FF-40-BB-F1 5</pre>
[ASU Settings]	
TK_ASU_File	<p>Specifies the file to be used for a Capture System Settings or Deploy System Settings operation. If you are capturing system settings, they will be written to a file with this name. If you are deploying system settings, they will be read from this file.</p> <p>Default: /sgdeploy/sgtklinux/ini/asu/ \$(BIOS_Build_Level0:2)/asu_capture</p>
TK_ASU_Mode	<p>Specifies the ASU mode being used. This value is used with the asu command and the value of the TK_ASU_File variable to create a complete ASU command.</p> <p>Valid values are: save, replicate, and batch.</p>
TK_ASU_Flags	<p>Specifies additional flags for the current mode.</p> <p>The default value is -group-bios.</p>
[NOS Installation Settings]	
TK_DISTRO_TYPE	<p>Specifies the Linux distribution to be installed.</p> <p>Valid values are: RHEL, SLES, VMWARE</p>

Table 1. Customizable variables in Altiris sample jobs (continued)

Variable	Description
TK_DISTRO_VERSION	<p>Specifies the version of the operating system indicated by TK_DISTRO_TYPE.</p> <p>Valid values correspond to the supported versions of the supported operating systems.</p> <p>Note: The version number must be a valid and supported version of the Linux distribution specified by TK_DISTRO_TYPE.</p>
TK_DISTRO_PATH	<p>Specifies the fully qualified URL for the location of the network share where the operating system files are located.</p> <p>Supported protocols are FTP, HTTP, and NFS.</p> <p>Default: ftp://\$TK_Altiris_IP/sgdeploy/os/osfolder</p>
TK_DISTRO_CFG	<p>Specifies the unattended answer file to be used for the operating system installation. This file must be formatted as a kickstart or autoyast file, depending on the distribution being deployed.</p> <p>Default: ./sgdeploy/sgtklinux/altiris/answerfiles/answerfile</p>
TK_DISTRO_KPARAM	<p>Specifies additional kernel parameters to be used for the deployment, such as VNC parameters or a static IP address.</p> <p>Default: none</p>
TK_DISTRO_NIC_PORT	<p>Specifies a Network Interface Card (NIC) to be used for the installation, if the NIC is different than the one used for the pre-installation execution environment (PXE) boot. If no NIC is specified, the NIC used for PXE boot will be used for the installation, using the bootif method.</p> <p>Note: This variable is not valid for VMware ESX Server. To indicate the network device for VMware ESX Server, edit the network section of the VMware kickstart file.</p>
[Director Agent Settings]	
TK_DirAgent_DirectorAgent	<p>Specifies the location of the IBM Director Agent application files on the source server. Valid values are:</p> <ul style="list-style-type: none"> • dirlin • A user-supplied directory in the sgdeploy/apps directory <p>Default:dirlin</p>
[UXSP Settings]	
TK_UXSP_UpdateXpressSystemPacks	<p>Specifies the location of the UpdateXpress System Packs on the source server.</p> <p>Valid values are:</p> <ul style="list-style-type: none"> • uxsp • a user-specified directory in the sgdeploy/updates directory <p>Default: uxsp</p>

Sample job definitions

This section provides descriptions of the sample Altiris jobs provided by the Linux Scripting Toolkit, including a description of the variables that can be customized for each job.

All of the sample jobs except imaging jobs without RAID configuration and the Linux Pre-Boot test add logging information to the ToolkitProcess.log file.

Customizing Fibre HBA boot configuration

You can use Toolkit variables to customize the configuration of Fibre HBAs on the target system, allowing them to boot from SAN targets.

By default, the ServerGuide Scripting Toolkit will configure the first HBA on the system to boot from the first available SAN target (for QLogic Fibre HBAs only. For information Emulex Fibre HBAs, see “Known problems and limitations” on page 92). The BIOS configures the first disk drive that it finds that is also a LUN 0 as a boot device. The ServerGuide Scripting Toolkit uses the following variables to configure Fibre HBAs:

Note: Please note that while some examples are broken across multiple lines for formatting reasons, when using these settings, you must include all the information for each variable on a single line.

Table 2. Fibre HBA boot configuration variables

Variable	Description
TK_FIBRE_COUNT	<p>Specifies the number of HBA ports to configure.</p> <p>Valid values are 1–<i>n</i>, where <i>n</i> is the number of HBA ports available.</p> <p>This variable affects the use of the following variables:</p> <ul style="list-style-type: none">• TK_FIBRE_N_HBA_ID• TK_FIBRE_N_BOOT_DISABLE• TK_FIBRE_N_BOOT_PRIM• TK_FIBRE_N_BOOT_ALT1• TK_FIBRE_N_BOOT_ALT2• TK_FIBRE_N_BOOT_ALT3 <p>Where N is the HBA number to be configured.</p> <p>Note: You must complete one of each of these variables for every HBA port you configure. So if TK_FIBRE_COUNT=2, you must complete one set of these variables for the first port and one for the second.</p>

Table 2. Fibre HBA boot configuration variables (continued)

Variable	Description
TK_FIBRE_N_HBA_ID	<p>Identifies the Qlogic HBA to be configured, where <i>N</i> is the HBA number to be configured.</p> <p>Valid values are:</p> <p><i>hba_instance</i></p> <p>the instance number of an HBA port. Valid values are integers from 0 to <i>n-1</i>, where <i>n</i> is the number of HBAs in the system.</p> <p>For example, to configure HBA instance 0: TK_FIBRE_1_HBA_ID=0</p> <p><i>hba_wwpn</i></p> <p>the World Wide Port Name of an HBA port, in the format xx-xx-xx-xx-xx-xx-xx-xx or xxxxxxxxxxxxxxxx.</p> <p>For example, to configure HBA: 90-87-AA-BB-65-34-BB-E0: TK_FIBRE_1_HBA_ID= 90-87-AA-BB-65-34-BB-E0</p> <p>Default: 0</p>
TK_FIBRE_N_BOOT_DISABLE	<p>Disable the selected current boot device settings on the specified HBA port, where <i>N</i> is the HBA number to be configured.</p> <p>Valid values are</p> <p>No Does not clear or disable any boot settings.</p> <p>All Disables the primary and all alternate boot settings - Prim, Alt1, Alt2, and Alt3.</p> <p>Prim Disables only the primary boot setting.</p> <p>Alt1 Disables the Alternative 1 boot setting.</p> <p>Alt2 Disables the Alternative 2 boot setting.</p> <p>Alt3 Disables the Alternative 3 boot setting.</p> <p>Default: No.</p>
TK_FIBRE_N_BOOT_PRIM = <i>target_wwnn target_wwpn lun_id</i>	<p>Defines the primary boot target settings, where <i>N</i> is the HBA number to be configured, and:</p> <ul style="list-style-type: none"> <i>target_wwnn</i> - is the World Wide Node Name of a device, in the format xx-xx-xx-xx-xx-xx-xx-xx or xxxxxxxxxxxxxxxx. <i>target_wwpn</i> - is the World Wide Port Name of a device, in the format xx-xx-xx-xx-xx-xx-xx-xx or xxxxxxxxxxxxxxxx. <i>lun_id</i> - is the Logical Unit Number of a device. <p>Default: 0 0 0</p> <p>Example:</p> <p>TK_FIBRE_1_BOOT_PRIM= BB-CC-AA-BB-65-34-BB-F1 BB-CC-AA-BB-FF-34-BB-F1 9</p>

Table 2. Fibre HBA boot configuration variables (continued)

Variable	Description
TK_FIBRE_1_BOOT_ALT1 = <i>target_wwnn target_wwpn lun_id</i>	<p>Configures the operating system to use the indicated target as the first alternate boot device, where <i>N</i> is the HBA number to be configured, and</p> <ul style="list-style-type: none"> • <i>target_wwnn</i> - is the World Wide Node Name of a device, in the format xx-xx-xx-xx-xx-xx-xx-xx or xxxxxxxxxxxxxx. • <i>target_wwpn</i> - is the World Wide Port Name of a device, in the format xx-xx-xx-xx-xx-xx-xx-xx or xxxxxxxxxxxxxx. • <i>lun_id</i> - is the Logical Unit Number of a device. <p>Default: blank.</p> <p>Example:</p> <p>TK_FIBRE_1_BOOT_ALT1= BB-CC-AA-BB-65-34-BB-FD BB-CC-AA-BB-FF-40-BB-F1 5</p>
TK_FIBRE_2_BOOT_ALT2 = <i>target_wwnn target_wwpn lun_id</i>	<p>Configures the operating system to use the indicated target as the second alternate boot device, where <i>N</i> is the HBA number to be configured, and</p> <ul style="list-style-type: none"> • <i>target_wwnn</i> - is the World Wide Node Name of a device, in the format xx-xx-xx-xx-xx-xx-xx-xx or xxxxxxxxxxxxxx. • <i>target_wwpn</i> - is the World Wide Port Name of a device, in the format xx-xx-xx-xx-xx-xx-xx-xx or xxxxxxxxxxxxxx. • <i>lun_id</i> - is the Logical Unit Number of a device. <p>Default: blank.</p> <p>Example:</p> <p>TK_FIBRE_2_BOOT_ALT2= BB-CC-AA-BB-65-34-BB-FD BB-CC-AA-BB-FF-40-BB-F1 5</p>
TK_FIBRE_3_BOOT_ALT3 = <i>target_wwnn target_wwpn lun_id</i>	<p>Configures the operating system to use the indicated target as the third alternate boot device, where <i>N</i> is the HBA number to be configured, and</p> <ul style="list-style-type: none"> • <i>target_wwnn</i> - is the World Wide Node Name of a device, in the format xx-xx-xx-xx-xx-xx-xx-xx or xxxxxxxxxxxxxx. • <i>target_wwpn</i> - is the World Wide Port Name of a device, in the format xx-xx-xx-xx-xx-xx-xx-xx or xxxxxxxxxxxxxx. • <i>lun_id</i> - is the Logical Unit Number of a device. <p>Default: blank.</p> <p>Example:</p> <p>TK_FIBRE_3_BOOT_ALT3= BB-CC-AA-BB-65-34-BB-FD BB-CC-AA-BB-FF-40-BB-F1 5</p>

Capture and Deploy RAID Configuration and Linux image

The ServerGuide Scripting Toolkit, Linux Edition provides sample Altiris jobs to perform operating system imaging tasks using Altiris. Imaging tasks include

capturing a copy of an installed operating system and deploying that image to a target server. You might need to configure the target server before you deploy the image.

Note: The donor and target systems must be configured identically in order to deploy the captured RAID configuration and Linux image.

These jobs capture a RAID Configuration along with the OS image, so that you can use both to redeploy the image. In order to run the capture RAID configuration and Linux image sample job, you must first install the Altiris agent on the donor system. The Toolkit's scripted OS install jobs automatically install the Altiris agent.

The capture sample job captures the RAID configuration of the server, and then captures an OS image from the target server and stores both on the Altiris server.

Each deployment sample job deploys the captured RAID configuration, and OS image to the target server. The sample job configures RAID, calls a reboot, and then performs the image deployment.

The following variables may be customized for these jobs within the Altiris Console:

- TK_pRAID_File="/sgdeploy/sgtklinux/ini/praid/\$Machine_Type/raid_capture.ini"

Configure RAID + Install Linux OS

This sample job performs a RAID configuration, restarts the system, and then performs a scripted operating system installation. You must set up the operating system being deployed in the Linux Scripting Toolkit source tree on the Altiris server. See "Adding operating system installation files" on page 10 for details.

The following variables may be customized for this job within the .Altiris Deployment Solution console. The values shown are the defaults:

- TK_pRAID_File="/sgdeploy/sgtklinux/ini/praid/default_raid.ini"
- TK_pRAID_Flags="-r"
- TK_Altiris_IP
- TK_DISTRO_TYPE
- TK_DISTRO_VERSION
- TK_DISTRO_PATH=ftp://\$TK_Altiris_IP/sgdeploy/os/rhel5x64
- TK_DISTRO_CFG
- TK_DirAgent_DirectorAgent=dirlin
- TK_UXSP_UpdateXpressSystemPacks=uxsp
- TK_DISTRO_KPARAM
- TK_DISTRO_NIC_PORT="link"

Configuring RAID with a policy file

You can configure RAID controllers using standalone jobs that only configure the RAID controllers and then stop, and jobs integrated with scripted and image-based deployment. The jobs that specify a specific RAID level in them use a pre-configured policy file to create a RAID array of that type on the target machine. The other jobs either deploy a previously captured RAID configuration or create the default RAID configuration if no policy file is specified.

Follow these steps to use a user defined policy file:

1. Create the policy file in the sgdeploy/sgtklinux/ini/praid directory.

2. Copy a pre-existing Toolkit job with RAID configuration.
3. Modify the TK_pRAID_File variable in the copied job to point to your policy file.
In this example: TK_pRAID_File="/sgdeploy/sgtklinux/ini/praid/UserPolicy1.ini".

Capture and deploy RAID configuration

TheLinux Scripting Toolkit provides sample Altiris jobs to capture and deploy a RAID Configuration, allowing the RAID configuration of a single server to provide a configuration basis for any number of servers. The capture sample job captures the RAID configuration of the server and stores it in a file named RAID_Configuration.ini.

By default, all captured RAID configurations are stored in the following directory on the Deployment Server:

AltirisPath\sgdeploy\sgtklinux\ini\praid\machinetype

where:

- *AltirisPath* is the fully qualified path to the Altiris Deployment Solution directory, for example C:\Program Files\Altiris\Express\Deployment Server.
- *machinetype* is the machine type of the captured system.

The deployment sample job deploys the captured RAID configuration from RAID_Configuration.ini located in the above directory by default. You can customize the following variables for these jobs within the Altiris Console:

- TK_pRAID_File=/sgdeploy/sgtklinux/ini/praid/*machinetype*/raid_capture.ini
- TK_pRAID_Flags="-r"

Server data disposal

These sample jobs perform a server data disposal. The first performs a disposal and resets the RAID Configuration. The second performs only a server data disposal.

The following variables may be customized for these jobs within the Altiris Console:

Variable	Values
TK_Wipe_Level	<ul style="list-style-type: none"> • "quick" - performs a quick wipe of the disks. • "dod" - performs a multipass wipe of the disks that conforms to DOD standards.
TK_Wipe_Repeat_Number	<i>number</i> - indicates the number of passes to complete.
TK_Wipe_Disk	<i>disk_number</i> - indicates the number of the disk to wipe. By default, "1" is the first disk in the system.

Note: Depending on the size of the drives involved and the wipe level, these jobs can take up to several hours to complete.

Linux and VMware unattended scripted installation

These sample jobs perform scripted installation of the supported Linux distributions. You must setup the distribution to be installed on the Altiris server before running these jobs. See “Adding operating system installation files” on page 10 for more information.

You can customize the following variables for these jobs:

- TK_Altiris_IP
- TK_DISTRO_TYPE
- TK_DISTRO_VERSION
- TK_DISTRO_PATH
- TK_DISTRO_CFG
- TK_DirAgent_DirectorAgent
- TK_UXSP_UpdateXpressSystemPacks

Capture and deploy a Linux image

The Linux Scripting Toolkit provides sample jobs to perform OS imaging tasks using Altiris. Operating system imaging tasks include capturing a copy of an installed OS and deploying that image to a target server. You might need to perform RAID configuration on the target server before you can deploy the OS image to it. In order to run the **Capture Linux Image** sample job, the Altiris agent must first be installed on the donor system. The Toolkit’s scripted OS install jobs automatically install the Altiris agent.

Note: The **Capture Linux Image** job is not supported for VMware ESX Server.

To modify the filename and location of the captured image, perform the following steps:

1. Double-Click on the **Capture Linux Image** job.
2. Select the **Create Disk Image** task and click **Modify**.
3. Change the path and filename for the captured image.
4. Click **Finish** to save.
5. Double-click on the **Deploy Linux Image** job.
6. Select the **Distribute Disk Image** task and click **Modify**.
7. Change the path and filename to the same values used above for the captured image.
8. Click **Finish** to save the changes.

Note:

- When you deploy a target server using the Image Install job, the image will include the Altiris Agent, because the donor server is required to have the Altiris Agent installed.
- Because the Linux imaging sample jobs use a sector-based imaging technique, the donor and target servers must have identical hardware.
- Altiris RapiDeploy, which is used for the cloning jobs, does not support cloning of multiple disks in a single pass. To work around this issue, you can place all of the Linux partitions on a single disk during installation by modifying the sample kickstart files to include the **–ondisk** parameter in the partition configuration *part* lines. Refer to the operating system documentation for additional information.

- To specify the disk to be cloned, you must add the **-d** parameter, specifying the disk number, to the command line options for the Capture Linux Image and Deploy Linux Image jobs. For example, to clone the operating system image on disk two, you would add: **-d2** to the command line options for the job.

Linux Pre-Boot Test

This sample job performs a basic task to test connectivity between the target server and the Altiris Deployment Server. The job boots into the IBM Linux PE x64 environment on the target server.

Chapter 6. Supported hardware and software

This section lists the operating systems, adapters, and RAID controllers supported by the Linux Scripting Toolkit, as well as systems that support BIOS and firmware updates using the ASU.

The Linux Scripting Toolkit supports deployment of Linux® operating systems on IBM System x® and BladeCenter® servers. In general, the Linux Scripting Toolkit provides support for ServerProven® IBM or third-party adapters in the following categories:

- Ethernet
- Fibre Channel
- IDE and IDE RAID
- SAS and SAS RAID
- SATA and SATA RAID
- SCSI and SCSI RAID, including Ultra-SCSI

This section contains the following information about specific hardware and software support for deployment scenarios:

- Supported operating system and server combinations
- RAID and Fibre channel HBA support by server
- Network device driver support by server
- Limitations of support for applicable servers.

The most up-to-date support information is contained in the `readme.htm` file. You can download the latest version of `readme.htm` file from the ServerGuide Scripting Toolkit Web page. See IBM deployment resources on the World Wide Web for information.

Operating system support

This section details what operating system deployment/server combinations are supported by the Linux Scripting Toolkit.

The Linux Scripting Toolkit supports installation of these Linux distributions on the indicated servers. For complete information on supported combinations of servers and operating systems, please visit IBM ServerProven at <http://www-03.ibm.com/systems/info/x86servers/serverproven/compat/us/>.

Table 3. Red Hat operating system support by server

Server	Operating system	
	Red Hat Enterprise Linux 4	Red Hat Enterprise Linux 5
xSeries® 260	✓	✓
xSeries 460	✓	✓
System x3105	✓	✓
System x3200	✓	✓
System x3200 M2	✓	✓
System x3200 M3		✓
System x3250	✓	✓
System x3250 M2	✓	✓

Table 3. Red Hat operating system support by server (continued)

Server	Operating system	
	Red Hat Enterprise Linux 4	Red Hat Enterprise Linux 5
System x3250 M3		✓
Systemx 3350	✓	✓
System x3400	✓	✓
System x3400 M2	✓	✓
System x 3400 M3	✓	✓
System x3455		✓
System x3500	✓	✓
System x3500 M2	✓	✓
System x3500 M3	✓	✓
System x3550	✓	✓
System x3550 M2	✓	✓
System x3550 M3	✓	✓
System x3620 M3		✓
System x3650	✓	✓
System x3650 M2	✓	✓
System x3650 M3	✓	✓
System x3655	✓	✓
System x3690 X5		✓
System x3755	✓ (8877)	✓
System x3800	✓	✓
System x3850	✓	✓
System x3850 M2	✓	✓
System x3850 X5		✓
System x3950	✓	✓
System x3950 M2	✓	✓
BladeCenter HS12	✓	✓
BladeCenter HS20	✓	
BladeCenter HS21	✓	✓
BladeCenter HS21 XM	✓	✓
BladeCenter HS22	✓	✓
BladeCenter HS22V	✓	✓
BladeCenter HX5		✓
AMD Opteron LS20 for IBM BladeCenter	✓	✓
AMD Opteron LS21 for IBM BladeCenter	✓	✓
AMD Opteron LS22 for IBM BladeCenter	✓	✓
AMD Opteron LS41 for IBM BladeCenter	✓	✓

Table 3. Red Hat operating system support by server (continued)

Server	Operating system	
	Red Hat Enterprise Linux 4	Red Hat Enterprise Linux 5
AMD Opteron LS42 for IBM BladeCenter	✓	✓
iDataplex dx360 M2	✓	
iDataplex dx360 M3	✓	✓

Table 4. SUSE operating system support by server

Server	Operating system		
	SUSE Linux Enterprise Server 9 SP4	SUSE Linux Enterprise Server 10	SUSE Linux Enterprise Server 11
xSeries 260	✓	✓	
xSeries 460	✓	✓	
System x3105	✓	✓	
System x3200	✓	✓	
System x3200 M2		✓	✓
System x3200 M3			✓
System x3250	✓	✓	
System x3250 M2	✓	✓	✓
System x3250 M3			✓
Systemx 3350	✓	✓	✓
System x3400	✓	✓	✓
System x3400 M2		✓	✓
System x3400 M3		✓	✓
System x3455	✓		
System x3500	✓	✓	✓
System x3500 M2		✓	✓
System x3500 M3		✓	✓
System x3550	✓	✓	✓
System x3550 M2		✓	✓
System x3550 M3		✓	✓
System x3620 M3		✓	✓
System x3650	✓	✓	✓
System x3650 M2		✓	✓
System x3650 M3		✓	✓
System x3655	✓ (7985)	✓	
System x3690 X5		✓	✓
System x3755	✓ (8877)	✓	✓
System x3800	✓	✓	
System x3850	✓	✓	
System x3850 M2	✓	✓	✓

Table 4. SUSE operating system support by server (continued)

Server	Operating system		
	SUSE Linux Enterprise Server 9 SP4	SUSE Linux Enterprise Server 10	SUSE Linux Enterprise Server 11
System x3850 X5		✓	✓
System x3950	✓	✓	
System x3950 M2	✓	✓	✓
BladeCenter HS12		✓	✓
BladeCenter HS20	✓	✓	
BladeCenter HS21	✓	✓	✓
BladeCenter HS21 XM	✓	✓	✓
BladeCenter HS22		✓	✓
BladeCenter HS22V		✓	✓
BladeCenter X5		✓	✓
AMD Opteron LS20 for IBM BladeCenter	✓	✓	
AMD Opteron LS21 for IBM BladeCenter	✓	✓	✓
AMD Opteron LS22 for IBM BladeCenter	✓	✓	✓
AMD Opteron LS41 for IBM BladeCenter	✓	✓	
AMD Opteron LS42 for IBM BladeCenter		✓	✓
iDataplex dx360 M2			
iDataplex dx360 M3		✓	✓

Table 5. VMware operating system support by server

Server	Operating system	
	VMware ESX Server 3.5	VMware ESX Server 4
xSeries 260	✓	
xSeries 460	✓	
System x3105		
System x3200		
System x3200 M2		
System x3200 M3		
System x3250		
System x3250 M2		
System x3250 M3		
Systemx 3350		✓
System x3400	✓	✓
System x3400 M2	✓	✓

Table 5. VMware operating system support by server (continued)

Server	Operating system	
	VMware ESX Server 3.5	VMware ESX Server 4
System x3400 M3	✓	✓
System x3455	✓	✓
System x3500	✓	✓
System x3500 M2	✓	✓
System x3500 M3	✓	✓
System x3550	✓	✓
System x3550 M2	✓	✓
System x3550 M3	✓	✓
System x3620 M3		✓
System x3650	✓	✓
System x3650 M2	✓	✓
System x3650 M3	✓	✓
System x3655	✓	
System x3690 X5		✓
System x3755	✓	
System x3800	✓	
System x3850	✓	
System x3850 M2	✓	✓
System x3850 X5		✓
System x3950	✓	
System x3950 M2	✓	✓
BladeCenter HS12		✓
BladeCenter HS20	✓	
BladeCenter HS21	✓	✓
BladeCenter HS21 XM	✓	✓
BladeCenter HS22	✓	✓
BladeCenter HS22V	✓	✓
BladeCenter HX5		✓
AMD Opteron LS20 for IBM BladeCenter	✓	
AMD Opteron LS21 for IBM BladeCenter	✓	✓
AMD Opteron LS22 for IBM BladeCenter	✓	✓
AMD Opteron LS41 for IBM BladeCenter	✓	✓
AMD Opteron LS42 for IBM BladeCenter	✓	✓
iDataplex dx360 M2		
iDataplex dx360 M3	✓	✓

RAID controller support

The following tables detail which RAID controller/server combinations are supported by the ServerGuide Scripting Toolkit, Linux Edition.

Note: This list was current at the time that this version of the ServerGuide Scripting Toolkit, Linux Edition was released. For the most current information on RAID controller compatibility, please visit IBM ServerProven.

ServeRAID controllers

Table 6. ServeRAID controllers 6m - 8s

Server	ServeRAID controller					
	6M	7t	8i	8k	8k-l	8s
xSeries 460	✓		✓			
System x3105		✓				
System x3200						✓
System x3200 M2						
System x3200 M3						
System x3250						✓
System x3250 M2						
System x3250 M3						
System x3350						
System x3400				✓	✓	✓
System x3400 M2						
System x3455						✓
System x3500				✓	✓	
System x3500 M2						
System x3550				✓	✓	✓
System x3550 M2						
System x3650	✓			✓	✓	✓
System x3650 M2						
System x3655				✓	✓	✓ (7985)
System x3755				✓	✓	✓
System x3800	✓		✓			✓
System x3850	✓		✓			✓
System x3850 M2						
System x3950	✓		✓			
System x3950 M2						
BladeCenter HS12						
BladeCenter HS20	✓					
BladeCenter HS21				✓		
BladeCenter HS21 XM				✓		
BladeCenter HS22						
BladeCenter LS20						

Table 6. ServeRAID controllers 6m - 8s (continued)

Server	ServeRAID controller					
	6M	7t	8i	8k	8k-l	8s
BladeCenter LS21				✓		
BladeCenter LS22						
BladeCenter LS41				✓		
BladeCenter LS42						

Table 7. ServeRAID B-series controllers

Server	Controller			
	B5015	BR10i	BR10il	BR10il v2
xSeries 460				
System x3105				
System x3200				
System x3200 M2			✓	
System x3200 M3				✓
System x3250				
System x3250 M2			✓	
System x3250 M3				✓
System x3350			✓	
System x3400				
System x3400 M2		✓		✓
System x3400 M3				
System x3455		✓		
System x3500				
System x3500 M2		✓		✓
System x3550				
System x3550 M2	✓			✓
System x3550 M3	✓			
System x3650				
System x3650 M2	✓	✓		✓
System x3650 M3	✓			
System x3655				
System x3755				
System x3800				
System x3850				
System x3850 M2				
System x3850 M3	✓			
System x3950				
System x3950 M2				
System x3950 M3	✓			
BladeCenter HS12				

Table 7. ServeRAID B-series controllers (continued)

Server	Controller			
	B5015	BR10i	BR10il	BR10il v2
BladeCenter HS20				
BladeCenter HS21				
BladeCenter HS21 XM				
BladeCenter HS22				
BladeCenter LS20				
BladeCenter LS21				
BladeCenter LS22				
BladeCenter LS41				
BladeCenter LS42				

Table 8. ServeRAID M-series controllers

Server	Controller									
	M1015	M5014	M5015	M5025	MR10i	MR10ie	MR10is	MR10k	MR1015/	MR105-R
xSeries 460										
System x3105										
System x3200										
System x3200 M2					✓		✓		✓	
System x3200 M3	✓	✓	✓	✓						✓
System x3250										
System x3250 M2					✓		✓		✓	
System x3250 M3	✓	✓	✓	✓						✓
System x3350					✓		✓		✓	
System x3400							✓			
System x3400 M2	✓	✓	✓	✓	✓		✓		✓	✓
System x3400 M3	✓	✓	✓	✓						
System x3455									✓	
System x3500							✓			
System x3500 M2	✓	✓	✓	✓	✓		✓		✓	✓
System x3500 M3	✓	✓	✓	✓						
System x3550							✓		✓	
System x3550 M2	✓	✓	✓	✓	✓		✓		✓	✓
System x3550 M3	✓	✓	✓	✓						

Table 8. ServeRAID M-series controllers (continued)

Server	Controller									
	M1015	M5014	M5015	M5025	MR10i	MR10ie	MR10is	MR10k	MR1015/	MR105-R
System x3620 M3	✓	✓	✓							
System x3650							✓		✓	
System x3650 M2	✓	✓	✓	✓	✓		✓		✓	✓
System x3650 M3	✓	✓	✓	✓						
System x3655							✓		✓	
System x3690 X5		✓	✓	✓						
System x3755							✓		✓(8877)	
System x3800										
System x3850										
System x3850 M2		✓	✓				✓	✓	✓	
System x3850 M3										
System x3850 X5	✓	✓	✓	✓						
System x3950										
System x3950 M2		✓	✓				✓	✓	✓	
System x3950 M3										
System x3950 X5	✓	✓	✓	✓						
BladeCenter HS12						✓				
BladeCenter HS20										
BladeCenter HS21										
BladeCenter HS21 XM										
BladeCenter HS22										
BladeCenter LS20										
BladeCenter LS21										
BladeCenter LS22										
BladeCenter LS41										

Table 8. ServeRAID M-series controllers (continued)

Server	Controller									
	M1015	M5014	M5015	M5025	MR10i	MR10ie	MR10is	MR10k	MR10L5	MR105-R
BladeCenter LS42										
iDataplex dx360 M2					✓					

Other supported controllers

Table 9. Other supported RAID controllers

Server	Controller					
	IBM 3Gb SAS HBA v2	IBM-SAS 1068	LSI-SAS 1064/1064E	LSI-SAS 1078	LSI-SCSI 1020/1030	LSI MegaRAID 8480
xSeries 460						
System x3105		✓				
System x3200			✓			
System x3200 M2		✓				
System x3200 M3						
System x3250			✓			
System x3250 M2		✓				✓
System x3250 M3						
System x3350						✓
System x3400						
System x3400 M2	✓					
System x3400 M3						
System x3455	✓	✓				
System x3500						
System x3500 M2						
System x3500 M3						
System x3550						✓
System x3550 M2	✓					
System x3550 M3						
System x3620 M3						
System x3650						✓
System x3650 M2	✓					
System x3650 M3						
System x3655						✓
System x3755						✓
System x3800						✓
System x3850						
System x3850 M2		✓		✓		✓
System x3850 M3						

Table 9. Other supported RAID controllers (continued)

Server	Controller					
	IBM 3Gb SAS HBA v2	IBM-SAS 1068	LSI-SAS 1064/1064E	LSI-SAS 1078	LSI-SCSI 1020/1030	LSI MegaRAID 8480
System x3950						
System x3950 M2		✓		✓		✓
System x3950 M3						
BladeCenter HS12						
BladeCenter HS20					✓	
BladeCenter HS21			✓			
BladeCenter HS21 XM			✓			
BladeCenter HS22			✓			
BladeCenter LS20					✓	
BladeCenter LS21			✓			
BladeCenter LS22			✓			
BladeCenter LS41			✓			
BladeCenter LS42			✓			

Fibre Channel HBA support

This section lists the Fibre Channel adapters supported by the Linux Scripting Toolkit.

The Linux Scripting Toolkit provides full support for the following adapters. For information on supported server/adaptor combinations, please see IBM ServerProven.

IBM HBAs:

- 2 GB IBM SMB 2-Gbps Fibre Channel HBA (13N1873)
- 2 GB IBM HS20 Fibre Channel Expansion Card (13N2203)
- 2 GB DS4000® HBA (24P0960)
- 2 GB SFF Fibre Channel Expansion card (26K4841)
- 4 GB DS4000 PCI-X Single Port HBA (39M5894)
- 4 GB DS4000 FC PCI-X Dual Port HBA (39M5895)
- IBM HBA SAS controller (44W1853)
- 2 GB IBM HS20 Fibre Channel Expansion Card (48P7061)

Qlogic HBAs:

- 4 GB Standard Fibre Channel Expansion Card for IBM eServer™ BladeCenter (26R0884)
- 4 GB SFF Fibre Channel Expansion Card for IBM eServer BladeCenter (26R0890)
- 4 GB Single-Port PCIe HBA for IBM System x (39R6525)
- 4 GB Dual-Port PCIe HBA for IBM System x (39R6527)
- Ethernet and 4 GB Fibre Channel Expansion Card for IBM BladeCenter (39Y9306)

- iSCSI Single-port PCIe HBA for IBM System x (39Y6146)
- iSCSI Dual-port PCIe HBA for IBM System x (42C1770)
- 4 GB Fibre Channel Expansion Card for IBM BladeCenter (41Y8527)
- 8 GB Fibre Channel Singleport HBA (42D0501)
- 8 GB Fibre Channel Dualport HBA (42D0510)
- 8 GB Ethernet and Fibre Channel Expansion Card CFFh (44X1940)
- 8 GB Fibre Channel Expansion Card CIOv (44X1945)

Emulex HBAs:

- 4 GB Fibre Channel Single-port PCIe HBA for IBM System x (42C2069)
- 4 GB Fibre Channel Single-port PCIe HBA for IBM System x (42C2071)
- 8 GB Fibre Channel Single- Port Expansion Card (42D0485)
- 8 GB Fibre Channel Single/ Dual- Port HBA (42D0494)
- 8GB Fibre Channel Dual- Port Expansion Card (42D0494)
- 8 GB Fibre Channel Dual-port Expansion Card (46M6140)

Note:

- Support of some Fibre Channel HBA cards, particularly the QLogic 39Y9306, by some models of BladeCenter chassis is subject to some limitations and can require the installation of additional supporting equipment. Please refer to the IBM Red Paper *Implementing the QLogic Intelligent Pass-thru module for IBM BladeCenter* at <http://www.ibm.com/redbooks> for additional compatibility information.

In addition, the Linux Scripting Toolkit supports the use of the following Brocade adapters as boot devices, but you must configure them using the Brocade utilities, as no configuration support is provided by the Linux Scripting Toolkit.

Brocade adapters:

- 8 GB Single Port Fibre Channel Adapter (46M6049)
- 8 GB Dual Port Fibre Channel Adapter (46M6050)
- 4 GB Fibre Channel Single-port HBA for IBM System x (59Y1987)
- 4 GB Fibre Channel Dual-port HBA for IBM System x (59Y1993)

Advanced Settings Utility Support

This section lists the systems supported by the Advanced Settings Utility through the Linux Scripting Toolkit.

Table 10. ASU support by the Toolkit

Systems supported by ASU and the Linux Scripting Toolkit	
Model	Type
xSeries 260	8865
xSeries 366	8863
xSeries 460	8872
System x3200	4362, 4363
System x3200 M2	4367, 4368
System x3200 M3	7327, 7328
System x3250 M2	4190, 4191, 4194

Table 10. ASU support by the Toolkit (continued)

System x3250 M3	4251, 4252, 4261
System x3350	4192, 4193
System x3400	7973, 7974, 7975, 7976
System x3400 M2	7836, 7837
System x3400 M3	7378, 7379
System x3455	7940, 7941
System x3500	7977
System x3500 M2	7839
System x3500 M3	7380
System x3550	1913, 7978
System x3550 M2	4198, 7946
System x3550 M3	4254, 7944
System x3620 M3	7376
System x3650	1914, 7979
System x3650 M2	4199, 7947
System x3650 M3	4255, 7945
System x3655	7943, 7985
System x3690 X5	7148, 7149
System x3755	7163, 8877
System x3800	8865, 8866
System x3850	7362, 7365, 8864
System x3850 M2	7141, 7144, 7233
System x3850 X5	7145
System x3950	7363, 7366, 8878
System x3950 M2	7141, 7144, 7234
System x3950 X5	7146
IBM BladeCenter HS12	1916, 8014, 8028
IBM BladeCenter HS20	1883, 8843
IBM BladeCenter HS21	1885, 8853
IBM BladeCenter HS21 XM	1915, 7995
IBM BladeCenter HS22	1936, 7809, 7870
IBM BladeCenter HS22V	1949, 7871
IBM BladeCenter HX5	1909, 7872
AMD Opteron LS20 for IBM BladeCenter	8850
AMD Opteron LS21 for IBM BladeCenter	7971
AMD Opteron LS22 for IBM BladeCenter	7901
AMD Opteron LS41 for IBM BladeCenter	7972
AMD Opteron LS42 for IBM BladeCenter	7902
IBM System x iDataPlex dx360 M3	6391

Chapter 7. Linux Scripting Toolkit utilities and tools

This section contains information about the utilities that are included in the Linux Scripting Toolkit and the tools that are shipped with it. For each utility there is a description of parameters, along with examples.

For each included tool there is a brief description of the tool and instructions on using it with the Linux Scripting Toolkit, as well as pointers on where to get more information on the tool and its use.

altiris_sgtklinux.cmd

Purpose

This script builds the IBM-specific Linux Pre-installation Environment for Altiris Deployment Solution and integrates the Toolkit into Altiris Deployment Solution

Note:

1. This script must be executed from the directory in which it resides.
2. The Altiris Deployment Solution and Linux Scripting Toolkit must be installed in a path that does not contain parentheses.

altiris_sgtklinux.cmd

Parameters

There are no parameters

Sample

Altiris_SGTKLinux

acquire_seps.cmd

This script acquires the System Enablement Packs (SEP) for the specified machine types given and copies the packs to a location where Linux Toolkit can utilize them during deployments.

acquire_seps.cmd

Parameters

machine_type

specifies the machine type for which to acquire seps. You can specify multiple machine types by separating them with commas.

All Acquires all available SEPs.

Sample

acquire_seps.cmd 7979

acquire_seps.cmd 7979,4199

acquire_seps.cmd all

Linux Scripting Toolkit utilities

This section contains information about the utilities that are included in the Linux Scripting Toolkit. For each utility there is a description of parameters, along with examples. These utilities can be found in `/sgdeploy/sgtklinux/tk/bin`.

The command-line syntax examples in this documentation use the following conventions:

- Variables are shown in *italics*
- Required parameters are shown within `<>` brackets
- Optional parameters are shown within `[]` brackets
- Required or optional parameters from which you must make a unique choice are separated by a vertical bar (`|`) character

You must enter all parameters for a utility on a single command line, even when the information in this documentation is shown on multiple lines.

HWDETECT

HWDETECT is used to perform basic hardware detection functions that are typically obtained using SMBIOS and a PCI scan. This utility contains options that can be used to dump all of the hardware information to an output file, or it can be used to query hardware information and return values that set the *errorlevel* environment variable or the return code, for example `$?`.

HWDETECT has basic hardware scan functions, and more complex PCI device detection options. The basic hardware scan functions can only be used singularly. The PCI device detection functions may be used in combination with each other to produce a query based on multiple restrictions. You can only use the `hwdetect` utility basic hardware scan functions one at a time. The PCI-device detection functions can be combined or used more than once on the same command line.

Usage:

```
hwdetect [-s|-i|-p|--m=machinetype] -f=filename
```

Parameter	Description	Example
-s	Determines if the target server is an IBM System x, xSeries, or BladeCenter server. The return values are: <ul style="list-style-type: none">• 0 for an IBM system• 1 for a non-IBM system	<pre>./hwdetect -s if [\$? -eq 1]; then echo "Perform non-IBM equipment specific steps here." else echo "Perform IBM equipment specific steps here." fi</pre>
-i	Dumps all available information about the system hardware to the screen in an ini file format. You can use the -f parameter to output this information to a file. A return code of zero indicates success. All other return codes indicate an error.	<pre>./hwdetect -i</pre>

Parameter	Description	Example
<code>-f=filename</code>	Directs the output to the indicated file. This parameter can be used in conjunction with the <code>-i</code> or <code>-p</code> parameters. A return code of 254 indicates that hwdetect was unable to open the specified file.	<pre>./hwdetect -i --f=hwdetect.out cat hwdetect.out grep "Bus_Number.21 = 41"</pre>
<code>--m=machinetype</code>	Compares the machine type of the current system to the specified machine type. Return codes: <ul style="list-style-type: none"> 0 indicates that the machine types do not match. 1 indicates a match 	<pre>./hwdetect --m=8676 if [\$? -eq 8676]; then echo "It is an IBM system." else echo "It is not an IBM system."</pre>

You can also use HWDETECT to inventory PCI devices on the target system.

Usage:

```
hwdetect [--vid=vendor_id|--did=device_id|--svid=sub-vendor_id|
--sdid=sub-device_id|--bn=bus_number|--dn=device_number|--add=n]
```

Parameter	Description	Example
<code>--vid=vendor_id</code>	Searches for PCI devices with the indicated hexadecimal vendor ID.	<pre>./hwdetect --vid=40 echo "Found \$? matches..."</pre>
<code>--did=device_id</code>	Searches for PCI devices with the indicated hexadecimal device ID.	<pre>./hwdetect --did=41 echo "Found \$? matches..."</pre>
<code>--svid=sub-vendor_id</code>	Searches for PCI devices with the indicated hexadecimal sub-vendor ID.	<pre>./hwdetect --svid=42 echo "Found \$? matches..."</pre>
<code>--sdid=sub-vendor_id</code>	Searches for PCI devices with the indicated hexadecimal sub-device ID.	<pre>./hwdetect --sdid=43 echo "Found \$? matches..."</pre>
<code>--bn=bus_number</code>	Starts the search at the indicated decimal bus number.	<pre>./hwdetect --bn=44 echo "Found \$? matches..."</pre>
<code>--dn=bus_number</code>	Starts the search at the indicated decimal device number.	<pre>./hwdetect --dn=45 echo "Found \$? matches..."</pre>
<code>--add=number</code>	Adds the specified decimal value to the return value before exiting.	<pre>./hwdetect --vid=46 --add=1 echo "Found \$? - 1 matches..."</pre>

Below is an example of the hwdetect.out file created by the `-i` flag:

```
[System]
Machine_Type=8674
Model_Number=42X
Serial_Number=78Z9506
Product_Name=eserver xSeries 330
BIOS_version=1.04
BIOS_Build_Level=EME112A
BIOS_DATE=06/28/2002
BIOS_Manufacturer=IBM
BIOS_Language=US
Number_Of_Enclosures=1
Enclosure_Type.0=23
Processor_Slots=2
Active_Processors=1
Processor_Family.0=17
Processor_Speed_MHz.0=1400
```

```

Processor_X64 = TRUE
Total_Enabled_Memory_Mb=256
ROM_Diagnostics_Build_Level=EME112A
ISMP_Build_Level=BR8T30A
RSA_Build_Level=GEE834A
System_UUID = 8030E01060F010B010605090D0A020F0
Blade_Chassis_UUID = 0F020A0D0900F00F020A0D0900F00F02
Blade_Slot = 02

```

```

[PCI]
Total_Number_Devices=10
Bus_Number.0=0
Device_Number.0=1
Function_Number.0=0
Class_Code.0=0000
Revision.0=0
Header_Type.0=0
Vendor_ID.0=5333
Device_ID.0=8A22
Subvendor_ID.0=1014
Subdevice_ID.0=01C5
Bus_Number.1=0
Device_Number.1=2
Function_Number.1=0
Class_Code.1=0000
Revision.1=0
Header_Type.1=0
Vendor_ID.1=8086
Device_ID.1=1229
Subvendor_ID.1=1014
Subdevice_ID.1=105C

```

Using the `-p` flag produces the same output with the exception that the section names are tacked onto the beginning of each keyword:

```

System_Machine_Type = 8674
System_Model_Number = 42X
System_Serial_Number = 78Z9506
...
PCI_Bus_Number.0 = 0
PCI_Device_Number.0 = 1
...

```

Notes:

1. The BIOS_DATE value is listed in mm/dd/yyyy format.
2. The Enclosure_Type.0=23 is based on SMBIOS 2.3 spec. 23 = Main chassis.
3. There is an entry for Processor_Family and Processor_Speed_MHz for each microprocessor in the server.
4. The ROM_Diagnostics_Build_Level is empty for servers that do not support ROM diagnostics.
5. PCI devices are listed in the order they are scanned.
6. PCI devices are listed in the *Value.n* format, where *Value* is the variable name and *n* is the nth PCI device scanned.
7. The header_type field is not available for versions of hwdetect running on Windows® 32 or 64-bit operating systems.
8. The vendor, device, subvendor, and subdevice values are in hexadecimal notation.

SAVESTAT.SH

The Savestat utility allows you to store and retrieve up to twenty values to persistent storage. The utility is designed to help you remember where you left off in an installation script even when a system reboot is required. This utility is designed to return values that set the `?` environment variable so that you can branch in a script (sh) file based on the result of the utility's execution.

Savestat uses the persistent storage capability of ASU. Therefore the following files must be available in order for the script to work:

- ASU package (ibm_utl_asu_asut69*_linux_x86-64.tgz)
- savestat.sh script
- savestat.def

Usage

The savestat utility that comes with the ServerGuide Scripting Toolkit has the following command-line syntax:

```
SAVESTAT [/q] -set1=value [...-set2=value ... -set21=value]
SAVESTAT [/q] -getn
SAVESTAT [/q] -validate
SAVESTAT [/q] -signature
```

Parameter	Description	Usage
-setn=value	Saves an integer value, <i>value</i> , to the <i>n</i> th location in persistent-storage memory Return codes: <ul style="list-style-type: none">• 0 if successful• 1 if not successful	<code>./savestat.sh -setn=value</code> Where: <ul style="list-style-type: none">• <i>n</i> is an integer from 1–21• <i>value</i> is an integer from 0–254
-getn	Retrieves a value currently set in the <i>n</i> th location in persistent-storage memory, where <i>n</i> can be any number 1-5. Return codes: <ul style="list-style-type: none">• The value stored at the location specified by <i>n</i>, if successful.• 255 if not successful.	<code>./savestat.sh -getn</code> Where <i>n</i> is the location of a previously-stored value.
-signature	Verifies that the persistent storage contains the savestat signature. Return codes: <ul style="list-style-type: none">• 0 if storage contains the signature• 1 if storage does not contain the signature	<code>./savestat.sh -signature</code>
-validate	Verifies that the system is supported by savestat. Return codes: <ul style="list-style-type: none">• 0 if the system is supported• 1 if the system is not supported	<code>./savestat.sh -validate</code>
-q	Invokes the quiet mode. This parameter is optional and can be used with any other savestat parameter.	<code>./savestat.sh -q -set1=100</code>

Note: The help for `savestat.sh` indicates that the `--reset` parameter is supported. `Savestat.sh` does not currently support the `--reset` parameter. In order to reset all of the storage locations to zero, use the `savestat.sh --set` command as shown here:

```
savestat.sh --set1=0 --set2=0 --set3=0 --set4=0 --set5=0 --set6=0 --set7=0
--set8=0 --set9=0 --set10=0 --set11=0 --set12=0 --set13=0 --set14=0
--set15=0 --set16=0 --set17=0 --set18=0 --set19=0 --set20=0 --set21=0
```

Examples

The following examples illustrate `savestat` utility usage.

Example	Description
<code>./savestat.sh -set2=100</code>	Stores the value 100 in the second persistent-storage memory location
<pre>./savestat.sh -get2 if [\$? -eq 100]; then echo "The value 100 was found successfully." else echo "The value 100 was not found." fi</pre>	Retrieves the value of the second persistent-storage memory location and branches in the script file according to the value returned

PRAID

PRAID is a scriptable utility that offers a single user interface for both configuring and replicating all RAID controllers supported by the Linux Scripting Toolkit.

PRAID has three modes of operation:

- **Deploy mode** – for scripted configuration of RAID controllers.
- **Capture mode** – for replicating RAID controller settings.
- **Restore-defaults mode** – for resetting RAID controllers to factory-default settings only.

Deploy mode

Used in Deploy mode, PRAID offers the following features:

- Configures all RAID controllers in a server with a single call to the program.
- Automatically resets all RAID controllers to factory-default settings before configuring.
- Uses customizable logic to decide which configuration (policy) is applied to a server based on system hardware. The logic can involve:
 - Machine type of the server
 - Serial number of the server
 - Number of drives connected to the RAID controller
 - RAID controller type
 - Controller number (order) of the RAID controller
- Can be highly customized for specific RAID configurations, or generalized to handle many different RAID configurations.
- Provides a default or AUTO mode for automatically creating arrays and logical drives using default settings. This mode requires no knowledge of the number, size, or location of the drives connected to the RAID controllers.

- Automatically applies default values for any RAID configuration parameters that you do not supply. You supply only the parameters that you want to change.
- Default values for each configuration parameter are equivalent to the default settings of the ServeRAID Manager express configuration method, where applicable.
- Allows up to 50 policies for configuring RAID controllers to be specified in a single policies file.

Note:

When using PRAID in Deploy mode, the **-r** parameter is required.

To delete RAID configuration on all controllers, specify **-r**. To delete RAID configuration on a specific controller, specify **-r#** where **#** is the controller number.

For example, `praid -f:policy.ini -r -y`.

Capture mode

Used in Capture mode, PRAID offers the following features:

- Captures the RAID configurations of all supported controllers to a text file, the policies file, with a common format.
- Captured RAID configurations can be immediately used with PRAID in deploy mode to easily replicate the RAID configuration to many servers.
- Allows customizable logic when saving the captured parameters to determine when each captured configuration should be deployed.
- Saves useful information about each captured configuration, including the system machine type, date, and time when the configuration was captured.
- Allows you to edit any RAID configurations that you capture before deploying them to other systems.

Restore-defaults mode

Used in Restore-defaults mode, PRAID offers the following features:

- Deletes all arrays and logical drives on all RAID controllers.
- Sets other RAID controller settings back to factory defaults.

Environment requirements

The PRAID utility supports the following RAID controllers:

- ServeRAID-6M
- ServeRAID-7t
- ServeRAID-8i
- ServeRAID-8k
- ServeRAID-8k-l
- ServeRAID-8s
- ServeRAID-10k
- ServeRAID-10M
- ServeRAID-B5015
- ServeRAID-BR9i
- ServeRAID-BR10i

- ServeRAID-BR10ie
- ServeRAID-BR10il
- ServeRAID-M5014
- ServeRAID-M5015
- ServeRAID-M5025
- ServeRAID-MR10i
- ServeRAID-MR10il
- ServeRAID-MR10is
- ServeRAID-MR1015
- ServeRAID-MR1015–R5
- LSI SCSI (1020/1030)
- LSI SAS (1064/1064E/1068/1078)

PRAID works by parsing the output of other RAID-configuration utilities. In order to accomplish this, the following utilities must be in the system search path:

Adapter	Utility
ServeRAID 6M	IPSSSEND
ServeRAID-7t, 8i, 8k, 8k-l, 8s	ARCCONF
LSI-SCSI 1020/1030, LSI-SAS 1064/1064E, LSI-SAS 1068, LSI-SAS 1078, ServeRAID BR9i, BR10i, BR10ie, BR10il	CFGGEN
MegaRAID SAS, ServeRAID-M5014, M5015, M5025, MR10i,, MR10ie,MR10il, MR10is, MR10k, MR10M, MR1015, MR1015–R5	MEGACLI
ServeRAID-B5015	BRCLI

Usage

Each of the modes supported by PRAID requires a specific syntax, but they all share some common parameters, described in Table 11.

Table 11. PRAID parameters common to multiple modes

Parameter	Description	Usage
-r: <i>n</i> Restore-defaults mode	Restores the RAID controller with the controller number specified by <i>n</i> to factory-default settings and then returns immediately. No RAID configuration is done if you use this parameter. If no value is specified for the controller number, all RAID controllers are reset to factory-default settings. Used alone, the parameter provides Restore-defaults mode. You must use this parameter in conjunction with Deploy mode parameters to reset controllers to the factory default settings before deploying a new configuration.	<code>praid -r</code> Restores all controllers to factory-default settings. <code>praid -r:3</code> Restores controller three to factory-default settings. No other controllers are affected. <code>PRAID -f:policies.ini -r -v:5 -e1</code> Configures the RAID controllers in the system using the policies file <code>policies.ini</code> , sets the verbose mode to maximum, and returns an error code if there were no matching policies for any controllers.

Table 11. PRAID parameters common to multiple modes (continued)

Parameter	Description	Usage
<p><code>-f:polices_file</code></p> <p>Specifies the policy file</p>	<p>The policy file name. This parameter is required for capture mode, and for deploy mode unless the <code>-d</code> parameter is used.</p> <p>In deploy mode, this points to the policies that you would like PRAID to use when configuring the RAID controllers. You cannot use this parameter with the <code>-d</code> parameter.</p> <p>In capture mode, this points to the file where you would like the captured configurations to be written. If the file does not exist, PRAID will create it. If the file does exist, PRAID will append to the end of it.</p> <p>The <code>-f</code> parameter is valid in deploy and capture modes.</p>	<p><code>praid -f:myfile.ini</code></p> <p>Uses the policies file, myfile.ini, to configure all RAID controllers.</p> <p><code>praid -c -f:myfile.ini</code></p> <p>Captures the RAID configuration of all controllers to the policy file, myfile.ini.</p>
<p><code>-y</code></p> <p>Suppresses prompting</p>	<p>Suppresses the confirmation prompt. This parameter is optional.</p> <p>If you select the <code>-y</code> parameter, PRAID does not prompt you before resetting controllers to factory-default settings. PRAID always resets all controllers to factory-default settings before configuring them.</p> <p>If you do not supply this parameter, PRAID will pause to warn you before resetting the RAID controllers to factory-default settings.</p> <p>The <code>-y</code> parameter is valid in deploy and restore-defaults modes.</p> <p>This parameter is optional.</p>	<p><code>praid -f:myfile.ini -y</code></p> <p>Uses the policies in myfile.ini to configure the RAID controllers and does not prompt before resetting all controllers to factory-default settings.</p>
<p><code>-e2</code></p> <p>Error code 2 if no supported controllers found</p>	<p>Returns an error code of 2 if there were no supported RAID controllers found in the system.</p> <p>By default, PRAID does not return an error if no controllers are found in the system.</p> <p>This parameter is valid in all modes.</p> <p>This parameter is optional.</p>	<p><code>praid -c -f:myfile.ini -e2</code></p> <p>Captures the RAID configuration of all RAID controllers to myfile.ini, and returns an error if no controllers are found in the system.</p>

Table 11. PRAID parameters common to multiple modes (continued)

Parameter	Description	Usage
-e3 Error code 3 if no supported drives found	Returns an error code of 3 if at least one controller was found with no drives attached. By default, PRAID does not return an error if no drives are attached to a RAID controller. This parameter is valid in any mode. This parameter is optional.	<code>praid -d -e3</code> Configures all RAID controllers with default settings and returns an error if one or more controllers has no drives attached.
-v:n Verbose level	Sets the verbosity level, where n is: <ul style="list-style-type: none"> • 0 - quiet • 3 - default • 5 - maximum This parameter is valid in any mode. This parameter is optional.	<code>praid -d -v:5</code> Configures all RAID controllers with default settings, and sets the verbose level to maximum.

Deploy mode

The syntax for Deploy mode is:

```
PRAID.EXE -f:policies -r -d -p:path -e1 -e2 -e3
-v:n -y -b
```

The parameters unique to Deploy mode are described below.

Table 12. PRAID Deploy mode parameters

Parameter	Description	Usage
-d Configure with defaults	Configure all controllers in the system using default settings instead of using a policies file. The default settings used are the same as the default settings for the policies file. You cannot use this parameter with the -f parameter. See “Default RAID levels” on page 71 for the default values that will be assigned for each RAID controller based on the number of drives attached to the controller. This parameter is required unless the -f parameter is specified.	<code>praid -d -r</code> Configures all RAID controllers in the system using default settings.
-e1 Error if no policy found	Returns an error code of 1 if one or more controllers are not configured due to the fact that there was no policy found to configure them This parameter is optional.	<code>praid -f:policy.ini -r -e1</code> Configures all RAID controllers using the policies file, policy.ini, and returns an error if no matching policy was found.

Capture mode

The syntax for Capture mode is:

```
PRAID.EXE -c[:p] -f:policies -e2 -e3 -v:n
```

The parameters unique to Capture mode are described below.

Table 13. Capture mode parameters

Parameter	Description	Usage
-c[:p] Capture mode	<p>Indicates capture mode. The :p portion is optional. If you do not include the optional portion, then :p will assume the default value: "t,d".</p> <p>You can use :p to provide a list of parameters describing the AppliesTo that should be created when capturing the parameters to a policy. See "AppliesTo.n" on page 63.</p> <p>:p is a list containing any of the following:</p> <ul style="list-style-type: none">• t – use the type of the RAID controller in the AppliesTo.1 entry for the policy.• c – use the controller number (scan order relative to all other RAID controllers in the system) in the AppliesTo.1 entry for the policy.• d – use the number of drives connected to the RAID controller in the AppliesTo.1 entry for the policy. <p>Note: You must specify the name of the policies file using the -f parameter when using the -c parameter.</p> <p>The policy or policies created are appended to the end of the file if the file exists. If the file does not exist, a new file is created. If there are multiple RAID controllers in the system, their configurations are placed in the file in scan order.</p>	<pre>praid -c:m,t -f:myfile.ini</pre> <p>Captures the configuration of all RAID controllers to myfile.ini using the machine type of the server and the RAID controller type as the AppliesTo.1 entry.</p>

Restore-defaults mode

The syntax for Restore-defaults mode is:

```
PRAID -r:n -e2 -v:n -y
```

Usage examples

Deploy mode examples

```
PRAID -r -d -y
```

- Configures all RAID controllers in the system using default settings.
- Does not prompt before setting controllers to factory-default settings.
- Performs drive synchronization without prompting, when required.

This example is useful for unattended scripted installations.

```
PRAID -f:policies.ini -r -v:5 -e1
```

- Configures the RAID controllers in the system using the policies file: policies.ini.
- Sets the verbose mode to maximum.
- Returns an error code if there were no matching policies for one or more controllers

Capture mode examples

```
PRAID -c -f:policies.ini
```

Captures the configuration of all RAID controllers into the file: policies.ini.

```
PRAID -c:m,t -f:policies.ini
```

- Captures the configuration of all RAID controllers into the file: policies.ini.
- Uses the system machine type and RAID controller type as the AppliesTo.1 entry in the policies file for each captured configuration.

Restore-defaults mode examples

```
PRAID -r -v:0 -y
```

- Restores all RAID controllers to factory-default settings.
- Operates in silent mode, no messages are printed to the screen.
- Does not prompt the user before restoring factory-default settings.

Return codes

- **0** - Success.
- **1** - Execution was successful, but the *-e1* parameter was supplied and at least one controller was not configured because there was no matching policy.
- **2** - Execution was successful, but the *-e2* parameter was supplied and no controllers were found in the system.
- **3** - Execution was successful, but the *-e3* parameter was supplied and at least one controller was not configured because no drives were attached.
- **4** - Syntax error on the command line.
- **5** - Syntax error in the policies file or the policy file could not be opened.
- **6** - Reserved
- **7** - Error resetting a controller to the default settings.
- **8** - Error gathering information about a controller.
- **9** - Error in the policy file.
- **10** - Error during processing.
- **11** - Error during deployment.

Policies file

When used in configure mode, the policies file directs how PRAID configures the RAID controllers in a system using keywords and values that can be customized by the user. In capture mode, PRAID creates or appends to the end of a policies file the parameters that can configure other RAID controllers identically to the ones in the current system.

A policies file can be created using any of the following methods:

1. Run PRAID in capture mode to create a policies file from an already-configured RAID controller.

2. Use one of the example policies files provided with the ServerGuide Scripting Toolkit, and customize it to configure your RAID controllers.
3. Use an ASCII text editor to create a new policies file.

The policies file is an ASCII text file that is organized in INI-file format. Each INI-file section name indicates the start of a new policy for configuring RAID controllers.

The policies file must contain one or more uniquely-named sections using the format `[Policy.name]` where *name* is a unique user-assigned name that is used to identify the policy. *name* can be any combination of letters, numbers, underscores, periods, or dashes.

Some examples of legal section names are: `[Policy.1]`, `[Policy.mypolicy]`, and `[Policy.My-RAID5-config]`. Each section in the policies file represents a single policy for configuring RAID controllers. You can have up to 50 policies in a single policies file.

How PRAID selects a policy: Each section in the policies file represents a single policy for configuring the RAID controllers. In configure mode, each RAID controller is configured using a single policy, but a single policy can be used to configure multiple controllers. Each policy in a policies file contains one or more *AppliesTo.n* entries, where *n* is the number of the AppliesTo parameter within the policy. This entry is required in each section, so every section must contain at least an *AppliesTo.1* entry. See “Policies file parameters” for a full description of the *AppliesTo.n* entry.

These entries are followed by a list of hardware parameters including machine type, number of drives connected to the RAID controller, and scan order, that are evaluated against the current system hardware. If all of the hardware parameters of an *AppliesTo.n* entry match the hardware being evaluated, this policy is used to configure the hardware. For each policy in the policies file, the *AppliesTo.n* entries for that policy are evaluated in order starting with *AppliesTo.1*. If none of the *AppliesTo.n* entries match the current hardware then the policy is not applied and the *AppliesTo.n* entries in the next policy are evaluated. This continues until either a match is found or no more policies exist in the file. If the end of the file is reached without a match then the controller is not configured. Because the policies are evaluated in order, you should place more specific policies at the beginning of the policies file.

Policies file parameters: This section describes the parameters used in the policies file. The *Policy.name* header and *AppliesTo.1* entry are the only parameters required. All values are case-insensitive.

If you do not specify a value for any of the other parameters, they will be assigned their default value when applicable. If a parameter is not valid for a RAID controller, it will be ignored.

In addition to this reference, the ServerGuide Scripting Toolkit also provides two example policies files that you can modify for your own use.

- **RAID1-5.ini** Creates a RAID-1 array using the first two drives, and a RAID-5 array using the remaining drives. Valid for ServeRAID-6M and 8i.
- **RAID5HSP.ini** Creates a single RAID-5 array with a single hot-spare drive using all available drives. Valid for ServeRAID-6M and 8i.
- **template.ini** Provides a policies file template containing all parameters with details about each parameter.

- syntax.txt Provides a syntax specification for the policies file.

Table 14. Policy file parameters

Keyword	Required?	Default	Description
<code>Policy.name</code>	Yes	None	This header designates the start of a new policy. See “ <i>Policy.name</i> ” on page 63 for additional information.
<code>AppliesTo.n</code>	Yes	None	Use this parameter to describe when the current policy should be chosen to configure the RAID controllers. See “ <i>AppliesTo.n</i> ” on page 63 for additional information.
<code>ReadAhead</code>	No	<ul style="list-style-type: none"> • ADAPTIVE (for ServeRAID 6M) • ON (for ServeRAID-7t 8i, 8k, and 8k-l) 	Specifies the read ahead setting that should be applied to the RAID controller. See “ <i>ReadAhead</i> ” on page 64 for additional information.
<code>RebuildRate</code>	No	HIGH	Specifies the rebuild rate that should be applied to the RAID controller. See “ <i>RebuildRate</i> ” on page 65 for additional information.
<code>StripeSize</code>	No	<ul style="list-style-type: none"> • 8 (for ServeRAID 6M) • 64 (for ServeRAID-7t, 8i, 8k, 8k-l,) 	Specifies the stripe-unit size in KB that the controller should use for its arrays. See “ <i>StripeSize</i> ” on page 65 for additional information.
<code>Array_Mode</code>	No	AUTO	Defines the array-creation policy to use when selecting physical disk drives to include in an array. See “ <i>Array_Mode</i> ” on page 65 for additional information.
<code>Array_Defaults</code>	No	<ul style="list-style-type: none"> • 0%:1 for ServeRAID-8e-SATA and 8e-SAS, LSI-SCSI-RAID when at least 3 drives are available • 0%:1 for ServeRAID-6M, when one or more arrays has 4 or more physical drives • 0%:0 for all other cases 	Defines the default values to use for the variance and number of hot-spare drives when AUTO is specified for <i>Array_Mode</i> . See “ <i>Array_Defaults</i> ” on page 65 for additional information.
<code>Array.letter</code>	No	None	Lets you specify exactly how many arrays are created and the exact physical drives that you would like in each array. See “ <i>Array.letter</i> ” on page 66 for additional information.

Table 14. Policy file parameters (continued)

Keyword	Required?	Default	Description
Hotspares	No	None	Defines a list of specific physical drives to designate as hot-spare drives. See “Hotspares” on page 67 for additional information.
Logical_Mode	No	AUTO	Defines the logical-drive creation policy to use when creating logical drives. See “Logical_Mode” on page 67 for additional information.
Logical_Defaults	No	FILL:AUTO:AUTO	Defines the default logical drive settings that should be used when creating logical drives. See “Logical_Defaults” on page 67 for additional information.
Logical.num	No	None	Lets you specify how many logical drives are created and the specific parameters for each logical drive. See “Logical.num” on page 68 for additional information.

Policy.name:

Description

This header designates the start of a new policy. You can specify *name* using any combination of letters, numbers, underscores, periods, or dashes. There is no maximum length for *name*, but the maximum length for a single line in the policies file is 256 characters. You can have up to 50 policies in a single policies file.

Examples

[Policy.RAID-5-Hotspare]

AppliesTo.n:

Description

Use this parameter to describe when the current policy should be chosen to configure the RAID controllers. You can define up to 20 AppliesTo.n entries per policy. You must have an AppliesTo.1 entry for each policy, and AppliesTo.n is the only required parameter of a policy.

AppliesTo.n includes a comma delimited list containing one or more of the following parameters:

- *m:mtype*, where *mtype* is the four digit machine type of an IBM eServer or xSeries server.
- *s:serial*, where *serial* is the serial number of an IBM eServer or xSeries server.
- *c:contn*, where *contn* is the controller number (scan order) of the RAID controller with respect to all other RAID controllers in the system.

The number assigned to a particular controller is dependent on the controller's physical PCI slot and the order in which your system scans its PCI slots.

- *t:ctype*, where *ctype* is the type of the controller. The type is not case sensitive, and must be one of the following descriptive names :
 - SERVERAID-6M

- SERVERAID-7t
- SERVERAID-8i
- SERVERAID-8k
- SERVERAID-8k-1
- ServeRAID-8s
- ServeRAID-10k
- ServeRAID-10M
- ServeRAID-B5015
- ServeRAID-BR9i
- ServeRAID-BR10i1
- ServeRAID-M5014
- ServeRAID-M5015
- ServeRAID-M5025
- ServeRAID-MR10i
- ServeRAID-MR10ie
- ServeRAID-MR10i1
- ServeRAID-MR10is
- ServeRAID-MR1015
- ServeRAID-MR1015-R5
- LSI SAS 1078 IR Controller
- LSI-SCSI-RAID
- LSI Integrated SAS-RAID Controller (1064/1064E/1068)
- *d:drives*, where *drives* is an integer value specifying the number of drives connected to the controller. Only drives in a **Ready** state after resetting the controller to factory-default settings are counted.
- **ALL**. Indicates that this policy should be used for all RAID controllers. This parameter is good to use if you declare a default policy that is not covered by any of the other policies.

Examples

Example using the m,s,c,t, and d parameters:

AppliesTo.1 = m:8865,t:ServeRAID-7t

AppliesTo.2 = c:1,d:15,s:87R478U

Example using the ALL parameter:

AppliesTo.1 = ALL

ReadAhead:

Description

Specifies the read ahead setting that should be applied to the RAID controller. If this parameter is not applicable for a RAID controller, it is ignored. See “Supported settings for RAID controllers” on page 68 for the list of ReadAhead settings supported by PRAID for each RAID controller. Possible settings are:

- Adaptive
- On
- Off

Examples

ReadAhead = On

RebuildRate:

Description

Specifies the rebuild rate that should be applied to the RAID controller. If this parameter is not applicable for a RAID controller, then it will be ignored. See “Supported settings for RAID controllers” on page 68 for the list of RebuildRate settings supported by PRAID for each RAID controller.

- High
- Medium
- Low

Examples

RebuildRate = High

StripeSize:

Description

Specifies the stripe-unit size in KB that the controller should use for its arrays. If this parameter is not applicable for a RAID controller, then it will be ignored. See “Supported settings for RAID controllers” on page 68 for the list of StripeSize settings supported by PRAID for each RAID controller. Possible values are any stripe size supported by the controller.

Examples

StripeSize = 32

Array_Mode:

Description

Defines the array-creation policy to use when selecting physical disk drives to include in an array. Possible values are:

Auto Creates arrays using drives that have the same size in MB. This is the default. Each set of drives with same size on will be combined into a single array. The maximum number of drives allowed per array is determined by the limits of the RAID controller. Only drives in a **Ready** state after resetting the controller to factory-default settings are used in arrays. Hot-spare drives are created based on the rules supplied with the Array_Defaults parameter.

The Array_Defaults parameter allows you to modify the default behavior of the AUTO mode for arrays.

Custom Allows you to specify the exact physical disk drives to use in the array. If you specify this value, you must also specify the Array_Letter parameter with a list of drives for each array that you want to create. If you want hot-spare drives to be created, you must use the Hotspares parameter to list the hot-spare drives.

Examples

Array_mode = CUSTOM

Array_Defaults:

Description

Defines the default values to use for the variance and number of hot-spare drives when AUTO is specified for Array_Mode. This parameter is not valid if Array_Mode is set to CUSTOM.

The value of Array_Defaults is expressed in the format: *variance:hotspares*, where:

variance specifies the percentage variance to use when selecting drives to add to the array. This parameter is useful when you are using drives that may vary slightly in size. Variance is based on a percentage of the drive's size in MB. Valid values are:

- 0% - Only drives with equal size in MB will be combined into a single array.
- 5% - All drives within 5% size in MB will be combined into a single array.
- 10% - All drives within 10% size in MB will be combined into a single array.
- 100% - All drives, regardless of size in MB, will be combined into a single array.

and

hotspares is an integer that specifies the total number of hot-spare drives to create. The largest drives are chosen as hot-spare drives first. If not enough drives are available to create hot-spare drives, then PRAID will not create any hot-spare drives.

Examples

```
Array_Defaults = 5%:1
```

Array.letter:

Description

Lets you specify exactly how many arrays are created and the exact physical drives that you would like in each array. You can specify the physical drives using any of the following methods:

- The channel number and SCSI ID (for SCSI) or bus number and target ID (for SATA/SAS) of each drive. The channel number or bus number is always 1-based. The SCSI ID or target ID is always 0-based.
- A list of integer values indicating that the *n*th drive should be included in the array
- The keyword ALL to indicate that all remaining drives attached to the controller that are not specified in previous arrays should be included in the current array.

The first array must be labeled Array.A. Additional arrays are labeled sequentially, Array.B, Array.C, and so on. The maximum number of arrays allowed per controller is determined by the limits of the specific RAID controller.

Examples

Example using channel number and SCSI ID:

```
Array.A = 1:1,1:2  
Array.B = 1:3,1:4,1:5,2:1,2:2,2:3,2:4,2:5,2:6  
Array.C = ALL
```

Example using integer values:


```
Array.A = 1,2,3  
Array.B = ALL
```

Hotspares:

Description

Defines a list of specific physical drives to designate as hot-spare drives. You can specify the physical drives using any one of these methods:

- The channel number and SCSI ID (for SCSI) or bus number and target ID (for SATA/SAS) of each drive. The channel number or bus number is always 1-based. The SCSI ID or target ID is always 0-based.
- A list of integer values indicating that the *n*th drive should be included in the array
- The keyword ALL to indicate that all remaining drives attached to the controller that are not specified in previous arrays should be included in the current array.

Examples

Example using channel number and SCSI ID:

```
Hotspares = 1:12,2:14
```

Example using integer value:

```
Hotspares = 12, 13
```

Logical_Mode:

Description

Defines the logical-drive creation policy to use when creating logical drives. Possible values are:

- AUTO** Indicates that defaults should be used for all parameters. Default parameters are:
- One logical drive is created on each array using all available space.
 - The RAID level is set using the AUTO (default) scheme
 - Write-cache mode is set using the default value for the controller.

You can adjust these default values using the `Logical_Defaults` parameter.

- CUSTOM** Indicates that you want to specify all of the parameters for each logical drive that is created. If you specify CUSTOM, then you must specify the parameters for each logical drive using the `Logical.num` parameter.

Examples

```
Logical_Mode = CUSTOM
```

Logical_Defaults:

Description

Defines the default logical drive settings that should be used when creating logical drives. This parameter is only valid when AUTO is specified for `Logical_Mode`. Values for this parameter are expressed in the format: *size:raidlevel:writemode*, where:

Size specifies the size of each logical drive. One logical drive will be created on each array using the given size. *Size* can be in any of the following formats:

- A positive integer – specifies the size in MB.

- A percentage – specifies that a percentage of the total space should be used.
- FILL – indicates that all available space on the array should be used.

Raidlevel specifies the RAID level for the logical drive. See “Supported settings for RAID controllers” for the list of RAID level settings supported by PRAID for each controller.

Writecmode is an optional parameter that specifies the write-cache mode for each logical drive. If the write-cache mode cannot be set for a specific configuration, then this parameter will be ignored. See “Supported settings for RAID controllers” for the list of write_cache mode settings supported by PRAID for each RAID controller.

Valid values are:

- ON
- OFF
- AUTO uses the default write-cache mode for the controller. (Recommended for most users.) This is the default value if writecmode is not specified.

Examples

Logical_Defaults = 50%:5EE:AUTO

Logical.num:

Description

Lets you specify how many logical drives are created and the specific parameters for each logical drive. You can set the array letter where the logical drive is located, logical drive size, RAID level, and write-caching mode for each logical drive. The first logical drive must be labeled Logical.1. Additional logical drives are numbered Logical.2, Logical.3, and so on. You must specify at least one logical drive for each array. The maximum number of drives allowed per array and the maximum total number of logical drives allowed is determined by the specific RAID controller.

Values for this parameter are expressed in the format:

array:size:raidlevel:writecmode where *array* specifies the array letter, and *size*, *raidlevel*, and *writecmode* are as described in “Logical_Defaults” on page 67.

Examples

Logical.1 = A:50%:0
 Logical.2 = A:50%:5EE
 Logical.3 = B:FILL:1:ON
 Logical.4 = C:4096:AUTO:AUTO

Supported settings for RAID controllers: Table 15 on page 69 lists the supported settings for each RAID controller when using PRAID.

In some cases, the list of supported settings when using PRAID might differ from the supported settings of the RAID controller. These known cases are indicated in the table.

Table 15. Supported settings for each RAID controller when using PRAID. Bold settings are defaults.

Controller	Rebuild Rate	Read Ahead	Stripe Size	RAID Levels ¹	Write-cache Mode
ServeRAID-6m	<ul style="list-style-type: none"> HIGH MEDIUM LOW 	<ul style="list-style-type: none"> ADAPTIVE ON OFF 	<ul style="list-style-type: none"> 8 16 32 64 	<ul style="list-style-type: none"> 0 1 1E 10 5 50 5EE AUTO 	<ul style="list-style-type: none"> ON OFF AUTO
ServeRAID-7t	[n/a]	<ul style="list-style-type: none"> ON OFF 	<ul style="list-style-type: none"> 16 32 64 	<ul style="list-style-type: none"> 0 1 5 10 VOLUME AUTO 	<ul style="list-style-type: none"> ON OFF AUTO
ServeRAID-8i	[n/a]	<ul style="list-style-type: none"> ON OFF 	<ul style="list-style-type: none"> 16 32 64 128 256 512 	<ul style="list-style-type: none"> 0 1 1E 10 5 50 5EE VOLUME 	<ul style="list-style-type: none"> ON OFF AUTO
ServeRAID-8k	[n/a]	<ul style="list-style-type: none"> ON OFF 	<ul style="list-style-type: none"> 16 32 64 128 256 512 1024 	<ul style="list-style-type: none"> 0 1 1E 10 5 6 VOLUME 	<ul style="list-style-type: none"> ON OFF AUTO
ServeRAID-8k-l	[n/a]	<ul style="list-style-type: none"> ON OFF 	<ul style="list-style-type: none"> 16 32 64 128 256 512 1024 	<ul style="list-style-type: none"> 0 1 10 VOLUME AUTO 	[n/a]

Table 15. Supported settings for each RAID controller when using PRAID (continued). Bold settings are defaults.

Controller	Rebuild Rate	Read Ahead	Stripe Size	RAID Levels ¹	Write-cache Mode
ServeRAID-8s	[n/a]	[n/a]	<ul style="list-style-type: none"> • 16 • 32 • 64 • 128 • 256 • 512 • 1024 	<ul style="list-style-type: none"> • 0 • 1 • 1E • 10 • 5 • 50 • 6 • 60 • VOLUME 	[n/a]
LSI-SCSI-RAID (1020/1030)	[n/a]	[n/a]	<ul style="list-style-type: none"> • 8 • 16 • 32 • 64 	<ul style="list-style-type: none"> • 0 • 1 • 1E² 	[n/a]
<ul style="list-style-type: none"> • LSI-SAS-RAID (1064/1064E/1068) • IBM SAS HBA • IBM 3 Gb SAS HBA v2 • ServeRAID BR10i • ServeRAID BR10il 	[n/a]	[n/a]		<ul style="list-style-type: none"> • 0 • 1 • 1E 	[n/a]
<ul style="list-style-type: none"> • ServeRAID-MR10i • ServeRAID-MR10ie • ServeRAID-MR10il • ServeRAID-MR10is • ServeRAID-MR10k • ServeRAID-MR10M • ServeRAID-MR1015 • ServeRAID-MR1015-R5 	<ul style="list-style-type: none"> • HIGH • MEDIUM • LOW 	<ul style="list-style-type: none"> • ADAPTIVE • ON • OFF 	<ul style="list-style-type: none"> • 8 • 16 • 32 • 64 • 128 	<ul style="list-style-type: none"> • 0 • 1 • 10 • 5 • 50 • 6 • 60 	<ul style="list-style-type: none"> • ON • OFF • AUTO

Table 15. Supported settings for each RAID controller when using PRAID (continued). Bold settings are defaults.

Controller	Rebuild Rate	Read Ahead	Stripe Size	RAID Levels ¹	Write-cache Mode
LSI SAS 1078	[n/a]	[n/a]	[n/a]	<ul style="list-style-type: none"> • 0 • 1 	[n/a]
LSI MegaRAID 8480	[n/a]	[n/a]	<ul style="list-style-type: none"> • 8 • 16 • 32 • 64 • 128 	<ul style="list-style-type: none"> • 0 • 1 • 5 • 10 • AUTO 	[n/a]
ServeRAID-M5014	<ul style="list-style-type: none"> • HIGH • MEDIUM • LOW 	<ul style="list-style-type: none"> • ADAPTIVE • ON • OFF 	<ul style="list-style-type: none"> • 8 • 16 • 32 • 64 • 128 	<ul style="list-style-type: none"> • 0 • 1 • 5 • 10 • 50 • AUTO 	<ul style="list-style-type: none"> • ON • OFF • AUTO
ServeRAID-M5015	<ul style="list-style-type: none"> • HIGH • MEDIUM • LOW 	<ul style="list-style-type: none"> • ON • OFF 	<ul style="list-style-type: none"> • 8 • 16 • 32 • 64 • 128 	<ul style="list-style-type: none"> • 0 • 1 • 5 • 10 • 50 • AUTO 	<ul style="list-style-type: none"> • ON • OFF • AUTO
ServeRAID-M5025	<ul style="list-style-type: none"> • HIGH • MEDIUM • LOW 	<ul style="list-style-type: none"> • ADAPTIVE • ON • OFF 	<ul style="list-style-type: none"> • 8 • 16 • 32 • 64 • 128 	<ul style="list-style-type: none"> • 0 • 1 • 5 • 6 • 10 • 50 • 60 • AUTO 	<ul style="list-style-type: none"> • ON
ServeRAID-B5015	[n/a]	[n/a]	<ul style="list-style-type: none"> • 4 • 8 • 16 • 32 • 64 • 128 • 256 • 512 • 1024 	<ul style="list-style-type: none"> • 1 • 5 • AUTO 	<ul style="list-style-type: none"> • ON

1. RAID levels 5E and 5EE support only one logical drive per array.
2. RAID level 1E is supported for the LSI 1030 only on the xSeries model 336.

Default RAID levels are described in “Default RAID levels.”

Default RAID levels: The default RAID level that is applied to a logical drive depends on the number of drives in the array and the controller type. These default

values are designed to match the default values of the express configuration method in ServeRAID Manager where applicable. The following table shows the default RAID values that PRAID will use when AUTO is specified for *raidlevel*.

Table 16. Default RAID levels

Controller	Drives in Array				
	1	2	3	4	5 or more
ServeRAID-6M	RAID 0	RAID 1	RAID 5	RAID 5+Hotspare	RAID 5+Hotspare
ServeRAID-7t	RAID 0	RAID 1	RAID 5	RAID 5+Hotspare	RAID 5+Hotspare
ServeRAID-8i	VOLUME	RAID 1	RAID 5	RAID 5+Hotspare	RAID 5+Hotspare
ServeRAID-8k	VOLUME	RAID 1	RAID 5	RAID 5+Hotspare	RAID 5+Hotspare
ServeRAID-8k-l	VOLUME	RAID 1	RAID 1+Hotspare	RAID 10	RAID 10+Hotspare
ServeRAID-8s	VOLUME	RAID 1	RAID 5	RAID 5+Hotspare	RAID 5+Hotspare
LSI-SCSI-RAID (1020/1030)	[n/a]	RAID 1	RAID 5	RAID 1+Hotspare	RAID 1+Hotspare
<ul style="list-style-type: none"> • LSI-SAS-RAID (1064/1064E/1068) • IBM SAS HBA • IBM 3Gb SAS HBA v2 • ServeRAID BR10i • ServeRAID BR10il 	[n/a]	RAID 1	RAID 1+Hotspare	RAID 1ME+Hotspare	RAID 1ME+Hotspare
<ul style="list-style-type: none"> • ServeRAID-MR10i • ServeRAID-MR10ie • ServeRAID-MR10il • ServeRAID-MR10is • ServeRAID-MR10k • ServeRAID-MR10M • ServeRAID-MR1015 	RAID 0	RAID 1	RAID 5	RAID 5+Hotspare	RAID 5+Hotspare
LSI-SAS-1078	[n/a]	RAID 1	2RAID 1+1Hotspare	2RAID 1+1Hotspare	2RAID 1+1Hotspare
LSI MegaRAID 8480	RAID 0	RAID 1	RAID 5	RAID 5+Hotspare	RAID 5+Hotspare

INVRAID

This program can be used to dump all of the RAID controller configuration information to an output file. INVRAID supports the following RAID controllers:

- ServeRAID-6M
- ServeRAID-7t
- ServeRAID-8i
- ServeRAID-8k
- ServeRAID-8k-l

- ServeRAID-8s
- ServeRAID-10k
- ServeRAID-10M
- ServeRAID-B5015
- ServeRAID-BR9i
- ServeRAID-BR10i
- ServeRAID-BR10ie
- ServeRAID-BR10il
- ServeRAID-M5014
- ServeRAID-M5015
- ServeRAID-M5025
- ServeRAID-MR10i
- ServeRAID-MR10il
- ServeRAID-MR10is
- ServeRAID-MR1015
- ServeRAID-MR1015–R5
- LSI SCSI (1020/1030)
- LSI SAS (1064/1064E/1068/1078)

Environment requirements

INVRAID works by parsing the output of other RAID-configuration utilities. To accomplish this, the following utilities must be located in the system search path.

Adapter	Utility
ServeRAID 6M	IPSSSEND
ServeRAID-7t, 8i, 8k, 8k-l, 8s	ARCCONF
LSI-SCSI 1020/1030, LSI-SAS 1064/1064E, LSI-SAS 1068, LSI-SAS 1078, ServeRAID BR9i, BR10i, BR10ie, BR10il	CFGGEN
MegaRAID SAS, ServeRAID-M5014, M5015, M5025, MR10i,, MR10ie,MR10il, MR10is, MR10k, MR10M, MR1015, MR1015–R5	MEGACLI
ServeRAID-B5015	BRCLI

Usage

```
invraid [-I | -P] -F
```

Table 17. INVRAID parameters

Parameter	Description
-I	Displays information about the all host adapters in the system in an INI-file format.
-P	Dumps information about all host adapters in a system in a keyword=value format.
-F <i>:filename</i>	Directs the output of invraid to the specified file.

Return values

Table 18 lists the values returned by INVRAID.

Table 18. Values returned by INVRAID

Return Value	Description
0	Success
1	Syntax Error
2	Program Error

Examples

To dump the information about all RAID controllers in a system to a file in INI file format with the name myraid.ini, use the -l parameter as shown here:

```
invraid.exe -i -f:myraid.ini
```

Returns:

```
[System]
Machine_Type = 7233
Serial_Number = 23A0075
Total_Number_Of_Controllers = 2

[RAIDController.1]
Model = LSI-SAS-1078-IR
BIOSVersion = 6.22.00.00
FirmwareVersion = 1.25.82.00
DriverVersion =
RebuildRate = HIGH
StripeSize =
ReadAhead = ADAPTIVE
PCI = 4:0:0:1000:0062:FFFF:FFFF

[RAIDController.1.Array]
Total_Number_Of_Arrays = 1
ID.1 = A
Members.1 = 1,2

[RAIDController.1.Hotspares]
Total_Number_Of_Hotspares = 0

[RAIDController.1.Logical]
Total_Number_Of_Logicals = 1

Array.1 = A
Size.1 = 139236
Raid_Level.1 = 1
WriteCache.1 = AUTO
State.1 = Okay (OKY)
Derived_State.1 = GOOD

[RAIDController.1.Physical]
Total_Number_Of_Physicals = 4

Channel.1 = 1
ID.1 = 0
Size.1 = 140013
Type.1 = SAS
Serial_Number.1 = 3NM2SQED0000980322JB
State.1 = Online (ONL)
Derived_State.1 = GOOD
```



```

Channel.2 = 1
ID.2 = 1
Size.2 = 140013
Type.2 = SAS
Serial_Number.2 = 3NM223CV0000974732Y9
State.2 = Online (ONL)
Derived_State.2 = GOOD

```

```

Channel.3 = 1
ID.3 = 2
Size.3 = 140013
Type.3 = SAS
Serial_Number.3 = 3NM2000900009746H8BY
State.3 = Ready (RDY)
Derived_State.3 = GOOD

```

```

Channel.4 = 1
ID.4 = 3
Size.4 = 140013
Type.4 = SAS
Serial_Number.4 = 3NM23J1J00009746XNSB
State.4 = Ready (RDY)
Derived_State.4 = GOOD

```

```

[RAIDController.2]
Model = ServeRAID-MR10M
BIOSVersion = 2.02.00
FirmwareVersion = 1.40.12-0551
DriverVersion =
PCI = 30:0:0:1000:0060:1014:0379

```

```

[RAIDController.2.Array]
Total_Number_Of_Arrays = 0

```

```

[RAIDController.2.Hotspares]
Total_Number_Of_Hotspares = 0

```

```

[RAIDController.2.Logical]
Total_Number_Of_Logicals = 0

```

```

[RAIDController.2.Physical]
Total_Number_Of_Physicals = 0

```

Using the -p parameter returns the same information, but the section title from the properties file is shown for each value:

```
invraid -p -f:myfile.ini
```

Returns:

```

System_Machine_Type = 7233
System_Serial_Number = 23A0075
RAIDController.1.Model = LSI-SAS-1078-IR
RAIDController.1.BIOSVersion = 6.22.00.00
RAIDController.1.FirmwareVersion = 1.25.82.00
RAIDController.1.DriverVersion =
RAIDController.1.RebuildRate = HIGH
RAIDController.1.StripeSize =
RAIDController.1.ReadAhead = ADAPTIVE
RAIDController.1.PCI = 4:0:0:1000:0062:FFFF:FFFF

```

```

RAIDController.1.Array.ID.1 = A
RAIDController.1.Array.Members.1 = 1,2

```

```

RAIDController.1.Logical.Array.1 = A
RAIDController.1.Logical.Size.1 = 139236

```

```

RAIDController.1.Logical.Raid_Level.1 = 1
RAIDController.1.Logical.WriteCache.1 = AUTO
RAIDController.1.Logical.State.1 = Okay (OKY)
RAIDController.1.Logical.Derived_State.1 = GOOD

RAIDController.1.Physical.Channel.1 = 1
RAIDController.1.Physical.ID.1 = 0
RAIDController.1.Physical.Size.1 = 140013
RAIDController.1.Physical.Type.1 = SAS
RAIDController.1.Physical.Serial_Number.1 = 3NM2SQED0000980322JB
RAIDController.1.Physical.State.1 = Online (ONL)
RAIDController.1.Physical.Derived_State.1 = GOOD

RAIDController.1.Physical.Channel.2 = 1
RAIDController.1.Physical.ID.2 = 1
RAIDController.1.Physical.Size.2 = 140013
RAIDController.1.Physical.Type.2 = SAS
RAIDController.1.Physical.Serial_Number.2 = 3NM223CV0000974732Y9
RAIDController.1.Physical.State.2 = Online (ONL)
RAIDController.1.Physical.Derived_State.2 = GOOD

RAIDController.1.Physical.Channel.3 = 1
RAIDController.1.Physical.ID.3 = 2
RAIDController.1.Physical.Size.3 = 140013
RAIDController.1.Physical.Type.3 = SAS
RAIDController.1.Physical.Serial_Number.3 = 3NM2000900009746H8BY
RAIDController.1.Physical.State.3 = Ready (RDY)
RAIDController.1.Physical.Derived_State.3 = GOOD

RAIDController.1.Physical.Channel.4 = 1
RAIDController.1.Physical.ID.4 = 3
RAIDController.1.Physical.Size.4 = 140013
RAIDController.1.Physical.Type.4 = SAS
RAIDController.1.Physical.Serial_Number.4 = 3NM23J1J00009746XNSB
RAIDController.1.Physical.State.4 = Ready (RDY)
RAIDController.1.Physical.Derived_State.4 = GOOD

RAIDController.2.Model = ServeRAID-MR10M
RAIDController.2.BIOSVersion = 2.02.00
RAIDController.2.FirmwareVersion = 1.40.12-0551
RAIDController.2.DriverVersion =
RAIDController.2.PCI = 30:0:0:1000:0060:1014:0379

```

VALRAID

VALRAID is a utility program that can be used to validate policy files against inventory files generated by the INVRAID utility.

VALRAID has two modes of operation:

- **Simulation mode** - simulates the effect a policy file would have on a controller.
- **Check mode** - determines whether the policy file matches the configuration represented in the inventory file.

Simulation mode

Used in simulation mode, VALRAID will simulate the effect that a policy file would have on a RAID configuration if it were applied using the pRAID utility. This capability can be used when creating pRAID policy files. The policy files can be tested without running pRAID on the target system.

Check mode

Used in check mode, VALRAID determines whether the policy file specified matches the RAID configuration represented in the inventory file. This capability can be used in OS deployment scripts to skip the RAID configuration step if the controller is already configured with the required RAID configuration and thus avoiding an extra reboot before installing the OS. VALRAID will set the return code = 20 to indicate that the policy file does not match the configuration represented by the inventory file.

Usage

The two modes of operation share most parameters, but the syntax is mode-specific.

The simulation mode syntax is:

```
valraid -ini:input_inventory_file -inp:input_policy_file -outi:output_inventory_file  
-outp:output_policy_file -raid:/inifiles
```

The check mode syntax is:

```
valraid -c -ini:input_inventory_file -inp:input_policy_file -raid:/inifiles
```

Table 19. VALRAID parameters

Parameter	Description	Example
<code>-ini:input_inventory_file</code> Specifies the input inventory file.	Specifies the input inventory file. Generate the inventory file by running INVRAID against a target system.	<pre>valraid -ini:myfile.inv -inp:policy.ini -outi:newfile.inv -outp:newpolicy.ini -raid:/inifiles</pre>
<code>-inp:input_policy_file</code> Specifies the input policy file.	Specifies the input policy file.	<pre>valraid -ini:myfile.inv -inp:policy.ini -outi:newfile.inv -outp:newpolicy.ini -raid:/inifiles</pre>
<code>-outi:output_inventory_file</code> Specifies the filename of the output inventory file.	Specifies the filename for the output inventory file. This is an inventory file representing the RAID configuration that would result from using the PRAID utility to apply <i>input_policy_file</i> to the system described in <i>input_inventory_file</i> . This option is valid only for simulation mode.	<pre>valraid -ini:myfile.inv -inp:policy.ini -outi:newfile.inv -outp:newpolicy.ini -raid:/inifiles</pre>
<code>-outp:output_policy_file</code> Specifies the filename for the output policy file.	Specifies the filename for the output policy file. This file can be applied to a target system using the pRAID utility. This option is valid only for simulation mode.	<pre>valraid -ini:myfile.inv -inp:policy.ini -outi:newfile.inv -outp:newpolicy.ini -raid:/inifiles</pre>

Table 19. VALRAID parameters (continued)

Parameter	Description	Example
-raid:inifiles Specifies the path to the RAID configuration ini files.	Specifies the directory that contains the RAID ini files. The default is /opt/ibm/sgtk/sgdeploy/sgtklinux/.data/valraid	valraid -ini:myfile.inv -inp:policy.ini -outi:newfile.inv -outp:newpolicy.ini -raid:/inifiles
-c Specifies check mode.	Specifies check mode. Check mode compares the configuration from <i>input_inventory_file</i> to the configuration represented in <i>input_policy_file</i> . The default is simulation mode.	valraid -c -ini:myfile.inv -inp:policy.ini -raid:inifiles

Return codes

VALRAID uses the following return codes:

- 0 – Success
- 1 – Error parsing input policy file
- 2 – Error parsing input inventory file
- 3 – Controller is not supported
- 4 – Raid level is not supported
- 5 – Stripesize is not supported
- 6 – Number of arrays not supported
- 7 – Number of drives in array not supported
- 8 – Number of logical volumes in array is not supported
- 9 – Not enough drives to create hotspare
- 10 – Not enough drives of the same size
- 11 – Error opening input policy file
- 12 – Error opening input inventory file
- 13 – Error opening output inventory file
- 14 – Error writing to output inventory file
- 15 – Error opening output policy file
- 16 – Error writing output policy file
- 17 – Partial drive sizing not supported
- 18 – Command line syntax error
- 19 – No policy match
- 20 – Controller not configured, does not match policy file

Tools included with the Linux Scripting Toolkit

The Linux Scripting Toolkit includes several additional tools to make the Toolkit more efficient. This section describes the additional tools provided by this release of the Linux Scripting Toolkit:

- Advanced Settings Utility
- SCLI
- UpdateXpress System Pack Installer

Advanced Settings Utility

For convenience, the Linux Scripting Toolkit, includes the Advanced Settings Utility (ASU). You can use ASU to modify firmware settings from the command line on multiple operating-system platforms.

The Linux Scripting Toolkit uses a subset of the ASU function in order to capture and deploy firmware settings as part of your scripted deployments.

Usage

This section describes the ASU functions used by the Linux Scripting Toolkit.

Table 20. ASU functions in Linux Scripting Toolkit

Command	Description
<code>asu show all</code>	Is used to display and capture BIOS settings. You can use redirection to store this output in a file as shown here: <code>asu.exe show bios > bios_settings.ini</code>
<code>asu save filename</code>	Is used to apply CMOS settings from a file. ASU looks for the filename specified by <i>filename</i> , and reads the contents. If the contents are valid CMOS settings, they are applied, one line at a time, to the server. This example applies the settings captured above: <code>asu save bios_settings.ini</code> Note: Only settings captured from an identical model can be replicated, due to difference in BIOS settings and valid values between models.
<code>asu set IMM.HostIPAddress IP address</code>	Sets the external IP address in the Integrated Management Module (IMM) to the specified address. This setting is part of the IMM group.
<code>asu set IMM.LandOverUsb enabled/disabled -kcs</code>	Enables or disables the IMM LAN over USB interface. Note: When you enable or disable this setting, you must use the KCS interface to ensure that the asu command completes correctly and returns status.

SCLI

You can use the SCLI utility to configure Fibre Host Bus Adapters (HBAs). A 32-bit version of this utility comes with the Linux Scripting Toolkit. You can download this utility from QLogic at <http://www.qlogic.com>.

Usage

Table 21. SCLI usage

Command	Description
<code>scli -e (view ?)</code>	Shows the current boot device information on all HBAs

Example	Description
<code>scli -e E0-FF-EE-DE-CD-34-56-30 disable prim</code>	Clears the selected boot device setting on HBA port E0-FF-EE-DE-CD-34-56-30.
<code>scli -l E0-FF-EE-DE-CD-34-56-30</code>	Displays information about the LUNs attached to HBA port E0-FF-EE-DE-CD-34-56-30.

septool200

For convenience, the Linux Scripting Toolkit, includes the SEPTool. You can use SEPTool to acquire any additional System Enablement Packs (SEP)s.

Usage

This section describes the septool200 functions.

Table 22. septool functions in Linux Scripting Toolkit

Command	Description
<code>septool200 acquire</code>	downloads SEPs from the IBM web site.

UpdateXpress System Pack Installer

For convenience, the Linux Scripting Toolkit includes the UXSPi to help you acquire updates for inclusion in your deployment scenarios. The UpdateXpress System Pack Installer is located at: `...sgdeploy\updates\uxsp`.

The UpdateXpress System Pack Installer can perform these functions:

- Acquire firmware and driver updates for supported machine type/operating system combinations from a remote location, such as the IBM Support Web site.
- Inventory a system to be updated and compare the inventory to the list of available updates, then recommend and deploy a set of updates for the system.
- Create bootable media on CD-ROM, DVD, or USB key to use in applying firmware to supported systems.

For more information on running the UpdateXpress System Pack Installer, change directory to the UXSPi directory and run the UXSPi executable, `uxspi410` as shown below:

```
uxspi410 -mode-help
```

where *mode* is one of the modes of use for the UXSPi:

- `acquire`
- `compare`
- `bootable`
- `update`

Usage

The Linux Scripting Toolkit uses the UXSPi in the update mode to acquire and deploy device drivers and firmware as part of Linux Scripting Toolkit deployments. This section details the command-line options for the `uxspi410 -update` mode.

Table 23. UXSPi update mode options

Option	Description
<code>-firmware</code>	The firmware option forces UXSPi to install only firmware updates.
<code>-drivers</code>	The driver option forces UXSPi to install only driver updates.
<code>-f update_ids, -force=update_ids</code>	Specifies that UXSPi use the <code>unattendedForcedInstallCommandLine</code> field in the update XML rather than the <code>unattendedInstallCommand</code> field.
<code>-s update_ids -select=update_ids</code>	The select option deploys the specified set of updates to the target system even if the system version is newer than the version in the update package. Use this option to roll-back firmware and driver levels where necessary.
<code>-l update_xml_path, -local=update_xml_path</code>	Specifies the filename of a local UXSP XML file or the path to search for one.
<code>-n, -new</code>	Selects all updates that are newer than the current system versions or not currently installed on the system.
<code>-e update_ids, -exclude=update_ids</code>	Excludes the specified update IDs. You can provide multiple IDs in a comma-separated list.
<code>-i update_ids, -include= update_ids</code>	Includes the updates specified in the list of update IDs. You can provide multiple IDs in a comma-separated list.
<code>-ignore-undetected=update_ids</code>	Specifies not to apply the indicated update IDs. You can provide multiple IDs in a comma-separated list.
<code>-L, -latest</code>	The default behavior of UXSPi is to apply the latest UXSPi update pack found in the UXSPi directory. This option forces UXSPi to install the latest updates whether they are from an update pack, are individual updates, or a combination of the two.
<code>-remote=remote_address</code>	Runs the update command on the remote server specified by <code>remote_address</code> .
<code>-remote-user=remote_user</code>	Specifies the remote user ID to use when connecting to a remote system specified with <code>-remote</code> .
<code>-remote-password=password</code>	Sets the password for the user ID specified by <code>-remote-user</code> .
<code>--remote-dir=directory</code>	Specifies the staging or working directory on the remote system.
<code>-noinventory</code>	Causes UXSPi to gather only the machine type and operating system information without performing an inventory of existing updates.
<code>-nouxsp</code>	Do not deploy UXSPs.
<code>-r, -report</code>	Displays a summary report of updates used in the compare step.

Examples

The following example can be used to specify an UpdateXpress System PackXML file named `uxsp.xml` located in the same directory as the UXSPi executable.

```
.\uxspi410 update -l uxsp.xml
```

Chapter 8. Incorporating the Scripting Toolkit with your existing process

To incorporate Scripting Toolkit procedures into an existing deployment process, use the HWDETECT utility to determine if the combined process is being executed on Scripting Toolkit supported hardware. You can then add appropriate branches in the batch files to use the existing process or the Scripting Toolkit process.

For example, you might use the -s option of HWDETECT to determine if the current system is an IBM server:

```
hwdetect -s
if errorlevel 1 goto NONIBM
if errorlevel 0 goto IBM
```

```
:NONIBM
rem Perform non-IBM equipment specific processing here.
```

```
:IBM
rem Perform IBM eServer or xSeries equipment specific processing here.
```

Chapter 9. IBM ServerProven compatibility

The IBM ServerProven website provides valuable information on selected products for compatibility with IBM System x, BladeCenter, and xSeries servers. Check the following link for up to date compatibility with operating systems, configuration, and hardware options. <http://www-03.ibm.com/servers/eserver/serverproven/compat/us/>

Chapter 10. Hints and tips

This section contains information on known problems and limitations, best practices, and hints and tips for using the Linux Scripting Toolkit.

Performing Network OS installations using HTTP

To perform Network OS installations using HTTP, Linux Toolkit requires that you enable directory browsing on the web server. If this presents a security risk, you can provide the information needed to perform installations by adding and setting the following environment variables in the Altiris jobs:

```
TK_DISTRO_HTTP_KERNEL_PKG
TK_DISTRO_HTTP_RELEASE_PKG
TK_DISTRO_HTTP_ISOLINUX
TK_DISTRO_HTTP_INITRD
TK_DISTRO_HTTP_VMLINUX
```

This example shows the values for these variables for a Red Hat Enterprise Linux 5, Update 4 x64 installation:

```
TK_DISTRO_HTTP_KERNEL_PKG=Server/kernel-2.6.18-160.el5.x86_64.rpm
TK_DISTRO_HTTP_RELEASE_PKG=Server/redhat-release-5Server-5.4.0.2.x86_64.rpm
TK_DISTRO_HTTP_ISOLINUX=isolinux/isolinux.cfg
TK_DISTRO_HTTP_INITRD=isolinux/initrd.img
TK_DISTRO_HTTP_VMLINUX=isolinux/vmlinuz
```

Improving PXE boot transfer speed

To speed up the TFTP transfer of the preboot environment, you can increase the packet size for the TFTP server of Altiris. Follow these steps to increase the package size:

1. Open the PXE configuration utility.
2. Click on the **Multicast** tab.
3. Change the packet size to 1420 (the default packet size is 768).

If the system is uEFI-based, see “Disable uEFI PXE to decrease network boot time” for more ways to increase performance.

Disable uEFI PXE to decrease network boot time

You can improve the network boot time for uEFI-based systems by performing the following steps:

1. Start the System
2. Press F1 to get the Menu Options.
3. Navigate to **System Settings** → **Network** → **PXE Configuration**
4. Select Port **%MAC1%**.
5. Select **Enable PXE** and press Enter.
6. Select **Legacy Support** and press Enter.
7. Select **Save Changes** and press ESC.
8. Select Port **%MAC2%**
9. Select **Enable PXE** and press Enter.
10. Select **Legacy Support** and press Enter.
11. Select **Save Changes** and press ESC.

Performing Clone/Deploy of SLES 11

To perform a clone of SUSE Linux Enterprise Server(SLES) 11 with Altiris, you must use Altiris. Deployment Solution 6.9 SP3. To deploy a cloned image of SLES11 from Altiris, please refer to Altiris Knowledgebase article 48984 to enable SLES11 support in Altiris.

After enablement, perform the following steps to perform a deployment of an SLES11 cloned image.

1. Navigate to the Deploy Linux TK job in the Altiris Console.
2. In the Distribute Disk Image Task of the Deploy Linux TK job, you will need to uncheck the option of **Automatically perform configuration task after completing this image task.**

Note: If this action is not done, the network configuration will not be configured.

Using RapiDeploy with SLES 10 and VMware

RapiDeploy provides native imaging support for EXT2 and EXT3 file systems. By default, SuSE Linux Enterprise Server 10 uses the reiserfs file system when installing. In order to clone and redeploy a SLES 10 image using the Toolkit jobs, you must perform the original deployment using an EXT3 file system.

To change the file system prior to installation with the Toolkit, edit the sles10.xml AutoYast file provided by the Toolkit.

Replace the partitioning section of the AutoYast file:

```
<partitioning config:type="list">
  <drive>
    <initialize config:type="boolean">true</initialize>
    <use>all</use>
  </drive>
</partitioning>
```

with the following partitioning section:

```
<partitioning config:type="list">
  <drive>
    <initialize config:type="boolean">true</initialize>
    <use>all</use>
    <partitions config:type="list">
      <partition>
        <filesystem config:type="symbol">ext3</filesystem>
        <format config:type="boolean">true</format>
        <mount>/boot</mount>
        <size>100mb</size>
      </partition>
      <partition>
        <filesystem config:type="symbol">swap</filesystem>
        <format config:type="boolean">true</format>
        <mount>swap</mount>
        <size>auto</size>
      </partition>
      <partition>
        <filesystem config:type="symbol">ext3</filesystem>
        <format config:type="boolean">true</format>
        <mount>/</mount>
        <size>auto</size>
      </partition>
    </partitions>
  </drive>
</partitioning>
```



```
</partition>
</partitions>
</drive>
</partitioning>
```

Linux X server considerations

There are some special considerations for using Linux X server with a Remote Supervisor Adapter II (RSA II) port. If you are using this configuration, please be aware of the following items:

If the Remote Supervisor Adapter II-EXA is installed in a server that is running either the Red Hat Linux or SuSE Linux operating system, make sure that the Linux operating system is selected in the Remote Supervisor Adapter II settings in the server BIOS. Complete the following steps to set Linux as the operating system in the server BIOS:

1. Boot or reboot the server. Press F1 when prompted to enter the configuration menu.
2. Select **Advanced Setup** and then **ASM Settings**.
3. In the **OS USB** selection field, select Linux.
4. Select **Save Values and Reboot ASM**.

Note: If you run an automated X Windows system configuration utility, you must repeat these configuration changes.

Install the operating system in text mode. Set the color depth to 16-bit and the screen resolution to 1024 x 768.

If SuSE Linux or Red Hat Linux is already installed and configured to run in text mode, and will never use the X Window system, no additional configuration is required for the RSA II-EXA to function correctly.

The Remote Supervisor Adapter II-EXA requires USB mouse support from the operating system. If you install a supported Linux operating system on your server using a USB mouse, the installation process automatically establishes USB mouse support; no further action is required. If you install a supported Linux operating system using a PS/2 mouse, you must modify the Linux files after installation to add USB mouse support. Follow the instructions in this document to add USB mouse support

The Remote Supervisor Adapter II-EXA requires a Video Electronics Standard Association (VESA) device driver. The VESA video device driver enables the remote control screen and the local screen to display the same information (clone mode).

When using power management, the video output might not return correctly from some power saving states. To correct this, use the `xset` command to disable DPMS as shown: `xset -dpms`

For more information, see the *IBM Remote Supervisor Adapter II-EXA Technical Update for Linux Operating Systems* available from ftp://ftp.software.ibm.com/systems/support/system_x_pdf/88p9275.pdf.

Special considerations for BladeCenter Blades and Linux X server configuration

After installing, do not change the monitor configuration or any other graphical settings. If you must change the graphics settings, type the following command to start the configuration utility: `sax2 -m 0=fbdev`.

When using power management, the video output might not return correctly from some power saving states. To correct this, use the `xset` command to disable DPMS as shown: `xset -dpms`

Known problems and limitations

This section provides information and alternative solutions for known problems and limitations of the Linux Scripting Toolkit.

Integration script `altiris_sgtklinux.cmd` fails with error code 16

When running the `altiris_sgtklinux.cmd` command, it fails with the following error:

```
[Altiris_PerformUpgradeSteps.cmd]
Running
"C:\Program Files (x86)\Altiris\Express\Deployment Server\pxe\pxeconfig.exe"
-delete "IBM Linux Toolkit 1.00"
"C:\Program Files (x86)\Altiris\Express\Deployment Server\pxe\pxeconfig.exe"
-delete "IBM Linux Toolkit 1.00" returned a non-zero error code
    ReturnCode = 16
    The Altiris_PerformUpgradeSteps.cmd script was aborted.
```

To correct this problem, restart the Windows operating system on which the Altiris Deployment Server and the PXE server are running.

Integration script `altiris_sgtklinux.cmd` fails with error code 10

When running the `altiris_sgtklinux.cmd` command, it fails with the following error:

```
[Altiris_CreatePXEImage.cmd]
Running
"E:\Program Files\Altiris\Express\Deployment Server\pxe\pxeconfig"
-create -linux "IBM Linux Toolkit 1.00" -x64 -defaultLinux -oem "ibm"
-save -notmanaged
    "C:\Program Files\Altiris\Express\Deployment Server\pxe\pxeconfig"
-create -linux "IBM Linux Toolkit 1.00" -x64 -defaultLinux -oem "ibm"
-save -notmanaged returned a non-zero error code
    ReturnCode = 10
    The Altiris_CreatePXEImage.cmd script was aborted.
```

This problem can occur when the Altiris Linux x64 Automation Environment is not properly installed by the `altiris_sgtklinux.cmd` script.

To correct this problem, manually install the Altiris Linux x64 Automation Environment (BDCgp1_6.9.xxxx.frm) then try running the script again.

To manually install the Altiris Linux x64 Automation Environment:

1. Start the PXE Configuration Utility from the Altiris Console.
2. Select **Boot** → **New...**
3. Select the **Linux** radio button and click **Add pre-boot**.
4. Select the row **Linux X64** from the table.
5. Enter the path to the `BDCgp1_6.9.xxxx.frm` file.

6. Click **Next** and follow the on-screen instructions.

Operating system installation halts after reboot when using LSI SAS RAID controller

Some combinations of LSI SAS RAID controllers and operating systems might experience a system halt after rebooting during operating system installation. The affected operating systems are:

- SLES 10
- SLES 11
- RHEL 5
- VMware 4

in combination with one of these RAID controllers:

- LSI-SAS-1078-IR
- LSI-SAS-(1064,1068)
- ServeRAID-BR10i
- ServeRAID-BR10ie

This problem occurs when the server has a drive that is not part of a RAID array and not configured as a hot spare. The problem is caused by the ordering of Linux mptsas devices.

For example, consider a system has four drives with two configured in a RAID 1 array, one configured as a hot spare, and one outside the array. The BIOS sees the drive outside the array, /dev/sda, as HDD1. The RAID array, /dev/sdb, is treated as HDD0. The operating system installation puts the boot files on /dev/sda, the drive outside the array, but after the reboot, the installation looks to HDD0 for the boot files.

To work around this problem, use one of these options:

- Do not configure RAID.
- Change the RAID configuration so that all drives are included in a RAID array.
- Remove the drive outside the RAID array from the controller.
- Modify the boot order of the system to point to the drive outside the array instead of the array.

UpdateXpress System Pack Installer returns errors when supported hardware is not present

Deployment tasks that include installation of UpdateXpress System Packs (UXSPs) will return errors if hardware supported by the UXSPs is not present in the target system. These errors can be safely ignored.

Savestat will not save to location 9 on xSeries 226 with BIOS PME170CUS

On the xSeries 226 with BIOS Level PME170CUS, savestat cannot save a value to byte nine in persistent storage.

Missing files in USB key network deployment

You might receive errors due to missing files when using a USB key as a boot method for network Linux Scripting Toolkit deployments when the key was used previously for local deployments.

In order to perform network installations with a key that has been used for local installations, you must manually remove the `sgdeploy` directory from the key before creating the boot media using the Linux Scripting Toolkit.

Unattended Linux installation requests network device

When performing unattended Linux operating system installs, the process might pause to ask which network device to use if there are multiple devices available. To avoid this problem, you can add a kernel parameter to specify the desired network device during the Workflow creation process.

In the **OS install** section of the workflow, a field is provided for optional kernel parameters.

The kernel parameter varies by operating system:

- For Red Hat and VMware: `ksdevice=eth`, where *eth* is the network device to use. For example `eth0`, `eth1`, and so on.
- For SUSE Linux: `netdevice=eth` where *eth* is the network device to use. For example `eth0`, `eth1`, and so on.

RAID configuration fails for ServeRAID-8E SATA

RAID configuration is not supported for the ServeRAID-8E SATA disk controller. Before you can install an operating system, you must create one or more simple volumes using the BIOS-based utility.

This limitation affects the following systems:

- System x3400, types 7973 and 7974
- System x3550, types 1913 and 7978

Unattended file not found during installation of SLES on uEFI systems

When using Linux Scripting Toolkit to install SLES on a uEFI based system, the installation task might be unable to find the answer file, causing the installation to attempt to continue in manual mode.

To resolve this issue, perform these steps:

1. Edit the workflow for your installation.
2. In the OS install section of the workflow, add `brokenmodules=usb_storage` to the optional kernel parameters.
3. Save the workflow.
4. Create bootable media from the workflow and perform the installation.
5. After the installation is complete, edit the file `/etc/modules.d/blacklist`, it is recommended that you make a copy of this file before editing it.
6. Remove the line `blacklist usb_storage`.

This limitation affects the following systems:

- System x3400 M2, types 7836 and 7837
- System x3500 M2, type 7839
- System x3550 M2, types 7946 and 4198
- System x3650 M2, types 7947 and 4199
- System x iDataPlex dx360 M2 types 7321, 7323 and 6380
- BladeCenter HS22, types 7870 and 1936

Altiris Clone of Image Fails on SLES 11

Altiris RapiDeploy does not support the cloning of SLES 11 for capturing or deploying images, which causes this job to fail. To avoid this problem, use the **-raw** parameter for the **Capture Linux Image** and **Deploy Linux Image** jobs.

You must add **-raw** to the **Additional Parameters line** of both the **Capture Linux Image** and **Deploy Linux Image** jobs. When using this parameter, the operation will take significantly longer. You must also ensure that enough free space is available on the target location to save the images.

VMware 4 installations using Altiris fail

The *computername* variable used in VMware installations must contain only letters, digits, and hyphens. If any other characters are detected, the installation will halt.

By default, the Altiris console supplies the *compname* variable used by the console as the *computername* variable for VMware installations. Therefore to successfully install VMware using Altiris, you must ensure that the *compname* variable used by the Altiris console is allowable as the VMware *computername* variable.

ServeRAID BR10i adapter not supported on iDataPlex dx360 M2 with 12 Bay Storage Chassis (Machine type 7321)

The ServeRAID BR10i adapter is not supported on the iDataPlex dx360 M2 with 12 Bay Storage Chassis, machine type 7321.

RAID configuration fails for LSI SATA RAID

When performing RAID configuration to configure an LSI 1064/1064e SATA controller, you might receive error code 7 or 11. This error is caused when the *cfggen* utility is unable to remove or create a configuration on SATA drives larger than 250GB.

To avoid this problem, remove any logical volumes including RAID arrays on the adapters using the Ctrl+C menu on system POST prior to using Linux Scripting Toolkit.

Default Fibre Configurations not supported on Emulex Fibre HBAs

The Target WWNN, Target WWPN and LUN number on the Fibre HBA Toolkit variables need to be set to configure the Primary, Alternate 1, Alternate 2 and Alternate 3 boot device settings. The default settings will not work on Emulex Fibre HBA adapters.

All values are case sensitive. You must ensure that the configured values are identical to the adapter values with regard to case.

ASU configuration fails for Load Defaults

When performing ASU Configuration to load the system defaults, you might receive an error code of 45. This error is caused when the ASU utility is unable to load defaults for the `ISCSI.InitiatorName` setting. This limitation affects the following systems:

- System x3200 M3, types 7327 and 7328
- System x3250 M3, types 4251, 4252, and 4261
- System x3400 M2, types 7836 and 7837
- System x3500 M2, type 7839
- System x3550 M2, types 7946 and 4198
- System x3650 M2, types 7947 and 4199
- System x iDataPlex dx360 M2 types 7321, 7323 and 6380
- BladeCenter HS22, types 7870 and 1936

To avoid this problem, create a new `asu.ini` file with these contents:

```
loaddefault uEFI
loaddefault SYSTEM_PROD_DATA
loaddefault BootOrder
loaddefault IMM
```

VMware ESX 4 installation requires a minimum of 2GB of memory

When performing an installation of VMware ESX 4, ensure that the target system has a minimum of 2 GB of memory.

PXE will not bind to port 4011 on a Windows 2008 server

When Altiris Deployment Server is installed on a Windows 2008 server, you might encounter this problem with PXE-E55 on the target system. Instructions for avoiding the problem are included in this Altiris knowledge base article.

RAID configuration fails for disks in JBOD

When performing RAID configuration for ServerRAID M-series controllers, any disks in state JBOD will not be used.

To avoid this problem, change the state of the disks from JBOD to unconfigured-good using the **Ctrl+H** menu during System POST prior to using theLinux Scripting Toolkit.

VMWARE ESX requires that NUMA system memory be balanced

VMWare installations may fail to load the VMkernel when Non-Uniform Memory Access (NUMA) is enabled and each processor does not have memory in its adjoining memory banks. For more information on this problem, see RETAIN tip H1974.

Appendix A. Getting help and technical assistance

If you need help, service, or technical assistance or just want more information about IBM products, you will find a wide variety of sources available from IBM to assist you. This appendix contains information about where to go for additional information about IBM and IBM products, what to do if you experience a problem with your System x or IntelliStation® system, and whom to call for service, if it is necessary.

Before you call

Before you call, make sure that you have taken these steps to try to solve the problem yourself:

- Check all cables to make sure that they are connected.
- Check the power switches to make sure that the system is turned on.
- Use the troubleshooting information in your system documentation, and use the diagnostic tools that come with your system. Information about diagnostic tools is in the *Hardware Maintenance Manual and Troubleshooting Guide* on the IBM xSeries Documentation CD or in the IntelliStation *Hardware Maintenance Manual* at the IBM Support Web site.
- Go to the IBM Support Web site at <http://www.ibm.com/pc/support/> to check for technical information, hints, tips, and new device drivers or to submit a request for information.

You can solve many problems without outside assistance by following the troubleshooting procedures that IBM provides in the online help or in the publications that are provided with your system and software. The information that comes with your system also describes the diagnostic tests that you can perform. Most xSeries and IntelliStation systems, operating systems, and programs come with information that contains troubleshooting procedures and explanations of error messages and error codes. If you suspect a software problem, see the information for the operating system or program.

Using the documentation

Information about your IBM System x or IntelliStation system and preinstalled software, if any, is available in the documentation that comes with your system. That documentation includes printed books, online books, readme files, and help files. See the troubleshooting information in your system documentation for instructions for using the diagnostic programs. The troubleshooting information or the diagnostic programs might tell you that you need additional or updated device drivers or other software. IBM maintains pages on the World Wide Web where you can get the latest technical information and download device drivers and updates. To access these pages, go to <http://www.ibm.com/pc/support/> and follow the instructions. Also, you can order publications through the IBM Publications Ordering System at <http://www.elink.ibm.link.ibm.com/public/applications/publications/cgibin/pbi.cgi>.

Getting help and information from the World Wide Web

On the World Wide Web, the IBM Web site has up-to-date information about IBM System x and IntelliStation products, services, and support. The address for IBM System x information is <http://www.ibm.com/systems/x/>. The address for IBM IntelliStation information is <http://www.ibm.com/systems/intellistation/pro/index.html>.

You can find service information for your IBM products, including supported options, at <http://www.ibm.com/support><http://www.ibm.com/support>.

Software service and support

Through IBM Support Line, you can get telephone assistance, for a fee, with usage, configuration, and software problems with xSeries servers, IntelliStation workstations, and appliances. For information about which products are supported by Support Line in your country or region, go to <http://www.ibm.com/services/sl/products/>.

For more information about Support Line and other IBM services, go to <http://www.ibm.com/services/>, or go to <http://www.ibm.com/planetwide/> for support telephone numbers. In the U.S. and Canada, call 1-800-IBM-SERV (1-800-426-7378).

Hardware service and support

You can receive hardware service through IBM Services or through your IBM reseller, if your reseller is authorized by IBM to provide warranty service. Go to <http://www.ibm.com/planetwide/> for support telephone numbers, or in the U.S. and Canada, call 1-800-IBM-SERV (1-800-426-7378).

In the U.S. and Canada, hardware service and support is available 24 hours a day, 7 days a week. In the U.K., these services are available Monday through Friday, from 9 a.m. to 6 p.m.

Appendix B. Notices

This book contains the following notices designed to highlight key information:

- **Note:** These notices provide important tips, guidance, or advice.
- **Important:** These notices provide information or advice that might help you avoid inconvenient or difficult situations.
- **Attention:** These notices indicate possible damage to programs, devices, or data. An attention notice is placed just before the instruction or situation in which damage could occur.

Edition notice

© COPYRIGHT INTERNATIONAL BUSINESS MACHINES CORPORATION, 2010.
All rights reserved.

U.S. Government Users Restricted Rights — Use, duplication or disclosure
restricted by GSA ADP Schedule Contract with IBM Corp.

Trademarks

The following terms are trademarks of International Business Machines Corporation
in the United States, other countries, or both:

BladeCenter	IntelliStation
e-business logo	ServeRAID
eServer	ServerGuide
IBM	ServerProven
IBM (logo)	xSeries
TotalStorage	System x

Intel and Pentium are trademarks of Intel Corporation in the United States, other
countries, or both.

Linux is a trademark of Linus Torvalds in the United States, other countries, or both.

Microsoft, Windows, and the Windows logo are trademarks of Microsoft Corporation
in the United States, other countries, or both.

UNIX is a trademark of The Open Group in the United States, other countries, or
both.

Other company, product, or service names might be trademarks or service marks of
others.

Important notes

When referring to processor storage, real and virtual storage, or channel volume,
KB stands for approximately 1000 bytes, MB stands for approximately 1 000 000
bytes, and GB stands for approximately 1 000 000 000 bytes.

When referring to hard disk drive capacity or communications volume, MB stands
for 1 000 000 bytes, and GB stands for 1 000 000 000 bytes. Total user-accessible
capacity might vary depending on operating environments.

IBM makes no representation or warranties regarding non-IBM products and services that are ServerProven, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. These products are offered and warranted solely by third parties.

IBM makes no representations or warranties with respect to non-IBM products. Support (if any) for the non-IBM products is provided by the third party, not IBM.

Some software can differ from its retail version (if available), and may not include user manuals or all program functionality.

Index



Printed in USA