

Lenovo B71-80 Hardware Maintenance Manual

Note:

Before using this information and the product it supports, be sure to read the general information under “Notices” on page 81.

First Edition (October 2015)

© Copyright Lenovo 2015. All rights reserved.

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant a General Services Administration “GSA” contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

© 2015 Lenovo

Contents

About this manual	iv
--------------------------------	-----------

Safety information	1
---------------------------------	----------

General safety	2
Electrical safety	3
Safety inspection guide	5
Handling devices that are sensitive to electrostatic discharge.....	6
Grounding requirements	6
Safety notices: multilingual translations	7
Laser compliance statement.....	14

Important service information	16
--	-----------

Strategy for replacing FRUs.....	16
Strategy for replacing a hard disk drive	17
Important notice for replacing a system board.....	17
Important information about replacing RoHS compliant FRUs.....	18

General checkout	19
-------------------------------	-----------

What to do first	20
Power system checkout	21
Checking the AC adapter.....	21
Checking operational charging	22
Checking the battery pack	22

Related service information	23
--	-----------

Restoring the factory contents by using Recovery Disc Set	23
Start Recovery Disc (one disc).....	23
Operating System Recovery Disc (one or more discs).....	23
Applications and Drivers Recovery Disc (one or more discs)	23
Supplemental Recovery Disc.....	23
Restoring the factory contents by using OneKey Recovery	24
Restore of factory default	24
Passwords.....	24
Power-on password	24
Hard-disk password	25
Supervisor password	25
Power management	26
Screen blank state	26
Putting your computer to sleep.....	26
Shutting down the computer.....	27

Lenovo B71-80	28
----------------------------	-----------

Specifications	28
----------------------	----

Status indicators.....	30
Fn key combinations/Hotkeys	31
FRU replacement notices	32
Screw notices	32
Removing and replacing an FRU	33
1010 Hard disk drive (HDD)/Memory/Mini PCI Express Card slot compartment cover.....	34
1020 Hard disk drive	35
1030 DIMM	37
1040 PCI Express Mini Card for wireless LAN/WAN	38
1050 Keyboard.....	40
1060 Optical drive.....	42
1070 Keyboard bezel	43
1080 System board	46
1090 Fan assembly and Heat Sink assembly.....	50
1100 LCD unit.....	51
1110 Battery pack	53
1120 Speakers, base cover, IO board, DC-IN cable, power board and ODD transfer board	54
1130 LCD front bezel.....	59
1140 LCD panel and LCD cable.....	60
1150 LCD hinges	62
1160 Integrated camera	63
1170 Antenna assembly and LCD cover	64
Locations	65
Front view	65
Bottom and Left-side view	66
Right-side view	67
Parts list.....	68
Overall.....	69
LCD FRUs	72
Keyboard.....	74
Miscellaneous parts.....	77
Screws.....	77
AC adapters.....	77
Power cords	78

Notices	81
----------------------	-----------

Trademarks	82
------------------	----

About this manual

This manual contains service and reference information for the following Lenovo product:

Lenovo B71-80

Use this manual to troubleshoot problems.

The manual is divided into the following sections:

- The common sections provide general information, guidelines, and safety information required for servicing computers.
- The product-specific section includes service, reference, and product-specific parts information.

Important:

This manual is intended only for trained servicers who are familiar with Lenovo products. Use this manual to troubleshoot problems effectively. Before servicing a Lenovo product, make sure to read all the information under “Safety information” on page 1 and “Important service information” on page 16.

Safety information

This chapter presents the following safety information that you need to get familiar with before you service a Lenovo computer:

- “General safety” on page 2
- “Electrical safety” on page 3
- “Safety inspection guide” on page 5
- “Handling devices that are sensitive to electrostatic discharge” on page 6
- “Grounding requirements” on page 6
- “Safety notices: multilingual translations” on page 7
- “Laser compliance statement” on page 14

General safety

Follow these rules below to ensure general safety:

- Observe a good housekeeping in the area where the machines are put during and after the maintenance.
- When lifting any heavy object:
 1. Make sure that you can stand safely without slipping.
 2. Distribute the weight of the object equally between your feet.
 3. Use a slow lifting force. Never move suddenly or twist when you attempt to lift it.
 4. Lift it by standing or pushing up with your leg muscles; this action could avoid the strain from the muscles in your back. Do not attempt to lift any object that weighs more than 16 kg (35 lb) or that you think is too heavy for you.
- Do not perform any action that causes hazards to the customer, or that makes the machine unsafe.
- Before you start the machine, make sure that other service representatives and the customer are not in a hazardous position.
- Please remove covers and other parts in a safe place, away from all personnel, while you are servicing the machine.
- Keep your toolcase away from walk areas so that other people will not trip it over.
- Do not wear loose clothing that can be trapped in the moving parts of the machine. Make sure that your sleeves are fastened or rolled up above your elbows. If your hair is long, fasten it.
- Insert the ends of your necktie or scarf inside clothing or fasten it with the nonconductive clip, about 8 centimeters (3 inches) from the end.
- Do not wear jewelry, chains, metal-frame eyeglasses, or metal fasteners for your clothing.

Attention: Metal objects are good electrical conductors.
- Wear safety glasses when you are hammering, drilling, soldering, cutting wire, attaching springs, using solvents, or working in any other conditions that may be hazardous to your eyes.
- After service, reinstall all safety shields, guards, labels, and ground wires. Replace any safety device that is worn or defective.
- Reinstall all covers correctly before returning the machine to the customer.
- Fan louvers on the machine help to prevent the overheating of internal components. Do not obstruct fan louvers or cover them with labels or stickers.

Electrical safety

Observe the following rules when working on electrical equipments.

Important:

Use only approved tools and test equipments. Some hand tools have handles covered with a soft material that does not insulate you when working with live electrical currents.

Many customers have rubber floor mats near their machines that contain small conductive fibers to decrease electrostatic discharges. Do not use such kind of mat to protect yourself from electrical shock.

- Find the room emergency power-off (EPO) switch, disconnecting switch, or electrical outlet. If an electrical accident occurs, you can then operate the switch or unplug the power cord quickly.
- Do not work alone under hazardous conditions or near the equipment that has hazardous voltages.
- Disconnect all power before:
 - Performing a mechanical inspection
 - Working near power supplies
 - Removing or installing main units
- Before you start to work on the machine, unplug the power cord. If you cannot unplug it, ask the customer to power-off the wall box that supplies power to the machine, and to lock the wall box in the off position.
- If you need to work on a machine that has exposed electrical circuits, observe the following precautions:
 - Ensure that another person, familiar with the power-off controls, is near you.

Attention: Another person must be there to switch off the power, if necessary.

- Use only one hand when working with powered-on electrical equipment; keep the other hand in your pocket or behind your back.

Attention: An electrical shock can occur only when there is a complete circuit. By observing the above rule, you may prevent a current from passing through your body.

- When using testers, set the controls correctly and use the approved probe leads and accessories for that tester.
- Stand on suitable rubber mats (obtained locally, if necessary) to insulate you from grounds such as metal floor strips and machine frames.

Observe the special safety precautions when you work with very high voltages; instructions for these precautions are in the safety sections of maintenance information. Be extremely careful when you measure the high voltages.

- Regularly inspect and maintain your electrical hand tools for safe operational condition.
- Do not use worn or broken tools and testers.
- Never assume that power has been disconnected from a circuit. First, check it to make sure that it has been powered off.

- Always look carefully for possible hazards in your work area. Examples of these hazards are moist floors, nongrounded power extension cables, power surges, and missing safety grounds.
- Do not touch live electrical circuits with the reflective surface of a plastic dental mirror. The surface is conductive; such touching can cause personal injury and machine damage.
- Do not service the following parts with the power on when they are removed from their normal operating places in a machine:
 - Power supply units
 - Pumps
 - Blowers and fans
 - Motor generatorsand similar units. (This practice ensures correct grounding of the units.)
- If an electrical accident occurs:
 - Use caution: do not become a victim yourself.
 - Switch off the power.
 - Send the victim to get medical aid.

Safety inspection guide

The purpose of this inspection guide is to assist you in identifying potential unsafe conditions. As each machine was designed and built, required safety items were installed to protect users and service personnel from injury. This guide addresses only those items. You should use good judgment to identify potential safety hazards due to attachment of non-Lenovo features or options not covered by this inspection guide.

If any unsafe conditions are present, you must determine how serious the apparent hazard could be and whether you can continue without first correcting the problem.

Consider these conditions and the safety hazards they present:

- Electrical hazards, especially primary power (primary voltage on the frame can cause serious or fatal electrical shock)
- Explosive hazards, such as a damaged CRT face or a bulging capacitor
- Mechanical hazards, such as loose or missing hardware

To determine whether there are any potential unsafe conditions, use the following checklist at the beginning of every service task. Begin the checks with the power off, and the power cord disconnected.

Checklist:

1. Check exterior covers for damage (loose, broken, or sharp edges).
2. Turn off the computer. Disconnect the power cord.
3. Check the power cord for:
 - a. A third-wire ground connector in good condition. Use a meter to measure third-wire ground continuity for 0.1 ohm or less between the external ground pin and the frame ground.
 - b. The power cord should be the type specified in the parts list.
 - c. Insulation must not be frayed or worn.
4. Check for cracked or bulging batteries.
5. Remove the cover.
6. Check for any obvious non-Lenovo alterations. Use good judgment as to the safety of any non-Lenovo alterations.
7. Check inside the unit for any obvious unsafe conditions, such as metal filings, contamination, water or other liquids, or signs of fire or smoke damage.
8. Check for worn, frayed, or pinched cables.
9. Check that the power-supply cover fasteners (screws or rivets) have not been removed or tampered with.

Handling devices that are sensitive to electrostatic discharge

Any computer part containing transistors or integrated circuits (ICs) should be considered sensitive to electrostatic discharge (ESD). ESD damage can occur when there is a difference in charge between objects. Protect against ESD damage by equalizing the charge so that the machine, the part, the work mat, and the person handling the part are all at the same charge.

Notes:

1. Use product-specific ESD procedures when they exceed the requirements noted here.
2. Make sure that the ESD protective devices you use have been certified (ISO 9000) as fully effective.

When handling ESD-sensitive parts:

- Keep the parts in protective packages until they are inserted into the product.
- Avoid contact with other people.
- Wear a grounded wrist strap against your skin to eliminate static on your body.
- Prevent the part from touching your clothing. Most clothing is insulative and retains a charge even when you are wearing a wrist strap.
- Use the black side of a grounded work mat to provide a static-free work surface. The mat is especially useful when handling ESD-sensitive devices.
- Select a grounding system, such as those listed below, to provide protection that meets the specific service requirement.

Notes:

The use of a grounding system to guard against ESD damage is desirable but not necessary.

- Attach the ESD ground clip to any frame ground, ground braid, or green-wire ground.
- When working on a double-insulated or battery-operated system, use an ESD common ground or reference point. You can use coax or connector-outside shells on these systems.
- Use the round ground prong of the ac plug on ac-operated computers.

Grounding requirements

Electrical grounding of the computer is required for operator safety and correct system function. Proper grounding of the electrical outlet can be verified by a certified electrician.

Safety notices: multilingual translations

The safety notices in this section are provided in English, French, German, Hebrew, Italian, Japanese, and Spanish.

Safety notice 1

Before the computer is powered on after FRU replacement, make sure all screws, springs, and other small parts are in place and are not left loose inside the computer. Verify this by shaking the computer and listening for rattling sounds. Metallic parts or metal flakes can cause electrical shorts.

Avant de remettre l'ordinateur sous tension après remplacement d'une unité en clientèle, vérifiez que tous les ressorts, vis et autres pièces sont bien en place et bien fixées. Pour ce faire, secouez l'unité et assurez-vous qu'aucun bruit suspect ne se produit. Des pièces métalliques ou des copeaux de métal pourraient causer un court-circuit.

Bevor nach einem FRU-Austausch der Computer wieder angeschlossen wird, muß sichergestellt werden, daß keine Schrauben, Federn oder andere Kleinteile fehlen oder im Gehäuse vergessen wurden. Der Computer muß geschüttelt und auf Klappergeräusche geprüft werden. Metallteile oder-splitter können Kurzschlüsse erzeugen.

לפני הפעלת המחשב לאחר החלפת FRU יש לוודא שכל הברגים, הקפיצים, וחלקים קטנים אחרים נמצאים במקומם ואינם חופשיים לזוז בתוך המחשב. כדי לוודא זאת, יש ללטלט את המחשב ולהקשיב לגילוי קולות שקשוק. חלקי או שבבי מתכת עלולים לגרום לקצרים חשמליים.

Prima di accendere l'elaboratore dopo che é stata effettuata la sostituzione di una FRU, accertarsi che tutte le viti, le molle e tutte le altre parti di piccole dimensioni siano nella corretta posizione e non siano sparse all'interno dell'elaboratore. Verificare ciò scuotendo l'elaboratore e prestando attenzione ad eventuali rumori; eventuali parti o pezzetti metallici possono provocare cortocircuiti pericolosi.

FRUの交換後、コンピュータの電源を入れる前に、ねじ、バネ、その他の小さな部品がすべて正しい位置にあり、またコンピュータの内部で緩んでいないことを確認してください。これを確認するには、コンピュータを振って、カチャカチャと音がしないか確かめます。金属部品や金属破片はショートの原因になることがあります。

Antes de encender el sistema despues de sustituir una FRU, compruebe que todos los tornillos, muelles y demás piezas pequeñas se encuentran en su sitio y no se encuentran sueltas dentro del sistema. Compruébelo agitando el sistema y escuchando los posibles ruidos que provocarían. Las piezas metálicas pueden causar cortocircuitos eléctricos.

Safety notice 2

⚠ DANGER

Some standby batteries contain a small amount of nickel and cadmium. Do not disassemble a standby battery, recharge it, throw it into fire or water, or short-circuit it. Dispose of the battery as required by local ordinances or regulations. Use only the battery in the appropriate parts listing. Use of an incorrect battery can result in ignition or explosion of the battery.

Certaines batteries de secours contiennent du nickel et du cadmium. Ne les démontez pas, ne les rechargez pas, ne les exposez ni au feu ni à l'eau. Ne les mettez pas en court-circuit. Pour les mettre au rebut, conformez-vous à la réglementation en vigueur. Lorsque vous remplacez la pile de sauvegarde ou celle de l'horloge temps réel, veillez à n'utiliser que les modèles cités dans la liste de pièces détachées adéquate. Une batterie ou une pile inappropriée risque de prendre feu ou d'exploser.

Die Bereitschaftsbatterie, die sich unter dem Diskettenlaufwerk befindet, kann geringe Mengen Nickel und Cadmium enthalten. Sie darf nicht zerlegt, wiederaufgeladen, kurzgeschlossen, oder Feuer oder Wasser ausgesetzt werden. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Bereitschafts- oder Systembatterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.

סוללות המתנה מסוימות מכילות כמות קטנה של ניקל וקדמיום. אין למפרק סוללת המתנה, לטעון אותה מחדש, להשליך אותה לאש או למים או לקצר אותה. יש לטפל את הסוללה כגדרש על ידי התקנות והחוקים המקומיים. יש להשתמש רק בסוללה המופיעה ברשימת החלקים המתאימה. שימוש בסוללה לא מתאימה עלול לגרום להצתה או התפוצצות של הסוללה.

Alcune batterie di riserva contengono una piccola quantità di nichel e cadmio. Non smontarle, ricaricarle, gettarle nel fuoco o nell'acqua né cortocircuitarle. Smaltirle secondo la normativa in vigore (DPR 915/82, successive disposizioni e disposizioni locali). Quando si sostituisce la batteria dell'RTC (real time clock) o la batteria di supporto, utilizzare soltanto i tipi inseriti nell'appropriato Catalogo parti. L'impiego di una batteria non adatta potrebbe determinare l'incendio o l'esplosione della batteria stessa.

予備バッテリーの中には少量のニッケルとカドミウムが含まれているものがあります。したがって、予備バッテリーの分解、再充電、火または水の中への投棄、またはショートさせることは決して行わないでください。バッテリーを廃棄する場合は地方自治体の条例に従ってください。適切なパーツ・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。

Algunas baterías de reserva contienen una pequeña cantidad de níquel y cadmio. No las desmonte, ni recargue, ni las eche al fuego o al agua ni las cortocircuite. Deséchelas tal como dispone la normativa local. Utilice sólo baterías que se encuentren en la lista de piezas. La utilización de una batería no apropiada puede provocar la ignición o explosión de la misma.

Safety notice 3

DANGER

The battery pack contains small amounts of nickel. Do not disassemble it, throw it into fire or water, or short-circuit it. Dispose of the battery pack as required by local ordinances or regulations. Use only the battery in the appropriate parts listing when replacing the battery pack. Use of an incorrect battery can result in ignition or explosion of the battery.

La batterie contient du nickel. Ne la démontez pas, ne l'exposez ni au feu ni à l'eau. Ne la mettez pas en court-circuit. Pour la mettre au rebut, conformez-vous à la réglementation en vigueur. Lorsque vous remplacez la batterie, veillez à n'utiliser que les modèles cités dans la liste de pièces détachées adéquate. En effet, une batterie inappropriée risque de prendre feu ou d'exploser.

Akkus enthalten geringe Mengen von Nickel. Sie dürfen nicht zerlegt, wiederaufgeladen, kurzgeschlossen, oder Feuer oder Wasser ausgesetzt werden. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Batterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.

מארו הסוללה מכיל כמות קטנה של ניקל
וקדמיים. אין לפרק את מארו הסוללה, להשליך
אותו לאש או למים או לקצר אותו. יש לשלוק את
מארו הסוללה כנדרש על ידי התקנות
המקומיות המקומיים. יש להשתמש רק בסוללה
המופיעה ברשימת החלקים המתאימה בזמן החלפת
מארו הסוללה. שימוש בסוללה לא מתאימה עלול
לגרום להצתה או התפוצצות של הסוללה.

La batteria contiene piccole quantità di nichel. Non smontarla, gettarla nel fuoco o nell'acqua né cortocircuitarla. Smaltirla secondo la normativa in vigore (DPR 915/82, successive disposizioni e disposizioni locali). Quando si sostituisce la batteria, utilizzare soltanto i tipi inseriti nell'appropriato Catalogo parti. L'impiego di una batteria non adatta potrebbe determinare l'incendio o l'esplosione della batteria stessa.

バッテリー・パックには少量のニッケルが含まれています。バッテリー・パックを分解したり、火または水の中に投げ込んだり、ショートさせないでください。バッテリー・パックの廃棄にあたっては、地方自治体の条例または規則に従ってください。バッテリー・パックを交換するときは、適切なパーツ・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。

Las baterías contienen pequeñas cantidades de níquel. No las desmonte, ni recargue, ni las eche al fuego o al agua ni las cortocircuite. Deséchelas tal como dispone la normativa local. Utilice sólo baterías que se encuentren en la lista de piezas al sustituir la batería. La utilización de una batería no apropiada puede provocar la ignición o explosión de la misma.

Safety notice 4

DANGER

The lithium battery can cause a fire, an explosion, or a severe burn. Do not recharge it, remove its polarized connector, disassemble it, heat it above 100°C (212°F), incinerate it, or expose its cell contents to water. Dispose of the battery as required by local ordinances or regulations. Use only the battery in the appropriate parts listing. Use of an incorrect battery can result in ignition or explosion of the battery.

La pile de sauvegarde contient du lithium. Elle présente des risques d'incendie, d'explosion ou de brûlures graves. Ne la rechargez pas, ne retirez pas son connecteur polarisé et ne la démontez pas. Ne l'exposez pas à une température supérieure à 100°C, ne la faites pas brûler et n'en exposez pas le contenu à l'eau. Mettez la pile au rebut conformément à la réglementation en vigueur. Une pile inappropriée risque de prendre feu ou d'exploser.

Die Systematterie ist eine Lithiumatterie. Sie kann sich entzünden, explodieren oder schwere Verbrennungen hervorrufen. Batterien dieses Typs dürfen nicht aufgeladen, zerlegt, über 100 C erhitzt oder verbrannt werden. Auch darf ihr Inhalt nicht mit Wasser in Verbindung gebracht oder der zur richtigen Polung angebrachte Verbindungsstecker entfernt werden. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Batterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.

סוללת הליתיום עלולה לגרום לשריפה, להתפוצצות או לכוויות קשות. אין לטעון אותה מחדש, לשלק את המחבר המקוטב שלה, למרק אותה או לחמם אותה לטמפרטורה העולה על 100 מעלות צלזיוס. אין לשרוף את הסוללה ואין לחשוף את תוכן התא למים. יש לשלק את הסוללה כנדרש בתקנות ובחוקים המקומיים. יש להשתמש רק בסוללה המופיעה ברשימת החלקים המתאימים. שימוש בסוללה אחרת עלול לגרום לסכנת שריפה או התפוצצות.

La batteria di supporto e una batteria al litio e può incendiarsi, esplodere o procurare gravi ustioni. Evitare di ricaricarla, smontarne il connettore polarizzato, smontarla, riscaldarla ad una temperatura superiore ai 100 gradi centigradi, incendiarla o gettarla in acqua. Smaltirla secondo la normativa in vigore (DPR 915/82, successive disposizioni e disposizioni locali). L'impiego di una batteria non adatta potrebbe determinare l'incendio o l'esplosione della batteria stessa.

リチウム・バッテリーは、火災、爆発、または重症のやけどを引き起こすことがあります。バックアップ・バッテリーの充電、その極性コネクタの取り外し、バッテリー本体の分解、100℃(212°F)以上の加熱、焼却、電池の中身を水に浸すことはしないでください。バッテリーを廃棄する場合は地方自治体の条例に従ってください。適切なパーツ・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。

La batería de repuesto es una batería de litio y puede provocar incendios, explosiones o quemaduras graves. No la recargue, ni quite el conector polarizado, ni la desmonte, ni caliente por encima de los 100°C (212°F), ni la incinere ni exponga el contenido de sus celdas al agua. Deséchela tal como dispone la normativa local.

Safety notice 5

If the LCD breaks and the fluid from inside the LCD gets into your eyes or on your hands, immediately wash the affected areas with water at least for 15 minutes. Seek medical care if any symptoms caused by the fluid are present after washing.

Si le panneau d'affichage à cristaux liquides se brise et que vous recevez dans les yeux ou sur les mains une partie du fluide, rincez-les abondamment pendant au moins quinze minutes. Consultez un médecin si des symptômes persistent après le lavage.

Die Leuchtstoffröhre im LCD-Bildschirm enthält Quecksilber. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Der LCD-Bildschirm besteht aus Glas und kann zerbrechen, wenn er unsachgemäß behandelt wird oder der Computer auf den Boden fällt. Wenn der Bildschirm beschädigt ist und die darin befindliche Flüssigkeit in Kontakt mit Haut und Augen gerät, sollten die betroffenen Stellen mindestens 15 Minuten mit Wasser abgespült und bei Beschwerden anschließend ein Arzt aufgesucht werden.

אם מסך הנוזלי (LCD) נשבר והנוזל מתוך המסך בא במגע עם עיניכם או ידיכם, שטפו את האזורים הנוגעים מיד במים במשך 15 דקות לפחות. פנו לקבלת עזרה רפואית אם תסמינים הנובעים מהמגע עם הנוזל נמשכים לאחר השטיפה.

Nel caso che caso l'LCD si dovesse rompere ed il liquido in esso contenuto entrasse in contatto con gli occhi o le mani, lavare immediatamente le parti interessate con acqua corrente per almeno 15 minuti; poi consultare un medico se i sintomi dovessero permanere.

LCD が破損し、LCD 中の液体が目に入ったり、手に触れたりした場合は、液体が触れた部分を少なくとも 15 分間洗い流してください。洗い流した後に、液体によって何らかの症状が現れた場合は、医師の治療を受けてください。

Si la LCD se rompe y el fluido de su interior entra en contacto con sus ojos o sus manos, lave inmediatamente las áreas afectadas con agua durante 15 minutos como mínimo. Obtenga atención medica si se presenta algún síntoma del fluido despues de lavarse.

Safety notice 6

⚠ DANGER

To avoid shock, do not remove the plastic cover that protects the lower part of the inverter card.

Afin d'éviter tout risque de choc électrique, ne retirez pas le cache en plastique protégeant la partie inférieure de la carte d'alimentation.

Aus Sicherheitsgründen die Kunststoffabdeckung, die den unteren Teil der Spannungswandlerplatine umgibt, nicht entfernen.

כדי למנוע התחשמלות, אין להסיר את מכסה הפלסטיק המגן על חלקו התחתון של הכרטיס ההפוך.

Per evitare scosse elettriche, non rimuovere la copertura in plastica che avvolge la parte inferiore della scheda invertitore.

感電を防ぐため、インバーター・カードの下部を保護しているプラスチック・カバーを外さないでください。

Para evitar descargas, no quite la cubierta de plástico que rodea la parte baja de la tarjeta invertida.

Safety notice 7

⚠ DANGER

Though the main batteries have low voltage, a shorted or grounded battery can produce enough current to burn personnel or combustible materials.

Bien que le voltage des batteries principales soit peu élevé, le court-circuit ou la mise à la masse d'une batterie peut produire suffisamment de courant pour brûler des matériaux combustibles ou causer des brûlures corporelles graves.

Obwohl Hauptbatterien eine niedrige Spannung haben, können sie doch bei Kurzschluß oder Erdung genug Strom abgeben, um brennbare Materialien zu entzünden oder Verletzungen bei Personen hervorzurufen.

אף שהסוללות הראשיות הן בעלות מתח נמוך, סוללה מקוצרת או מוארקת עלולה להפיק זרם מספיק לגרימת כוויות או להצתת חומרים דליקים.

Sebbene le batterie di alimentazione siano a basso voltaggio, una batteria in corto circuito o a massa può fornire corrente sufficiente da bruciare materiali combustibili o provocare ustioni ai tecnici di manutenzione.

メイン・バッテリーの電圧は低くても、ショートしたり、接地したバッテリーが、作業者にやけどを負わせたり、可燃物を燃やすだけの電流を発生させる場合があります。

Aunque las baterías principales tienen un voltaje bajo, una batería cortocircuitada o con contacto a tierra puede producir la corriente suficiente como para quemar material combustible o provocar quemaduras en el personal.

Safety notice 8

⚠ DANGER

Before removing any FRU, turn off the computer, unplug all power cords from electrical outlets, remove the battery pack, and then disconnect any interconnecting cables.

Avant de retirer une unité remplaçable en clientèle, mettez le système hors tension, débranchez tous les cordons d'alimentation des socles de prise de courant, retirez la batterie et déconnectez tous les cordons d'interface.

Die Stromzufuhr muß abgeschaltet, alle Stromkabel aus der Steckdose gezogen, der Akku entfernt und alle Verbindungskabel abgenommen sein, bevor eine FRU entfernt wird.

לפני סילוק FRU כלשהו, יש לכבות את המחשב,
לנתק את כל כבלי החשמל משקעי החשמל, להוציא
את סוללת הסוללה, ואז לנתק כבלי חיבור אחרים
אם יש כאלה.

Prima di rimuovere qualsiasi FRU, spegnere il sistema, scollegare dalle prese elettriche tutti i cavi di alimentazione, rimuovere la batteria e poi scollegare i cavi di interconnessione.

FRUを取り外す前に、ThinkPadの電源を切って、すべての電源コードをコンセントから外してください。次に、バッテリー・パックを外し、相互接続ケーブルを外してください。

Antes de quitar una FRU, apague el sistema, desenchufe todos los cables de las tomas de corriente eléctrica, quite la batería y, a continuación, desconecte cualquier cable de conexión entre dispositivos.

Laser compliance statement

Some models of Lenovo computer are equipped from the factory with an optical storage device such as a CD-ROM drive or a DVD-ROM drive. Such devices are also sold separately as options. If one of these drives is installed, it is certified in the U.S. to conform to the requirements of the Department of Health and Human Services 21 Code of Federal Regulations (DHHS 21 CFR) Subchapter J for Class 1 laser products. Elsewhere, the drive is certified to conform to the requirements of the International Electrotechnical Commission (IEC) 825 and CENELEC EN 60 825 for Class 1 laser products.

If a CD-ROM drive, a DVD-ROM drive, or another laser device is installed, note the following:

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.

O uso de controles, ajustes ou desempenho de procedimentos diferentes daqueles aqui especificados pode resultar em perigosa exposição à radiação.

凡未在这里指明的任何控制用法、调整、行为，都会导致严重后果。

Pour éviter tout risque d'exposition au rayon laser, respectez les consignes de réglage et d'utilisation des commandes, ainsi que les procédures décrites.

Werden Steuer- und Einstellelemente anders als hier festgesetzt verwendet, kann gefährliche Laserstrahlung auftreten.

Az itt előírt eljárásoktól, beállításoktól és vezérlésektől eltérni a lézersugárzás veszélye miatt kockázatos!

L'utilizzo di controlli, regolazioni o l'esecuzione di procedure diverse da quelle specificate possono provocare l'esposizione a.

Использование элементов настройки и выполнение процедур иных, чем указано здесь, может привести к опасному радиационному облучению.

Použitie kontrol, úprav alebo iných vykonaní od iných výrobcov, ako je v tomto špecifikované, mohlo by mať za následok nebezpečenstvo vystavenia sa vyžiarovaniu.

本書で指定された内容以外の、お客様による整備、調整、または手順を行った場合、レーザー光の放射の危険があります。

El uso de controles o ajustes o la ejecución de procedimientos distintos de los aquí especificados puede provocar la exposición a radiaciones peligrosas.

Opening the CD-ROM drive, the DVD-ROM drive, or any other optical storage device could result in exposure to hazardous laser radiation. There are no serviceable parts inside those drives. **Do not open.**

A CD-ROM drive, a DVD-ROM drive, or any other storage device installed may contain an embedded Class 3A or Class 3B laser diode. Note the following:

 DANGER

Emits visible and invisible laser radiation when open. Do not stare into the beam, do not view directly with optical instruments, and avoid direct exposure to the beam.

Radiação por raio laser ao abrir. Não olhe fixo no feixe de luz, não olhe diretamente por meio de instrumentos óticos e evite exposição direta com o feixe de luz.

开启时会有激光发射时，请勿直视激光束，请勿直接查看视觉仪器，并且避免直接接触在激光光束之中。

Rayonnement laser si carter ouvert. Évitez de fixer le faisceau, de le regarder directement avec des instruments optiques, ou de vous exposer au rayon.

Laserstrahlung bei geöffnetem Gerät. Nicht direkt oder über optische Instrumente in den Laserstrahl sehen und den Strahlungsbereich meiden.

Kinyitáskor lézersugár ! Ne nézzen bele se szabad szemmel, se optikai eszközökkel. Kerülje a sugárnyalábbal való érintkezést!

Aprendo l'unità vengono emesse radiazioni laser. Non fissare il fascio, non guardarlo direttamente con strumenti ottici e evitare l'esposizione diretta al fascio.

Открывая, берегитесь лазерного излучения. Не смотрите на луч, не разглядывайте его с помощью оптических инструментов, а также избегайте прямого воздействия лазерного луча.

Keď je laserová jednotka otvorená. Vyhňte sa priamemu pohľadu a neľadte priamo s optickými nástrojmi do lúča a vyhňte sa priamemu vystaveniu lúčov.

開けるとレーザー光が放射されます。光線を見つめたり、光学機械を使って直接見たりしないでください。

Radiación láser al abrir. No mire fijamente ni examine con instrumental óptico el haz de luz. Evite la exposición directa al haz.

Important service information

This chapter presents the following important service information:

- “Strategy for replacing FRUs” on page 16
 - “Strategy for replacing a hard disk drive” on page 17
 - “Important notice for replacing a system board” on page 17
- “Important information about replacing RoHS compliant FRUs” on page 18

Important:

BIOS and device driver fixes are customer-installable. The BIOS and device drivers are posted on the customer support site:
<http://support.lenovo.com>.

Strategy for replacing FRUs

Before replacing parts:

Make sure that all software fixes, drivers, and BIOS downloads are installed before replacing any FRUs listed in this manual.

After a system board is replaced, ensure that the latest BIOS is loaded to the system board before completing the service action.

To download software fixes, drivers, and BIOS, follow the steps below:

1. Go to <http://support.lenovo.com>.
2. Enter the serial number or select a product or use Lenovo smart downloading.
3. Select the BIOS/Driver/Applications and download.
4. Follow the directions on the screen and install the necessary software.

Use the following strategy to prevent unnecessary expense for replacing and servicing FRUs:

- If you are instructed to replace an FRU, but the replacement does not solve the problem, reinstall the original FRU before you continue.
- Some computers have both a processor board and a system board. If you are instructed to replace either of them, and replacing one of them does not solve the problem, reinstall that board, and then replace the other one.
- If an adapter or a device consists of more than one FRU, any of the FRUs may be the cause of the error. Before replacing the adapter or device, remove the FRUs one by one to see if the symptoms change. Replace only the FRU that changed the symptoms.

Attention: The setup configuration on the computer you are servicing may have been customized. Running Automatic Configuration may alter the settings. Note the current configuration settings (using the View Configuration option); then, when service has been completed, verify that those settings remain in effect.

Strategy for replacing a hard disk drive

Always try to run a low-level format before replacing a hard disk drive. This will cause all customer data on the hard disk to be lost. Make sure that the customer has a current backup of the data before performing this action.

Attention: The drive startup sequence in the computer you are servicing may have been changed. Be extremely careful during write operations such as copying, saving, or formatting. If you select an incorrect drive, data or programs can be overwritten.

Important notice for replacing a system board

Some components mounted on a system board are very sensitive. Improper handling can cause damage to those components, and may cause a system malfunction.

Attention: When handling a system board:

- Do not drop the system board or apply any excessive force to it.
- Avoid rough handling of any kind.
- Avoid bending the system board and hard pushing to prevent cracking at each BGA (Ball Grid Array) chipset.

Important information about replacing RoHS compliant FRUs

RoHS, The Restriction of Hazardous Substances in Electrical and Electronic Equipment Directive (2002/95/EC) is a European Union legal requirement affecting the global electronics industry. RoHS requirements must be implemented on Lenovo products placed on the market after June 2006. Products on the market before June 2006 are not required to have RoHS compliant parts. If the original FRU parts are non-compliant, replacement parts can also be non-compliant. In all cases if the original FRU parts are RoHS compliant, the replacement part must also be RoHS compliant.

Note: RoHS and non-RoHS FRU part numbers with the same fit and function are identified with unique FRU part numbers.

Lenovo plans to transit to RoHS compliance well before the implementation date and expects its suppliers to be ready to support Lenovo’s requirements and schedule in the EU. Products sold in 2005 and 2006 will contain some RoHS compliant FRUs. The following statement pertains to these products and any product Lenovo produces containing RoHS compliant FRUs.

RoHS compliant FRUs have unique FRU part numbers. Before or after the RoHS implementation date, failed RoHS compliant parts must always be replaced with RoHS compliant ones, so only the FRUs identified as compliant in the system HMM or direct substitutions for those FRUs may be used.

Products marketed before June 2006		Products marketed after June 2006	
Current or original part	Replacement FRU	Current or original part	Replacement FRU
Non-RoHS	Can be Non-RoHS	Must be RoHS	Must be RoHS
Non-RoHS	Can be RoHS		
Non-RoHS	Can sub to RoHS		
RoHS	Must be RoHS		

Note: A direct substitution is a part with a different FRU part number that is automatically shipped by the distribution center at the time of the order.

General checkout

This chapter presents the following information:

- “What to do first” on page 20
- “Power system checkout” on page 21

Before you go to the checkout, make sure to read the following important notes:

Important notes:

- **Only certified trained personnel can service the computer.**
- **Before replacing any FRU, read the entire page on removing and replacing FRUs.**
- **When you replace FRUs, use new nylon-coated screws.**
- **Be extremely careful during such write operations as copying, saving, or formatting.** Drives in the computer that you are servicing sequence might have been altered. If you select an incorrect drive, data or programs might be overwritten.
- **Replace an FRU only with another FRU of the correct model.** When you replace an FRU, make sure that the machine model and the FRU part number are correct by referring to the FRU parts list.
- **An FRU should not be replaced just because of a single, unreproducible failure.** Single failures can occur for a variety of reasons that have nothing to do with a hardware defect, such as cosmic radiation, electrostatic discharge, or software errors. Consider replacing an FRU only when a problem recurs. If you suspect that an FRU is defective, clear the error logs and run the test again. If the error does not recur, do not replace the FRU.
- **Be careful not to replace a nondefective FRU.**

What to do first

When you do return an FRU, you must include the following information in the parts exchange form or parts return form that you attach to it:

1. Name and phone number of servicer
2. Date of service
3. Date on which the machine failed
4. Date of purchase
5. Procedure index and page number in which the failing FRU was detected
6. Failing FRU name and part number
7. Machine type, model number, and serial number
8. Customer's name and address

Note for warranty: During the warranty period, the customer may be responsible for repair costs if the computer damage was caused by misuse, accident, modification, unsuitable physical or operating environment, or improper maintenance by the customer.

The following is a list of some common items that are not covered under warranty and some symptoms that might indicate that the system was subjected to stress beyond normal use.

Before checking problems with the computer, determine whether the damage is covered under the warranty by referring to the following list:

The following are not covered under warranty:

- LCD panel cracked from the application of excessive force or from being dropped
- Scratched (cosmetic) parts
- Distortion, deformation, or discoloration of the cosmetic parts
- Plastic parts, latches, pins, or connectors that have been cracked or broken by excessive force
- Damage caused by liquid spilled into the system
- Damage caused by the improper insertion of a PC Card or the installation of an incompatible card
- Improper disk insertion or use of an optical drive
- Diskette drive damage caused by pressure on the diskette drive cover, foreign material in the drive, or the insertion of a diskette with multiple labels
- Damaged or bent diskette eject button
- Fuses blown by attachment of a nonsupported device
- Forgotten computer password (making the computer unusable)
- Sticky keys caused by spilling a liquid onto the keyboard
- Use of an incorrect AC adapter on laptop products

The following symptoms might indicate damage caused by nonwarranted activities:

- Missing parts might be a symptom of unauthorized service or modification.
- If the spindle of a hard disk drive becomes noisy, it may have been subjected to excessive force, or dropped.

Power system checkout

To verify a symptom, follow the steps below:

1. Turn off the computer.
2. Remove the battery pack.
3. Connect the AC adapter.
4. Make sure that power is supplied when you turn on the computer.
5. Turn off the computer.
6. Disconnect the AC adapter and install the charged battery pack.
7. Make sure that the battery pack supplies power when you turn on the computer.

If you suspect a power problem, see the appropriate one of the following power supply checkouts:

- “Checking the AC adapter” on page 21
- “Checking operational charging” on page 22
- “Checking the battery pack” on page 22


Checking the AC adapter

You are here because the computer fails only when the AC adapter is used.

- If the power-on indicator does not turn on, check the power cord of the AC adapter for correct continuity and installation.
- If the computer does not charge during operation, go to “Checking operational charging”.

To check the AC adapter, follow the steps below:

1. Unplug the AC adapter cable from the computer.
2. Measure the output voltage at the plug of the AC adapter cable. See the following figure:

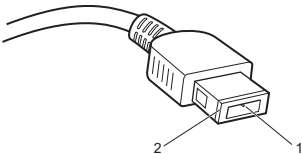

Pin	Voltage (V DC)
1	+20
2	0

Note: Output voltage for the AC adapter pin No. 2 may differ from the one you are servicing.

3. If the voltage is not correct, replace the AC adapter.
4. If the voltage is acceptable, do the following:
 - Replace the system board.
 - If the problem persists, go to “Lenovo B71-80” on page 28.

Note: Noise from the AC adapter does not always indicate a defect.

Checking operational charging

To check whether the battery charges properly during operation, use a discharged battery pack or a battery pack that has less than 50% of the total power remaining when installed in the computer.

Perform operational charging. If the battery status indicator or icon does not light on, remove the battery pack and let it return to room temperature. Reinstall the battery pack. If the charge indicator or icon is still off, replace the battery pack.

If the charge indicator still does not light on, replace the system board. Then reinstall the battery pack. If it is still not charged, go to the next section.

Checking the battery pack

Battery charging does not start until the Power Meter shows that less than 95% of the total power remains; under this condition the battery pack can charge to 100% of its capacity. This protects the battery pack from being overcharged or from having a shortened life.

To check your battery, move your cursor to the Power Meter icon in the icon tray of the Windows® taskbar and wait for a moment (but do not click it), and the percentage of battery power remaining is displayed. To get detailed information about the battery, double-click the Power Meter icon.

Note: If the battery pack becomes hot, it may not be able to be charged. Remove it from the computer and leave it at room temperature for a while. After it cools down, reinstall and recharge it.

Related service information

This chapter presents the following information:

- “Restoring the factory contents by using Recovery Disc Set” on page 23
- “Restoring the factory contents by using OneKey Recovery” on page 24
- “Passwords” on page 24
- “Power management” on page 26

Restoring the factory contents by using Recovery Disc Set

When the hard disk drive or solid state drive is replaced because of a failure, no product recovery program is on the new drive. In this case, you must use the *Recovery Disc Set* for the computer. Order the *Recovery Disc Set* and the drive at the same time so that you can recover the new drive with the pre-installed software when they arrive.

The *Recovery Disc Set* consists of the following set of DVDs to restore the computer to the original factory configuration.

Start Recovery Disc (one disc)

This disc is used to format the hard disk drive and initiate the recovery process.

Operating System Recovery Disc (one or more discs)

This disc restores the Microsoft Windows operating system.

Applications and Drivers Recovery Disc (one or more discs)

This disc restores the pre-installed applications and drivers on the computer.

Supplemental Recovery Disc

This disc contains additional content, such as software for specific models and updates to the software that was preloaded on the computer. Not all recovery disc sets come with a *Supplemental Recovery Disc*.

To restore the computer to the original factory configuration using the recovery disc set, do the following:

1. Insert the bootable *Start Recovery Disc* into the optical drive.
2. Start the computer. When the Lenovo logo comes up, immediately press F12; on the boot sequence menu, select the optical drive as the first boot-up device. The computer will boot from the *Start Recovery Disc*. Follow the on-screen instructions to begin the recovery process.
3. Read the license. If you agree with the terms, select **I accept these terms and conditions** and then click **Next**.
4. Insert the **Operating System Recovery Disc** when prompted and click **Yes** to begin the operating system recovery process.
5. Insert the *Applications and Drivers Recovery Disc* when prompted and then click **OK** to begin the applications and drivers recovery process.
6. If you have a *Supplemental Recovery Disc*, insert it when prompted and click **Yes**. If you do not have a *Supplemental Recovery Disc*, click **No**.

7. When all of the data has been copied from the last disc in the set, remove the disc and restart the computer.

Note: The remainder of the recovery process is fully automated and no action is required by you. The computer will restart into the Windows desktop several times and you might experience periods when no activity is apparent on the screen for several minutes at a time. This is normal.

8. When the recovery process is complete, the Welcome to the Microsoft Windows screen is displayed. Follow the instructions on the screen to complete the Windows setup.

Restoring the factory contents by using OneKey Recovery

Restore of factory default

The Lenovo B71-80 computers come with pre-installed OneKey Recovery System. In order to save application files and the initial backed up files of the system, the hard disk in a Lenovo computer includes a hidden partition when it is shipped. If you need to restore the system to the point of your first boot up, just enter Lenovo OneKey Recovery System and run **System Recovery**. For details of OneKey Recovery System, see *the User Guide for Lenovo OneKey Recovery system*.

Note: This will delete all the new data on the system partition (C drive), which is not recoverable. Make sure to back up your critical data before you perform this action.

Passwords

As many as three passwords may be needed for any Lenovo computer: the power-on password (POP), the hard disk password (HDP), and the supervisor password (SVP).

If any of these passwords has been set, a prompt for it appears on the screen whenever the computer is turned on. The computer does not start until the password is entered.

Exception: If only an SVP is installed, the password prompt does not appear when the operating system is booted.

Power-on password

A power-on password (POP) protects the system from being powered on by an unauthorized person. The password must be entered before an operating system can be booted.

Hard-disk password

There are two hard-disk passwords (HDPs):

- + User HDP - for the user

- + Master HDP - for the system administrator, who can use it to get access to the hard disk drive even if the user has changed the user HDP

Attention: If the user HDP has been forgotten, check whether a master HDP has been set. If it has, it can be used for access to the hard disk drive. If no master HDP is available, neither Lenovo nor Lenovo authorized service technicians provide any services to reset either the user or the master HDP, or to recover data from the hard disk drive. The hard disk drive can be replaced for a scheduled fee.

Supervisor password

A supervisor password (SVP) protects the system information stored in the BIOS Setup Utility. The user must enter the SVP in order to get access to the BIOS Setup Utility and change the system configuration.

Attention: If the SVP has been forgotten and cannot be made available to the servicer, there is no service procedure to reset the password. The system board must be replaced for a scheduled fee.

Power management

Note: Power management modes are not supported for APM operating system.

To reduce power consumption, the computer has three power management modes: screen blank, sleep (standby), and hibernation.

Screen blank state

If the time set on the “Turn off monitor” timer in the operating system expires, the LCD backlight turns off. You can also turn off the LCD backlight by pressing .

To end screen blank state and resume normal operation, press .

Putting your computer to sleep

If you will be away from your computer for only a short time, put the computer to sleep.

When the computer is in sleep mode, you can quickly wake it to resume use, bypassing the startup process.

To put the computer to sleep, do one of the following:

- Close the display lid.
- Press the Power button.
- Do the proper operations in the operating system.

Windows 7:

Click **Start**  → **Sleep**.

Windows 10:

Open the start menu, and then select **Power**  → **Sleep**.

Note: Wait until the power indicator light starts blinking (indicating that the computer is in sleep mode) before you move your computer. Moving your computer while the hard disk is spinning can damage the hard disk, causing loss of data.

To wake the computer, do one of the following:

- Press any key on the keyboard.
- Press the Power button.

Shutting down the computer

If you are not going to use your computer for a long time, shut it down.


To shut down the computer, do one of the following:

Windows 7:

Click **Start**  → **Shut down**.

Windows 10:

Open the start menu, and then select **Power**  → **Shut down**.

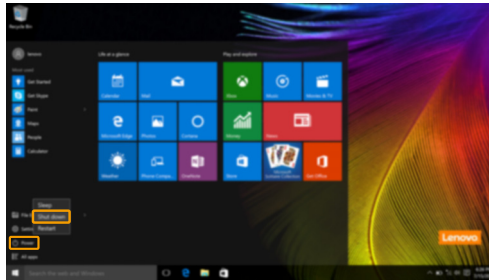

Right-click the **Start** button in the lower-left corner and select **Shut down or sign out** → **Shut down**.



Lenovo B71-80

This chapter presents the following product-specific service references and product-specific parts information:

- “Specifications” on page 28
- “Status indicators” on page 30
- “Fn key combinations/Hotkeys” on page 31
- “FRU replacement notices” on page 32
- “Removing and replacing an FRU” on page 33
- “Locations” on page 65
- “Parts list” on page 68

Specifications

The following table lists the specifications of the Lenovo B71-80:

Table 1. Specifications

Form Factor	
Dimensions	Appr. 418 mm × 292.6 mm × 25.1 mm
Weight	Appr. 3.0 kg
LCD size	17.3-inch
Processor	
See the system properties of your computer. You can do this as follows: <ul style="list-style-type: none">• Windows 10: Click Start, right-click File Explorer, and then click Properties.• Windows 7: Click Start, right-click Computer; then from the pull down menu select Properties.	
Memory	
Type and speed	DDR3L-1333 MHz/1600 MHz
Maximum supported capacity	16 GB
Slots	SODIMM × 2
Hard disk drive	
Form factor	2.5-inch, 7 mm/9.5 mm
Capacity	HDD: 500 GB/1 TB SSHD: 500 GB+8 GB/1 TB+8 GB SSD: 128 GB
Interface	SATA 3

Table 1. Specifications (continued)

Optical drive	
Form factor	9.0 mm
Type	RAMBO/Dummy ODD
Display	
Display resolution (LCD)	16:9 (1,600 × 900 pixels)
LCD backlight	LED
I/O Ports	
USB	USB 3.0 × 2, USB 2.0 × 1
Audio	Combo audio jack × 1
Communication	RJ-45 × 1
Video/Audio	HDMI slot × 1
Video	VGA × 1
Memory card slot	4 in 1 slot × 1 (SD/SDHC/SDXC/MMC)
Battery pack	
Type	Li-Cylinder battery
Cells/Capacity	4 cells, 41 Wh
AC power adapter	
Input	100-240 V, 50-60 Hz
Output voltage	20 V DC
Power	45 W/65 W
Miscellaneous	
Camera	0.3 Mega, HD
Security	Kensington slot × 1

Status indicators

The system status indicators below show the computer status:

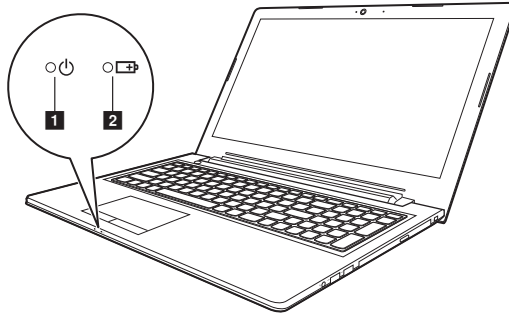


Table 2. Status indicators

Indicator	Indicator status	Meaning
Battery status indicator	On (solid white)	The battery has more than 20% charge.
	Solid amber	The battery has between 5% and 20% charge.
	Fast blinking amber	The battery has less than 5% charge.
	Slow blinking amber	The battery is being charged. When battery charge reaches 20%, the blinking color changes to white.
	Slow blinking white	The battery has between 20% and 80% charge and is still charging. When the battery reaches 80% charge the light will stop blinking, but charging will continue until the battery is fully charged.
Power status indicator	On (solid white)	The computer is powered on.
	Blinking	The computer is in sleep mode.
	Off	The computer is powered off.

Fn key combinations/Hotkeys

The following table shows the function of each combination of Fn with a function key.

Table 3. Fn key combinations

Fn + Home:	Activate the pause function.
Fn + End:	Activate the break function.
Fn + PgUp:	Enable/Disable the scroll lock.
Fn + PgDn:	Activate the system request.

You can access certain system settings quickly by pressing the appropriate hotkeys.

Table 4. Hotkeys

 F1 :	Mutes/unmutes the sound.	 F7 :	Enables/disables airplane mode.
 F2 :	Decreases the volume level.	 F8 :	Displays all currently active apps.
 F3 :	Increases the volume level.	 F9 :	Turns on/off the backlight of the LCD screen.
 F4 :	Closes the currently active window.	 F10 :	Toggles the display between the computer and an external device.
 F5 :	Refreshes the desktop or the currently active window.	 F11 :	Decreases display brightness.
 F6 :	Enables/disables the touch pad.	 F12 :	Increases display brightness.

FRU replacement notices

This section presents notices related to removing and replacing parts. Read this section carefully before replacing any FRU.

Screw notices

Loose screws can cause a reliability problem. In the Lenovo computer, this problem is addressed with special nylon-coated screws that have the following characteristics:

- They maintain tight connections.
- They do not easily come loose, even with shock or vibration.
- They are harder to tighten.
- Each one should be used only once.


Do the following when you service this machine:

- Keep the screw kit in your tool bag.
- Remove screws carefully for reuse.
- Use a torque screwdriver if you have one.

Tighten screws as follows:


- **Plastic to plastic**

Turn an additional 90° after the screw head touches the surface of the plastic part:

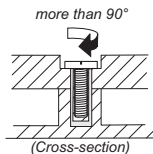

- **Logic card to plastic**

Turn an additional 180° after the screw head touches the surface of the logic card:

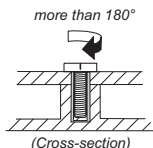

- **Torque driver**

If you have a torque screwdriver, refer to the “Torque” column for each step.

- Make sure that you use the correct screws. If you have a torque screwdriver, tighten all screws firmly to the torque shown in the table. **Never use a screw that you removed. Use a new one. Make sure that all screws are tightened firmly.**
- Ensure torque screwdrivers are calibrated correctly following country specifications.

Removing and replacing an FRU

This section presents exploded figures with the instructions to indicate how to remove and replace the FRU. Make sure to observe the following general rules:

1. Do not attempt to service any computer unless you have been trained and certified. An untrained person runs the risk of damaging parts.
2. Before replacing any FRU, review “FRU replacement notices” on page 32.
3. Begin by removing any FRUs that have to be removed before the failing FRU. Any of such FRUs are listed at the top of the page. Remove them in the order in which they are listed.
4. Follow the correct sequence in the steps to remove the FRU, as given in the figures by the numbers in square callouts.
5. When turning a screw to replace an FRU, turn it in the direction as given by the arrow in the figure.
6. When removing the FRU, move it in the direction as given by the arrow in the figure.
7. To put the new FRU in place, reverse the removal procedures and follow any of the notes that pertain to replacement. For information about connecting and arranging internal cables, see “Locations” on page 65.
8. When replacing an FRU, use the correct screw as shown in the procedures.

DANGER

Before removing any FRU, turn off the computer, unplug all power cords from electrical outlets, remove the battery pack, and then disconnect any of the interconnecting cables.

Attention: After replacing an FRU, do not turn on the computer until you have made sure that all screws, springs, and other small parts are in place and none are loose inside the computer. Verify this by shaking the computer gently and listening for rattling sounds. Metallic parts or metal flakes can cause electrical short circuits.

Attention: The system board is sensitive to, and can be damaged by, electrostatic discharge. Before touching it, establish personal grounding by touching a ground point with one hand or using an electrostatic discharge (ESD) strap (P/N 6405959) to remove potential shock reasons.

CAUTION:

Set the built-in battery in Ship Mode before replacing a CRU or sending your computer for service.


- ① Turn off the computer and disconnect the AC power adapter.
- ② Press **Fn + S + V**.
- ③ Press the Power button to verify if Ship Mode has been set.

Note: When set in Ship Mode, the battery does not supply power to the computer. To awake the battery from Ship Mode, connect the AC power adapter to your computer.

1010 Hard disk drive (HDD)/Memory/Mini PCI Express Card slot compartment cover

Figure 1. Removal steps of HDD/Memory/Mini PCI Express Card slot compartment cover

Loosen the screws **1** that secure the compartment cover. Remove the compartment cover **2**.

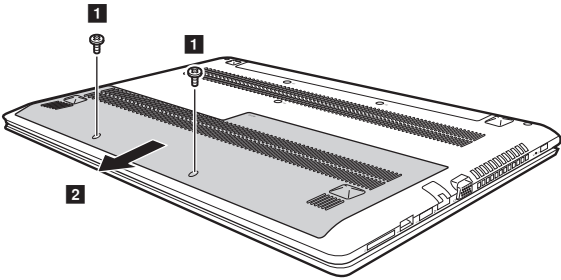

Step	Screw (quantity)	Color	Torque	PN
1	M2.5 × 7 mm, Phillips-head, nylok-coated (2)	Black	3.0±0.3 kgfcm	5S10K61894


1020 Hard disk drive

- For access, remove this FRU:
- “1010 Hard disk drive (HDD)/Memory/Mini PCI Express Card slot compartment cover” on page 34

Attention:


- **Do not drop the hard disk drive or apply any physical shock to it.**
The hard disk drive is sensitive to physical shock. Improper handling can cause damages and permanent loss of data.
- Before removing the drive, suggest the customer to backup all the information on it if possible.
- Never remove the drive while the system is operating or is in suspend mode.

Figure 2. Removal steps of hard disk drive
Remove the frame fixing screws **1**.

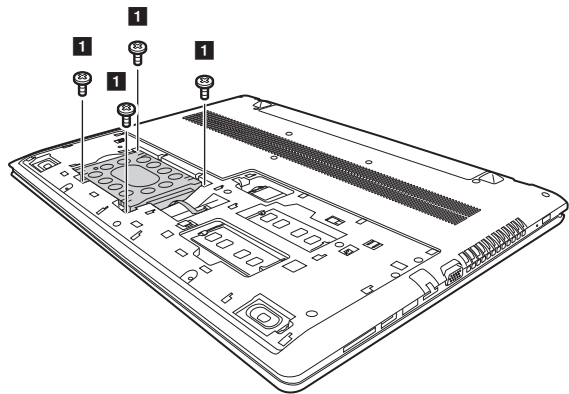


Step	Screw (quantity)	Color	Torque
1	M2 × 6 mm, Phillips-head, nylok-coated (4)	Black	1.85±0.15 kgfcm


Figure 2. Removal steps of hard disk drive (continued)
Detach the hard disk drive connector shown by arrows **2** and **3**.

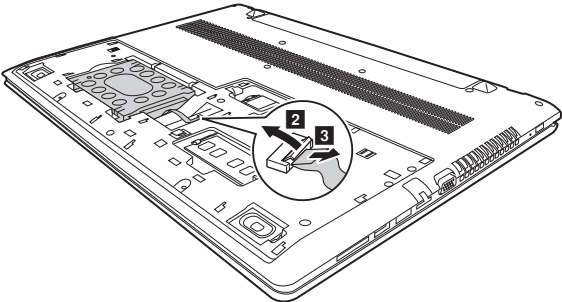

Take out the hard disk drive secured in a metal frame in the direction shown by arrow **4**.

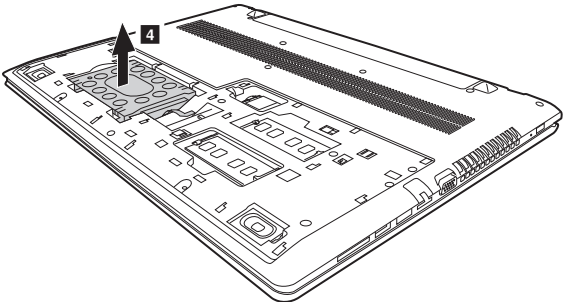

Remove the screws **5**. Take out the hard disk drive secured in a metal frame.

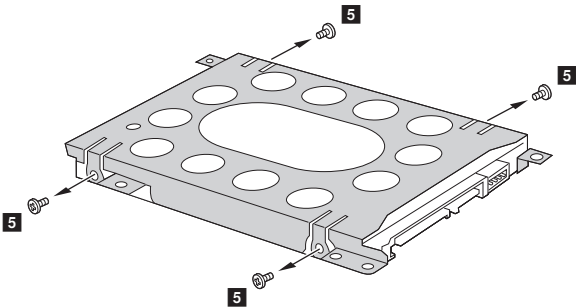

Step	Screw (quantity)	Color	Torque	PN
5	M3.0 × 3 mm, Phillips-head, nylok-coated (4)	Silver	3.0±0.3 kgfcm	90204955

When installing: Make sure that the HDD connector is attached firmly.


1030 DIMM

For access, remove these FRUs in order:

- “1010 Hard disk drive (HDD)/Memory/Mini PCI Express Card slot compartment cover” on page 34
- “1020 Hard disk drive” on page 35

Figure 3. Removal steps of DIMM

Release the two latches on both edges of the socket at the same time in the directions shown by arrows **1**, and then unplug the DIMM in the direction shown by arrow **2**.

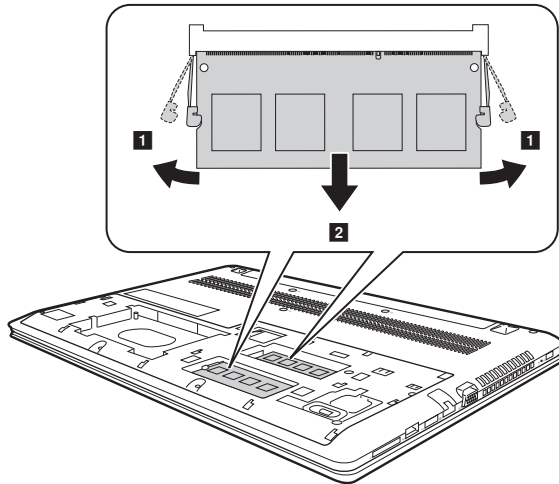

When installing: Insert the notched end of the DIMM into the socket. Push the DIMM firmly, and pivot it until it snaps into the place. Make sure that it is firmly fixed in the slot and difficult to be moved.

1040 PCI Express Mini Card for wireless LAN/WAN

For access, remove these FRUs in order:


- “1010 Hard disk drive (HDD)/Memory/Mini PCI Express Card slot compartment cover” on page 34
- “1020 Hard disk drive” on page 35
- “1030 DIMM” on page 37

Important:

- The preinstalled WLAN module may only be replaced with a Lenovo approved module in order to comply with FCC and IC regulations. Refer to “Overall” on page 69 for Lenovo part numbers for the approved modules.

Figure 4. Removal steps of PCI Express Mini Card for wireless LAN/WAN

Disconnect the two wireless LAN cables (black, white) **1**, and then remove the screw **2**.

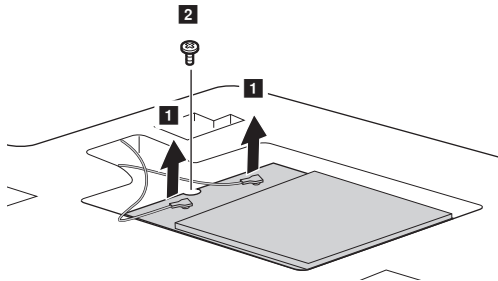

In step **1**, unplug the jacks by using the removal tool antenna RF connector (P/N: 08K7159), or pick up the connectors with your fingers and gently unplug them in the direction shown by arrows.


Notes: wireless LAN card has 2 cables in step **1**.

wireless LAN card in some models may have 3 cables in step **1**.

Step	Screw (quantity)	Color	Torque	PN
2	M2 × 3.0 mm, Phillips-head, nylok-coated (1)	Black	1.85±0.15 kgfcm	90001118

Figure 4. Removal steps of PCI Express Mini Card for wireless LAN/WAN (continued)

Remove the card in the direction shown by arrow **3**.

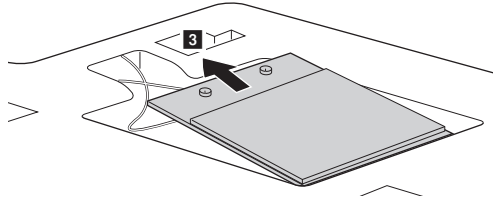

When installing:

- In models with a wireless LAN card that has two antenna connectors, plug the black cable (1st) (MAIN) into the jack labeled **1**, and the white cable (2nd) (AUX) into jack labeled **2** on the card.
- In models with a wireless LAN card that has three antenna connectors, plug the black cable (1st) (MAIN) into the jack labeled **1**, the grey cable (3rd) into jack labeled **3**, and the white cable (2nd) (AUX) into jack labeled **2** on the card.


1050 Keyboard

For access, remove these FRUs in order:

- “1010 Hard disk drive (HDD)/Memory/Mini PCI Express Card slot compartment cover” on page 34
- “1020 Hard disk drive” on page 35
- “1030 DIMM” on page 37
- “1040 PCI Express Mini Card for wireless LAN/WAN” on page 38

Figure 5. Removal steps of keyboard


Remove the screws **1**.

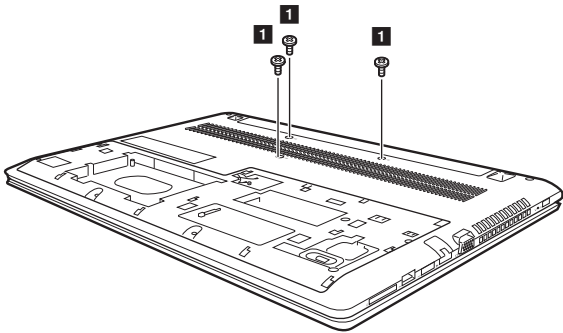


Step	Screw (quantity)	Color	Torque	PN
1	M2.0 × 6 mm, Phillips-head, nylok-coated (3)	Black	1.85±0.15 kgfcm	90205118

Figure 5. Removal steps of keyboard (continued)

Pull to unsnap the keyboard in the direction as shown by the arrows **2**, and then lift it up in the direction shown by arrow **3**.

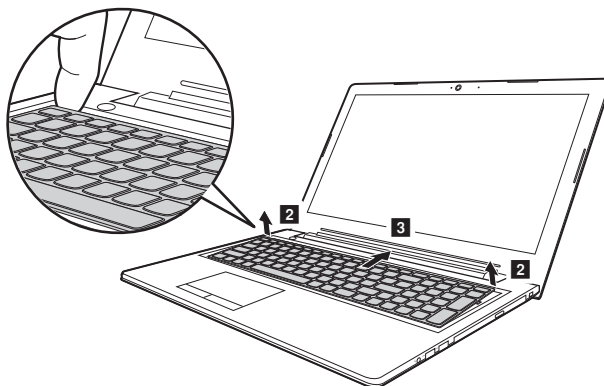

Pull the keyboard connector slot cover upward as shown by arrow **4**, detach the keyboard cable from the keyboard connector in the direction shown by arrow **5**.

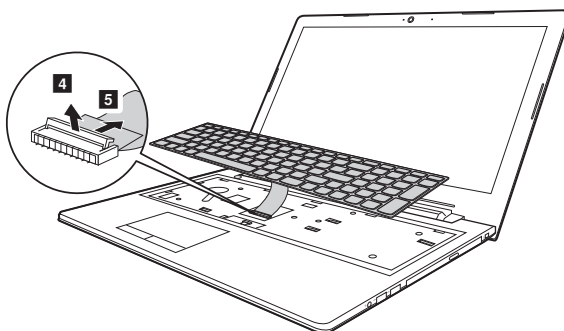

When installing: Make sure that the FPC connector is attached firmly.


1060 Optical drive

For access, remove these FRUs in order:

- “1010 Hard disk drive (HDD)/Memory/Mini PCI Express Card slot compartment cover” on page 34
- “1020 Hard disk drive” on page 35
- “1030 DIMM” on page 37
- “1040 PCI Express Mini Card for wireless LAN/WAN” on page 38
- “1050 Keyboard” on page 40


Figure 6. Removal steps of optical drive

Remove the screw **1**.

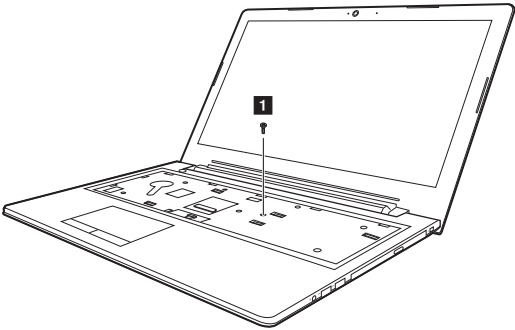

Step	Screw (quantity)	Color	Torque	PN
1	M2 × 6 mm, Phillips-head, nylokcoated (1)	Black	1.85+/-0.15 kgfcm	90205118

Insert a screwdriver into the screw hole and push the optical drive in the direction shown by arrow **2**. Pull the optical drive out in the direction shown by arrow **3**.

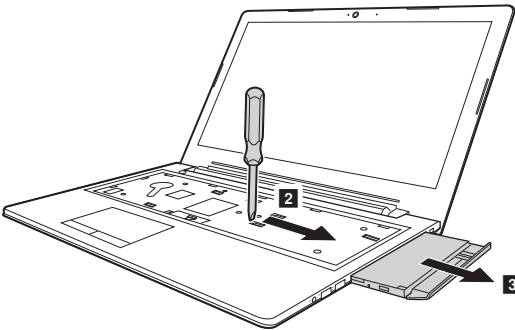


1070 Keyboard bezel

- For access, remove these FRUs in order:
- “1010 Hard disk drive (HDD)/Memory/Mini PCI Express Card slot compartment cover” on page 34
 - “1020 Hard disk drive” on page 35
 - “1030 DIMM” on page 37
 - “1040 PCI Express Mini Card for wireless LAN/WAN” on page 38
 - “1050 Keyboard” on page 40
 - “1060 Optical drive” on page 42

Figure 7. Removal steps of keyboard bezel


Remove screws **1**.

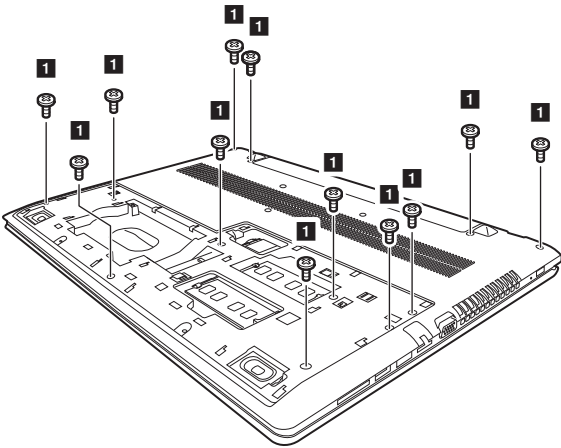

Step	Screw (quantity)	Color	Torque	PN
1	M2 x 6 mm, Phillips-head, nylok-coated (12)	Black	1.85±0.15 kgf.cm	90205118


Figure 7. Removal steps of keyboard bezel (continued)

Remove the screw **2**.

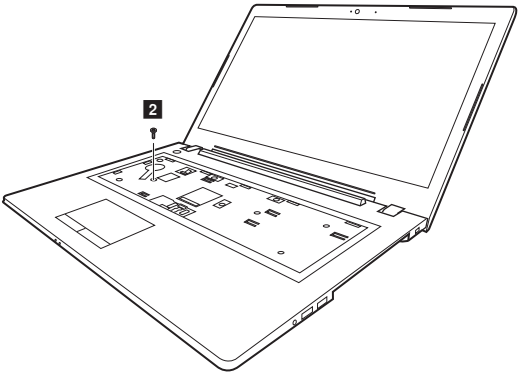

Step	Screw (quantity)	Color	Torque
2	M2 × 6 mm, Phillips-head, nylokcoated (1)	Black	1.85+/-0.15 kgfcm


Pull the touch pad connector, LED board and power button connector slot cover upward as shown by arrows **3**, and detach the touch pad board cable, LED board cable and power button cable from the touch pad board connector, LED board connector and power button connector in the direction shown by arrows **4**.

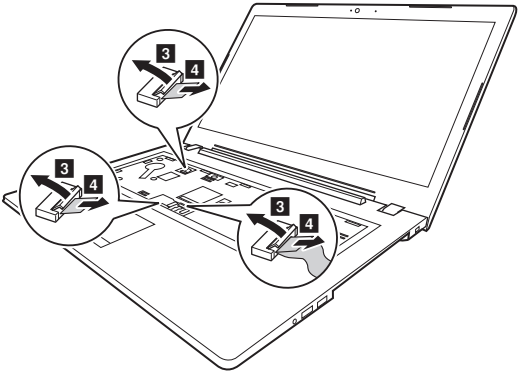

When installing: Make sure that the FPC connectors are attached firmly.

Figure 7. Removal steps of keyboard bezel (continued)

Remove the keyboard bezel in the direction shown by arrow **5**.

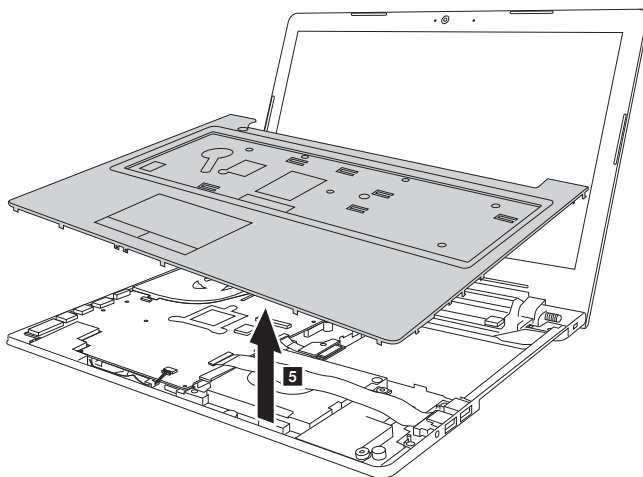

1080 System board

Important notices for handling the system board:


When handling the system board, bear the following in mind.

- Be careful not to drop the system board on a bench top that has a hard surface, such as metal, wood, or composite.
- Avoid rough handling of any kind.
- In the whole process, make sure not to drop or stack the system board.
- If you put a system board down, make sure to put it only on a padded surface such as an ESD mat or conductive corrugated material.

For access, remove these FRUs in order:

- “1010 Hard disk drive (HDD)/Memory/Mini PCI Express Card slot compartment cover” on page 34
- “1020 Hard disk drive” on page 35
- “1030 DIMM” on page 37
- “1040 PCI Express Mini Card for wireless LAN/WAN” on page 38
- “1050 Keyboard” on page 40
- “1060 Optical drive” on page 42
- “1070 Keyboard bezel” on page 43


Figure 8. Removal steps of system board
Remove screws **1** and screw **2** .

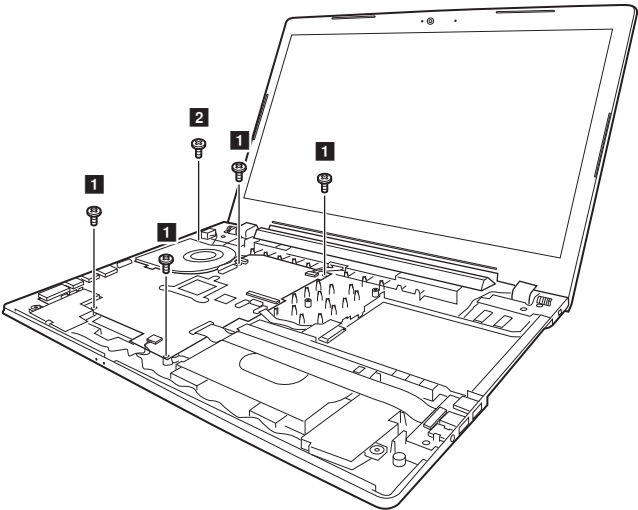

Step	Screw (quantity)	Color	Torque	PN
1	M2 × 3 mm, Phillips-head, nylok-coated (4)	Black	1.85±0.15 kgfcm	90001118
2	M2 × 6 mm, Phillips-head, nylok-coated (1)	Black	1.85±0.15 kgfcm	90205118

Figure 8. Removal steps of system board (continued)


Unplug speakers connector in the direction shown by arrow **3**, DC-IN cable connector in the direction shown by arrow **6**; detach USB board connector in the direction shown by arrow **4**, ODD transfer board connector in the direction shown by arrow **5**; disconnect LCD connector in the direction shown by arrow **7**, battery connector in the direction shown by arrow **8**.

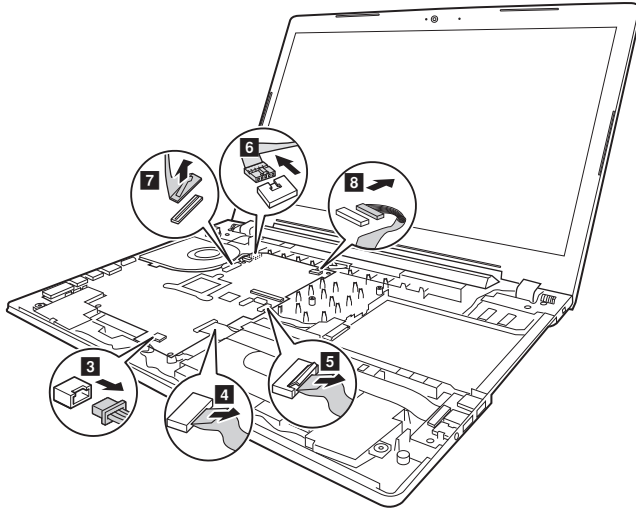

When installing: Make sure that all the connectors are attached firmly.

Figure 8. Removal steps of system board (continued)

Remove the system board in the direction shown by arrow **9**.

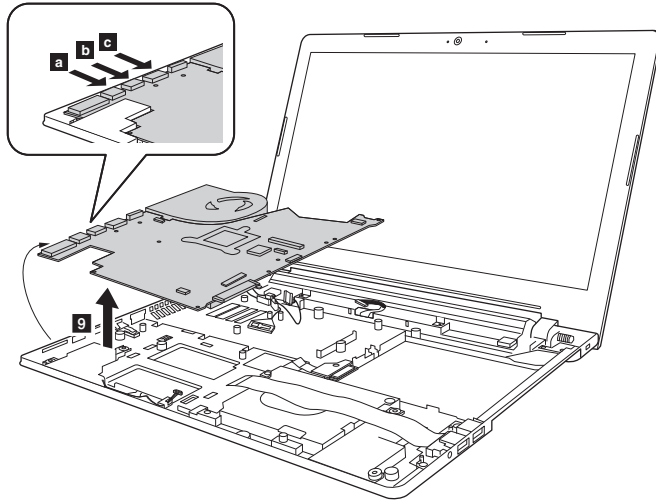

When installing: When attaching the system board to the base cover, adjust the placement of the USB, HDMI, RJ-45 ports as shown in **a b c**, and make sure that they are attached to the holes on the base cover as shown. Improper placement of those jacks might cause a damage.


1090 Fan assembly and Heat Sink assembly

For access, remove these FRUs in order:

- “1010 Hard disk drive (HDD)/Memory/Mini PCI Express Card slot compartment cover” on page 34
- “1020 Hard disk drive” on page 35
- “1030 DIMM” on page 37
- “1040 PCI Express Mini Card for wireless LAN/WAN” on page 38
- “1050 Keyboard” on page 40
- “1060 Optical drive” on page 42
- “1070 Keyboard bezel” on page 43
- “1080 System board” on page 46

Figure 9. Removal steps of fan assembly and heat sink assembly

Unplug the fan connector in the direction shown by arrow **1** and loosen screws **2** to lift the fan assembly.

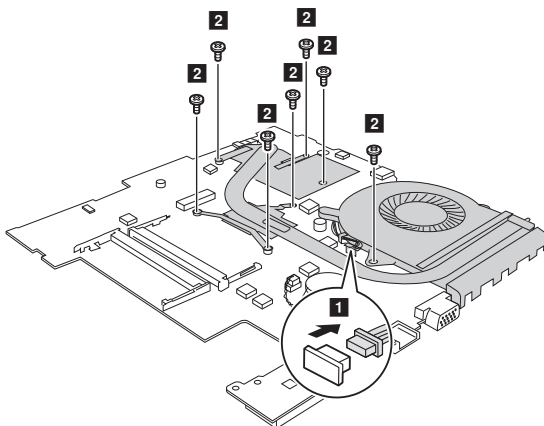

Step	Screw (quantity)	Color	Torque	PN
2	M2.0 × 3 mm, Phillips-head, nylok-coated (7)	Black	1.85±0.15 kgfcm	90001118


When installing: Make sure that the fan connector is attached firmly to the system board.

1100 LCD unit

- For access, remove these FRUs in order:
- “1010 Hard disk drive (HDD)/Memory/Mini PCI Express Card slot compartment cover” on page 34
 - “1020 Hard disk drive” on page 35
 - “1030 DIMM” on page 37
 - “1040 PCI Express Mini Card for wireless LAN/WAN” on page 38
 - “1050 Keyboard” on page 40
 - “1060 Optical drive” on page 42
 - “1070 Keyboard bezel” on page 43
 - “1080 System board” on page 46
 - “1090 Fan assembly and Heat Sink assembly” on page 50

Figure 10. Removal steps of LCD unit


Remove the four screws **1**.

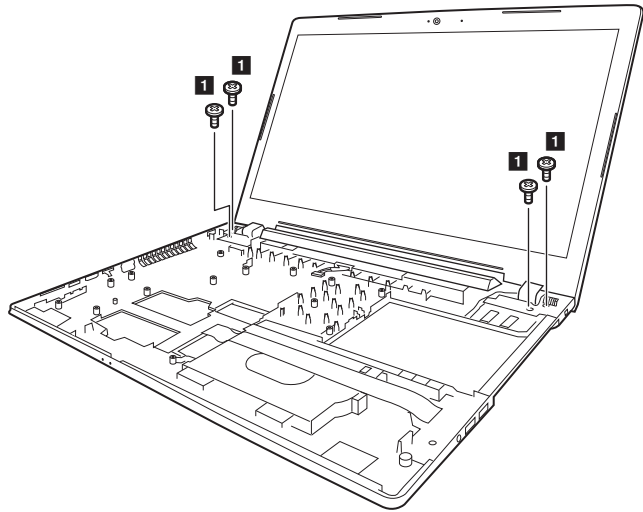

Step	Screw (quantity)	Color	Torque	PN
1	M2.5 × 5 mm, Phillips-head, nylok-coated (4)	Silver	3.0+/-0.3 kgfcm	90202001

Figure 10. Removal steps of LCD unit (continued)

Detach the LCD unit from the lower case.

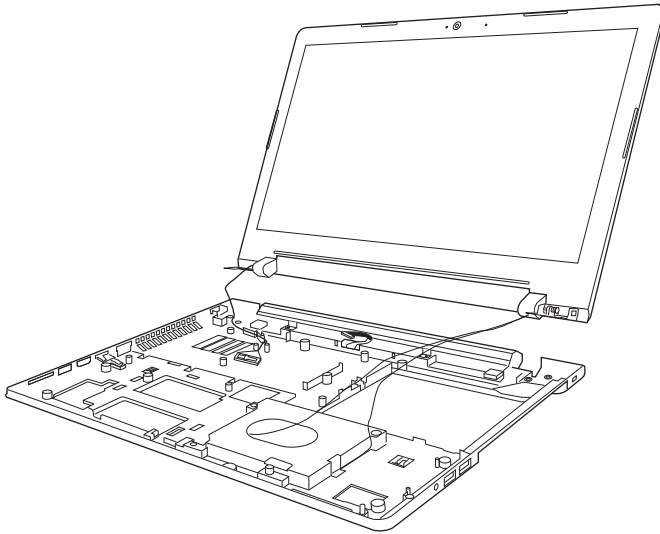

When installing:

- Route the antenna cables along the cable guides. As you route the cables, make sure that they are not subjected to any tension. Tension could cause the cables to be damaged by the cable guides, or a wire to be broken.
- Make sure that the LCD connector is attached firmly and make sure that you do not pinch the antenna cables when you attach the LCD assembly. Route the LCD cable along the cable guides.

1110 Battery pack

For access, remove these FRUs in order:


- “1010 Hard disk drive (HDD)/Memory/Mini PCI Express Card slot compartment cover” on page 34
- “1020 Hard disk drive” on page 35
- “1030 DIMM” on page 37
- “1040 PCI Express Mini Card for wireless LAN/WAN” on page 38
- “1050 Keyboard” on page 40
- “1060 Optical drive” on page 42
- “1070 Keyboard bezel” on page 43
- “1080 System board” on page 46
- “1090 Fan assembly and Heat Sink assembly” on page 50
- “1100 LCD unit” on page 51

⚠ DANGER

Only use the battery specified in the parts list for your computer. Any other battery could ignite or explode.

Figure 11. Removal steps of battery pack

Remove the screws **1**. Remove the battery pack in the direction shown by arrow **2**.

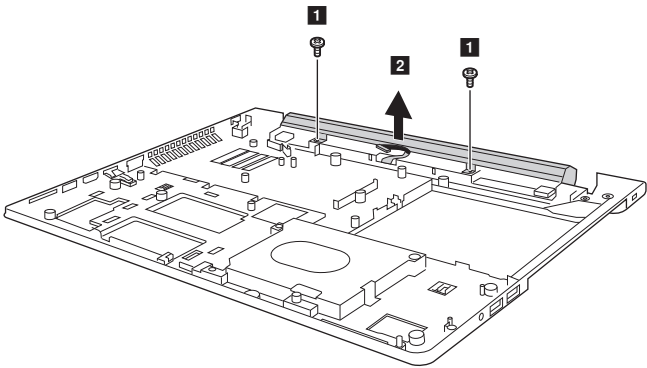

Step	Screw (quantity)	Color	Torque
1	M2 × 6 mm, Phillips-head, nylok-coated (2)	Black	1.85±0.15 kgfcm

1120 Speakers, base cover, IO board, DC-IN cable, power board and ODD transfer board

For access, remove these FRUs in order:

- “1010 Hard disk drive (HDD)/Memory/Mini PCI Express Card slot compartment cover” on page 34
- “1020 Hard disk drive” on page 35
- “1030 DIMM” on page 37
- “1040 PCI Express Mini Card for wireless LAN/WAN” on page 38
- “1050 Keyboard” on page 40
- “1060 Optical drive” on page 42
- “1070 Keyboard bezel” on page 43
- “1080 System board” on page 46
- “1090 Fan assembly and Heat Sink assembly” on page 50
- “1100 LCD unit” on page 51
- “1110 Battery pack” on page 53

Figure 12. Speakers, base cover, IO board, DC-IN cable, power board and ODD transfer board

Remove the speakers in the direction shown by arrows **1**.



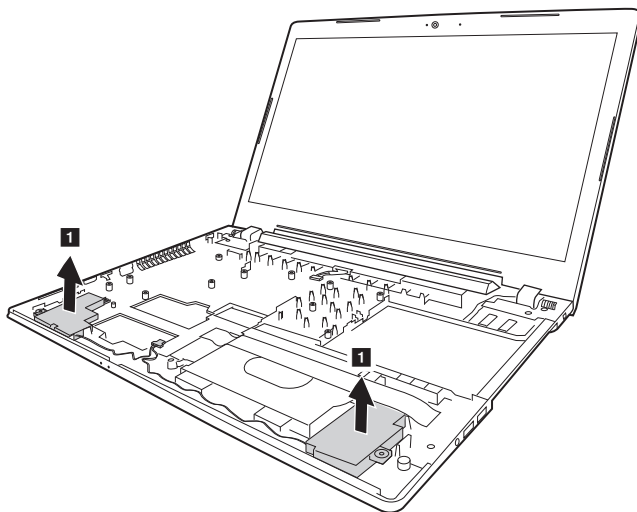


Figure 12. Speakers, base cover, IO board, DC-IN cable, power board and ODD transfer board (continued)

Remove the DC-IN cable in the direction shown by arrow **2**.

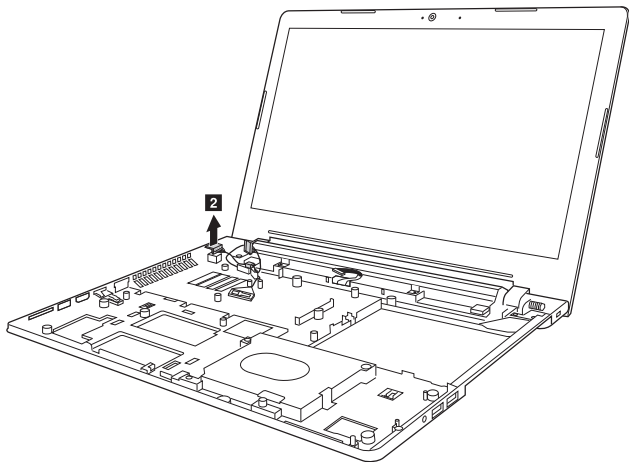


When installing: Make sure that the power connector is attached firmly.
Remove the screw **3**. Pull the IO board connector slot cover upward as shown by arrow **4**, detach the IO board cable from the keyboard connector in the direction shown by arrow **5**. Remove the IO board in the direction shown by arrow **6**.

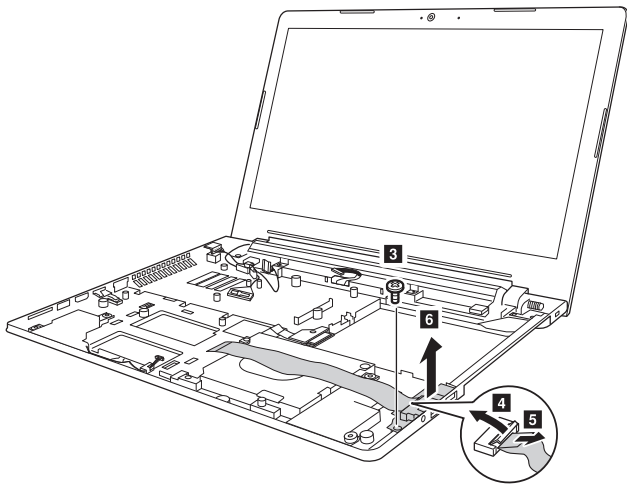

Step	Screw (quantity)	Color	Torque	PN
3	M2.0 × 3 mm, Phillips-head, nylok-coated (1)	Black	1.85+/-0.15 kgfcm	90001118


Figure 12. Speakers, base cover, IO board, DC-IN cable, power board and ODD transfer board (continued)

Remove the screw **7**, lift the power board in the direction shown by arrow **8**.

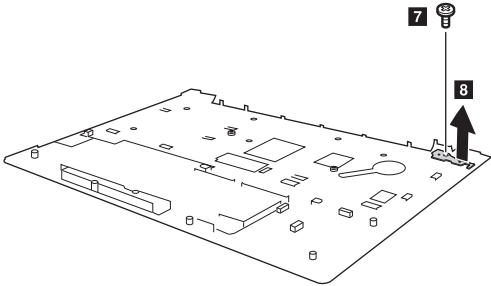

Step	Screw (quantity)	Color	Torque	PN
7	M2.0 × 3 mm, Phillips-head, nylok-coated (1)	Black	1.85+/-0.15 kgfcm	90001118


Remove screws **9**, lift the LED board in the direction shown by arrow **10**.

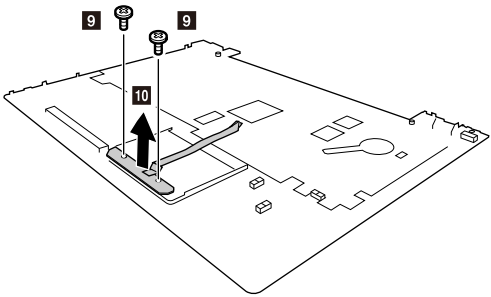

Step	Screw (quantity)	Color	Torque	PN
9	M2.0 × 3 mm, Phillips-head, nylok-coated (2)	Black	1.85+/-0.15 kgfcm	90001118

Figure 12. Speakers, base cover, IO board, DC-IN cable, power board and ODD transfer board (continued)

Remove the screw **11** to lift the ODD transfer board in the direction shown by arrow **12**.

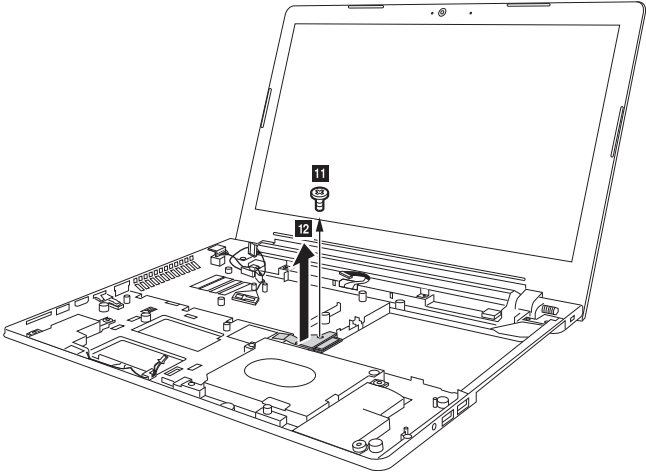

Step	Screw (quantity)	Color	Torque	PN
11	M2.0 × 3 mm, Phillips-head, nylok-coated (1)	Black	1.85+/-0.15 kgfcm	90001118


Applying labels to the base cover

The new base cover FRU is shipped with a kit containing labels of several kinds. Apply those labels when you replace the base cover. For labels which are not shipped with the new base cover, peel them from the replaced base cover and adhere them to the new one.

Note: If the Certificate of Authenticity (COA) label (b) is attached to a replaced part, return the replaced part to the customer, or provide a letter to the customer stating the original label part number, serial number, and product key.

The following letter shows the correct location of each label. Not all labels are attached on the part you are servicing.

- a** WL/BT Label
- b** KCC Label or BIS Label
- c** Indonesia label
- d** Rating label (66 × 24mm)
- e** Rating label for print (43 × 24 mm)
- f** OS label

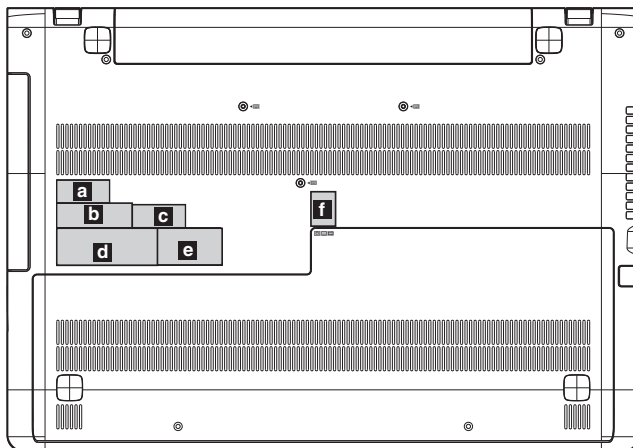


1130 LCD front bezel

For access, remove these FRUs in order:

- “1010 Hard disk drive (HDD)/Memory/Mini PCI Express Card slot compartment cover” on page 34
- “1020 Hard disk drive” on page 35
- “1030 DIMM” on page 37
- “1040 PCI Express Mini Card for wireless LAN/WAN” on page 38
- “1050 Keyboard” on page 40
- “1060 Optical drive” on page 42
- “1070 Keyboard bezel” on page 43
- “1080 System board” on page 46
- “1090 Fan assembly and Heat Sink assembly” on page 50
- “1100 LCD unit” on page 51
- “1110 Battery pack” on page 53
- “1120 Speakers, base cover, IO board, DC-IN cable, power board and ODD transfer board” on page 54

Figure 13. Removal steps of LCD front bezel

Remove the LCD front bezel in the direction by arrows **1**.

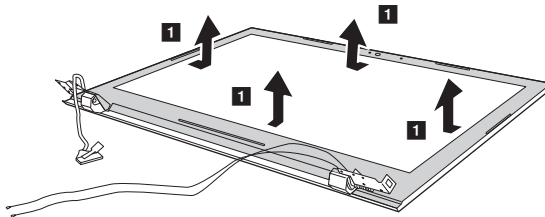


1140 LCD panel and LCD cable

For access, remove these FRUs in order:

- “1010 Hard disk drive (HDD)/Memory/Mini PCI Express Card slot compartment cover” on page 34
- “1020 Hard disk drive” on page 35
- “1030 DIMM” on page 37
- “1040 PCI Express Mini Card for wireless LAN/WAN” on page 38
- “1050 Keyboard” on page 40
- “1060 Optical drive” on page 42
- “1070 Keyboard bezel” on page 43
- “1080 System board” on page 46
- “1090 Fan assembly and Heat Sink assembly” on page 50
- “1100 LCD unit” on page 51
- “1110 Battery pack” on page 53
- “1120 Speakers, base cover, IO board, DC-IN cable, power board and ODD transfer board” on page 54
- “1130 LCD front bezel” on page 59

Figure 14. LCD panel and LCD cable


Remove four screws **1**.

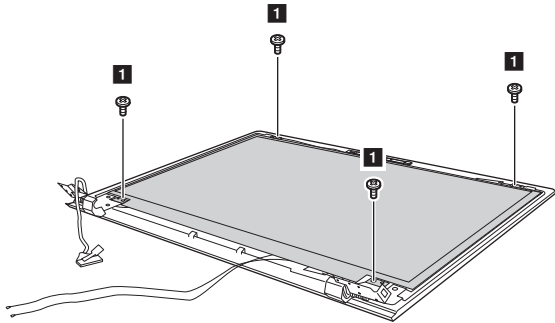

Step	Screw (quantity)	Color	Torque	PN
1	M2.0 × 4 mm, Phillips-head, nylok-coated (4)	Black	1.85 +/-0.15 kgfcm	5S10K61879

Figure 14. LCD panel and LCD cable (continued)

Turn over the LCD module in the direction as shown by arrow **2**. Disconnect the connector by arrow **3** to remove the LCD panel.

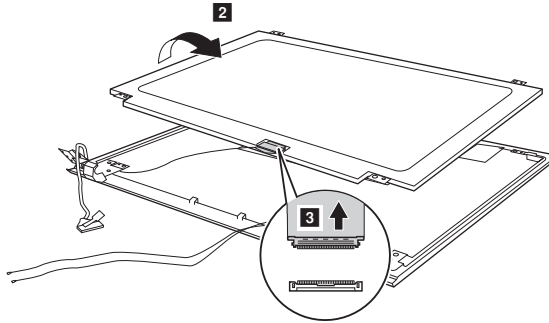

When installing: Make sure that the LCD panel connector is attached firmly.


1150 LCD hinges

For access, remove these FRUs in order:

- “1010 Hard disk drive (HDD)/Memory/Mini PCI Express Card slot compartment cover” on page 34
- “1020 Hard disk drive” on page 35
- “1030 DIMM” on page 37
- “1040 PCI Express Mini Card for wireless LAN/WAN” on page 38
- “1050 Keyboard” on page 40
- “1060 Optical drive” on page 42
- “1070 Keyboard bezel” on page 43
- “1080 System board” on page 46
- “1090 Fan assembly and Heat Sink assembly” on page 50
- “1100 LCD unit” on page 51
- “1110 Battery pack” on page 53
- “1120 Speakers, base cover, IO board, DC-IN cable, power board and ODD transfer board” on page 54
- “1130 LCD front bezel” on page 59
- “1140 LCD panel and LCD cable” on page 60

Figure 15. Removal steps of hinges

Remove screws **1**. Remove the hinges in the direction shown by arrows **2**.

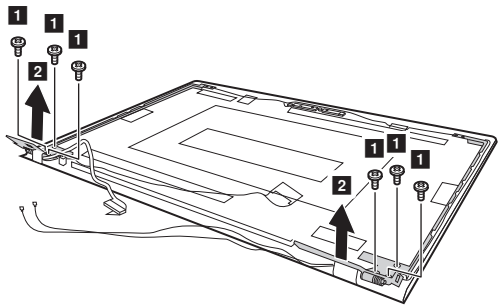

Step	Screw (quantity)	Color	Torque	PN
1	M2.5 × 4 mm , Phillips-head, nylok-coated (6)	Black	3.0±0.3 kgfcm	5S10K61904

1160 Integrated camera


For access, remove these FRUs in order:

- "1010 Hard disk drive (HDD)/Memory/Mini PCI Express Card slot compartment cover" on page 34
- "1020 Hard disk drive" on page 35
- "1030 DIMM" on page 37
- "1040 PCI Express Mini Card for wireless LAN/WAN" on page 38
- "1050 Keyboard" on page 40
- "1060 Optical drive" on page 42
- "1070 Keyboard bezel" on page 43
- "1080 System board" on page 46
- "1090 Fan assembly and Heat Sink assembly" on page 50
- "1100 LCD unit" on page 51
- "1110 Battery pack" on page 53
- "1120 Speakers, base cover, IO board, DC-IN cable, power board and ODD transfer board" on page 54
- "1130 LCD front bezel" on page 59
- "1140 LCD panel and LCD cable" on page 60
- "1150 LCD hinges" on page 62

Figure 16. Removal steps of integrated camera

Note: The integrated camera is stuck on the top center of the LCD cover.

Unplug the connector in the direction shown by arrow **1**, remove the integrated camera from the LCD cover in the direction shown by arrow **2**.

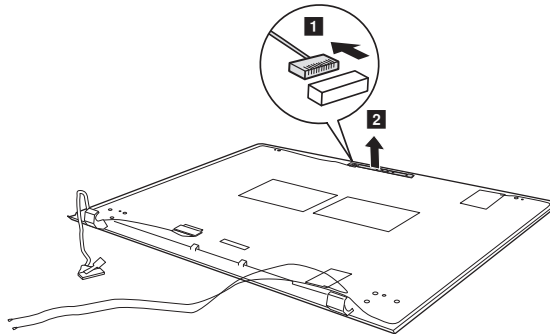

When installing: Stick the integrated camera to the top center of the LCD cover and adjust the placement of it to make sure the connector is attached firmly.


1170 Antenna assembly and LCD cover

For access, remove these FRUs in order:

- “1010 Hard disk drive (HDD)/Memory/Mini PCI Express Card slot compartment cover” on page 34
- “1020 Hard disk drive” on page 35
- “1030 DIMM” on page 37
- “1040 PCI Express Mini Card for wireless LAN/WAN” on page 38
- “1050 Keyboard” on page 40
- “1060 Optical drive” on page 42
- “1070 Keyboard bezel” on page 43
- “1080 System board” on page 46
- “1090 Fan assembly and Heat Sink assembly” on page 50
- “1100 LCD unit” on page 51
- “1110 Battery pack” on page 53
- “1120 Speakers, base cover, IO board, DC-IN cable, power board and ODD transfer board” on page 54
- “1130 LCD front bezel” on page 59
- “1140 LCD panel and LCD cable” on page 60
- “1150 LCD hinges” on page 62
- “1160 Integrated camera” on page 63

Figure 17. Removal steps of antenna assembly and LCD cover

Peel off the adhesive tape securing the antenna boards, release the cables from the cable guide, and then remove the antenna assembly in the direction shown by arrows **1**.

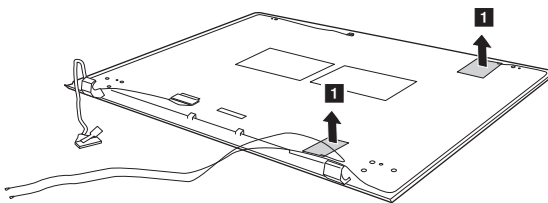


When installing: Route the antenna cables along the cable guides and secure the antenna boards with adhesive tape. As you route the cables, make sure that they are not subjected to any tension. Tension could cause the cables to be damaged by the cable guides, or a wire to be broken.

Locations


Front view

- 1** Built-in microphone
- 2** Integrated camera
- 3** Wireless LAN antennas
- 4** Computer display
- 5** Power button
- 6** Caps lock indicator
- 7** Touch pad
- 8** Numeric keypad
- 9** System status indicators

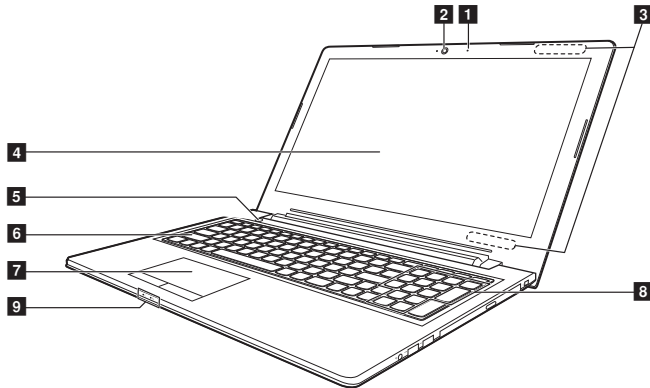


Bottom and Left-side view

- 1** AC power adapter jack
- 2** Novo button
- 3** Ventilation slots
- 4** VGA port
- 5** RJ-45 port
- 6** HDMI port
- 7** USB 3.0 port
- 8** Memory card slot
- 9** Speakers
- 10** Louvers

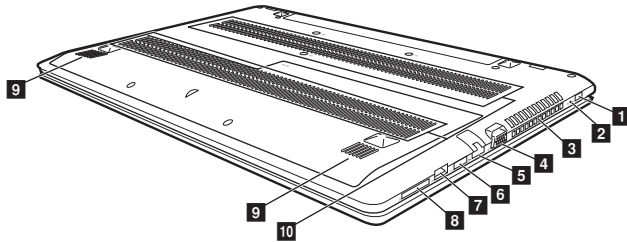

Right-side view

- 1** Combo audio jack
- 2** USB 2.0 ports
- 3** Optical drive
- 4** Kensington slot

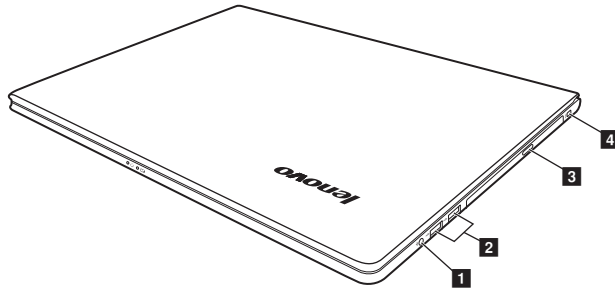

Parts list

This section presents the following service parts:

- “Overall” on page 69
- “LCD FRUs” on page 72
- “Keyboard” on page 74
- “Miscellaneous parts” on page 77
- “Screws” on page 77
- “AC adapters” on page 77
- “Power cords” on page 78

Notes:

- Each FRU is available for all types or models, unless specific types or models are specified.

Attention:

Do not attempt to replace an FRU on your own. If an FRU is damaged, contact a Lenovo authorized servicer or a marketing representative for replacement or repair. Only qualified technicians can inspect or repair this product.

Overall

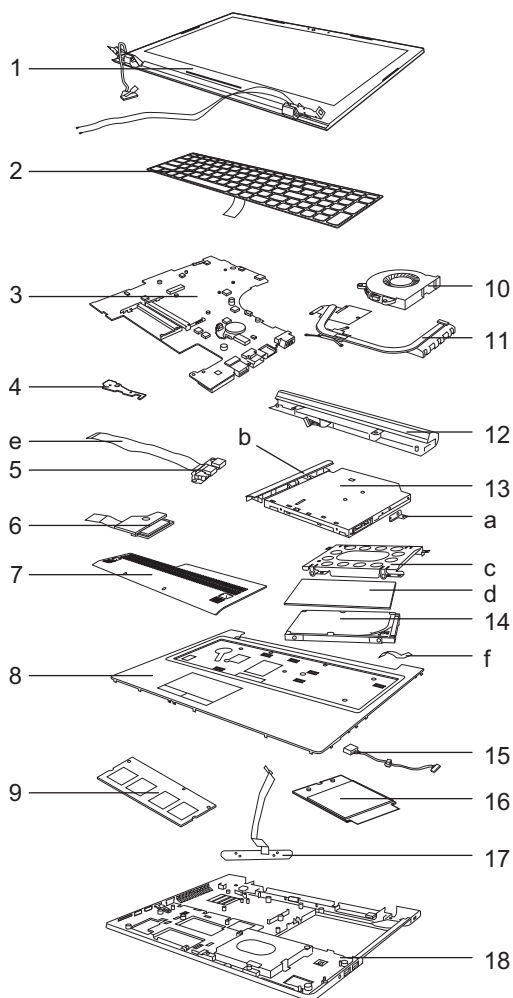


Table 5. Parts list—Overall

No.	FRU	FRU no.	CRU ID.
a-f	See “Miscellaneous parts” on page 77		
1	LCD unit (see “LCD FRUs” on page 72.)		
2	Keyboard (see “Keyboard” on page 74.)		
3	MB 3855U_V1G-PRO	5B20K81161	N
3	MB 3855U_V2G-PRO	5B20K81169	N
3	MB 3855U_UMA-PRO	5B20K81155	N
3	MB 4405U_V1G-PRO	5B20K81153	N
3	MB 4405U_V2G-PRO	5B20K81178	N
3	MB 4405U_UMA-PRO	5B20K81157	N
3	MB I3-6100U_V1G-PRO	5B20K81176	N
3	MB I3-6100U_V2G-PRO	5B20K81174	N
3	MB I3-6100U_UMA-PRO	5B20K81163	N
3	MB I5-6200U_V1G-PRO	5B20K81173	N
3	MB I5-6200U_V2G-PRO	5B20K81168	N
3	MB I5-6200U_UMA-PRO	5B20K81172	N
3	MB I7-6500U_V1G-PRO	5B20K81156	N
3	MB I7-6500U_V2G-PRO	5B20K81165	N
3	MB I7-6500U_UMA-PRO	5B20K81154	N
3	MB 3855U_V1G-BLK	5B20K81167	N
3	MB 3855U_V2G-BLK	5B20K81164	N
3	MB 3855U_UMA-BLK	5B20K81166	N
3	MB 4405U_V1G-BLK	5B20K81180	N
3	MB 4405U_V2G-BLK	5B20K81159	N
3	MB 4405U_UMA-BLK	5B20K81171	N
3	MB I3-6100U_V1G-BLK	5B20K81170	N
3	MB I3-6100U_V2G-BLK	5B20K81179	N
3	MB I3-6100U_UMA-BLK	5B20K81152	N
3	MB I5-6200U_V1G-BLK	5B20K81162	N
3	MB I5-6200U_V2G-BLK	5B20K81175	N
3	MB I5-6200U_UMA-BLK	5B20K81177	N
3	MB I7-6500U_V1G-BLK	5B20K81160	N
3	MB I7-6500U_V2G-BLK	5B20K81158	N
3	MB I7-6500U_UMA-BLK	5B20K81181	N
4	POWER BOARD	5C50K61870	N
5	USB& AUDIO BOARD	5C50K38228	N
6	ODD BOARD	5C50K61896	N
7	BIG DOOR	5CB0K61874	*
8	LOGIC UPPER ASSY	5CB0K78780	N
9	Memory, HMT451S6BFR8A-PB/RD 4GB DDR3L 1600	11202706	*
9	Memory, MT8KTF51264HZ-1G6E1 4GB DDR3L 1600	11202125	*
9	Memory, M471B5173EB0-YK0 4GB DDR3L 1600	5M30G18425	*
9	Memory, RMT3170MN68F9F-1600 4GB DDR3L 1600	5M30G75129	*
9	Memory, M471B1G73EB0-YK0 8GB DDR3L 1600	5M30G18424	*
9	Memory, HMT41GS6BFR8A-PB/RD 8GB DDR3L 1600	11202707	*
9	Memory, RMT3160ME68FAF-1600 8GB DDR3L 1600	11202450	*

Table 5. Parts list—Overall (continued)

No.	FRU	FRU no.	CRU ID.
9	Memory, MT16KTF1G64HZ-1G6E1 8GB DDR3L 1600	11201304	*
10	FAN	5F10K42885	N
11	THERMAL MODULE DIS	5H40K42887	N
11	THERMAL MODULE UMA	5H40K42886	N
12	Battery, SA L15S4E01 14.4V41Wh4cell	5B10H71979	N
12	Battery, SP/L L15M4E01 14.6V41Wh4cell bty	5B10H70338	N
12	Battery, LG L15L4E01 14.6V41Wh4cell bty	5B10H70340	N
13	ODD, HLDS GUE0N 9.0mm internal DVD Rambo ODD	5DX0J46488	**
13	ODD, PLDS DA-8A6SH 9.0mm Slim Tray Rambo ODD	5DX0F86404	**
13	ODD, PSN UJ8HC 9.0mm Slim Tray Rambo ODD	5DX0G86787	**
13	ODD, Dummy ODD	SM20G41593	**
14	HDD, ST500LT012 6G 7mm 5.4K 500G HDD	16200383	*
14	HDD, WD WD5000LPCX-24VHAT0	5H20J35762	*
14	HDD, MQ01ABF050 6G 7mm 5.4K 500G HDD	16200433	*
14	HDD, HTS545050A7E660 6G 7mm 5.4K 500G HDD	5H20H14223	*
14	HDD, ST1000LM024 6G 9.5mm 5.4K 1T HDD	16200385	*
14	HDD, WD10JPCX-24UE4T0 6G 9.5mm 5.4K 1T HDD	16200393	*
14	HDD, TSB MQ01ABD100 6G 9.5mm 5.4K 1T HDD	16200429	*
14	HDD, HTS541010A9E660 6G 9.5mm 5.4K 1T HDD	16200400	*
14	HDD, ST500LM000 7mm 500G+8G	5H20H24608	*
14	HDD, Toshiba MQ02ABF050H 7mm 5.4k 500GB+8GB SSHD	5H20H12631	*
14	HDD, ST1000LM014 9.5mm 1T+8G	5H20H24607	*
14	HDD, Toshiba MQ02ABD100H 9.5mm 5.4k 1TB+8GB SSHD	5H20H12632	*
14	SSD, Samsung MZYLFI128HCHP 2.5" 5mm 128GB SSD	5SD0H45117	*
15	DC-IN CABLE	90205112	N
16	WirelessLan_Non_Intel, Cbt BCM43162 1x1AC+BT4.0 PCIE M.2 WLAN V2	SW10A11586	*
16	WirelessLan_Non_Intel, Ltn NFA435 1x1AC+BT4.0 PCIE M.2 WLAN	SW10A11641	*
16	WirelessLan_Non_Intel, Cbt RTL8821AE 1x1AC+BT4.0 PCIE M.2 WLAN	SW10A11648	*
16	WirelessLan_Intel, Intel 3165 1x1AC+BT PCIE M.2 WLAN	SW10H24486	*
17	LED BOARD	5C50K61866	N
18	LOGIC LOWER	5CB0K61900	N
--	AC adapter "AC adapters" on page 77		

LCD FRUs

In Lenovo B71-80, there are following types of LCDs.

- “17.3-in. HD LED”

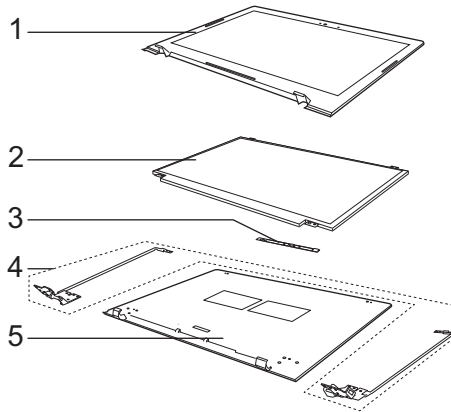


Table 6. Parts list—LCD FRUs

No.	FRU	FRU no.	CRU ID.
1	LCD BEZEL	5CB0K78781	N
2	panel, AU B173RTN02.1 1A HD+T AG F NB	5D10J46203	N
2	panel, SD LTN173KT04-401 HD+T AG F NB	5D10J46204	N
2	panel, BO NT173WDM-N21 HD+T AG F NB	5D10J46202	N
3	CAMERA 0.3M	5C20K27045	N
3	CAMERA HD	5C20K27042	N
4	HINGE L+R	5H50K61907	N
5	LCD COVER ASSY	5CB0K78779	N

Keyboard

Table 7. Parts list—Keyboard

Language		P/N	CRU ID.
Chicony	English	25214725	**
	U.K. English	25214726	**
	Italian	25214727	**
	Spanish	25214728	**
	Turkish	25214729	**
	Thai	25214730	**
	Portuguese	25214731	**
	Latin	25214732	**
	Canadian English&French	25214733	**
	Korean	25214734	**
	Traditional Chinese	25214735	**
	Russian	25214736	**
	Japanese	25214741	**
	French	25214737	**
	German	25214738	**
	Arabic	25214739	**
	Brazilian	25214740	**
	Dutch	25214742	**
	Greek	25214743	**
	Hebrew	25214744	**
	Hungarian	25214745	**
	Four Nordic countries	25214746	**
	Belgian	25214747	**
	Icelandic	25214748	**
	Slovenian	25214749	**
	Swiss	25214750	**
	International English	25214751	**
	Czechoslovakian	25214752	**
	Bulgarian	25214753	**
	Indian	25214754	**
	French-Arabic	5N20G90531	**
Sunrex	English	25214755	**
	U.K. English	25214756	**
	Italian	25214757	**
	Spanish	25214758	**
	Turkish	25214759	**
	Thai	25214760	**
	Portuguese	25214761	**
	Latin	25214762	**
	Canadian English&French	25214763	**
	Korean	25214764	**
	Traditional Chinese	25214765	**
	Russian	25214766	**
	French	25214767	**

Table 7. Parts list—Keyboard (continued)

Language		P/N	CRU ID.
Sunrex	German	25214768	**
	Arabic	25214769	**
	Brazilian	25214770	**
	Japanese	25214771	**
	Dutch	25214772	**
	Greek	25214773	**
	Hebrew	25214774	**
	Hungarian	25214775	**
	Four Nordic countries	25214776	**
	Belgian	25214777	**
	Icelandic	25214778	**
	Slovenian	25214779	**
	Swiss	25214780	**
	International English	25214781	**
	Czechoslovakian	25214782	**
	Bulgarian	25214783	**
Darfon	Indian	25214784	**
	French-Arabic	5N20G90525	**
	English	25214785	**
	U.K. English	25214786	**
	Italian	25214787	**
	Spanish	25214788	**
	Turkish	25214789	**
	Thai	25214790	**
	Portuguese	25214791	**
	Latin	25214792	**
	Canadian English&French	25214793	**
	Korean	25214794	**
	Traditional Chinese	25214795	**
	Russian	25214796	**
	French	25214797	**
	German	25214798	**
	Arabic	25214799	**
	Brazilian	25214800	**
	Japanese	25214801	**
	Dutch	25214802	**
	Greek	25214803	**
	Hebrew	25214804	**
	Hungarian	25214805	**
	Four Nordic countries	25214806	**
	Belgian	25214807	**
	Icelandic	25214808	**
	Slovenian	25214809	**
	Swiss	25214810	**
	International English	25214811	**

Table 7. Parts list—Keyboard (continued)

Language		P/N	CRU ID.
Darfon	Czechoslovakian	25214812	**
	Bulgarian	25214813	**
	Indian	25214814	**
	French-Arabic	5N20G90518	**

Miscellaneous parts

Table 8. Parts list—Miscellaneous parts

FRU	P/N	CRU ID.
System miscellaneous parts:		
• (a) ODD BRACKET	5B40K14005	N
• (b) ODD BEZEL	5B30K14037	N
• (c) HDD BRACKET	5B40K14016	N
• (d) HDD SPONGE KIT 7MM	5T10K14056	N
Cable miscellaneous parts:		
• (e) USB FFC	5C10K61876	N
• (f) HDD FFC	5C10K61865	N
Note: Italicized letters in parentheses are references to the exploded view in “Overall” on page 69.		

Screws

Table 9. Parts list—Screws

FRU	P/N	CRU ID.
SCREW M M 2.0D 4L K 5.0D NI NL +	5S10K61879	N
SCREW M M 2.5D 4L K 4.5D 0.8T BNI NL +	5S10K61904	N
SCREW M M 2.5D 7.0L K 4.5D 0.8T ZK NL +	5S10K61894	N
SCREW 2D 3L K 4.5D ZK NL +CR3+0.4T	90001118	N
SCREW MM 2D 6L K 4.6D 0.8T ZK+	90205118	N
SCREW M M 3.0D 3.0L K 4.0D 0.4T	90204955	N
SCREW M M 2.5D 5.0L K 4.6D NI NL+	90202001	N

AC adapters

Table 10. Parts list—AC adapters

FRU	P/N	CRU ID.
ADAPTER DOE 45W 3PIN-CCY	5A10H03912	*
ADAPTER DOE 45W 3PIN-LTON	5A10H03910	*
ADAPTER DOE 45W 3PIN-DLT	5A10H03911	*
ADAPTER BIS 65W 3 PIN-DLT	5A10J46692	*
ADAPTER BIS 65W 3 PIN-LTON	5A10J75114	*
ADAPTER BIS 65W 3 PIN-CCY	5A10J75111	*

Power cords

A Lenovo power cord for a specific country or region is usually available only in that country or region:

Table 11. Parts list—Power cords

Region	P/N	CRU ID.
CCC 3PIN • LINETEK PC323+RVV300/300+LS15 1m	145000600	*
Argentina 3PIN • LINETEK LS15+H03VV-F+LP39 1m	145000599	*
Danmark 3PIN • LINETEK LS15+H03VV-F+LP-38 1m	145000598	*
Switzerland 3PIN • LINETEK LS15+H03VV-F+LP-37 1m	145000597	*
Brazil 3PIN • LINETEK LS15 H03VV-F LP26A 1m	145000596	*
Israel 3PIN • LINETEK LS15+H03VV-F+LP-41 1m	145000595	*
UL 3PIN • LINETEK LP-30B + SPT-2 + LS15 1m	145000594	*
UK 3PIN • LINETEK LP-61L+ H03VV-F+ LS15 1m	145000593	*
Indian 3PIN • LINETEK PE-361+ H05VV-F+ LS15 1m	145000592	*
Italy 3PIN • LINETEK LS15+H03VV-F+PE-336 1m	145000591	*
Korea 3PIN • LINETEK LS15+H05VV-F+LP-E04A 1m	145000590	*
Australia 3PIN • LINETEK LS15+H03VV-F+LP-23A 1m	145000589	*
Taiwan3PIN • LINETEK LS15+VCTF+LP-53 1m	145000588	*
Japan 3PIN • LINETEK LS15+VCTF+LP-54 1m	145000587	*
Africa 3PIN • LINETEK LS15+H03VV-F+PE-364 1m	145000586	*
CE 3PIN • LINETEK LP-34+H03VV-F + LS15 1m	145000585	*
CCC 3PIN • Longwell LSG-31+RVV300/300+LS-18 1m	145000568	*
Argentina 3PIN • Longwell LP-24+H03VV-F+LS-18 1m	145000567	*
Danmark 3PIN • Longwell LP-40+H03VV-F+LS-18 1m	145000566	*
Switzerland 3PIN • Longwell LP-37+H03VV-F+LS-18 1m	145000565	*
Brazil 3PIN • Longwell LP-46+H03VV-F+LS-18 1m	145000564	*
Israel 3PIN • Longwell LP-41+H03VV-F+LS-18 1m	145000563	*
UL 3PIN • Longwell LP-30B+SPT-2 18AWG+LS-18 1m	145000562	*

Table 11. Parts list—Power cords (continued)

Region	P/N	CRU ID.
UK 3PIN • Longwell LP-61L+H03VV-F+LS-18 1m	145000561	*
Indian 3PIN • Longwell LP-67+BIS+LS-18 1m	145000560	*
Italy 3PIN • Longwell LP-22+H03VV-F+LS-18 1m	145000559	*
Korea 3PIN • Longwell LP-486+KTLH03VV-F+LS-5 1m	145000558	*
Australia 3PIN • Longwell LP-23A+LFC-3R+LS-18 1m	145000557	*
Taiwan 3PIN • Longwell LP-71+VCTF+LS-33 1m	145000556	*
Japan 3PIN • Longwell LP-54+VCTF+LS-18 1m	145000555	*
Africa 3PIN • Longwell LP-39+H03VV-F+LS-18 1m	145000554	*
CE 3PIN • Longwell LP-34A+H03VV-F+LS-18 1m	145000553	*
CCC 3PIN • VOLEX GB10S3+RVV 300/500+VAC5S 1m	145000538	*
UL 3PIN • Volex US15S3+SPT-2 +VAC5S 1m	145000537	*
UK 3PIN • VOLEX MP5004+H03VV-F+VAC5S 1m	145000605	*
Switzerland 3PIN • VOLEX MP232+H03VV-F+VAC5S 1m	145000524	*
Italy 3PIN • VOLEX IT10S3+H03VV-F+VAC5S 1m	145000535	*
Denmark 3PIN • VOLEX MP233D+H03VV-F+VAC5S 1m	145000534	*
Korea 3PIN • VOLEX M2511+KETI IEC+VAC5S 1m	145000533	*
Australia 3PIN • VOLEX AU10S3+H03VV-F+VAC5S 1m	145000532	*
Taiwan 3PIN • VOLEX TW15CS3+VCTF+VAC5S 1m	145000531	*
Japan 3PIN • VOLEX VAC5S+VCTF+M755 1m	145000530	*
Argentina 3PIN • VOLEX VA2073+H03VV-F+VAC5S 1m	145000528	*
Brazil 3PIN • VOLEX CH10S3+H03VV-F+VAC5S 1m	145000527	*
Israel 3PIN • VOLEX SI16S3+H03VV-F+VAC5S 1m	145000526	*
CE 3PIN • VOLEX M2511+H03VV-F+VAC5S 1m	145000525	*
UK • lux 0031+H03VV-F 0.75/3C+0011 1m	145500000	*
Europe • lux 0033+H03VV-F 0.75/3C+0011 1m	145500001	*

Table 11. Parts list—Power cords (continued)

Region	P/N	CRU ID.
US • lux 0014+SPT-2 60°C 18/3C+0016 1m	145500002	*
China • lux 0036+RVV 300/300 0.75/3C+0002 1m	145500003	*
Indian • lux 0046+IS694 0.75/3C+0011 1m	145500004	*
Japan • lux 0018(E)+VCTF 0.75/3C+0021 1m	145500005	*
Australia • lux 0038+H03VV-F 0.75/3C+0011 1m	145500006	*
Taiwan • lux 0019+VCTF 0.75/3C+0021 1m	145500007	*
Korea • lux 0033+H03VV-F 0.75/3C+0011 1m	145500008	*
Italy • lux 0029+H03VV-F 0.75/3C+0011 1m	145500009	*
South Africa • lux 0044+H03VV-F 0.75/3C+0011 1m	145500010	*
Brazil • lux 0034+H03VV-F 0.75/3C+0011 1m	145500011	*
Israel • lux 0041+H03VV-F 0.75/3C+0011 1m	145500012	*
Switzerland • lux 0027+H03VV-F 0.75/3C+0011 1m	145500013	*
Denmark • lux 0048+H03VV-F 0.75/3C+0011 1m	145500014	*
Thailand • lux 0014+H03VV-F 0.75/3C+0011 1m	5L60J33143	*
Argentina • lux 0040+H03VV-F 0.75/3C+0011 1m	145500015	*

Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area. Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service.

Lenovo may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents.

LENOVO GROUP LTD. PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Lenovo may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary.

Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk.

Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

Trademarks

The following terms are trademarks or registered trademarks of Lenovo in the United States, other countries, or both.

Lenovo
OneKey

Microsoft and Windows are trademarks of Microsoft Corporation in the United States, other countries, or both.

Other company, products, or service names may be trademarks or service marks of others.