



Hardware Maintenance Manual

Lenovo V580 and V580c

Note: Before using this information and the product it supports, be sure to read the general information under Appendix A “Notices” on page 105.

Fourth Edition (April 2013)

© Copyright Lenovo 2012.

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant a General Services Administration “GSA” contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

Contents

About this manual.	iii	Chapter 7. Removing and replacing a FRU	45
Chapter 1. Safety information.	1	General guidelines	45
General safety	1	1010 Battery pack	46
Electrical safety	2	1020 Bottom slot cover	46
Safety inspection guide	3	1030 Optical drive or blank bezel	47
Handling devices that are sensitive to electrostatic discharge.	3	1040 Memory modules	49
Grounding requirements	4	1050 Hard disk drive assembly	50
Safety notices (multilingual translations).	4	1060 PCI Express Mini Card for wireless LAN	52
Laser compliance statement (multilingual translations).	19	1070 mSATA solid-state drive	54
Chapter 2. Important service information	27	1080 Backup battery	55
Strategy for replacing FRUs	27	1090 Keyboard	56
Strategy for replacing a hard disk drive	28	1100 Keyboard bezel	58
Important notice for replacing a system board	28	1110 Fingerprint bracket and fingerprint board	61
Important information about replacing RoHS compliant FRUs	28	1120 LED board	61
Chapter 3. General checkout	29	1130 Touch pad bracket	63
What to do first	29	1140 Power board	65
Power system checkout	30	1150 Microphone assembly	66
Checking the ac power adapter	30	1160 I/O board	67
Checking operational charging	31	1170 USB board	67
Checking the battery pack	31	1180 DC-in connector.	68
Chapter 4. Related service information	33	1190 System board assembly.	69
Recovering the computer settings	33	1200 Thermal fan assembly	72
Passwords	33	1210 Microprocessor	74
Power-on password.	34	1220 LCD unit	75
Supervisor password	34	1230 Speaker assembly and base cover	77
Power management	34	2010 LCD front bezel	80
Screen blank mode	34	2020 Integrated camera	81
Sleep mode	34	2030 LCD panel, LCD cable, and hinges	81
Hibernation mode	35	2040 Antenna assembly and LCD rear cover	83
Chapter 5. Lenovo V580 and V580c	37	Chapter 8. Locations	85
Specifications	37	Front view	85
Status indicators	38	Bottom view	87
Fn key combinations	41	Chapter 9. Parts list	89
Chapter 6. FRU replacement notices	43	Overall	89
Screw notices	43	LCD FRUs	96
		Keyboard.	98
		Miscellaneous parts	99
		ac power adapters	100
		Power cords	101
		Appendix A. Notices.	105
		Electronic emissions notices	106
		Trademarks	106

About this manual

This manual provides service and reference information for the following Lenovo® products.

Machine	Machine type (MT)
Lenovo V580	4738, 20147
Lenovo V580c	4980, 20160

Use this manual to troubleshoot problems.

The manual is divided into the following sections:

- The common sections provide general information, guidelines, and safety information required for servicing computers.
- The product-specific sections include service, reference, and product-specific parts information.

Important:

- This manual is intended only for trained service technicians who are familiar with Lenovo products. Use this manual to troubleshoot problems effectively.
- Before servicing a Lenovo product, be sure to read all the information under Chapter 1 “Safety information” on page 1 and Chapter 2 “Important service information” on page 27.

Chapter 1. Safety information

This chapter presents following safety information that you need to be familiar with before you service a Lenovo Notebook.

- “General safety” on page 1
- “Electrical safety” on page 2
- “Safety inspection guide” on page 3
- “Handling devices that are sensitive to electrostatic discharge” on page 3
- “Grounding requirements” on page 4
- “Safety notices (multilingual translations)” on page 4
- “Laser compliance statement (multilingual translations)” on page 19

General safety

Follow these rules to ensure general safety:

- Observe good housekeeping in the area of the machines during and after maintenance.
- When lifting any heavy object:
 1. Make sure that you can stand safely without slipping.
 2. Distribute the weight of the object equally between your feet.
 3. Use a slow lifting force. Never move suddenly or twist when you attempt to lift.
 4. Lift by standing or by pushing up with your leg muscles; this action removes the strain from the muscles in your back. Do not attempt to lift any object that weighs more than 16 kg (35 lb) or that you think is too heavy for you.
- Do not perform any action that causes hazards to the customer, or that makes the equipment unsafe.
- Before you start the machine, make sure that other service technicians and the customer's personnel are not in a hazardous position.
- Place removed covers and other parts in a safe place, away from all personnel, while you are servicing the machine.
- Keep your toolcase away from walk areas so that other people will not trip over it.
- Do not wear loose clothing that can be trapped in the moving parts of a machine. Make sure that your sleeves are fastened or rolled up above your elbows. If your hair is long, fasten it.
- Insert the ends of your necktie or scarf inside clothing or fasten it with a nonconductive clip, about 8 centimeters (3 inches) from the end.
- Do not wear jewelry, chains, metal-frame eyeglasses, or metal fasteners for your clothing, because metal objects are good electrical conductors.
- Wear safety glasses when you are hammering, drilling, soldering, cutting wire, attaching springs, using solvents, or working in any other conditions that might be hazardous to your eyes.
- After service, reinstall all safety shields, guards, labels, and ground wires. Replace any safety device that is worn or defective.
- Reinstall all covers correctly before returning the machine to the customer.
- Fan louvers on the machine help to prevent overheating of internal components. Do not obstruct fan louvers or cover them with labels or stickers.

Electrical safety

Observe the following rules when working on electrical equipment.

Important:

Use only approved tools and test equipment. Some hand tools have handles covered with a soft material that does not insulate you when working with live electrical currents.

Many customers have, near their equipment, rubber floor mats that contain small conductive fibers to decrease electrostatic discharges. Do not use this type of mat to protect yourself from electrical shock.

- Find the room emergency power-off (EPO) switch, disconnecting switch, or electrical outlet. If an electrical accident occurs, you can then operate the switch or unplug the power cord quickly.
- Do not work alone under hazardous conditions or near equipment that has hazardous voltages.
- Disconnect all power before:
 - Performing a mechanical inspection
 - Working near power supplies
 - Removing or installing main units
- Before you start to work on the machine, unplug the power cord. If you cannot unplug it, ask the customer to power-off the wall box that supplies power to the machine, and to lock the wall box in the off position.
- If you need to work on a machine that has *exposed* electrical circuits, observe the following precautions:
 - Ensure that another person, familiar with the power-off controls, is near you.

Attention: Another person must be there to switch off the power, if necessary.

- Use only one hand when working with powered-on electrical equipment; keep the other hand in your pocket or behind your back.

Attention: An electrical shock can occur only when there is a complete circuit. By observing the above rule, you may prevent a current from passing through your body.

- When using testers, set the controls correctly and use the approved probe leads and accessories for that tester.
- Stand on suitable rubber mats (obtained locally, if necessary) to insulate you from grounds such as metal floor strips and machine frames.

Observe the special safety precautions when you work with very high voltages; Instructions for these precautions are in the safety sections of maintenance information. Use extreme care when measuring high voltages.

- Regularly inspect and maintain your electrical hand tools for safe operational condition.
- Do not use worn or broken tools and testers.
- *Never assume* that power has been disconnected from a circuit. First, *check* that it has been powered off.
- Always look carefully for possible hazards in your work area. Examples of these hazards are moist floors, nongrounded power extension cables, power surges, and missing safety grounds.
- Do not touch live electrical circuits with the reflective surface of a plastic dental mirror. The surface is conductive; such touching can cause personal injury and machine damage.
- Do not service the following parts *with the power on* when they are removed from their normal operating places in a machine:
 - Power supply units
 - Pumps
 - Blowers and fans
 - Motor generators
 - Similar units to listed above

This practice ensures correct grounding of the units.

- If an electrical accident occurs:

- Use caution; do not become a victim yourself.
- Switch off power.
- Send another person to get medical aid.

Safety inspection guide

The purpose of this inspection guide is to assist you in identifying potentially unsafe conditions. As each machine was designed and built, required safety items were installed to protect users and service technicians from injury. This guide addresses only those items. You should use good judgment to identify potential safety hazards due to attachment of non-Lenovo features or options not covered by this inspection guide.

If any unsafe conditions are present, you must determine how serious the apparent hazard could be and whether you can continue without first correcting the problem.

Consider these conditions and the safety hazards they present:

- Electrical hazards, especially primary power (primary voltage on the frame can cause serious or fatal electrical shock)
- Explosive hazards, such as a damaged CRT face or a bulging capacitor
- Mechanical hazards, such as loose or missing hardware

To determine whether there are any potentially unsafe conditions, use the following checklist at the beginning of every service task. Begin the checks with the power off, and the power cord disconnected.

Checklist:

1. Check exterior covers for damage (loose, broken, or sharp edges).
2. Power off the computer. Disconnect the power cord.
3. Check the power cord for:
 - a. A third-wire ground connector in good condition. Use a meter to measure third-wire ground continuity for 0.1 ohm or less between the external ground pin and the frame ground.
 - b. The power cord should be the type specified in the parts list.
 - c. Insulation must not be frayed or worn.
4. Check for cracked or bulging batteries.
5. Remove the cover.
6. Check for any obvious non-Lenovo alterations. Use good judgment as to the safety of any non-Lenovo alterations.
7. Check inside the unit for any obvious unsafe conditions, such as metal filings, contamination, water or other liquids, or signs of fire or smoke damage.
8. Check for worn, frayed, or pinched cables.
9. Check that the power-supply cover fasteners (screws or rivets) have not been removed or tampered with.

Handling devices that are sensitive to electrostatic discharge

Any computer part containing transistors or integrated circuits (ICs) should be considered sensitive to electrostatic discharge (ESD.) ESD damage can occur when there is a difference in charge between objects. Protect against ESD damage by equalizing the charge so that the machine, the part, the work mat, and the person handling the part are all at the same charge.

Notes:

1. Use product-specific ESD procedures when they exceed the requirements noted here.

2. Make sure that the ESD protective devices you use have been certified (ISO 9000) as fully effective.

When handling ESD-sensitive parts:

- Keep the parts in protective packages until they are inserted into the product.
- Avoid contact with other people.
- Wear a grounded wrist strap against your skin to eliminate static on your body.
- Prevent the part from touching your clothing. Most clothing is insulative and retains a charge even when you are wearing a wrist strap.
- Use a grounded work mat to provide a static-free work surface. The mat is especially useful when handling ESD-sensitive devices.
- Select a grounding system, such as those listed below, to provide protection that meets the specific service requirement.

Note: The use of a grounding system to guard against ESD damage is desirable but not necessary.

- Attach the ESD ground clip to any frame ground, ground braid, or green-wire ground.
- When working on a double-insulated or battery-operated system, use an ESD common ground or reference point. You can use coax or connector-outside shells on these systems.
- Use the round ground prong of the ac plug on ac-operated computers.

Grounding requirements

Electrical grounding of the computer is required for operator safety and correct system function. Proper grounding of the electrical outlet can be verified by a certified electrician.

Safety notices (multilingual translations)

The safety notices in this section are provided in the following languages:

- English
- Arabic
- Brazilian Portuguese
- French
- German
- Hebrew
- Japanese
- Korean
- Spanish
- Traditional Chinese



DANGER

Before the computer is powered on after FRU replacement, make sure that all screws, springs, and other small parts are in place and are not left loose inside the computer. Verify this by shaking the computer and listening for rattling sounds. Metallic parts or metal flakes can cause electrical short circuits.



DANGER

Some standby batteries contain a small amount of nickel and cadmium. Do not disassemble a standby battery, recharge it, throw it into fire or water, or short-circuit it. Dispose of the battery as required by local ordinances or regulations. Use only the battery in the appropriate parts listing. Use of an incorrect battery can result in ignition or explosion of the battery.



DANGER

The battery pack contains small amounts of nickel. Do not disassemble it, throw it into fire or water, or short-circuit it. Dispose of the battery pack as required by local ordinances or regulations. Use only the battery in the appropriate parts listing when replacing the battery pack. Use of an incorrect battery can result in ignition or explosion of the battery.



DANGER

The lithium battery can cause a fire, an explosion, or a severe burn. Do not recharge it, remove its polarized connector, disassemble it, heat it above 100°C (212°F), incinerate it, or expose its cell contents to water. Dispose of the battery as required by local ordinances or regulations. Use only the battery in the appropriate parts listing. Use of an incorrect battery can result in ignition or explosion of the battery.



DANGER

If the LCD breaks and the fluid from inside the LCD gets into your eyes or on your hands, immediately wash the affected areas with water for at least 15 minutes. Seek medical care if any symptoms from the fluid are present after washing.



DANGER

To avoid shock, do not remove the plastic cover that protects the lower part of the inverter card.



DANGER

Though the main batteries have low voltage, a short-circuited or grounded battery can produce enough current to burn personnel or combustible materials.



DANGER

Unless hot swap is allowed for the FRU being replaced, do as follows before removing it: power off the computer, unplug all power cords from electrical outlets, remove the battery pack, and disconnect any interconnecting cables.



قبل اعادة تشغيل الحاسب بعد الانتهاء من استبدال FRU، تأكد من أنه قد تم اعادة كل من المسامير و السوست وكل الأجزاء الصغيرة الأخرى في أماكنهم ولم يتم فقدهم داخل الحاسب. ويمكن التحقق من ذلك عن طريق هز الحاسب والاستماع لأي صوت صاخب يصدر منه. قد تؤدي الأجزاء أو الرقائق المعدنية الى حدوث دائرة قصر.



تحتوي بعض البطاريات الاحتياطية على كمية صغيرة من مادتي النيكل والكادميوم. لا تقم بفك أو اعادة شحن البطارية الاحتياطية ولا تقم أيضا بالقائها في النار أو الماء ولا تتسبب في احدث دائرة قصر بها. قم بالتخلص من البطارية كما هو موضح في القوانين المحلية. استخدم نوع البطارية المحدد والذي يوصى باستخدامه. حيث أنه قد يؤدي استخدام نوع بطارية غير صحيح الى اشتعالها أو انفجارها.



تحتوي حزمة البطارية على كمية صغيرة من مادة النيكل. لا تقم بفكها أو القاءها في النار أو الماء ولا تتسبب في احدث دائرة قصر بها. تخلص من حزمة البطارية وفقا لما هو موضح في القوانين المحلية. قم، عند استبدال حزمة البطارية، باستخدام الأنواع المحددة فقط والتي يوصى باستخدامها. حيث أنه قد يؤدي استخدام نوع بطارية غير صحيح الى اشتعالها أو انفجارها.



قد تتسبب بطارية الليثيوم في حدوث حريق أو انفجار أو حدوث حروق شديدة. لا تقم بإعادة شحن البطارية أو إزالة موصل الاستقطاب الخاص بها ولا تحاول أيضا فكها أو تسخينها لأكثر من ١٠٠ درجة مئوية (٢١٢١ فهرنهايت) أو حرقها أو تعريض محتويات الخانة الخاصة بها للماء. قم بالتخلص من البطارية وفقا لما هو موضح في القوانين المحلية. استخدم نوع البطارية المحدد والذي يوصى باستخدامه. حيث أنه قد يؤدي استخدام نوع بطارية غير صحيح الى اشتعالها أو انفجارها.



خطر

إذا ما انكسرت شاشة LCD ولامس السائل الداخلي عينيك أو يديك، قم في الحال بغسلهما بالماء لمدة لا تقل عن ١٥ دقيقة. إذا ما وجدت أي أعراض بعد الغسل اطلب عندئذ المساعدة الطبية.



خطر

لتجنب التعرض لأي صدمات، لا تقم بإزالة الغطاء البلاستيكي الذي يحمي الجزء الأسفل من بطاقة العاكس.



خطر

على الرغم من أن البطاريات الرئيسية يكون لها جهد منخفض، إلا أنه قد تقوم البطاريات التي حدث قصور بها أو التي تم توصيلها أرضيا بإصدار تيار يكفي لحدوث حروق للأفراد أو تعرض المواد القابلة للاشتعال للحريق.



خطر

ما لم يتم السماح بالتبديل الفوري لأي FRU الجاري استبداله بدون ضرورة إغلاق النظام، قم بتنفيذ ما يلي قبل إزالته: قم بإيقاف تشغيل الحاسب ونزع كل أسلاك الطاقة من المخارج الكهربائية وقم أيضا بإزالة حزمة البطارية ثم قم بفصل أي كابلات متصلة.



PERIGO

Antes de ligar o computador após a substituição da FRU, certifique-se de que todos os parafusos, molas e outras peças pequenas estejam no lugar e não estejam soltos dentro do computador. Verifique isso sacudindo o computador e procurando ouvir sons de peças soltas. Peças metálicas ou lascas de metal podem causar curto-circuito.



PERIGO

Algumas baterias reserva contêm uma pequena quantidade de níquel e cádmio. Não desmonte uma bateria reserva, recarregue-a, jogue-a no fogo ou na água, ou deixe-a entrar em curto-circuito. Descarte a bateria conforme requerido pelas leis ou regulamentos locais. Use somente a bateria nas partes listadas apropriadas. O uso de uma bateria incorreta pode resultar em combustão ou explosão da bateria.



PERIGO

O pacote da bateria contém uma pequena quantidade de níquel. Não o desmonte, jogue-o no fogo ou na água, ou deixe-o entrar em curto-circuito. Descarte o pacote da bateria conforme requerido pelas leis ou regulamentos locais. Use somente a bateria nas partes listadas apropriadas ao substituir o pacote da bateria. O uso de uma bateria incorreta pode resultar em combustão ou explosão da bateria.



PERIGO

A bateria de lítio pode causar incêndio, explosão ou graves queimaduras. Não a recarregue, remova seu conector polarizado, desmonte-a, aqueça-a acima de 100°C (212°F), incinere-a, ou exponha o conteúdo de sua célula à água. Descarte a bateria conforme requerido pelas leis ou regulamentos locais. Use somente a bateria nas partes listadas apropriadas. O uso de uma bateria incorreta pode resultar em combustão ou explosão da bateria.



PERIGO

Se o LCD quebrar e o fluido de dentro dele entrar em contato com seus olhos ou com suas mãos, lave as áreas afetadas imediatamente com água durante pelo menos 15 minutos. Procure cuidados médicos se algum sintoma causado pelo fluido surgir após a lavagem.



PERIGO

Para evitar choque elétrico, não remova a capa plástica que protege a parte inferior da placa inversora.



PERIGO

Embora as principais baterias possuam baixa voltagem, uma bateria em curto-circuito ou aterrada pode produzir corrente o bastante para queimar materiais de pessoal ou inflamáveis.



PERIGO

A menos que uma hot swap seja permitida para a FRU que está sendo substituída, faça o seguinte antes de removê-la: desligue o computador, desconecte todos os cabos de energia das tomadas, remova o pacote de baterias e desconecte quaisquer cabos de interconexão.



DANGER

Avant de remettre l'ordinateur sous tension après remplacement d'une unité en clientèle, vérifiez que tous les ressorts, vis et autres pièces sont bien en place et bien fixées. Pour ce faire, secouez l'unité et assurez-vous qu'aucun bruit suspect ne se produit. Des pièces métalliques ou des copeaux de métal pourraient causer un court-circuit.



DANGER

Certaines batteries de secours contiennent du nickel et du cadmium. Ne les démontez pas, ne les rechargez pas, ne les exposez ni au feu ni à l'eau. Ne les mettez pas en court-circuit. Pour les mettre au rebut, conformez-vous à la réglementation en vigueur. Lorsque vous remplacez la pile de sauvegarde ou celle de l'horloge temps réel, veillez à n'utiliser que les modèles cités dans la liste de pièces détachées adéquate. Une batterie ou une pile inappropriée risque de prendre feu ou d'exploser.



DANGER

La batterie contient du nickel. Ne la démontez pas, ne l'exposez ni au feu ni à l'eau. Ne la mettez pas en court-circuit. Pour la mettre au rebut, conformez-vous à la réglementation en vigueur. Lorsque vous remplacez la batterie, veillez à n'utiliser que les modèles cités dans la liste de pièces détachées adéquate. En effet, une batterie inappropriée risque de prendre feu ou d'exploser.



DANGER

La pile de sauvegarde contient du lithium. Elle présente des risques d'incendie, d'explosion ou de brûlures graves. Ne la rechargez pas, ne retirez pas son connecteur polarisé et ne la démontez pas. Ne l'exposez pas à une température supérieure à 100°C, ne la faites pas brûler et n'en exposez pas le contenu à l'eau. Mettez la pile au rebut conformément à la réglementation en vigueur. Une pile inappropriée risque de prendre feu ou d'exploser.



DANGER

Si le panneau d'affichage à cristaux liquides se brise et que vous recevez dans les yeux ou sur les mains une partie du fluide, rincez-les abondamment pendant au moins quinze minutes. Consultez un médecin si des symptômes persistent après le lavage.



DANGER

Afin d'éviter tout risque de choc électrique, ne retirez pas le cache en plastique protégeant la partie inférieure de la carte d'alimentation.



DANGER

Bien que le voltage des batteries principales soit peu élevé, le court-circuit ou la mise à la masse d'une batterie peut produire suffisamment de courant pour brûler des matériaux combustibles ou causer des brûlures corporelles graves.



DANGER

Si le remplacement à chaud n'est pas autorisé pour l'unité remplaçable sur site que vous remplacez, procédez comme suit avant de retirer l'unité : mettez l'ordinateur hors tension, débranchez tous les cordons d'alimentation des prises de courant, retirez le bloc de batterie et déconnectez tous les câbles d'interconnexion.



VORSICHT

Bevor nach einem FRU-Austausch der Computer wieder angeschlossen wird, muß sichergestellt werden, daß keine Schrauben, Federn oder andere Kleinteile fehlen oder im Gehäuse vergessen wurden. Der Computer muß geschüttelt und auf Klappergeräusche geprüft werden. Metallteile oder -splitter können Kurzschlüsse erzeugen.



VORSICHT

Die Bereitschaftsbatterie, die sich unter dem Diskettenlaufwerk befindet, kann geringe Mengen Nickel und Cadmium enthalten. Sie darf nur durch die Verkaufsstelle oder den IBM Kundendienst ausgetauscht werden. Sie darf nicht zerlegt, wiederaufgeladen, kurzgeschlossen, oder Feuer oder Wasser ausgesetzt werden. Die Batterie kann schwere Verbrennungen oder Verätzungen verursachen. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Bereitschafts- oder Systembatterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.



VORSICHT

Akkus enthalten geringe Mengen von Nickel. Sie dürfen nicht zerlegt, wiederaufgeladen, kurzgeschlossen, oder Feuer oder Wasser ausgesetzt werden. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Batterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.



VORSICHT

Die Systembatterie ist eine Lithiumbatterie. Sie kann sich entzünden, explodieren oder schwere Verbrennungen hervorrufen. Batterien dieses Typs dürfen nicht aufgeladen, zerlegt, über 100°C erhitzt oder verbrannt werden. Auch darf ihr Inhalt nicht mit Wasser in Verbindung gebracht oder der zur richtigen Polung angebrachte Verbindungsstecker entfernt werden. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Batterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.



VORSICHT

Die Leuchtstoffröhre im LCD-Bildschirm enthält Quecksilber. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Der LCD-Bildschirm besteht aus Glas und kann zerbrechen, wenn er unsachgemäß behandelt wird oder der Computer auf den Boden fällt. Wenn der Bildschirm beschädigt ist und die darin befindliche Flüssigkeit in Kontakt mit Haut und Augen gerät, sollten die betroffenen Stellen mindestens 15 Minuten mit Wasser abgespült und bei Beschwerden anschließend ein Arzt aufgesucht werden.



VORSICHT

Aus Sicherheitsgründen die Kunststoffabdeckung, die den unteren Teil der Spannungswandlerplatine umgibt, nicht entfernen.



VORSICHT

Obwohl Hauptbatterien eine niedrige Spannung haben, können sie doch bei Kurzschluß oder Erdung genug Strom abgeben, um brennbare Materialien zu entzünden oder Verletzungen bei Personen hervorzurufen.



VORSICHT

Wenn ein Austausch der FRU bei laufendem Betrieb nicht erlaubt ist, gehen Sie beim Austausch der FRU wie folgt vor: Schalten Sie den Computer aus, ziehen Sie alle Netzkabel von den Netzsteckdosen ab, entfernen Sie den Akku und ziehen Sie alle miteinander verbundenen Kabel ab.



סכנה

לפני הפעלת המחשב לאחר החלפת FRU יש לוודא שכל הברגים, הקפיצים, וחלקים קטנים אחרים נמצאים במקומם ואינם חופשיים לזוז בתוך המחשב. כדי לוודא זאת, יש לטלטל את המחשב ולחקש לבגלול קולות שקשוק. חלקי או שבבי מתכת עלולים לגרום לקצרים חשמליים.



סכנה

סוללות המתנה מסוימות מכילות כמות קטנה של ניקל וקדמיום. אין לפרק סוללת המתנה, לטעון אותה מחדש, להשליך אותה לאש או למים או לקצר אותה. יש לסלק את הסוללה כנדרש על ידי התקנות והחוקים המקומיים. יש להשתמש רק בסוללה המופיעה ברשימת החלקים המתאימה. שימוש בסוללה לא מתאימה עלול לגרום להצתה או התפוצצות של הסוללה.



סכנה

מארז הסוללה מכיל כמות קטנה של ניקל וקדמיום. אין לפרק את מארז הסוללה, להשליך אותו לאש או למים או לקצר אותו. יש לסלק את מארז הסוללה כנדרש על ידי התקנות והחוקים המקומיים. יש להשתמש רק בסוללה המופיעה ברשימת החלקים המתאימה בזמן החלפת מארז הסוללה. שימוש בסוללה לא מתאימה עלול לגרום להצתה או התפוצצות של הסוללה.



סכנה

סוללת הליתיום עלולה לגרום לשריפה, להתפוצצות או לכוויות קשות. אין לטעון אותה מחדש, לסלק את המחבר המקוטב שלה, לפרק אותה או לחמם אותה לטמפרטורה העולה על 100 מעלות צלזיוס. אין לשרוף את הסוללה ואין לחשוף את תוכן התא למים. יש לסלק את הסוללה בנדרש בתקנות ובחוקים המקומיים. יש להשתמש רק בסוללה המופיעה ברשימת החלקים המתאימים. שימוש בסוללה אחרת עלול לגרום לסכנת שריפה או התפוצצות.



סכנה

אם מסך הגביש הנוזלי (LCD) נשבר וחוזל מתוך המסך בא במגע עם עיניכם או ידיכם, שטפו את האזורים הנגועים מיד במים במשך 15 דקות לפחות. פנו לקבלת עזרה רפואית אם תסמינים חנוכיים מהמגע עם הנוזל נמשכים לאחר השטיפה.



סכנה

כדי למנוע התחשמלות, אין להסיר את מכסה הפלסטיק המגן על חלקו התחתון של הכרטיס ההפוך.



סכנה

אף שהסוללות הראשיות הן בעלות מתח נמוך, סוללה מקוצרת או מוארכת עלולה להפיק זרם מספיק לגרימת כוויות או להצתת חומרים דליקים.



סכנה

אלא אם כן מותרת 'החלפה חמה' של ה-FRU המוחלף, פעלו כדלהלן לפני הסרתו: כבו את המחשב, נתקו את כל כבלי החשמל מהשקעים, הוציאו את מארז הסוללות ונתקו את כל הכבלים המחוברים.



危険

FRU の交換後、コンピュータの電源を入れる前に、ねじ、バネ、その他の小さな部品がすべて正しい位置にあり、またコンピュータの内部で緩んでいないことを確認してください。これを確認するには、コンピュータを振って、カチャカチャと音がしないか確かめます。金属部品や金属破片はショートの原因になることがあります。



危険

予備バッテリーの中には少量のニッケルとカドミウムが含まれているものがあります。したがって、予備バッテリーの分解、再充電、火または水の中への投棄、またはショートさせることは決して行わないでください。バッテリーを廃棄する場合は地方自治体の条例に従ってください。適切なパーツ・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。



バッテリー・パックには少量のニッケルが含まれています。バッテリー・パックを分解したり、火または水の中に投げ込んだり、ショートさせないでください。バッテリー・パックの廃棄にあたっては、地方自治体の条例または規則に従ってください。バッテリー・パックを交換するときは、適切なパーツ・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。



リチウム・バッテリーは、火災、爆発、または重症のやけどを引き起こすことがあります。バックアップ・バッテリーの充電、その極性コネクタの取り外し、バッテリー本体の分解、100 °C (212 °F) 以上への加熱、焼却、電池の中身を水に浸すことはしないでください。バッテリーを廃棄する場合は地方自治体の条例に従ってください。適切なパーツ・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。



LCD が破損し、LCD 中の液体が目に入ったり、手に触れたりした場合は、液体が触れた部分を少なくとも 15 分間洗い流してください。洗い流した後に、液体によって何らかの症状が現れた場合は、医師の治療を受けてください。



感電を防ぐため、インバーター・カードの下部を保護しているプラスチック・カバーを外さないでください。



メイン・バッテリーの電圧は低くても、ショートしたり、接地したバッテリーが、作業者にやけどを負わせたり、可燃物を燃やすだけの電流を発生させる場合があります。



危険

交換しようとしている FRU がホット・スワップに対応していない場合、それを取り外す前に、コンピューターの電源をオフにし、すべての電源コードをコンセントから抜き、バッテリー・パックを取り外して、相互接続しているケーブルをすべて切り離してください。



위험

FRU를 교체하고 나서 컴퓨터 전원을 켜기 전에 모든 나사, 스프링 및 기타 작은 부품들이 올바른 위치에 있는지, 컴퓨터 내부에 단단하게 연결되어 있는지 확인하십시오. 컴퓨터를 흔들어 달각거리는 소리가 나지 않는지 확인하십시오. 금속 부품 또는 금속 조각은 누전을 일으킬 수 있습니다.



위험

일부 보조 배터리에는 소량의 니켈 및 카드뮴이 포함되어 있습니다. 보조 배터리를 분해하거나, 다시 충전하거나, 불 또는 물에 던지거나, 단락시키지 마십시오. 배터리 팩을 폐기할 때에는 해당 지역의 법률 규정을 따르십시오. 배터리 팩을 교체할 때에는 올바른 배터리만 사용하십시오. 올바르지 않은 배터리를 사용하면 배터리가 발화되거나 폭발할 수 있습니다.



위험

배터리 팩에는 소량의 니켈이 포함되어 있습니다. 배터리 팩을 분해하거나, 불 또는 물에 던지거나, 단락시키지 마십시오. 배터리 팩을 폐기할 때에는 해당 지역의 법률 규정을 따르십시오. 배터리 팩을 교체할 때에는 올바른 배터리만 사용하십시오. 올바르지 않은 배터리를 사용하면 배터리가 발화되거나 폭발할 수 있습니다.



위험

리튬 배터리는 화재, 폭발 또는 심각한 화상을 일으킬 수 있습니다. 리튬 배터리를 다시 충전하거나, 극성 커넥터를 제거하거나, 분해하거나, 100C(212F) 이상으로 가열하거나, 소각하거나, 전지 내용물을 물에 노출시키지 마십시오. 배터리를 폐기할 때에는 해당 지역을 법률 규정을 따르십시오. 올바른 배터리만 사용하십시오. 올바르지 않은 배터리를 사용하면 배터리가 발화되거나 폭발할 수 있습니다.



위험

LCD가 파손되어 LCD 내부의 액체가 눈에 들어가거나 손에 묻으면 즉시 깨끗한 물로 15분 이상 닦아 내십시오. 씻은 후에 조금이라도 이상을 느낀다면 즉시 병원에 가서 의사의 진찰을 받아야 합니다.



위험

전기적 위험을 방지하려면 인버터 카드의 아래 부분을 보호하는 플라스틱 덮개를 제거하지 마십시오.



위험

기본 배터리의 전압은 낮지만, 단락되거나 접지된 배터리는 화상을 입히기에 충분한 전류와 가연성 물질을 발생시킬 수 있습니다.



위험

FRU 교체 시 Hot Swap이 지원되지 않는 경우, FRU를 제거하기 전에 컴퓨터의 전원을 끄고, 전기 콘센트에서 전원 코드를 분리하고, 배터리를 제거한 후, 연결된 모든 케이블을 분리하십시오.



PELIGRO

Antes de encender el sistema despues de sustituir una FRU, compruebe que todos los tornillos, muelles y demás piezas pequeñas se encuentran en su sitio y no se encuentran sueltas dentro del sistema. Compruébelo agitando el sistema y escuchando los posibles ruidos que provocarían. Las piezas metálicas pueden causar cortocircuitos eléctricos.



PELIGRO

Algunas baterías de reserva contienen una pequeña cantidad de níquel y cadmio. No las desmonte, ni recargue, ni las eche al fuego o al agua ni las cortocircuite. Deséchelas tal como dispone la normativa local. Utilice sólo baterías que se encuentren en la lista de piezas. La utilización de una batería no apropiada puede provocar la ignición o explosión de la misma.



PELIGRO

Las baterías contienen pequeñas cantidades de níquel. No las desmonte, ni recargue, ni las eche al fuego o al agua ni las cortocircuite. Deséchelas tal como dispone la normativa local. Utilice sólo baterías que se encuentren en la lista de piezas al sustituir la batería. La utilización de una batería no apropiada puede provocar la ignición o explosión de la misma.



PELIGRO

La batería de repuesto es una batería de litio y puede provocar incendios, explosiones o quemaduras graves. No la recargue, ni quite el conector polarizado, ni la desmonte, ni caliente por encima de los 100°C (212°F), ni la incinere ni exponga el contenido de sus celdas al agua. Deséchela tal como dispone la normativa local.



PELIGRO

Si la LCD se rompe y el fluido de su interior entra en contacto con sus ojos o sus manos, lave inmediatamente las áreas afectadas con agua durante 15 minutos como mínimo. Obtenga atención médica si se presenta algún síntoma del fluido después de lavarse.



PELIGRO

Para evitar descargas, no quite la cubierta de plástico que rodea la parte baja de la tarjeta invertida.



PELIGRO

Aunque las baterías principales tienen un voltaje bajo, una batería cortocircuitada o con contacto a tierra puede producir la corriente suficiente como para quemar material combustible o provocar quemaduras en el personal.



PELIGRO

Salvo que se permita el intercambio en caliente para la unidad sustituible localmente, realice lo siguiente antes de extraerla: apague el sistema, desconecte todos los cables de alimentación de las tomas de alimentación eléctrica, extraiga la batería y desconecte los cables de interconexión.



危險

完成 FRU 更換之後，在開啟電腦的電源之前，請確定所有螺絲、彈簧及其他小零件都已歸位，沒有遺留在電腦內部。
若要確認這一點，請搖晃電腦，聽聽看是否有卡嗒的聲響。
金屬零件或儀錶的火花會造成電線短路。



危險

部分備用電池含有微量的鎳和鎘。請勿拆開備用電池、再充電、丟入火或水中，或使其形成短路。請按照當地法令或規定來棄置電池。

僅限使用零件清單中的電池。使用不適當的電池會導致電池起火或爆炸。



危險

電池套件含有微量的鎳。請勿拆開電池套件、丟入火或水中，或使其形成短路。請按照當地法令或規定來棄置電池套件。

更換電池套件時，僅限使用零件清單中的電池。使用不適當的電池會導致電池起火或爆炸。



危險

鋰電池會導致起火、爆炸或嚴重燒傷。請勿再充電、拔除其電極接頭、拆開、加熱超過 **100°C (212°F)**、焚燒，或讓電池組成物浸到水。請按照當地法令或規定來棄置電池。

僅限使用零件清單中的電池。使用不適當的電池會導致電池起火或爆炸。



危險

如果 LCD 破裂導致 LCD 流出的液體沾到您的眼睛或手，請立即以清水沖洗沾染部位至少 15 分鐘。如果在清洗後出現該液體所造成的任何症狀，請就醫治療。



危險

為避免電擊，請勿拆下轉換卡下面的塑膠護蓋。



危險

雖然主電池的電壓很低，但短路或接地電池所產生的電流，仍足以使人燒傷或使可燃物質起火。



危險

除非 FRU 允許以熱抽換來替換，否則請依下列方式將其移除：將電腦關機，拔除插座上所有電源線，移除電池包，並拔開任何交互連接的線材。

Laser compliance statement (multilingual translations)

The laser compliance statements in this section are provided in the following languages:

- English
- Arabic
- Brazilian Portuguese
- French
- German
- Hebrew
- Japanese
- Korean
- Spanish
- Traditional Chinese



CAUTION:

When laser products (such as CD-ROMs, DVD drives, fiber optic devices, or transmitters) are installed, note the following:

- Do not remove the covers. Removing the covers of the laser product could result in exposure to hazardous laser radiation. There are no serviceable parts inside the device.
- Use of controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.



DANGER

Some laser products contain an embedded Class 3A or Class 3B laser diode. Note the following.

Laser radiation when open. Do not stare into the beam, do not view directly with optical instruments, and avoid direct exposure to the beam.



تحذير:

عند تثبيت منتجات الليزر (مثل أقراص CD-ROM أو محركات تشغيل أقراص DVD أو أجهزة الألياف البصرية أو النواقل)، لاحظ ما يلي:

- لا تقم بنزع الغطاء. قد ينتج عن نزع غطاء منتج ليزر التعرض لأشعة ليزر في منتهى الخطورة. لا توجد أجزاء يمكن صيانتها داخل الجهاز.
- قد ينتج عن استخدام مفاتيح أو تنفيذ عمليات ضبط أو إجراءات بطريقة مختلفة عما هو محدد هنا التعرض لأشعة ليزر في منتهى الخطورة.



تحتوي بعض منتجات الليزر على صمام ثنائي ليزري مضمن من Class 3A أو Class 3B. لاحظ ما يلي. توجد أشعة ليزر عند الفتح. لا تنظر للشعاع ولا تنظر بطريقة مباشرة باستخدام أدوات ضوئية وتجنب التعرض المباشر للشعاع.

**CUIDADO:**

Quando produtos a laser (como CD-ROMs, unidades de DVD, dispositivos de fibra ótica ou transmissores) estão instalados, observe o seguinte:

- Não remova as tampas. A remoção das tampas do produto a laser pode resultar em exposição prejudicial à radiação de laser. Não há peças que permitam manutenção no interior do dispositivo.
- A utilização de controles ou ajustes ou a execução de procedimentos diferentes daqueles especificados aqui pode resultar em exposição perigosa à radiação.

**PERIGO**

Algumas produtos a laser contêm um diodo de laser Classe 3A ou Classe 3B integrado. Observe o seguinte:

Radiação a laser quando aberta. Não olhe diretamente para o feixe a olho nu ou com instrumentos óticos e evite exposição direta ao feixe.



ATTENTION :

Si des produits laser (tels que des unités de CD, DVD, à fibre optique ou des émetteurs) sont installés, lisez les informations suivantes :

- Ne retirez pas les carters. En ouvrant le produit laser, vous vous exposez au rayonnement dangereux du laser. Aucune pièce de l'unité n'est réparable.
- Pour éviter tout risque d'exposition au rayon laser, respectez les consignes de réglage et d'utilisation des commandes, ainsi que les procédures décrites dans le présent manuel.



DANGER

Certains produits à laser contiennent une diode à laser intégrée de classe 3A ou 3B. Prenez connaissance des informations suivantes.

Rayonnement laser lorsque le carter est ouvert. Evitez toute exposition directe au rayon laser. Evitez de regarder fixement le faisceau ou de l'observer à l'aide d'instruments optiques.



Vorsicht:

Bei der Installation von Lasergeräten (wie CD-ROM-Laufwerken, DVD-Laufwerken, Einheiten mit Lichtwellenleitertechnik oder Sendern) Folgendes beachten:

- **Die Abdeckungen nicht entfernen. Durch Entfernen der Abdeckungen des Lasergeräts können gefährliche Laserstrahlungen freigesetzt werden. Das Gerät enthält keine zu wartenden Teile.**
- **Werden Steuerelemente, Einstellungen oder Durchführungen von Prozeduren anders als hier angegeben verwendet, kann gefährliche Laserstrahlung auftreten.**



Gefahr

Einige Lasergeräte enthalten eine Laserdiode der Klasse 3A oder 3B. Beachten Sie Folgendes:

Laserstrahlung bei geöffneter Verkleidung. Nicht in den Strahl blicken. Keine Lupen oder Spiegel verwenden. Strahlungsbereich meiden.



זהירות:

כאשר מוצרי לייזר (כגון תקליטורים, כונני DVD, התקני סיבים אופטיים או משדרים) מותקנים, שימו לב להנחיות הבאות:

- **אל תסירו את הכיסויים. הסרת הכיסויים של מוצר הלייזר עלולה לגרום לחשיפה מסוכנת לקרינת לייזר. ההתקן אינם כוללים רכיבים להחלפה עצמית.**
- **שימוש בבקורות ובהתאמות שלא צוינו או ביצוע תהליכים שלא צוינו, יכולים לגרום לחשיפה מסוכנת לקרינה.**



סכנה

כמה ממוצרי הלייזר מכילים דיודת לייזר מובנית Class 3A או Class 3B. שימו לב לדברים שלהלן. קיימת פליטת קרני לייזר כאשר המוצר פתוח. אל תביטו ישירות אל הקרן, אל תביטו אל הקרן ישירות דרך אמצעים אופטיים, והימנעו מחשיפה ישירה לקרן.



警告：

レーザー製品 (CD-ROM、DVD ドライブ、光ファイバー装置、または送信機など) を取り付ける場合には、以下のことに注意してください。

- カバーを外さないこと。カバーを取り外すと有害なレーザー光を浴びることがあります。この装置の内部には保守が可能な部品はありません。
- 本書で指定された内容以外の、お客様による整備、調整、または手順を行った場合、レーザー放射の危険があります。



危険

一部のレーザー製品には、クラス 3A またはクラス 3B のレーザー・ダイオードが組み込まれています。次の点に注意してください。

開けるとレーザー光が放射されます。光線を見つめたり、光学機械を使って直接見たり、光線を直接浴びることは避けてください。



경고:

레이저 제품 (CD-ROM, DVD 드라이브, 광섬유 장치 또는 송신기)이 설치되어 있는 경우, 다음과 같은 취급 주의사항을 참고하십시오.

- 덮개를 제거하지 마십시오. 레이저 제품의 덮개를 제거하면 유해한 레이저 복사에 노출될 위험이 있습니다. 장치 내부에는 사용자가 수리할 수 있는 부분이 없습니다.
- 본 내용에서 설명한 이외의 방법으로 드라이브를 조정하거나 제어 또는 작동하는 경우, 해로운 레이저 복사에 노출될 수 있습니다.



위험

일부 레이저 제품은 임베디드 클래스 3A 또는 클래스 3B 레이저 다이오드가 포함되어 있습니다. 다음 주의사항을 유의하십시오.

드라이브의 덮개를 열면 전자파가 발생합니다. 광선 또는 광 장치를 직접 보거나 광선에 노출되지 않도록 주의하십시오.

**PRECAUCIÓN:**

Cuando haya instalados productos láser (por ejemplo, unidades de CD-ROM, unidades de DVD, dispositivos de fibra óptica o transmisores), tenga en cuenta lo siguiente:

- No extraiga las cubiertas. La extracción de las cubiertas del producto láser podría producir una exposición a radiación láser peligrosa. No hay ninguna pieza dentro del dispositivo que pueda reparar.
- La utilización de controles, ajustes o la realización de procedimientos diferentes a los especificados puede dar como resultado una exposición peligrosa a radiaciones.

**PELIGRO**

Algunos productos láser contienen un diodo láser de Clase 3A o Clase 3B incorporado. Tenga en cuenta lo siguiente.

Emite radiación láser cuando está abierto. No fije la vista en el rayo, no lo mire directamente con instrumentos ópticos y evite la exposición directa al rayo.



警告：

安裝雷射產品（如 CD-ROM、DVD 光碟機、光纖裝置或轉送器）時，請注意下列事項：

- 請勿卸下外蓋。卸下雷射產品的外蓋可能導致曝露於危險的雷射輻射。裝置內沒有可維修的零件。
- 若不遵守本文規定的控制、調整或操作程序，可能會導致危險的輻射外洩。



危險

某些雷射產品包含內嵌式 3A 類或 3B 類雷射二極體。這類光碟機的使用者應注意下列聲明。

在開啟光碟機時，會有雷射輻射。請勿直視光束或以光學儀器直接觀看光束，並避免直接暴露在光束中。

Chapter 2. Important service information

This chapter presents the following important service information that applies to all machine types supported by this manual:

- “Strategy for replacing FRUs” on page 27
 - “Strategy for replacing a hard disk drive” on page 28
 - “Important notice for replacing a system board” on page 28
- “Important information about replacing RoHS compliant FRUs” on page 28

Important: BIOS and device driver fixes are customer-installable. The BIOS and device drivers are available at <http://www.lenovo.com/support>.

Strategy for replacing FRUs

Before replacing parts:

Make sure that all software fixes, drivers, and BIOS downloads are installed before replacing any FRUs listed in this manual.

After a system board is replaced, ensure that the latest BIOS is installed to the system board before completing the service action.

To download software fixes, drivers, and BIOS, do the following:

1. Go to <http://www.lenovo.com/support>.
2. Click **Download Drivers & Software**. The Web site offers three options to begin your search:
 - Search by product number
 - Search through the product auto-detect function
 - Search by product category
3. Follow the directions on the screen and install the necessary software.

Notes: If you need to improve the computer performance, you also could download and install the latest BIOS utility from the Support Web site.

- Do not try to update the BIOS settings for any computer unless you have been trained and certified. An untrained person runs the risk of damaging the computer.
- Before installing the latest utility, make sure that the battery is fully charged and an ac power adapter is connected.
- Do not turn off or put your computer into sleep or hibernation until the update has been completed. Otherwise, the system board might be damaged.

Use the following strategy to prevent unnecessary expense for replacing and servicing FRUs:

- **If you are instructed to replace a FRU but the replacement does not correct the problem, reinstall the original FRU before you continue.**
- Some computers have both a processor board and a system board. If you are instructed to replace either the processor board or the system board, and replacing one of them does not correct the problem, reinstall that board, and then replace the other one.

- If an adapter or a device consists of more than one FRU, any of the FRUs may be the cause of the error. Before replacing the adapter or device, remove the FRUs, one by one, to see if the symptoms change. Replace only the FRU that changed the symptoms.

Strategy for replacing a hard disk drive

Always try to run a low-level format before replacing a hard disk drive (HDD). This will cause all customer data on the hard disk to be lost. Be sure that the customer has a current backup of the data before doing this task.

Attention: The drive startup sequence in the computer you are servicing might have been changed. Be extremely careful during write operations such as copying, saving, or formatting. If you select an incorrect drive, data or programs can be overwritten.

Important notice for replacing a system board

Some components mounted on a system board are very sensitive. Improper handling of a system board can cause damage to those components, and may cause a system malfunction.

Attention: When handling a system board:

- Do not drop a system board or apply any excessive force to it.
- Avoid rough handling of any kind.
- Avoid bending a system board and hard pushing to prevent cracking at each BGA (Ball Grid Array) chipset.

Important information about replacing RoHS compliant FRUs

RoHS, The Restriction of Hazardous Substances in Electrical and Electronic Equipment Directive (2002/95/EC) is a European Union legal requirement affecting the global electronics industry. RoHS requirements must be implemented on Lenovo products placed on the market after June 2006. Products on the market before June 2006 are not required to have RoHS compliant parts. If the original FRU parts are non-compliant, the replacement parts also can be non-compliant. That is, if the original FRU parts are RoHS compliant, the replacement part also must be RoHS compliant.

Note: RoHS and non-RoHS FRU part numbers with the same fit and function are identified by the unique FRU part numbers.

Lenovo plans to transit to RoHS compliance before the implementation date and expects its suppliers to be ready to meet Lenovo's requirements and schedule in the European Union. Products sold between 2005 and 2006 might contain some RoHS compliant FRUs. The following statement pertains to the products with RoHS compliant FRUs.

RoHS compliant FRUs have unique FRU part numbers. Before or after the RoHS implementation date, the failed RoHS compliant parts must be replaced with compliant parts and only the following FRUs can be used: identified as compliant in the *Hardware Maintenance Manual* or direct substitutions can be used.

- Compliant FRUs identified in *Hardware Maintenance Manual*
- Direct substitutions with different FRU part numbers automatically shipped by the distribution center at the time of order

For products shipped after June 2006

Current or original part	Replacement FRU
Must be RoHS	Must be RoHS

Chapter 3. General checkout

This chapter presents following information:

- “What to do first” on page 29
- “Power system checkout” on page 30

Before you go to the checkout guide, be sure to read the following important notes.

Important notes:

- **Only certified trained personnel should service the computer.**
- **Before replacing any FRU, read the entire page on removing and replacing FRUs.**
- **When you replace FRUs, it is recommended to use new nylon-coated screws.**
- **Be extremely careful during such write operations as copying, saving, or formatting.** The sequence of the drives in the computer that you are servicing might have been altered. If you select an incorrect drive, data or programs might be overwritten.
- **Replace a FRU only with another FRU of the correct model.** When you replace a FRU, make sure that the model of the machine and the FRU part number are correct by referring to the FRU parts list.
- **A FRU should not be replaced because of a single, unreproducible failure.** Single failures can occur for a variety of reasons that have nothing to do with a hardware defect, such as cosmic radiation, electrostatic discharge, or software errors. Consider replacing a FRU only when a problem recurs. If you suspect that a FRU is defective, clear the error log and run the test again. If the error does not recur, do not replace the FRU.
- **Be careful not to replace a nondefective FRU.**

What to do first

When you do return a FRU, you must include the following information in the parts exchange form or parts return form that you attach to it:

1. Name and phone number of service technician
2. Date of service
3. Date on which the machine failed
4. Date of purchase
5. Procedure index and page number in which the failing FRU was detected
6. Failing FRU name and part number
7. Machine type, model number, and serial number
8. Customer's name and address

Note: During the warranty period, the customer may be responsible for repair costs if the computer damage was caused by misuse, accident, modification, unsuitable physical or operating environment, or improper maintenance by the customer. Following is a list of some common items that are not covered under warranty and some symptoms that might indicate that the system was subjected to stress beyond normal use.

Before checking problems with the computer, determine whether the damage is covered under the warranty by referring to the following list:

The following are not covered under warranty:

- LCD panel cracked from the application of excessive force or from being dropped
- Scratched (cosmetic) parts
- Distortion, deformation, or discoloration of the cosmetic parts
- Plastic parts, latches, pins, or connectors that have been cracked or broken by excessive force
- Damage caused by liquid spilled into the system
- Damage caused by the improper insertion of a PC Card or the installation of an incompatible card
- Improper disc insertion or use of an optical drive

- Diskette drive damage caused by pressure on the diskette drive cover, foreign material in the drive, or the insertion of a diskette with multiple labels
- Damaged or bent diskette eject button
- Fuses blown by attachment of a nonsupported device
- Forgotten computer password (making the computer unusable)
- Sticky keys caused by spilling a liquid onto the keyboard
- Use of an incorrect ac power adapter on laptop products

The following symptoms might indicate damage caused by nonwarranted activities:

- Missing parts might be a symptom of unauthorized service or modification.
- If the spindle of a hard disk drive becomes noisy, it may have been subjected to excessive force, or dropped.

Power system checkout

To verify a symptom, do the following:

1. Turn off the computer.
2. Remove the battery pack.
3. Connect the ac power adapter.
4. Check that power is supplied when you turn on the computer.
5. Turn off the computer.
6. Disconnect the ac power adapter and install the charged battery pack.
7. Check that the battery pack supplies power when you turn on the computer.

If you suspect a power problem, see the appropriate one of the following power supply checkouts:

- “Checking the ac power adapter” on page 30
- “Checking operational charging” on page 31
- “Checking the battery pack” on page 31

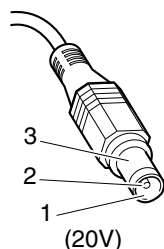
Checking the ac power adapter

You are here because the computer fails only when the ac power adapter is used.

- If the power-on indicator does not turn on, check the power cord of the ac power adapter for correct continuity and installation.
- If the computer does not charge during operation, go to “Checking operational charging” on page 31

To check the ac power adapter, do the following:

1. Unplug the ac power adapter cable from the computer.
2. Measure the output voltage at the plug of the ac power adapter cable. See the following figure:



Pin	Voltage (V dc)
1	+20
2	0

Note: Output voltage across pin 2 of the ac power adapter may differ from the one you are servicing.

3. If the voltage is not correct, replace the ac power adapter.
4. If the voltage is acceptable, do the following:
 - Replace the system board.
 - If the problem persists, go to Chapter 5 “Lenovo V580 and V580c” on page 37.

Note: Noise from the ac power adapter does not always indicate a defect.

Checking operational charging

To check whether the battery charges properly during operation, use a discharged battery pack or a battery pack that has less than 50% of the total power remaining when installed in the computer.

Perform operational charging. If the battery status indicator or icon does not turn on, remove the battery pack and let it return to room temperature. Reinstall the battery pack. If the charge indicator or icon still does not turn on, replace the battery pack.

If the charge indicator still does not turn on, replace the system board. Then reinstall the battery pack. If it is still not charged, go to the next section.

Checking the battery pack


The battery status icon in the Windows® notification area displays the percentage of battery power remaining.

To check for detailed battery status information on the Windows operating system, do the following:

- Windows 7: Launch the Power Manager program and click the **Battery** tab.
- Windows 8:
 - Press the recovery button to launch the Lenovo Solution Center program, and then click **Battery**.
 - Press Fn+Esc to launch the Lenovo Experience program, and then click **Battery Health**.

To check the battery pack, do the following:

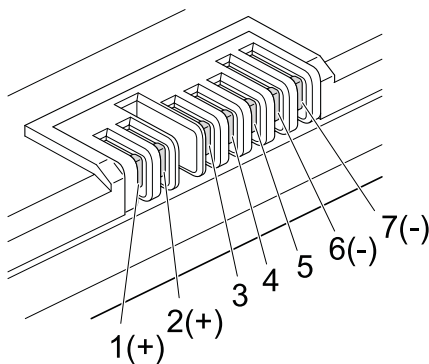1. Turn off the computer and disconnect the ac power adapter.
2. Remove the battery pack and measure the voltage between battery terminals 1 (+) and 7 (-).



Terminal	Voltage (V dc)
1	+ 0 to + 14
7	Ground (-)

3. If the voltage is less than +11.0 V dc, the battery pack has been discharged.

Note: Recharging will take at least three hours, even if the indicator does not turn on.

If the voltage is still less than +11.0 V dc after recharging, replace the battery pack.

4. If the voltage is more than +11.0 V dc, measure the resistance between battery terminals 5 and 7. The resistance must be 4 to 30 K Ω .

If the resistance is not correct, replace the battery pack. If the resistance is correct, replace the system board.

Chapter 4. Related service information

This chapter presents the following information:

- “Recovering the computer settings” on page 33
- “Passwords” on page 33
- “Power management” on page 34

Recovering the computer settings

This topic provides information about the recovery programs that are available for you to recover the computer settings.

- Windows 7: The following recovery programs are available on computers with a Windows 7 operating system:

- OneKey® Recovery Pro

The OneKey Recovery Pro program enables you to back up all your hard disk drive contents, including the operating system, data files, software programs, and personal settings. You can designate where the OneKey Recovery Pro program stores the backup. After you have backed up the contents on the hard disk drive, you can restore the complete contents of the hard disk drive, restore only the desired files, or restore only the Windows operating system and applications.

- Product Recovery

The Product Recovery program enables you to restore the computer settings to the factory default settings through recovery media.

Attention: When you use the Product Recovery program to restore the computer settings, all the data you have stored on the hard disk drive will be deleted and the computer settings will be restored to the factory default settings. During the restoring process, you will be given the option to save one or more files currently on the hard disk drive to other media before the data is deleted.

- Windows 8: The preinstalled Windows recovery program enables you to do the following:

- Refreshing the computer without losing personal files

- Restoring the computer to the factory default settings

Attention: When you use the Windows recovery program to restore the computer settings, all the data you have stored on the hard disk drive will be deleted and the computer will be restored to the factory default settings. To avoid data loss, back up your data in advance.

- Configuring the advanced startup options

The advanced startup options enable you to do the following:

- Changing the startup settings of the Windows operating system
- Restoring the Windows operating system from a system image
- Starting up from an external device

For more information about the recovery solutions, refer to the help information system of the programs.

Passwords

As many as two passwords might be needed for a Lenovo notebook computer: the power-on password and the supervisor password.

If any of these passwords has been set, a prompt for it will be displayed on the screen whenever the computer is turned on. The computer does not start until the password is entered.

Note: If only a supervisor password is set, the password prompt will not be displayed when the operating system is started.

Power-on password

A power-on password protects the system from being turned on by an unauthorized person. The password must be entered before an operating system can be started.

Supervisor password

A supervisor password protects the system information stored in the BIOS. The user must enter the supervisor password to get access to the BIOS and change the system configuration.

Attention: If you forget the password, there is no service procedure to reset the password. The system board must be replaced for a scheduled fee.

Power management

Note: Power management modes are not supported for APM operating system.

To reduce power consumption, the computer has three power management modes: screen blank, sleep, and hibernation.

Screen blank mode

In the following circumstances, the computer goes into screen blank mode:

- The time set on the “Turn off monitor” timer on the Windows 7 operating system expires.
To end screen blank mode and resume normal operation, press any key.
- You have pressed Fn+F2.
To end screen blank mode and resume normal operation, press Fn+F2.

Sleep mode

When the computer enters sleep mode, the following events occur in addition to what occurs in screen blank mode:

- The LCD is powered off.
- The hard disk drive is powered off.
- The microprocessor stops.

To enter sleep mode, press Fn+F1.

In certain circumstances, the computer goes into sleep mode automatically:

- If a “suspend time” has been set on the timer, and the user does not do any operation with the keyboard, the hard disk drive, the parallel connector, or the diskette drive within that time.
- If the battery indicator blinks orange, indicating that the battery power is low.

To cause the computer to return from sleep mode and resume the operation, do one of the following:

- Press the Fn key.
- Open the LCD cover.
- Turn on the power button.

Also, when the time set on the resume timer elapses, the computer automatically returns from sleep mode and resumes operation.

Note: The computer does not accept any input immediately after it enters sleep mode. Wait a few seconds before taking any action to reenter operation mode.

Hibernation mode

In hibernation mode, the following occurs:

- The system status, RAM, VRAM, and setup data are stored on the hard disk drive.
- The system is powered off.

If you have defined one of the following actions as the event that causes the system to go into hibernation mode, perform that action.

- Closing the lid.
- Pressing the power button.

Also, the computer goes into hibernation mode automatically in either of the following conditions:

- If a “hibernation time” has been set on the timer, and if the user does not do any operation with the keyboard, the hard disk drive, the parallel connector, or the diskette drive within that time.
- If the timer conditions are satisfied in suspend mode.

When the power is turned on, the computer returns from hibernation mode and resumes operation. The hibernation file in the boot record on the hard disk drive is read, and system status is restored from the hard disk drive.

Chapter 5. Lenovo V580 and V580c

This chapter presents the following product-specific service references and parts information:

- “Specifications” on page 37
- “Status indicators” on page 38
- “Fn key combinations” on page 41

Specifications

This topic lists the physical features for the Lenovo V580 and V580c models.

Processor

- Windows 7: To view the processor information of your computer, click **Start**, right-click **Computer**, and then click **Properties**.
- Windows 8: From desktop, move the cursor to the top-right or bottom-right corner of the screen to display the charms. Then click **Settings** → **PC info**.

Memory

- Double data rate 3 (DDR3) synchronous dynamic random access memory (SDRAM)

Storage device

- 2.5-inch (7 mm height or 9.5 mm height) hard disk drive
- mSATA solid-state drive

Note: If the computer is equipped with both a hard disk drive and an mSATA solid-state drive, do not use the mSATA solid-state drive as a bootable device. The mSATA solid-state drive is used for “cache” function only.

Display

- Size: 15.6 inches (396 mm)
- Resolution:
 - LCD: 1366-by-768
 - External monitor: Maximum 2048-by-1536
- Integrated camera (on some models)
- Built-in microphones

Keyboard

- 6-row Lenovo keyboard
- Fn key
- Recovery button

Interface

- Combo audio jack (stereo headphone or headset)
- Two USB 2.0 connectors

- Two USB 3.0 connectors
- RJ45 Ethernet connector
- HDMI port
- External monitor connector
- 4-in-1 digital media card reader slot

Optical drive

- 12.7 mm Rambo optical drive (on some models)

Wireless features

- Integrated wireless LAN
- Integrated WiMAX
- 10/100/1000 Mbps Ethernet communication

Security feature

- Fingerprint reader

Status indicators

This topic presents the system status indicators that show the status of the computer.

Status indicators (V580)

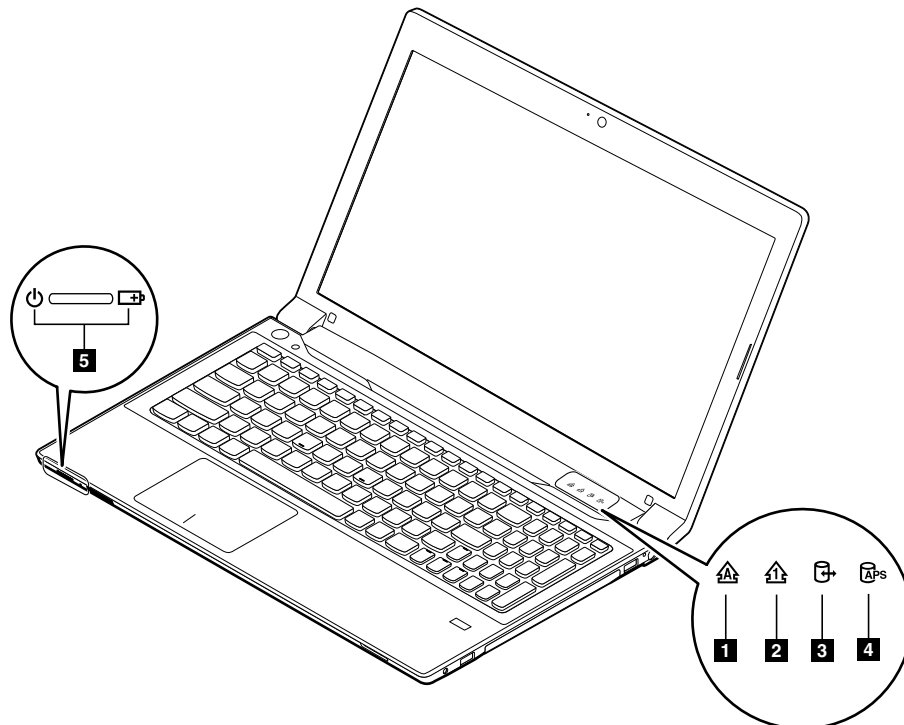







Table 1. Status indicators

Indicator	Meaning
1 Caps Lock status indicator 	White: Caps Lock mode is enabled. You can type all alphabetic characters (A-Z) in uppercase directly. To enable or disable Caps Lock mode, press the Caps Lock key.
2 Numeric Lock status indicator 	White: The separate numeric keypad on the keyboard is enabled. To enable or disable the numeric keypad, press the Numeric Lock key.
3 Device access status indicator 	On: The hard disk drive or optical drive is reading or writing data. Attention: <ul style="list-style-type: none"> When the indicator is on, do not put the computer into sleep mode or turn off the computer. When the indicator is on, do not move the computer. Sudden physical shock might cause drive errors.
4 Active Protection System™ (APS) status indicator 	<ul style="list-style-type: none"> White: The Active Protection System program is enabled. Off: The Active Protection System program is disabled.
5 Power and battery status indicator 	<ul style="list-style-type: none"> Solid green: The battery charge level is between 80% and 100%, or the battery discharge level is between 20% and 100%. Slow blinking green: The battery charge level is between 20% and 80%, and charging is continuing. When the battery charge level reaches 80%, the battery status indicator stops blinking, but the charging might continue until the battery is 100% charged. Slow blinking orange: The battery charge level is between 5% and 20%, and the charging is continuing. Orange: The battery discharge level is between 5% and 20%. Fast blinking orange: The battery charge or discharge level is 5% or less. Off: The battery is detached or the computer is powered off.

Status indicators (V580c)

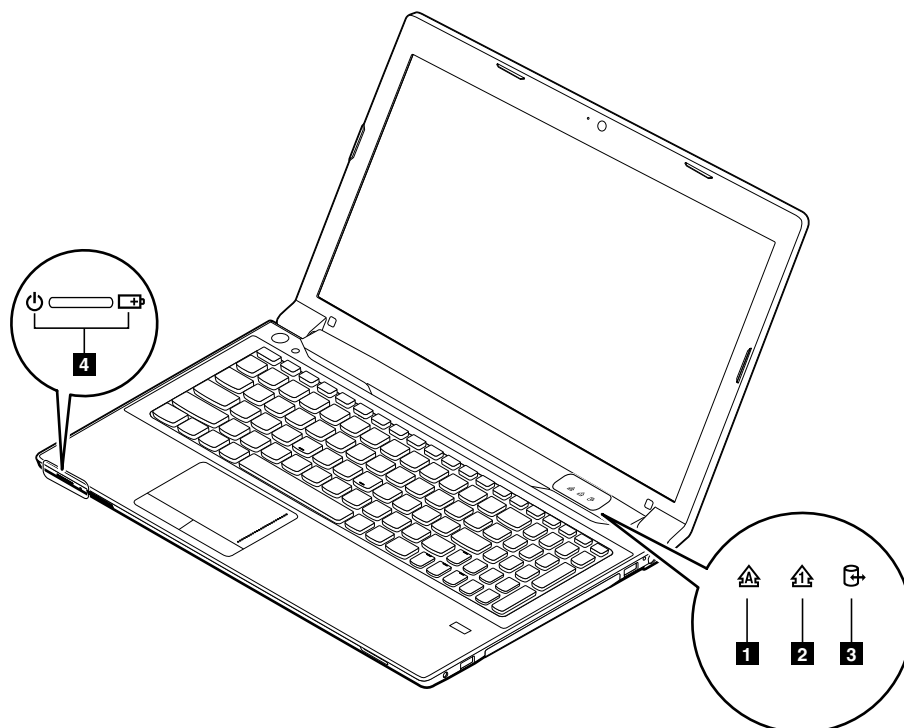






Table 2. Status indicators

Indicator	Meaning
1 Caps Lock status indicator 	White: Caps Lock mode is enabled. You can type all alphabetic characters (A-Z) in uppercase directly. To enable or disable Caps Lock mode, press the Caps Lock key.
2 Numeric Lock status indicator 	White: The separate numeric keypad on the keyboard is enabled. To enable or disable the numeric keypad, press the Numeric Lock key.
3 Device access status indicator 	On: The hard disk drive or optical drive is reading or writing data. Attention: <ul style="list-style-type: none"> When the indicator is on, do not put the computer into sleep mode or turn off the computer. When the indicator is on, do not move the computer. Sudden physical shock might cause drive errors.
4 Power and battery status indicator 	<ul style="list-style-type: none"> Solid green: The battery charge level is between 80% and 100%, or the battery discharge level is between 20% and 100%. Slow blinking green: The battery charge level is between 20% and 80%, and charging is continuing. When the battery charge level reaches 80%, the battery status indicator stops blinking, but the charging might continue until the battery is 100% charged. Slow blinking orange: The battery charge level is between 5% and 20%, and the charging is continuing. Orange: The battery discharge level is between 5% and 20%. Fast blinking orange: The battery charge or discharge level is 5% or less. Off: The battery is detached or the computer is powered off.

Fn key combinations

The following table describes the functions of Fn key combinations.

Table 3. Function key combinations

Key combination	Description
Fn+Esc	Launches the camera and audio settings window.
Fn+F1	Puts the computer into sleep mode. To resume normal operation, press the Fn key only.
Fn+F2	Enables the backlight feature of the computer screen. To disable the feature, press Fn+F2.
Fn+F3	Switches between the computer display and an external monitor. Note: You also can use the Windows+P combination to switch between the computer display and an external monitor.
Fn+F5	Enables or disables the built-in wireless networking features.
Fn+F6	Enables or disables the touch pad.
Fn+F9	Multimedia control: Start/Pause
Fn+F10	Multimedia control: Stop
Fn+F11	Multimedia control: Skip to the previous track
Fn+F12	Multimedia control: Skip to the next track
Fn+Insert	Has the same function as the ScrLk key on a conventional keyboard.
Fn+PrtSc	Has the same function as the SysRq key on a conventional keyboard.
Fn+Home	Has the same function as the Pause key on a conventional keyboard.
Fn+End	Has the same function as the Break key on a conventional keyboard.
Fn + up/down arrow	Increases or decreases the display brightness level.
Fn + left/right arrow	Increases or decreases the sound volume.

Chapter 6. FRU replacement notices

This chapter presents notices related to removing and replacing parts. Read this chapter carefully before replacing any FRU.

CRU statement for customers:

You can resolve some problems with your product with a replacement part you can install yourself, called a “Customer Replaceable Unit” or “CRU.” Some CRUs are designated as self-service CRUs and others are designated as optional-service CRUs. *Installation of self-service CRUs is your responsibility. For optional-service CRUs, you can either install the CRU yourself or you can request that a Service Provider install the CRU according to the warranty service for your product.* If you intend on installing the CRU, Lenovo will ship the CRU to you. CRU information and replacement instructions are shipped with your product and are available from Lenovo at any time upon request. You can find a list of CRUs for your product in this *Hardware Maintenance Manual*. An electronic version of this manual can be found at <http://www.lenovo.com/UserManuals>. Follow the on-screen instructions to find the manual for your product. You might be required to return the defective CRU. When return is required: (1) return instructions, a prepaid shipping label, and a container will be included with the replacement CRU; and (2) you might be charged for the replacement CRU if Lenovo does not receive the defective CRU within thirty (30) days of your receipt of the replacement CRU. See your Lenovo Limited Warranty documentation for full details.

Screw notices

Loose screws can cause a reliability problem. In the Lenovo notebook computer, this problem is addressed with special nylon-coated screws that have the following characteristics:

- They maintain tight connections.
- They do not easily come loose, even with shock or vibration.
- They are harder to tighten.

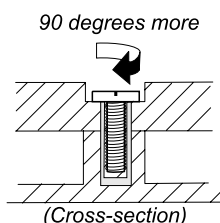
Do the following when you service the computer:

- Keep the screw kit in your tool bag.
- It is recommended to use new screws.
- It recommended to use each screw only once.
- Use a torque screwdriver if you have one.

Tighten screws as follows:


- **Plastic to plastic**

Turn an additional angle of 90 degrees after the screw head touches the surface of the plastic part.



- **Logic card to plastic**

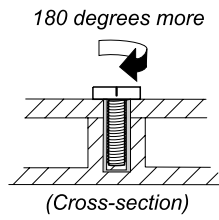Turn an additional angle of 180 degrees after the screw head touches the surface of the logic card.



Notes:

- Ensure that you use the correct screw. It is recommended to use new screws for replacements. If you have a torque screwdriver, tighten all screws firmly to the torque specified in the screw information table for each step.
- Ensure that torque screw drivers are calibrated correctly following country specifications.

Chapter 7. Removing and replacing a FRU

This chapter provides instructions on how to remove or replace a FRU.

CRU statement for customers:

You can resolve some problems with your product with a replacement part you can install yourself, called a “Customer Replaceable Unit” or “CRU.” Some CRUs are designated as self-service CRUs and others are designated as optional-service CRUs. *Installation of self-service CRUs is your responsibility. For optional-service CRUs, you can either install the CRU yourself or you can request that a Service Provider install the CRU according to the warranty service for your product.* If you intend on installing the CRU, Lenovo will ship the CRU to you. CRU information and replacement instructions are shipped with your product and are available from Lenovo at any time upon request. You can find a list of CRUs for your product in this *Hardware Maintenance Manual*. An electronic version of this manual can be found at <http://www.lenovo.com/UserManuals>. Follow the on-screen instructions to find the manual for your product. You might be required to return the defective CRU. When return is required: (1) return instructions, a prepaid shipping label, and a container will be included with the replacement CRU; and (2) you might be charged for the replacement CRU if Lenovo does not receive the defective CRU within thirty (30) days of your receipt of the replacement CRU. See your Lenovo Limited Warranty documentation for full details.

General guidelines

When removing or replacing a FRU, be sure to observe the following general guidelines:

1. Do not try to service any computer unless you have been trained and certified. An untrained person runs the risk of damaging parts.
2. Before replacing any FRU, review Chapter 6 “FRU replacement notices” on page 43.
3. Begin by removing any FRUs that have to be removed before replacing the failing FRU. Any such FRUs are listed at the beginning of each FRU replacement procedure. Remove them in the order in which they are listed.
4. Follow the correct sequence in the steps for removing a FRU, as given in the drawings by the numbers in square callouts.
5. When turning a screw, turn it in the direction as given by the arrow in the drawing.
6. When removing a FRU, move it in the direction as given by the arrow in the drawing.
7. To put the new FRU in place, reverse the removal procedure and follow any notes that pertain to replacement.
8. When replacing a FRU, use the correct screw(s) as shown in the replacement procedure.



DANGER

Before removing any FRU, turn off the computer, unplug all power cords from electrical outlets, remove the battery pack, and then disconnect any interconnecting cables.

Attention: After replacing a FRU, do not turn on the computer until you have made sure that all screws, springs, and other small parts are in place and none are loose inside the computer. Verify this by shaking the computer gently and listening for rattling sounds. Metallic parts or metal flakes can cause electrical short circuits.

Attention: The system board is sensitive to, and can be damaged by, electrostatic discharge. Before touching it, establish personal grounding by touching a ground point with one hand or by using an electrostatic discharge (ESD) strap (P/N 6405959).

1010 Battery pack

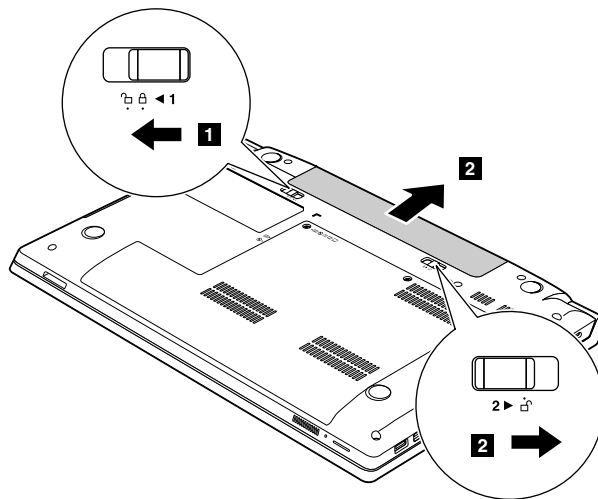
Removal steps of battery pack



DANGER

Use only the battery specified in the parts list for your computer. Any other battery could ignite or explode.

Unlock the manual battery latch **1**. Hold the right battery latch in the unlocked position, and then remove the battery pack **2**.



When installing: Install the battery pack in the slot. Ensure that the battery latches are in the locked position.

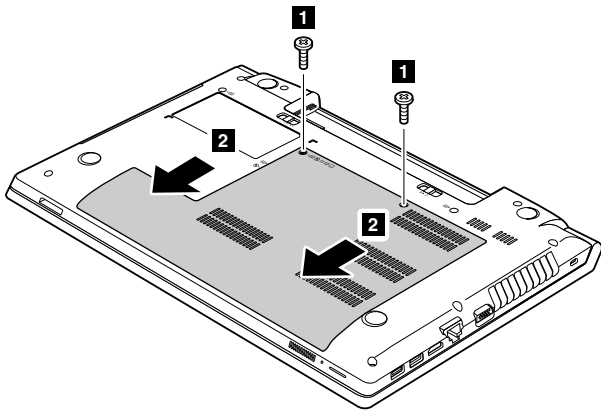
1020 Bottom slot cover

For access, remove this FRU:

- “1010 Battery pack” on page 46

Removal steps of bottom slot cover

Remove the screws **1**, and then remove the cover **2**.



Step	Screw (quantity)	Color	Torque
1	M2 × 3 mm, flat-head, nylon-coated (2)	Black	1.85 kgf-cm

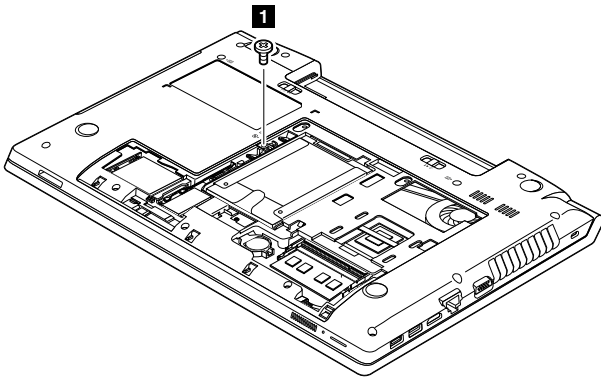
1030 Optical drive or blank bezel

For access, remove these FRUs in order:

- “1010 Battery pack” on page 46
- “1020 Bottom slot cover” on page 46


Removal steps of optical drive or blank bezel

Remove the screw **1**.



Step	Screw (quantity)	Color	Torque
1	M2 × 3 mm, flat-head, nylon-coated (1)	Black	1.85 kgf-cm

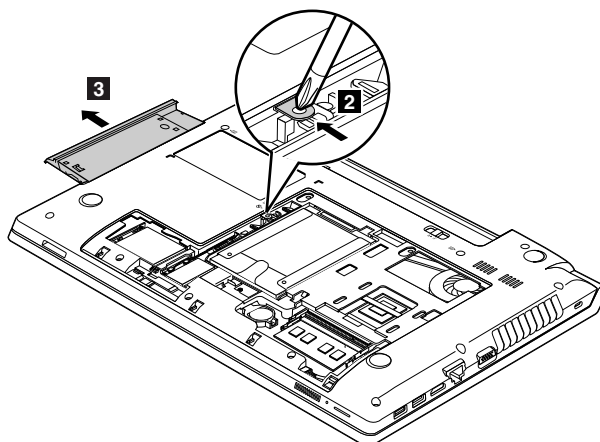
Insert a screwdriver into the screw hole **2**. Then push the optical drive in the direction shown by the arrow **3** to remove the drive.




Removal steps of optical drive bezel and optical drive bracket

Remove the optical drive bezel in the direction shown by the arrow in the following illustrations.

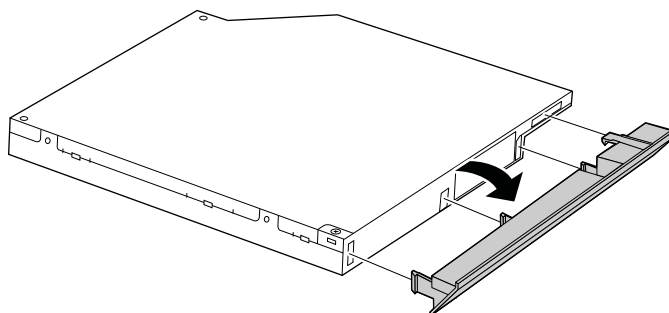For Lenovo V580 models




For Lenovo V580c models

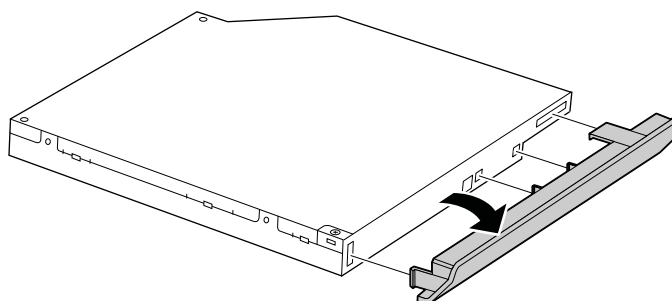


Remove the screw(s) **1** and then remove the optical drive bracket.

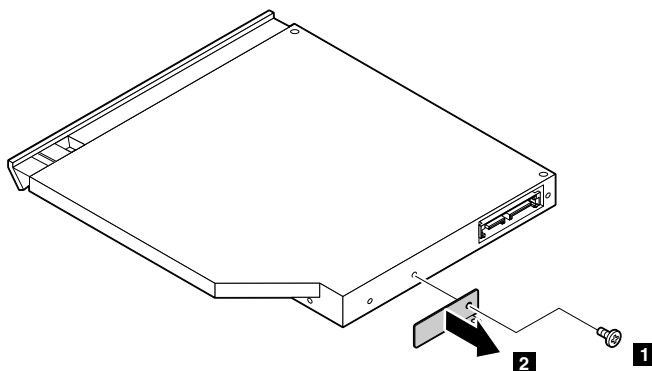For Lenovo V580 models



Step	Screw (quantity)	Color	Torque
1	M2 × 3 mm, flat-head, nylon-coated (1)	Black	1.85 kgf-cm

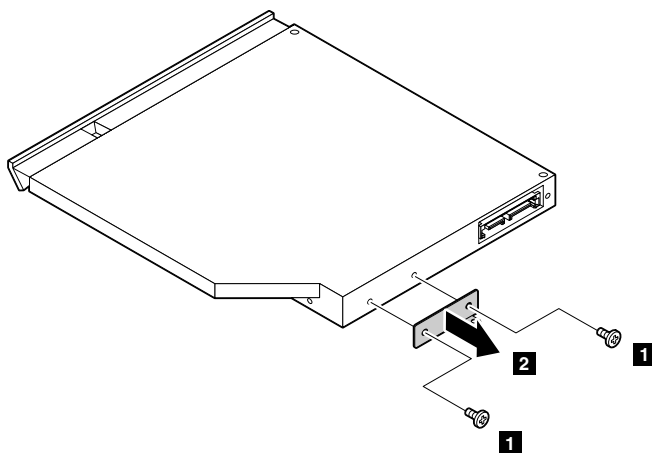For Lenovo V580c models



Step	Screw (quantity)	Color	Torque
1	M2 × 3 mm, flat-head, nylon-coated (2)	Black	1.85 kgf-cm

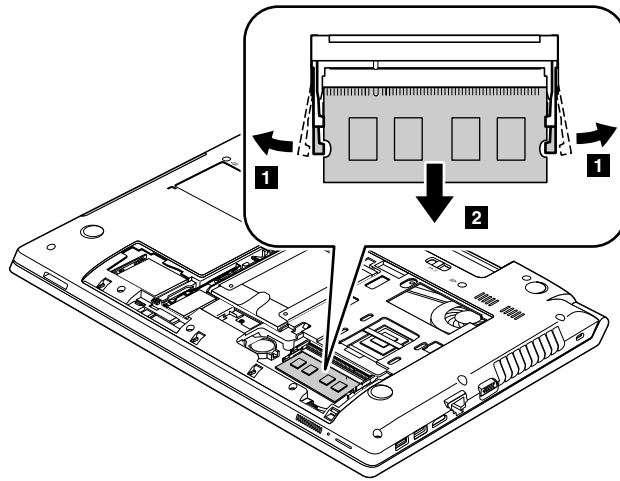
1040 Memory modules

For access, remove these FRUs in order:

- “1010 Battery pack” on page 46
- “1020 Bottom slot cover” on page 46


Removal steps of memory modules

Release the two latches on both edges of the socket at the same time in the direction shown by the arrows **1**, and then unplug the memory module in the direction shown by the arrow **2**.



When installing: Insert the notched end of the memory module into the socket. Press the memory module firmly, and pivot it until it snaps into place. Ensure that it is firmly installed in the slot and does not move easily.

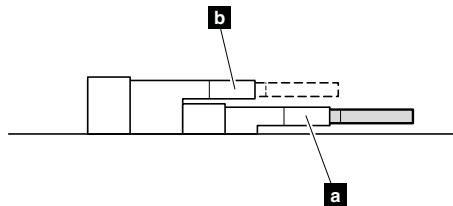Note: If only one memory module is to be installed on the computer you are servicing, the memory module must be installed in SLOT-0 (**a** lower slot), but not in SLOT-1 (**b** upper slot).



1050 Hard disk drive assembly

For access, remove these FRUs in order:

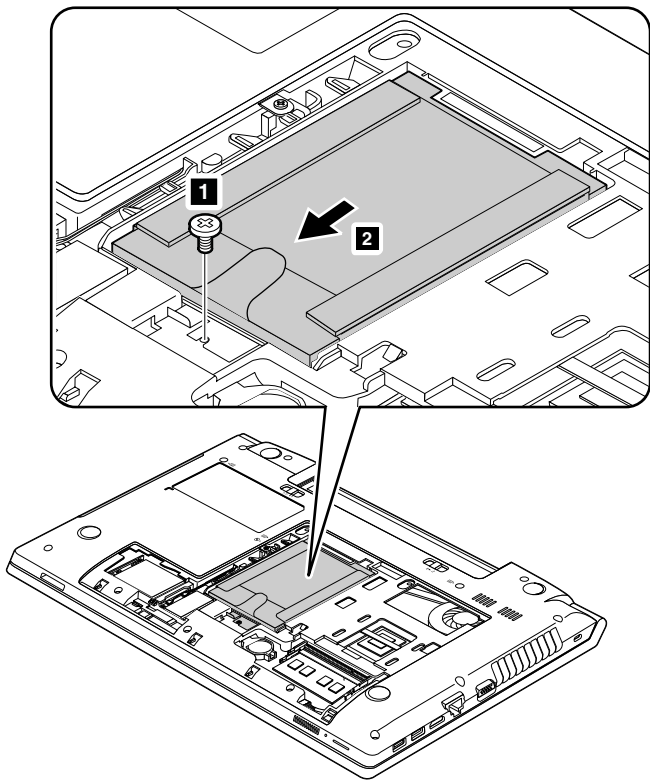
- “1010 Battery pack” on page 46
- “1020 Bottom slot cover” on page 46

Attention:

- Do not drop the drive or apply any physical shock to it. The drive is sensitive to physical shock. Improper handling can cause damage and permanent loss of data.
- Before removing the drive, have the user make a backup copy of all the information on it if possible.
- Never remove the drive while the computer is operating or in suspend mode.


Removal steps of hard disk drive assembly

Remove the screw **1**, then pull the tab in the direction shown by the arrow **2**.



Step	Screw (quantity)	Color	Torque
1	M2 × 3 mm, flat-head, nylon-coated (1)	Black	1.85 kgf-cm

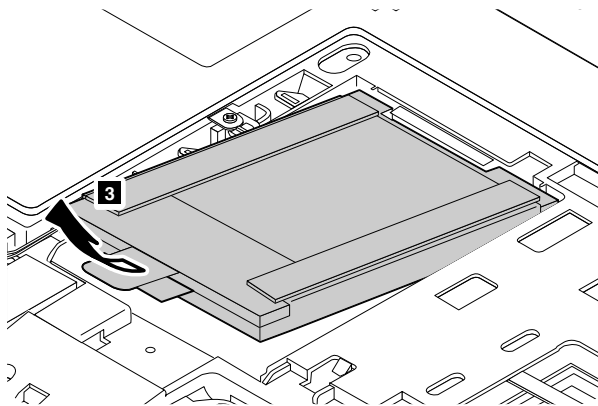
Remove the hard disk drive from the slot in the direction shown by the arrow **3**.



When installing: Ensure that the hard disk drive connector is attached firmly.


Removal steps of hard disk drive bracket

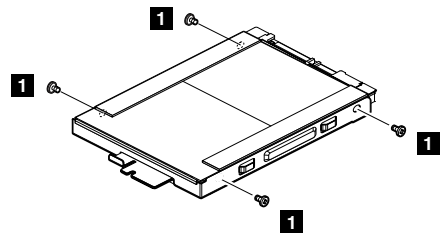Remove the screws **1**.



Step	Screw (quantity)	Color	Torque
1	M3 × 4 mm, flat-head, nylon-coated (4)	Black	4.0 kgf-cm

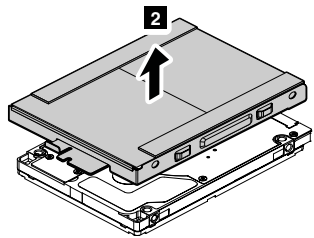Remove the hard disk drive bracket in the direction shown by the arrow **2**.




1060 PCI Express Mini Card for wireless LAN

For access, remove these FRUs in order:

- “1010 Battery pack” on page 46
- “1020 Bottom slot cover” on page 46


Removal steps of PCI Express Mini Card for wireless LAN

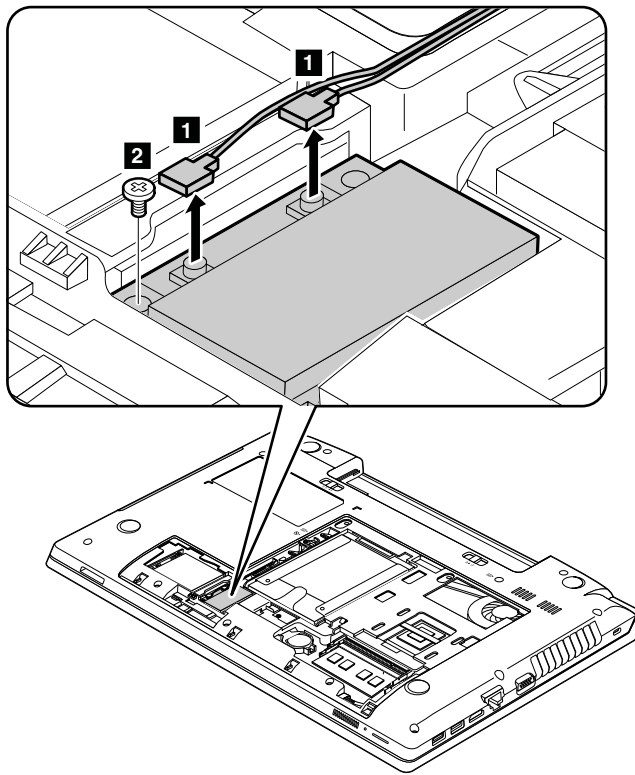In steps **1**, unplug the connectors using the removal tool antenna RF connector (P/N: 08K7159) or pick the connectors with your fingers and gently unplug them in the direction of the arrows. Then remove the screw **2**.



Step	Screw (quantity)	Color	Torque
2	M2 × 3 mm, flat-head, nylon-coated (1)	Black	1.85 kgf-cm

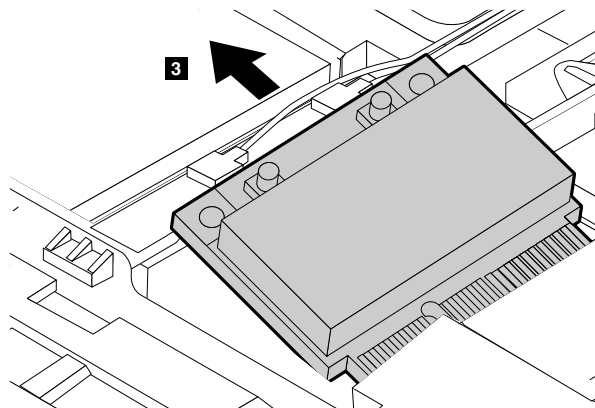Remove the PCI Express Mini Card for wireless LAN in the direction shown by the arrow **3**.



When installing: Plug the black cable into the main connector, and the white cable into the auxiliary connector.

1070 mSATA solid-state drive

For access, remove these FRUs in order:

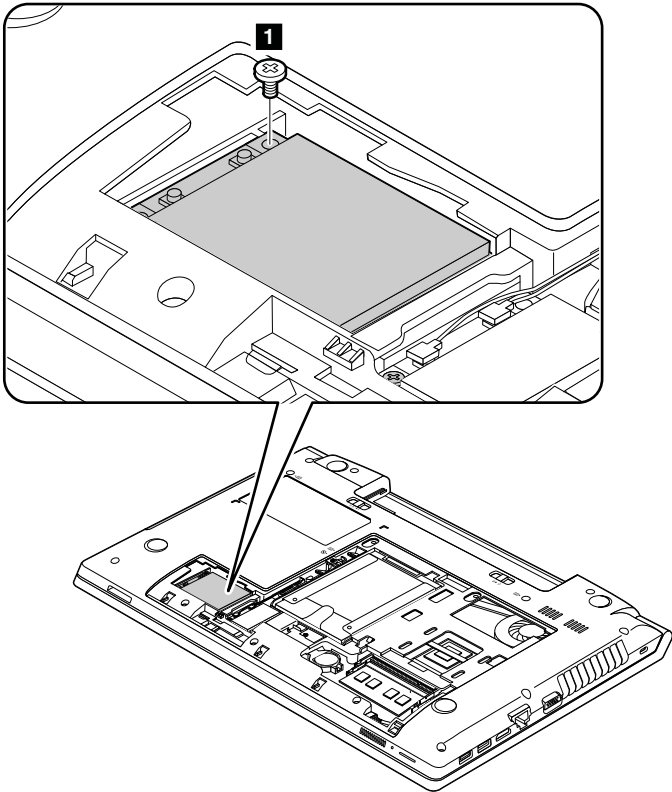
- “1010 Battery pack” on page 46
- “1020 Bottom slot cover” on page 46

Attention:

- Do not drop the drive or apply any physical shock to it. The drive is sensitive to physical shock. Improper handling can cause damage and permanent loss of data.
- Before removing the drive, have the user make a backup copy of all the information on it if possible.
- Never remove the drive while the computer is operating or in suspend mode.


Removal steps of mSATA solid-state drive

Remove the screw **1**.



Step	Screw (quantity)	Color	Torque
1	M2 × 3 mm, flat-head, nylon-coated (1)	Black	1.85 kgf-cm

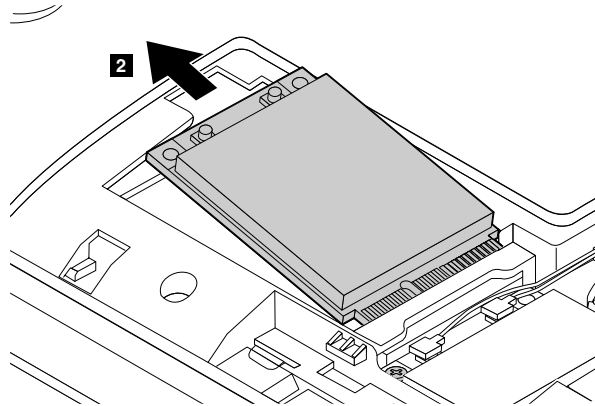Remove the mSATA solid-state drive in the direction shown by the arrow **2**.



1080 Backup battery

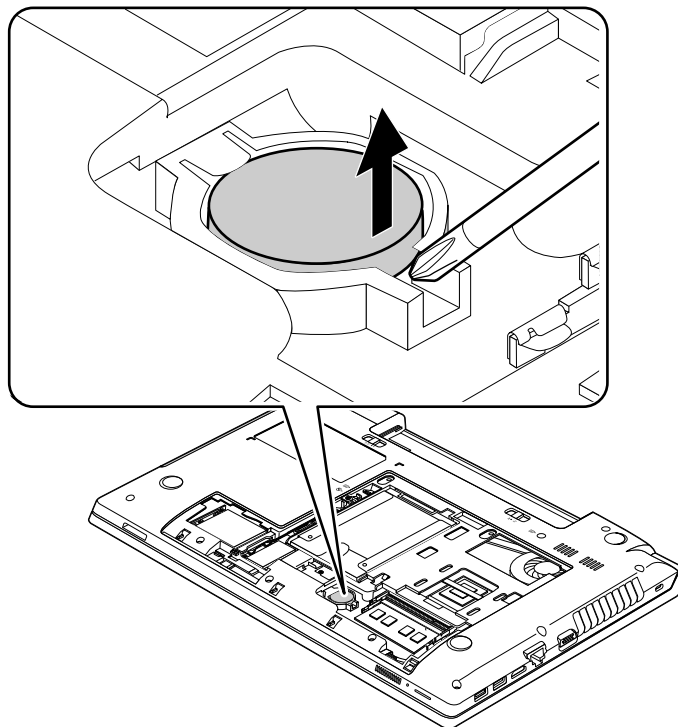
Removal steps of backup battery



DANGER

Use only the battery specified in the parts list for your computer. Any other battery could ignite or explode.

Pry the backup battery out using a screwdriver.




1090 Keyboard

For access, remove these FRUs in order:

- “1010 Battery pack” on page 46
- “1020 Bottom slot cover” on page 46

Removal steps of keyboard

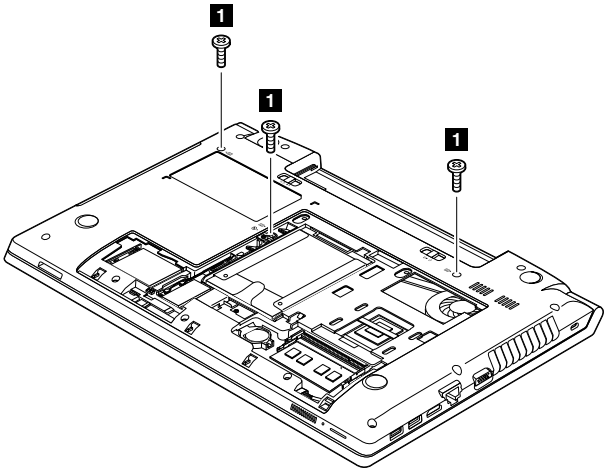Remove the screws **1**.




When installing: Ensure that the screws have been fastened to secure the keyboard.


Step	Screw (quantity)	Color	Torque
1	M2.5 × 8 mm, flat-head, nylon-coated (3)	Black	4.0 kgf-cm

Insert a polyester film into the front edge of the keyboard, and then push the polyester film in the direction shown by the arrow **2** to unlatch the front edge of the keyboard.

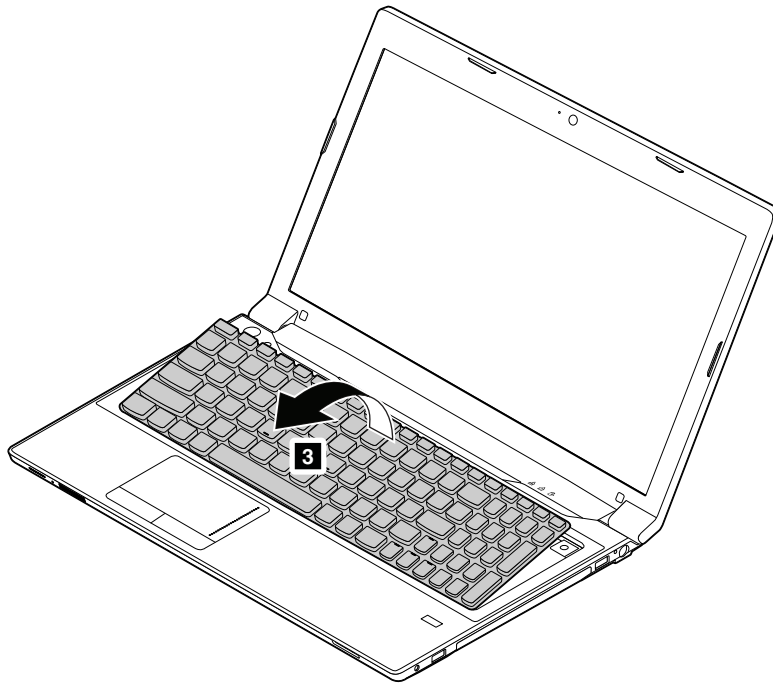Detach the keyboard lightly in the direction shown by the arrow **3**.



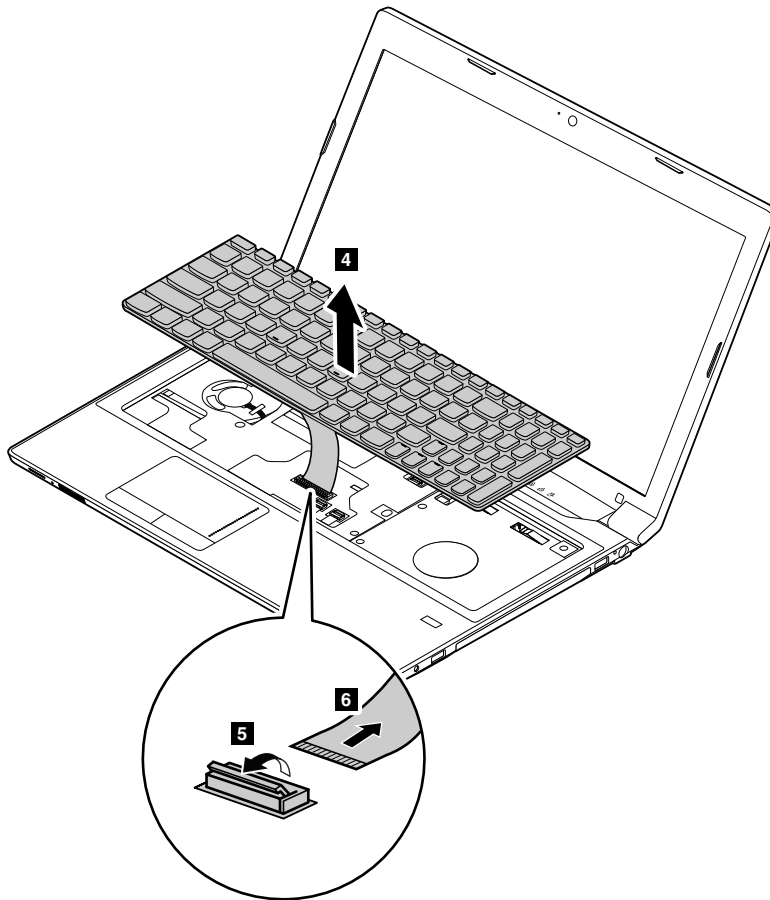Carefully lift the keyboard until you can see how it is connected **4**, and then detach the keyboard connector.



When installing: Ensure that the keyboard connector is attached firmly.

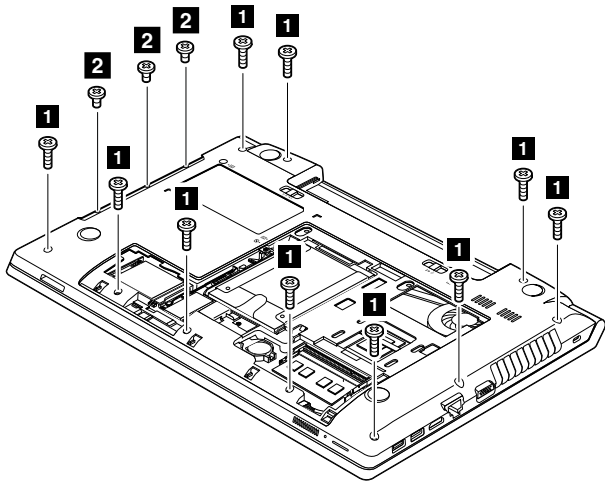
1100 Keyboard bezel

For access, remove these FRUs in order:

- “1010 Battery pack” on page 46
- “1020 Bottom slot cover” on page 46
- “1030 Optical drive or blank bezel” on page 47
- “1090 Keyboard” on page 56


Removal steps of keyboard bezel

Remove the screws **1** and **2** that secure the keyboard bezel.




Step	Screw (quantity)	Color	Torque
1	M2.5 × 8 mm, flat-head, nylon-coated (10)	Black	4.0 kgf-cm
2	M2 × 3 mm, flat-head, nylon-coated (3)	Silver	1.85 kgf-cm

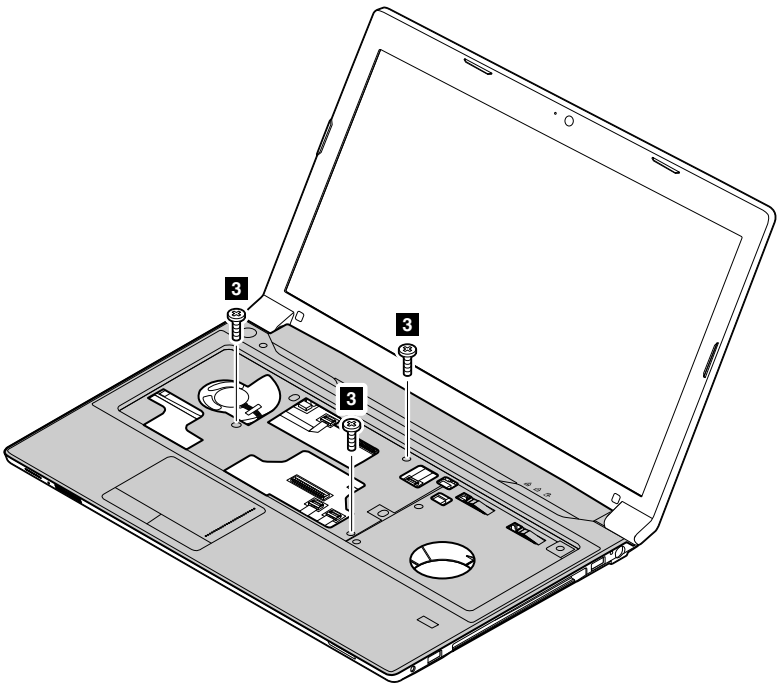Remove the screws **3**.




Step	Screw (quantity)	Color	Torque
3	M2 × 5 mm, flat-head, nylon-coated (3)	Silver	1.85 kgf-cm

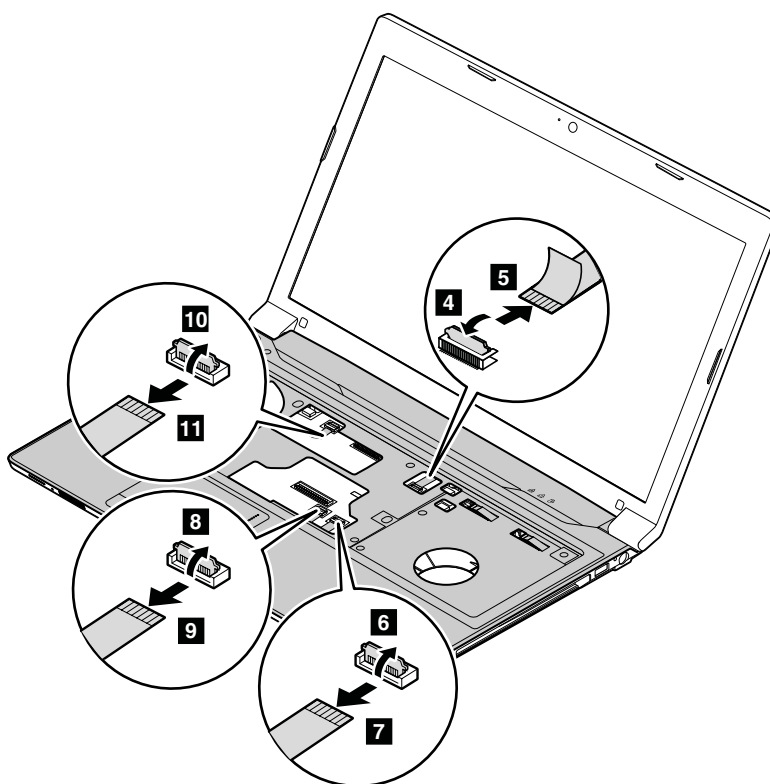Detach the connectors as shown in the following illustration.



When installing: Ensure that all the connectors are attached firmly.

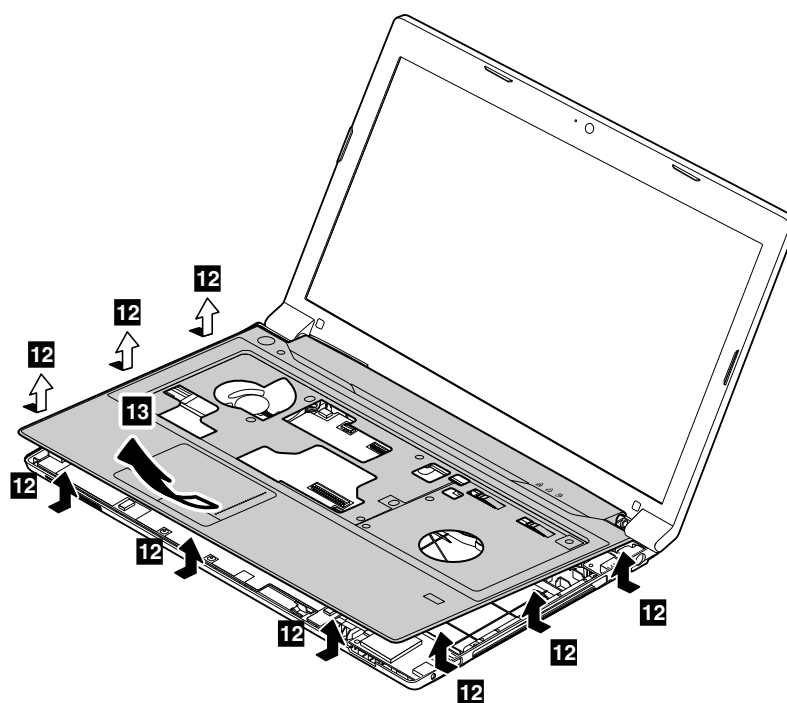In steps **12**, release the keyboard bezel from the frame using a plastic pry tool as shown in the following illustration. Then remove the keyboard bezel in the direction shown by the arrow **13**.



1110 Fingerprint bracket and fingerprint board

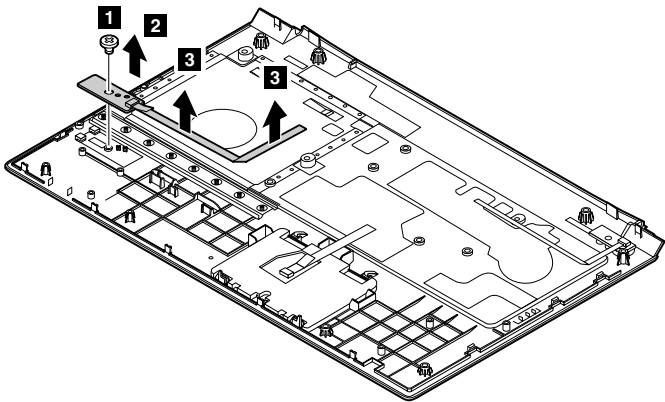
For access, remove these FRUs in order:

- “1010 Battery pack” on page 46
- “1020 Bottom slot cover” on page 46
- “1030 Optical drive or blank bezel” on page 47
- “1090 Keyboard” on page 56
- “1100 Keyboard bezel” on page 58


Removal steps of fingerprint bracket and fingerprint board

Remove the screw **1**, and then remove the fingerprint board as shown in the following illustration.

For Lenovo V580 models



For Lenovo V580c models

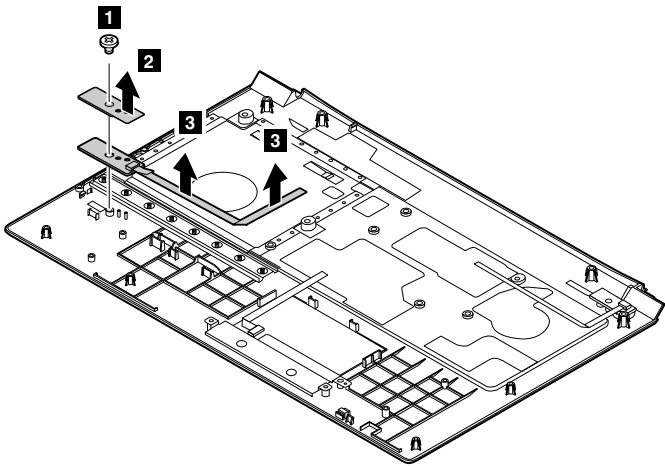

Step	Screw (quantity)	Color	Torque
1	M2 × 3 mm, flat-head, nylon-coated (1)	Black	1.85 kgf-cm

1120 LED board

For access, remove these FRUs in order:

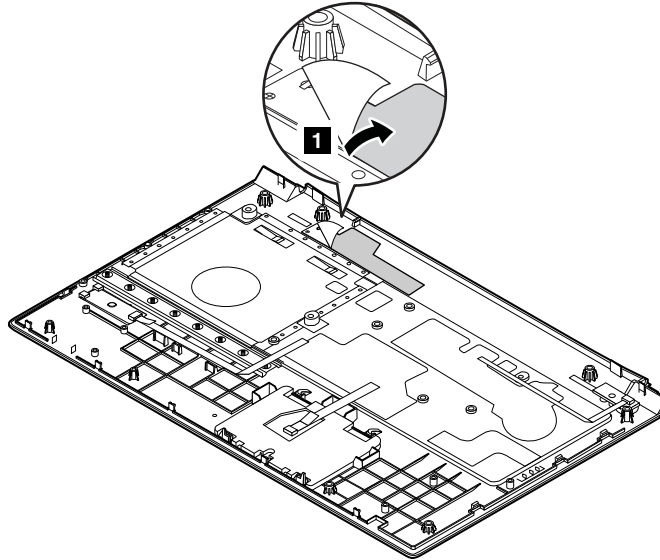
- “1010 Battery pack” on page 46
- “1020 Bottom slot cover” on page 46

- “1030 Optical drive or blank bezel” on page 47
- “1090 Keyboard” on page 56
- “1100 Keyboard bezel” on page 58


Removal steps of LED board

Peel off the mylar tape in the direction shown by the arrow **1**.

For Lenovo V580 models




For Lenovo V580c models

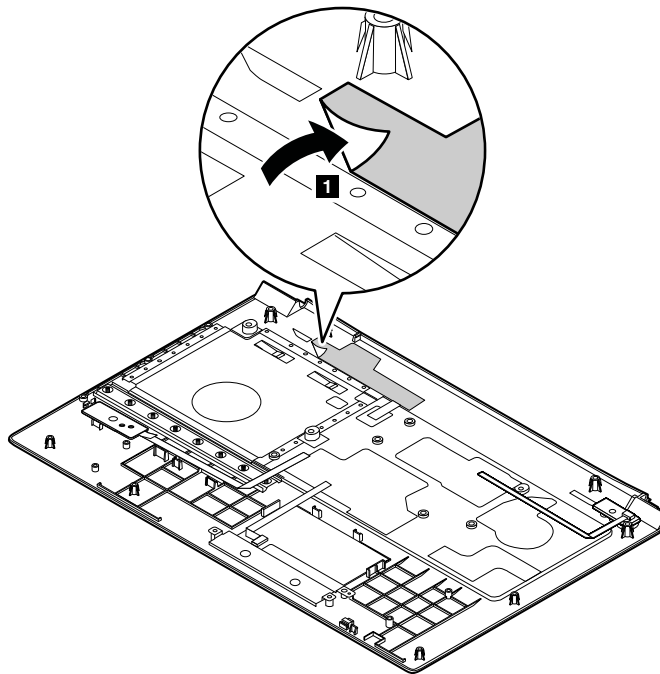


Remove the LED board in the direction shown by the arrow **2**.

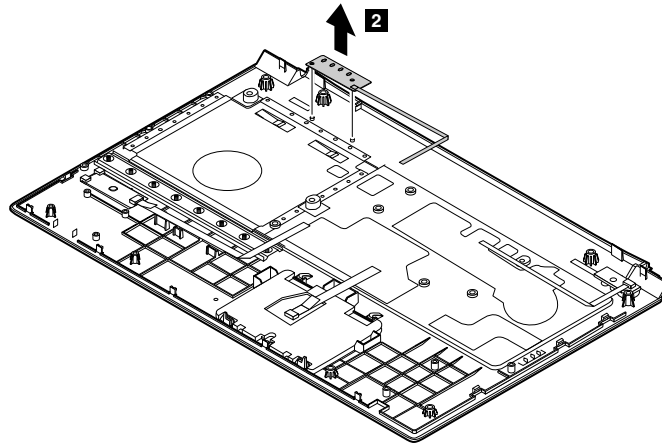For Lenovo V580 models



For Lenovo V580c models

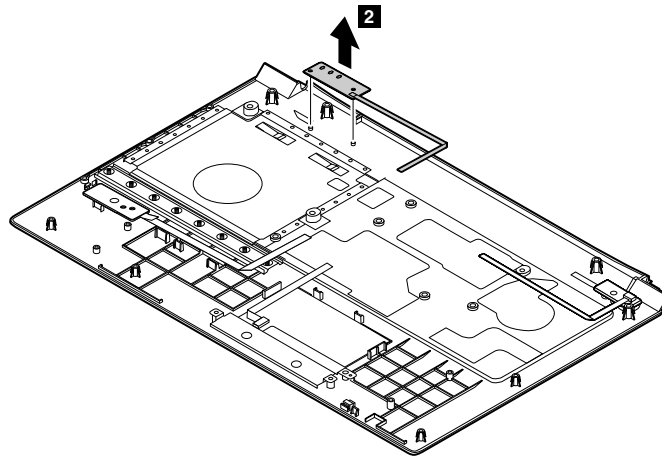


1130 Touch pad bracket

For access, remove these FRUs in order:


- “1010 Battery pack” on page 46
- “1020 Bottom slot cover” on page 46
- “1030 Optical drive or blank bezel” on page 47
- “1090 Keyboard” on page 56
- “1100 Keyboard bezel” on page 58

Removal steps of touch pad for Lenovo V580 models

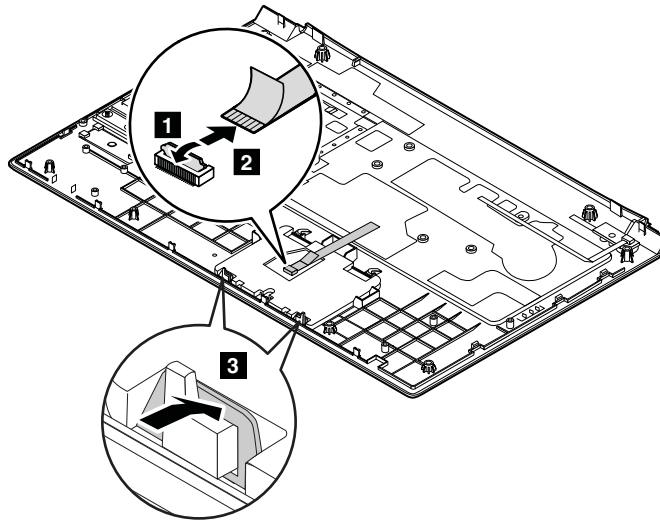Remove the touch pad cable and then push the touch pad in the direction shown by the arrow **3**.




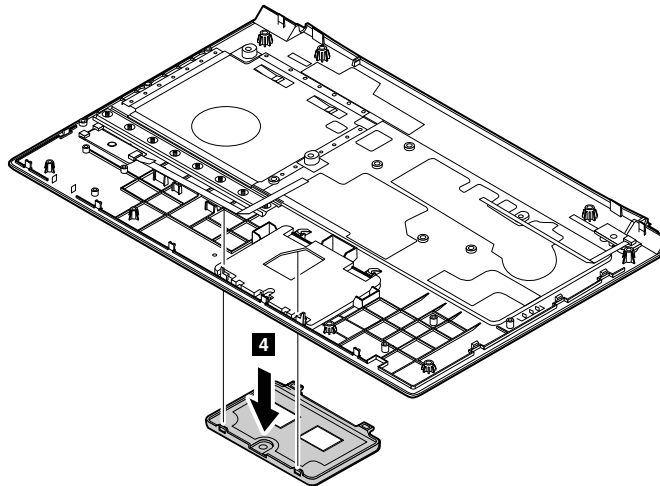Remove the touch pad in the direction shown by the arrow **4**.



Removal steps of touch pad bracket for Lenovo V580c models

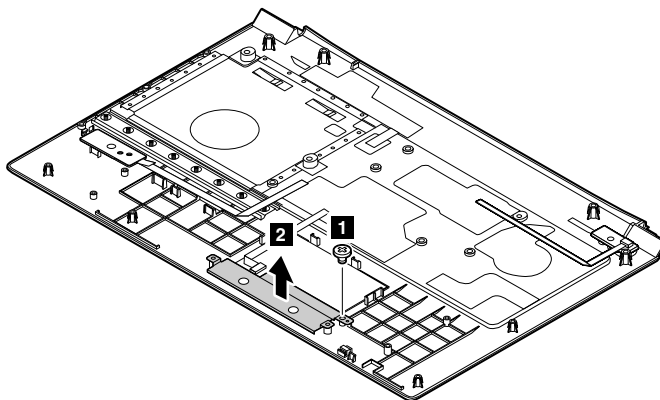Remove the screw **1** and then remove the touch pad bracket in the direction shown by the arrow **2**.



Step	Screw (quantity)	Color	Torque
1	M2 × 3 mm, flat-head, nylon-coated (1)	Black	1.85 kgf-cm

1140 Power board

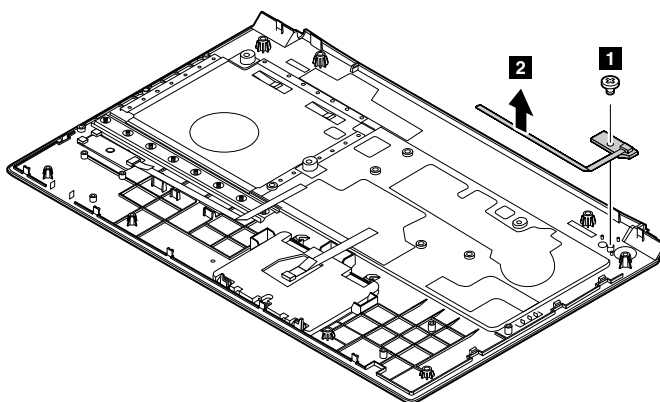
For access, remove these FRUs in order:

- “1010 Battery pack” on page 46
- “1020 Bottom slot cover” on page 46
- “1030 Optical drive or blank bezel” on page 47
- “1090 Keyboard” on page 56
- “1100 Keyboard bezel” on page 58


Removal steps of power board

Remove the screw **1** and then remove the power board **2**.

For Lenovo V580 models



For Lenovo V580c models

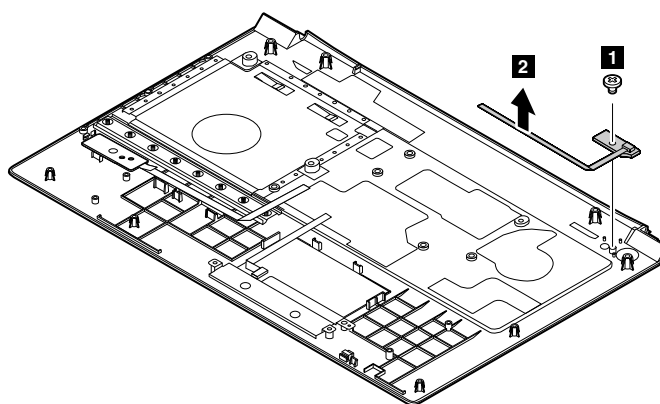

Step	Screw (quantity)	Color	Torque
1	M2 × 3 mm, flat-head, nylon-coated (1)	Black	1.85 kgf-cm

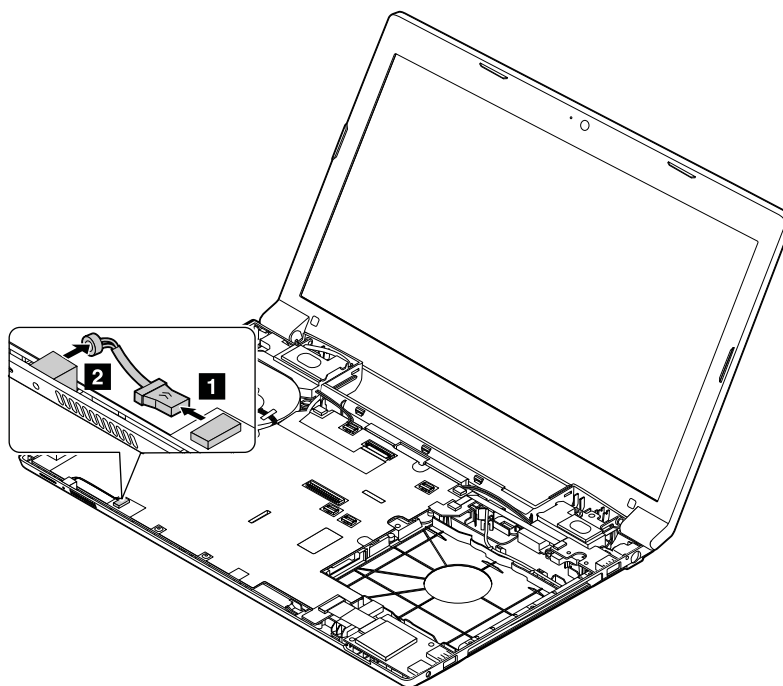
1150 Microphone assembly

For access, remove these FRUs in order:

- “1010 Battery pack” on page 46
- “1020 Bottom slot cover” on page 46
- “1030 Optical drive or blank bezel” on page 47
- “1090 Keyboard” on page 56
- “1100 Keyboard bezel” on page 58

Removal steps of microphone assembly

Detach the connector **1**, and then remove the microphone assembly.



When installing: Ensure that the connector is attached firmly to the system board.

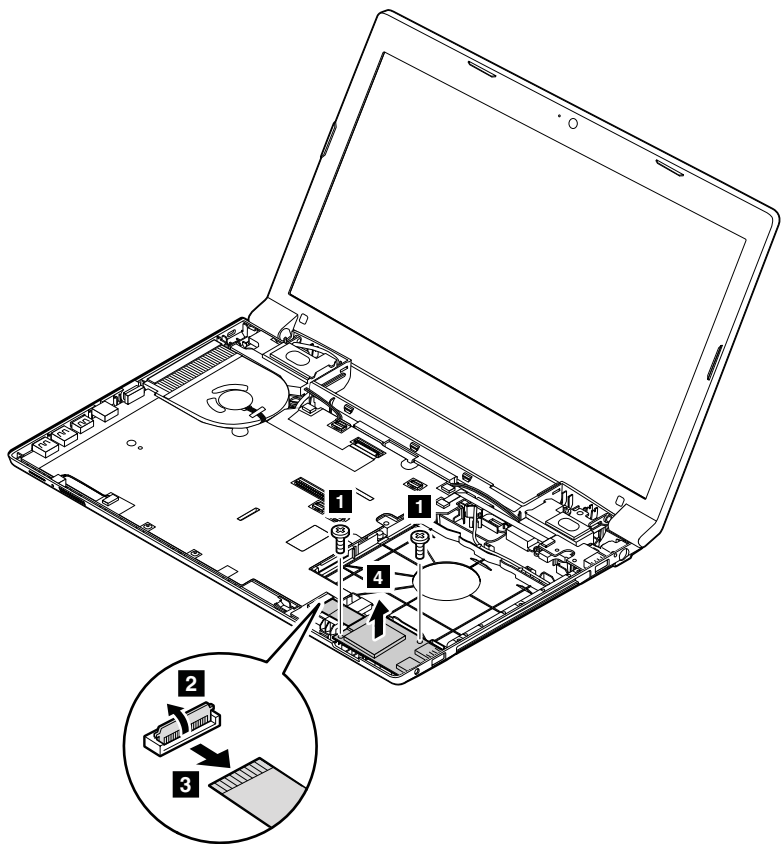
1160 I/O board

For access, remove these FRUs in order:

- “1010 Battery pack” on page 46
- “1020 Bottom slot cover” on page 46
- “1030 Optical drive or blank bezel” on page 47
- “1090 Keyboard” on page 56
- “1100 Keyboard bezel” on page 58

Removal steps of I/O board

Remove the screws **1**. Detach the cable **3**. Then remove the I/O board **4**.



Step	Screw (quantity)	Color	Torque
1	M2 × 5 mm, flat-head, nylon-coated (2)	Silver	1.85 kgf-cm

When installing: Ensure that the cable is attached firmly to the system board.

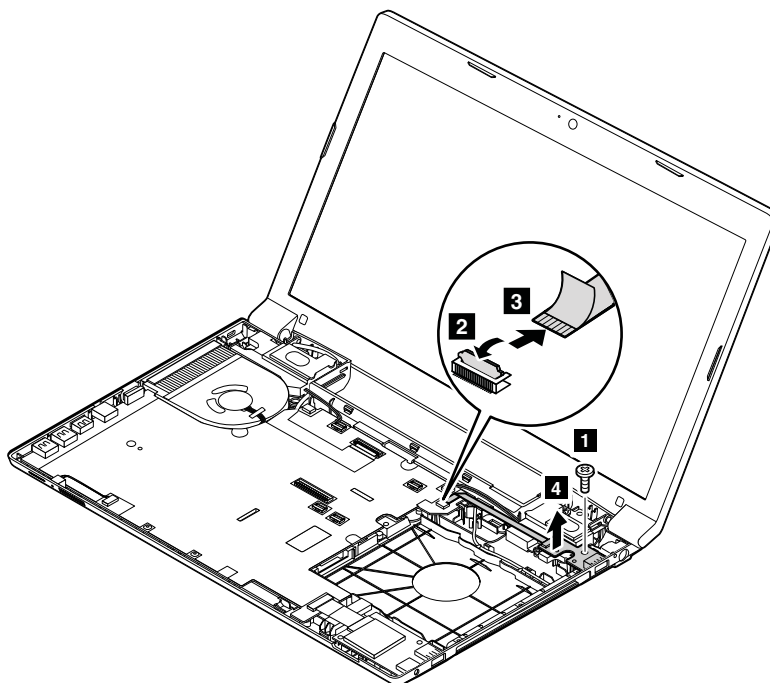
1170 USB board

For access, remove these FRUs in order:

- “1010 Battery pack” on page 46
- “1020 Bottom slot cover” on page 46
- “1030 Optical drive or blank bezel” on page 47
- “1090 Keyboard” on page 56
- “1100 Keyboard bezel” on page 58

Removal steps of USB board

Remove the screw **1**, and detach the USB cable. Then remove the USB board in the direction shown by the arrow **4**.



Step	Screw (quantity)	Color	Torque
1	M2 × 5 mm, flat-head, nylon-coated (1)	Silver	1.85 kgf-cm

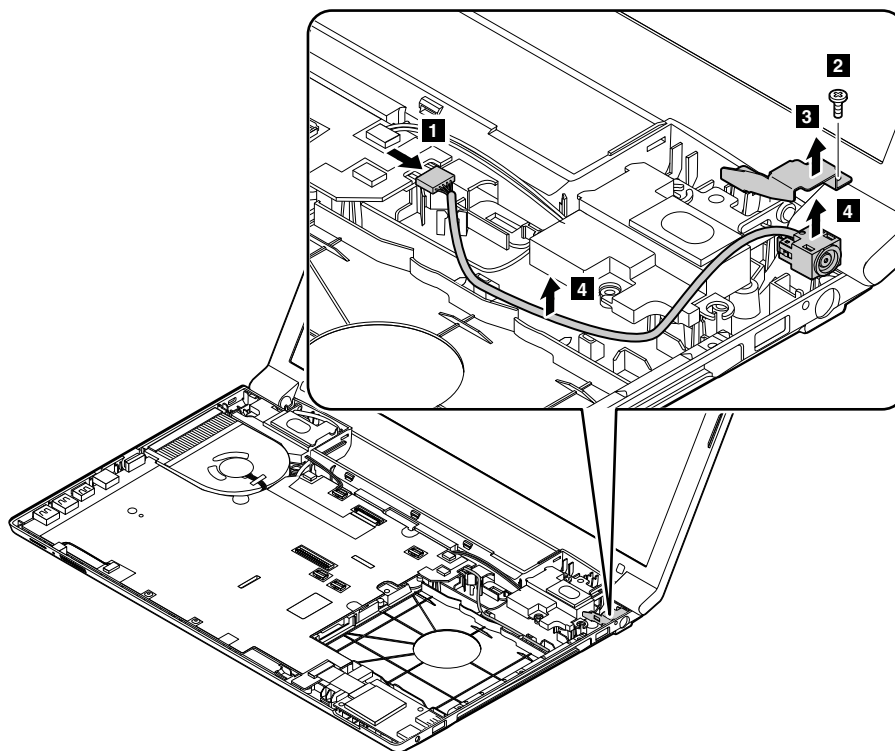
1180 DC-in connector

For access, remove these FRUs in order:

- “1010 Battery pack” on page 46
- “1020 Bottom slot cover” on page 46
- “1030 Optical drive or blank bezel” on page 47
- “1040 Memory modules” on page 49
- “1050 Hard disk drive assembly” on page 50
- “1060 PCI Express Mini Card for wireless LAN” on page 52
- “1070 mSATA solid-state drive” on page 54
- “1080 Backup battery” on page 55
- “1090 Keyboard” on page 56
- “1100 Keyboard bezel” on page 58
- “1170 USB board” on page 67

Removal steps of DC-in connector

Disconnect the DC-in connector **1**, and remove the screw **2**. Then remove the DC-in bracket and DC-in cable as shown in the following illustration.



Step	Screw (quantity)	Color	Torque
2	M2 × 3 mm, flat-head, nylon-coated (1)	Black	1.85 kgf-cm

1190 System board assembly

Important notices for removing the system board

When removing the system board, bear the following in mind:

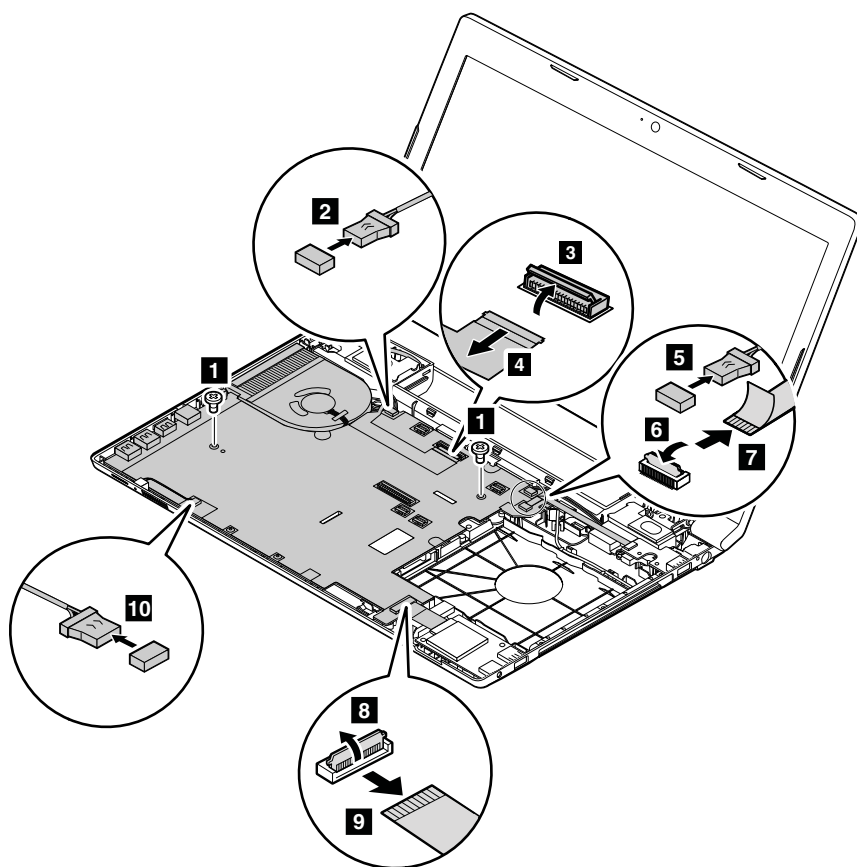
- Be careful not to drop the system board on a bench top that has a hard surface, such as metal, wood, or composite.
- Avoid rough handling of any kind.
- At every point in the process, be sure not to drop or stack the system board.
- If you put a system board down, be sure to put it only on a padded surface such as an ESD mat or a corrugated conductive surface.

For access, remove these FRUs in order:

- “1010 Battery pack” on page 46
- “1020 Bottom slot cover” on page 46
- “1030 Optical drive or blank bezel” on page 47
- “1040 Memory modules” on page 49
- “1050 Hard disk drive assembly” on page 50
- “1060 PCI Express Mini Card for wireless LAN” on page 52
- “1070 mSATA solid-state drive” on page 54
- “1080 Backup battery” on page 55
- “1090 Keyboard” on page 56
- “1100 Keyboard bezel” on page 58

Removal steps of system board assembly

Remove the screws **1**, and then detach the connectors as shown in the following illustration.




Step	Screw (quantity)	Color	Torque
1	M2 × 5 mm, flat-head, nylon-coated (3)	Silver	1.85 kgf-cm


When installing: Ensure that all the connectors are attached firmly.

Detach the connector **11**, and then remove the system board in the direction shown by the arrow **12**.

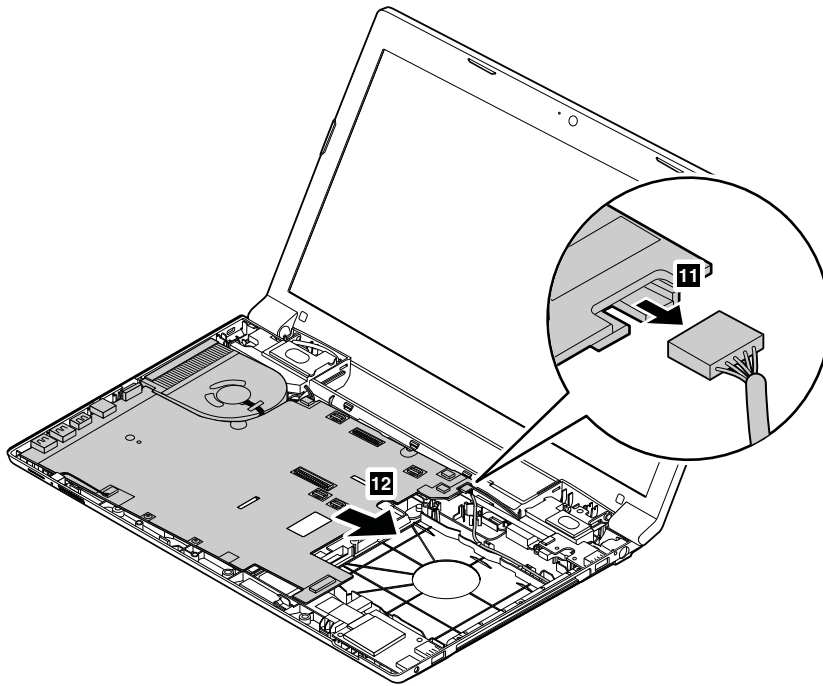For Lenovo V580 models



For Lenovo V580c models

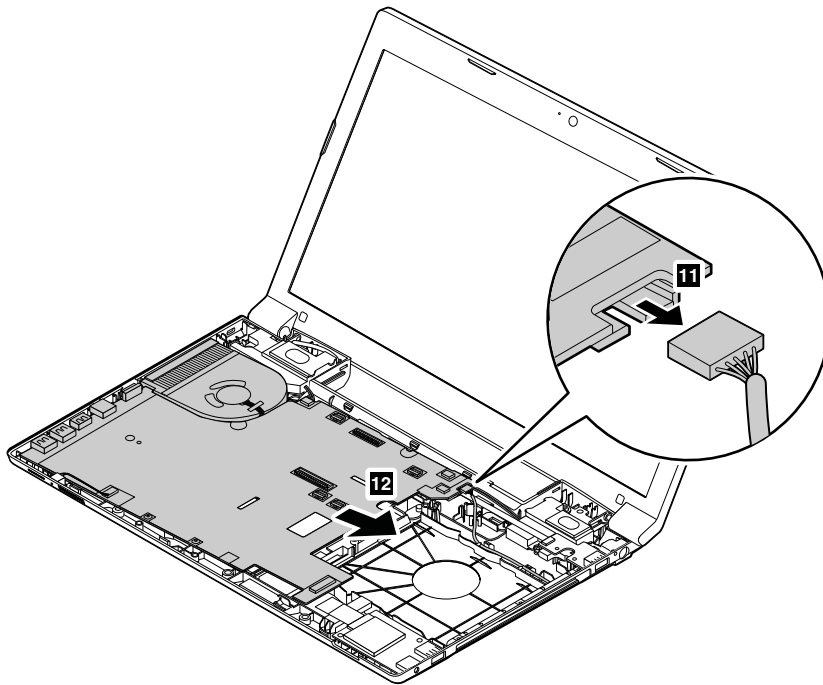


1200 Thermal fan assembly

For access, remove these FRUs in order:

- “1010 Battery pack” on page 46
- “1020 Bottom slot cover” on page 46
- “1030 Optical drive or blank bezel” on page 47
- “1040 Memory modules” on page 49
- “1050 Hard disk drive assembly” on page 50
- “1060 PCI Express Mini Card for wireless LAN” on page 52
- “1070 mSATA solid-state drive” on page 54
- “1080 Backup battery” on page 55
- “1090 Keyboard” on page 56
- “1100 Keyboard bezel” on page 58
- “1150 Microphone assembly” on page 66
- “1190 System board assembly” on page 69


Removal steps of thermal fan assembly

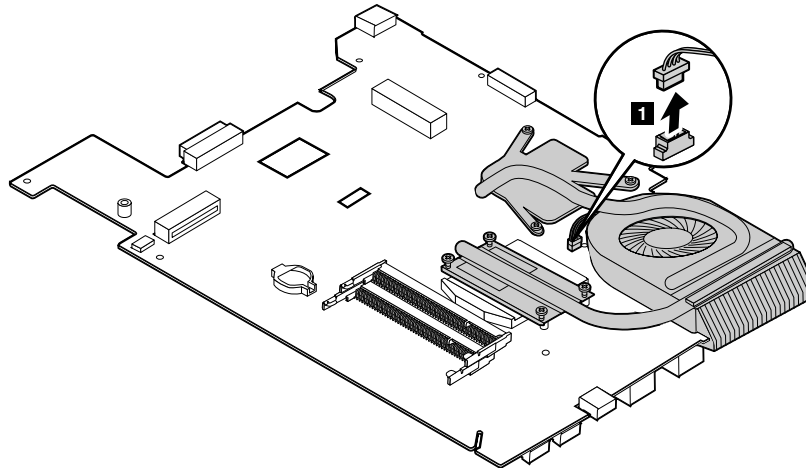Detach the connector **1**.




When installing: Ensure that the connector is attached firmly.

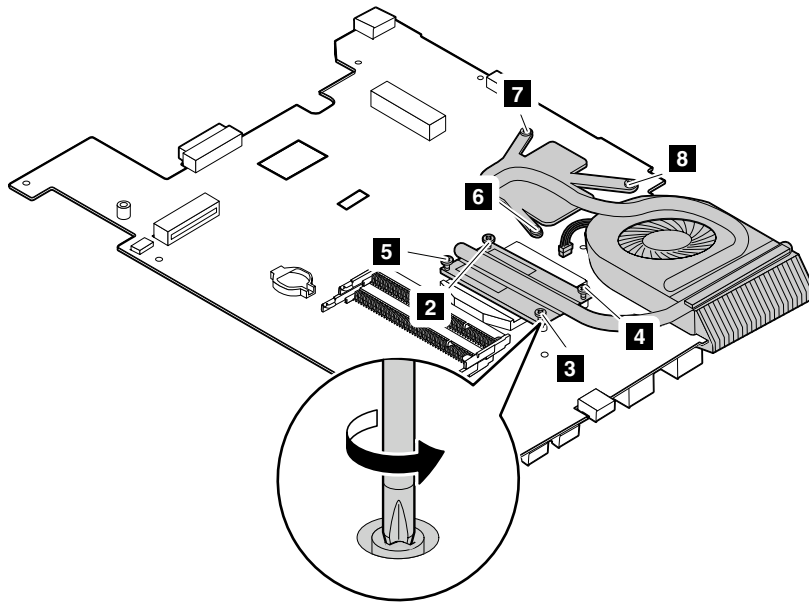Loosen the screws **2** to **8**.




Lift the thermal fan assembly in the direction shown by the arrow **9**.

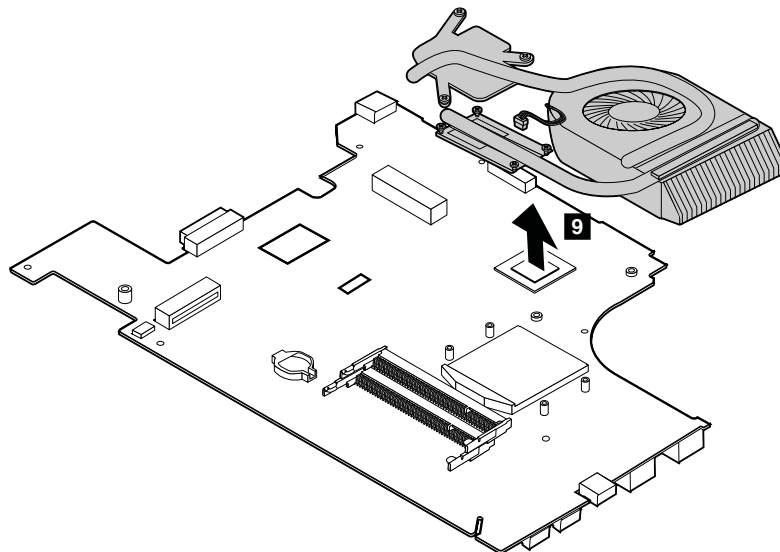Attention: Be careful not to damage the connector.



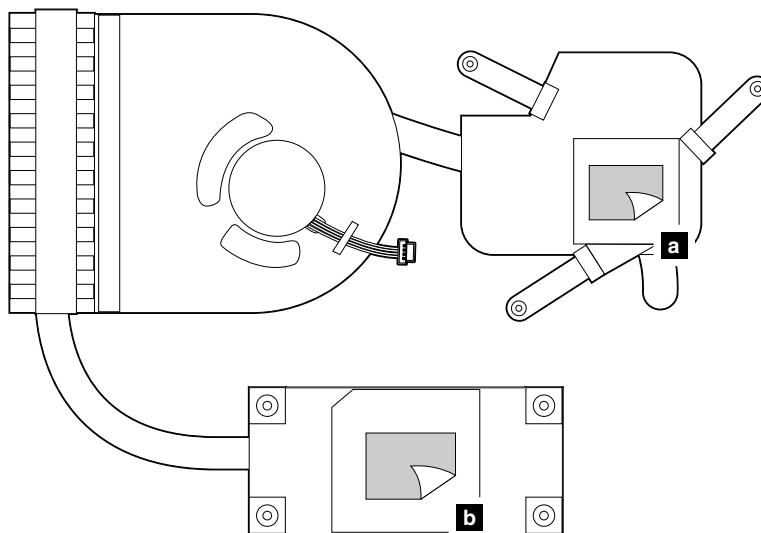When installing: Before you attach the thermal fan assembly to the computer, apply thermal grease, at an amount of 0.2 grams, on the part marked **a** and **b** as shown in the following illustration. Either too much or too less application of grease can cause a thermal problem due to imperfect contact with a component.



1210 Microprocessor

For access, remove these FRUs in order:

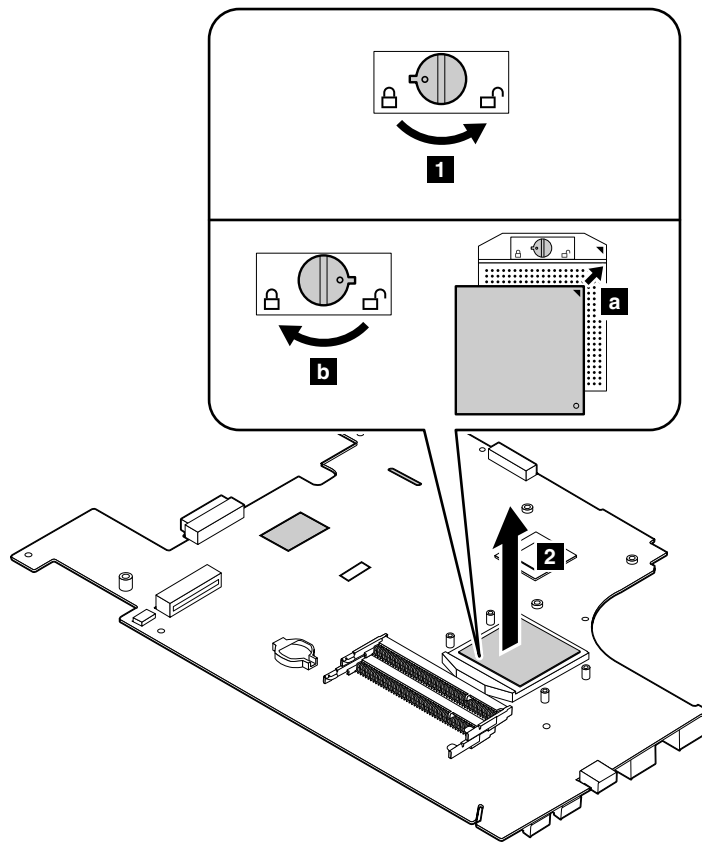
- “1010 Battery pack” on page 46
- “1020 Bottom slot cover” on page 46
- “1030 Optical drive or blank bezel” on page 47
- “1040 Memory modules” on page 49
- “1050 Hard disk drive assembly” on page 50
- “1060 PCI Express Mini Card for wireless LAN” on page 52
- “1070 mSATA solid-state drive” on page 54
- “1080 Backup battery” on page 55

- “1090 Keyboard” on page 56
- “1100 Keyboard bezel” on page 58
- “1150 Microphone assembly” on page 66
- “1190 System board assembly” on page 69
- “1200 Thermal fan assembly” on page 72

Attention: The microprocessor is extremely sensitive. When you service the microprocessor, avoid any kind of rough handling.

Removal steps of microprocessor

Rotate the head of the screw in the direction shown by the arrow **1** to release the lock, then remove the microprocessor **2**.



When installing: Place the microprocessor above the microprocessor socket **a**, and then rotate the head of the screw in the direction shown by the arrow **b** to secure the microprocessor.

1220 LCD unit

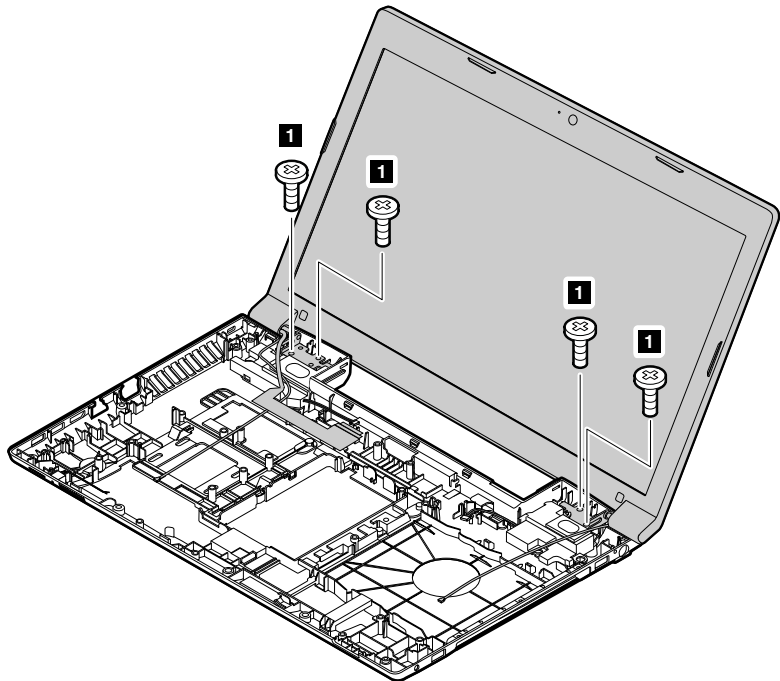
For access, remove these FRUs in order:

- “1010 Battery pack” on page 46
- “1020 Bottom slot cover” on page 46
- “1030 Optical drive or blank bezel” on page 47
- “1040 Memory modules” on page 49
- “1050 Hard disk drive assembly” on page 50
- “1060 PCI Express Mini Card for wireless LAN” on page 52
- “1070 mSATA solid-state drive” on page 54
- “1080 Backup battery” on page 55

- “1090 Keyboard” on page 56
- “1100 Keyboard bezel” on page 58
- “1150 Microphone assembly” on page 66
- “1160 I/O board” on page 67
- “1190 System board assembly” on page 69

Removal steps of LCD unit

Release the antenna cables from the cable guides. Then remove the screws **1**.




Step	Screw (quantity)	Color	Torque
1	M2.5 × 5 mm, flat-head, nylon-coated (4)	Silver	4.0 kgf-cm

When installing:

- Route the antenna cables along the cable guides. As you route the cables, ensure that they are not subject to any tension. Tension could cause the cables to be damaged by the cable guides, or a wire to be broken.
- Ensure that the LCD connector is attached firmly and ensure that you do not pinch the antenna cables when you attach the LCD assembly. Route the LCD cable along the cable guides.

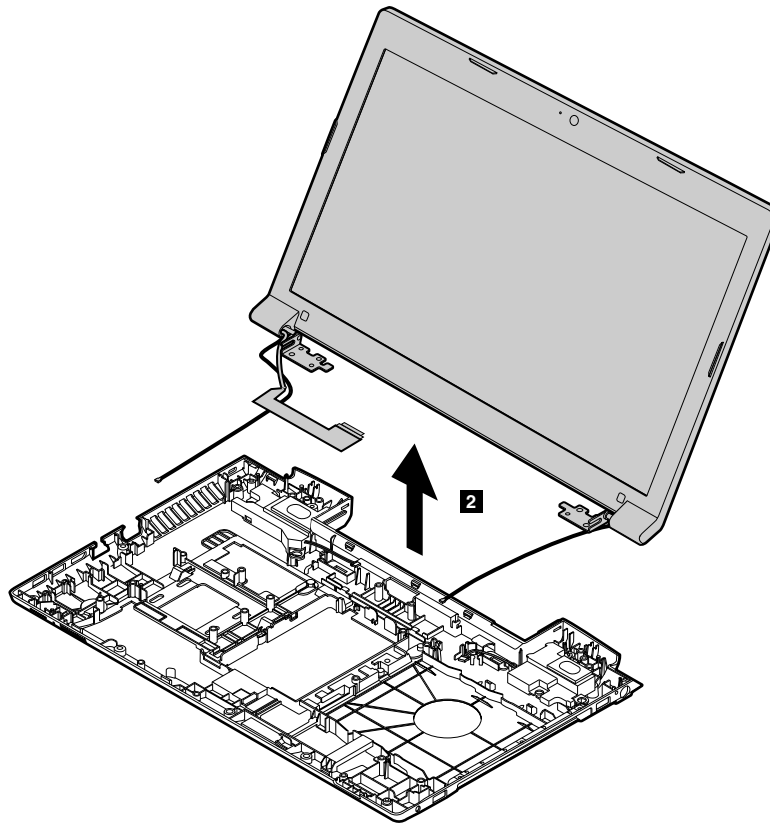Remove the LCD unit in the direction shown by the arrow **2**.




1230 Speaker assembly and base cover

For access, remove these FRUs in order:

- “1010 Battery pack” on page 46
- “1020 Bottom slot cover” on page 46
- “1030 Optical drive or blank bezel” on page 47
- “1040 Memory modules” on page 49
- “1050 Hard disk drive assembly” on page 50
- “1060 PCI Express Mini Card for wireless LAN” on page 52
- “1070 mSATA solid-state drive” on page 54
- “1080 Backup battery” on page 55
- “1090 Keyboard” on page 56
- “1100 Keyboard bezel” on page 58
- “1150 Microphone assembly” on page 66
- “1160 I/O board” on page 67
- “1190 System board assembly” on page 69
- “1220 LCD unit” on page 75

Removal steps of speaker assembly and base cover

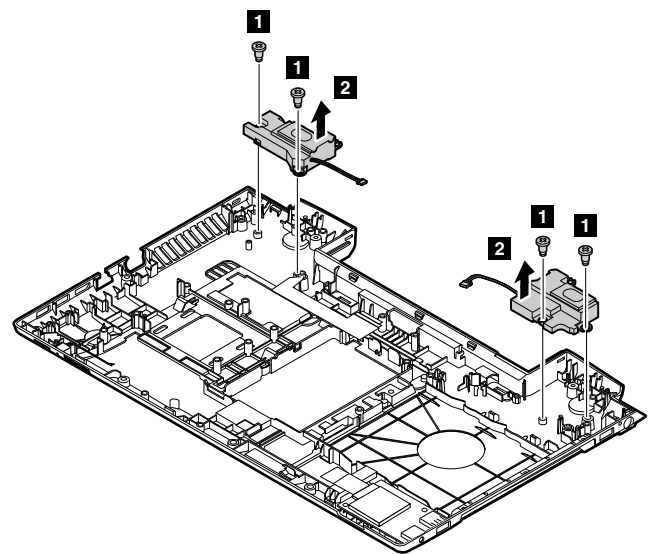Remove the screws **1**. Then remove the speaker assembly **2**.




Step	Screw (quantity)	Color	Torque
1	M2.5 × 5.7 mm, flat-head, nylon-coated (4)	Black	4.0 kgf-cm

Applying labels to the base cover

The new base cover is shipped with a kit containing labels of several kinds. Apply those labels listed when you replace the base cover. For the labels which are not shipped with the new base cover, peel them off from the old base cover, and adhere them to the new one.

Note: If you replace a part with the Windows Certificate of Authentication (COA) label **11**, return the old part with the label attached to the customer. Otherwise, you can provide the customer with a letter, stating the original location of the label on the computer and the information on the label, such as the part number, serial number, and product key.

The following illustration shows the label locations on the base cover.

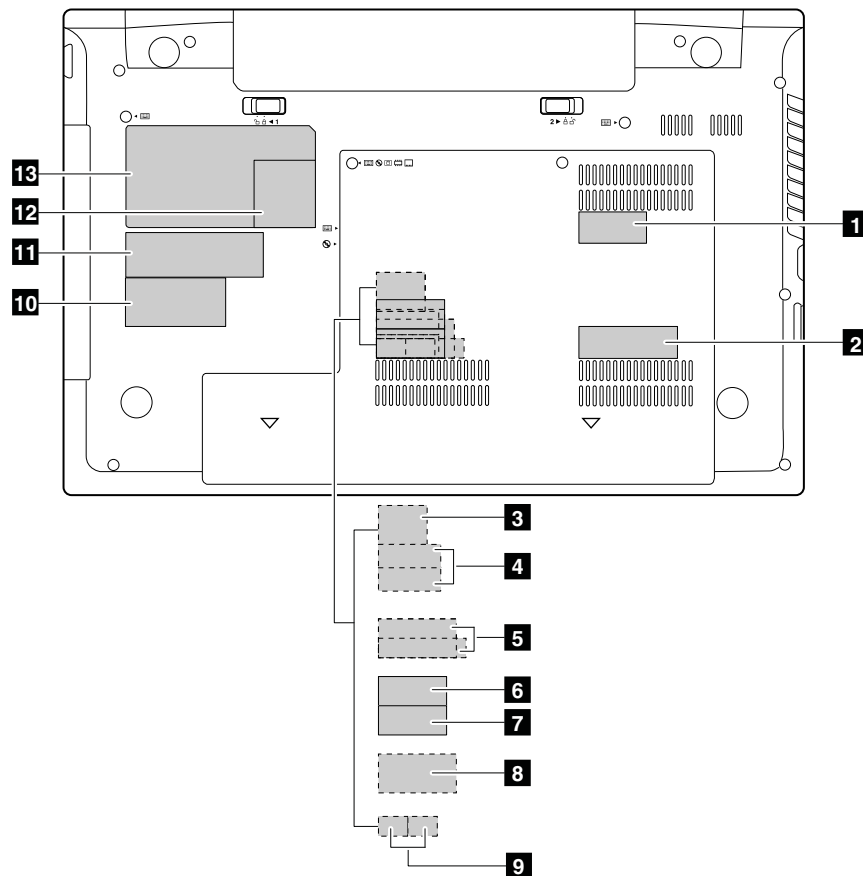

1 Wireless WAN IMEI barcode label

2 China label, KCC label, or MAC label

3 Indonesia D side label

4 Indonesia wireless LAN and Bluetooth label

5 Israel label

6 Brazil Bluetooth label or Bluetooth label for United States/Canada/Taiwan

7 Brazil wireless LAN label or wireless LAN label for United States/Canada/Taiwan

8 PPT label for China 3G models

9 Malaysia SIRIM label

10 Vodafone label

12 Rating label I

13 Rating label II

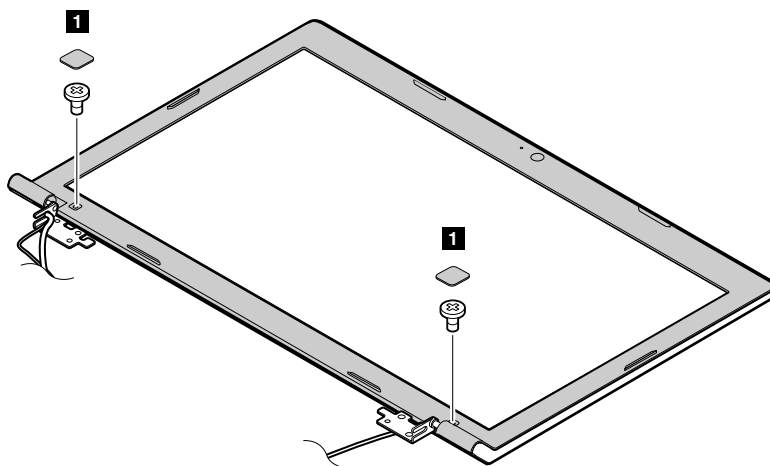
2010 LCD front bezel

For access, remove these FRUs in order:

- “1010 Battery pack” on page 46
- “1220 LCD unit” on page 75


Removal steps of LCD front bezel

Remove the screws **1**.



Step	Screw (quantity)	Color	Torque
1	M2 × 3.5 mm, flat-head, nylon-coated (2)	Black	1.85 kgf-cm

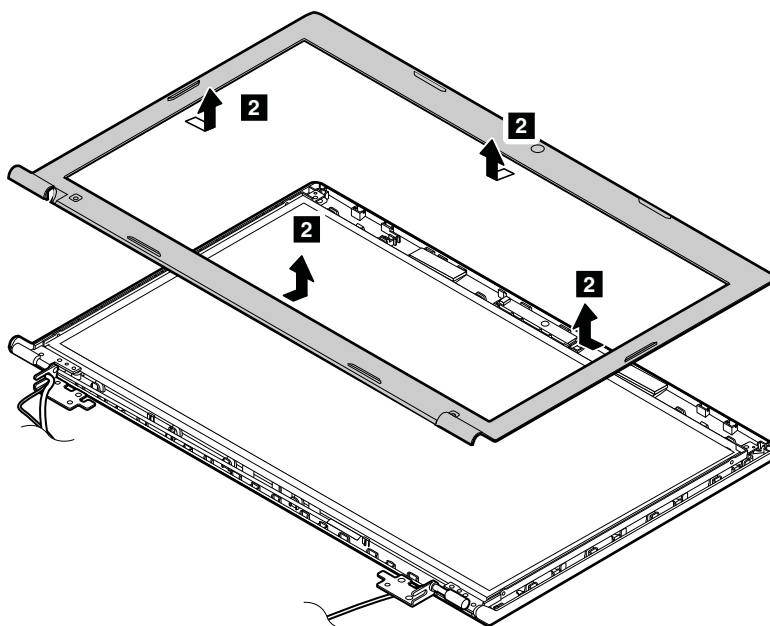Remove the LCD front bezel in the direction shown by the arrows **2**.



When installing: Ensure that all the latches are attached firmly. Then secure the bezel with the screws.

2020 Integrated camera

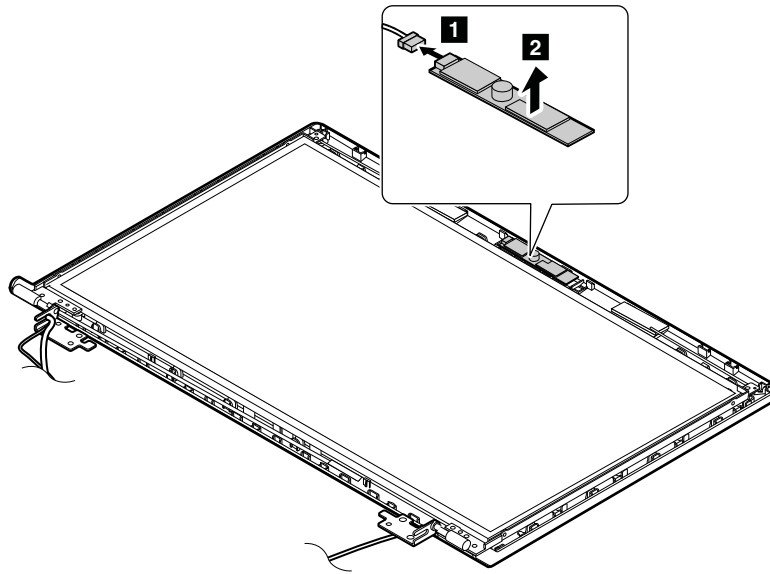
For access, remove these FRUs in order:

- “1010 Battery pack” on page 46
- “1220 LCD unit” on page 75
- “2010 LCD front bezel” on page 80

Removal steps of integrated camera

Remove the integrated camera from the LCD cover as shown in the following illustration.

Note: The integrated camera is stuck on the top center of the LCD cover.



When installing: Stick the integrated camera to the top center of the LCD cover and adjust the placement to ensure that the connector is attached firmly.

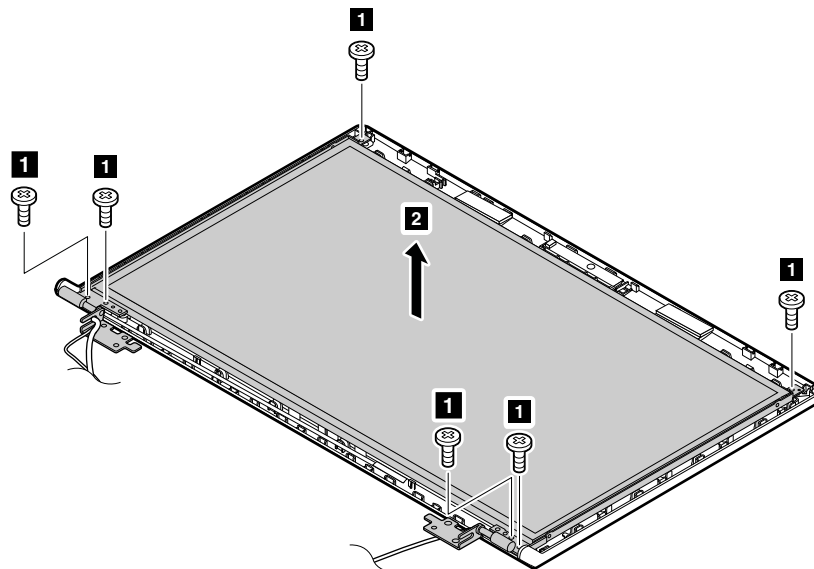
2030 LCD panel, LCD cable, and hinges

For access, remove these FRUs in order:

- “1010 Battery pack” on page 46
- “1220 LCD unit” on page 75
- “2010 LCD front bezel” on page 80


Removal steps of LCD panel and LCD cable

Remove the screws **1**. Then remove the LCD panel in the direction shown by the arrow **2**.



Step	Screw (quantity)	Color	Torque
1	M2 × 3.5 mm, flat-head, nylon-coated (6)	Silver	1.85 kgf-cm

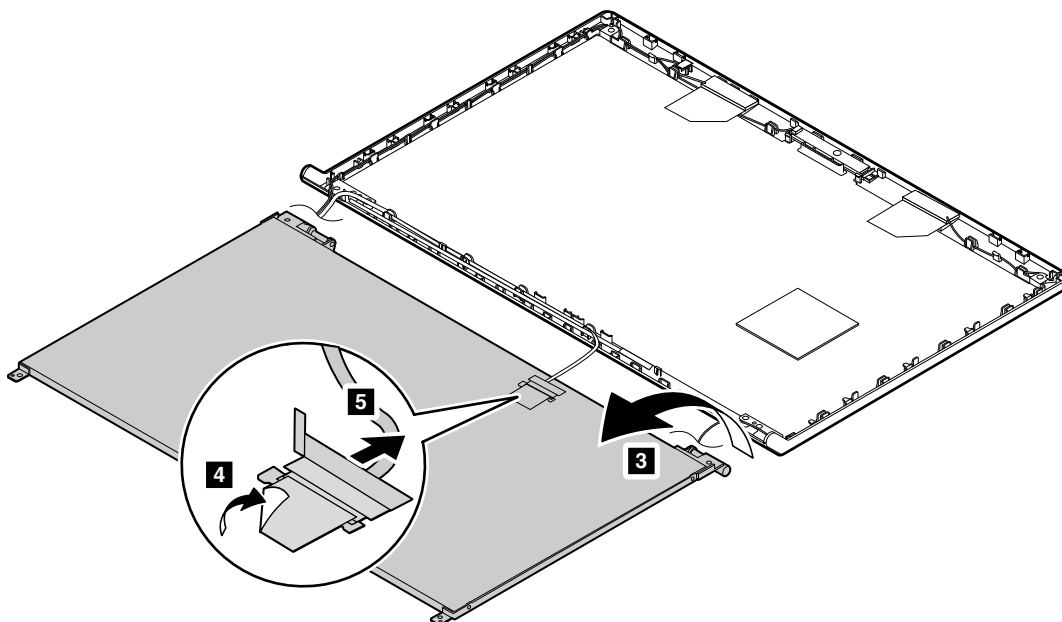
Turn over the LCD panel in the direction shown by the arrow **3**. Then detach the LCD cable as shown in the following illustration.



When installing: Ensure that the cable is attached firmly.

Removal steps of hinges

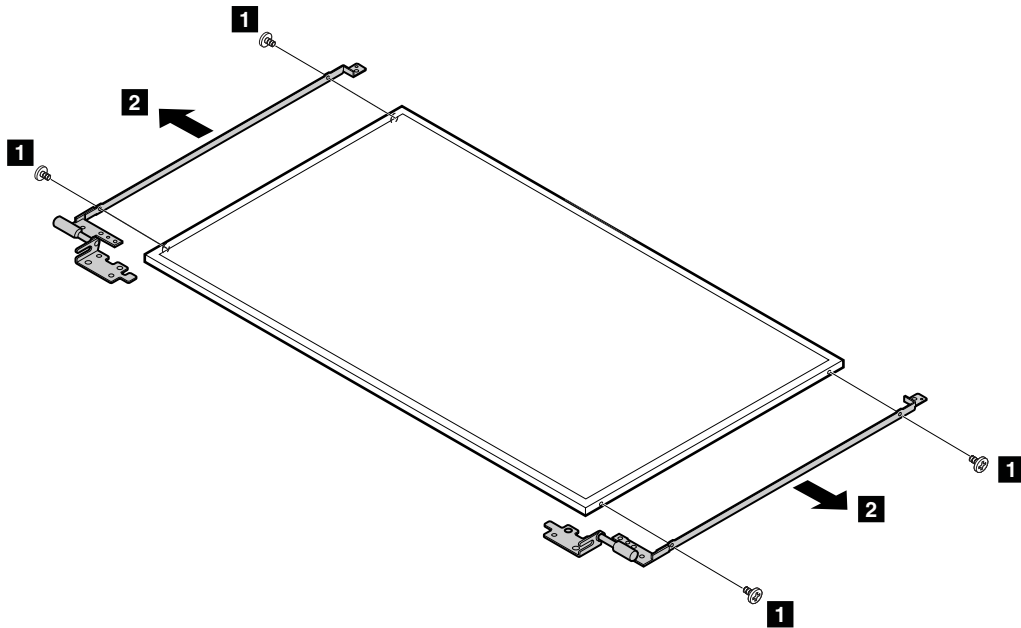Remove the screws **1**, and then remove the hinges **2**.



Step	Screw (quantity)	Color	Torque
1	M2 × 3.5 mm, flat-head, nylon-coated (4)	White	1.85 kgf-cm

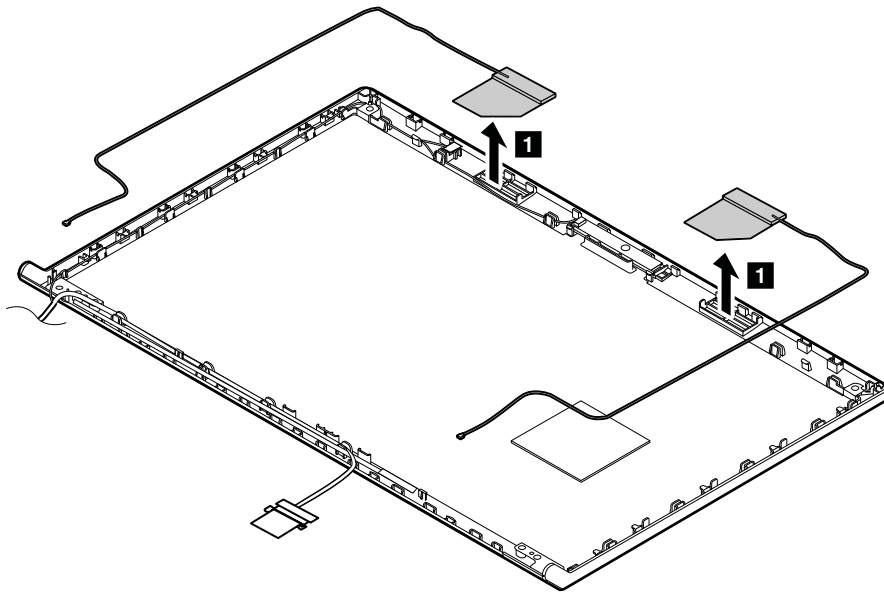
2040 Antenna assembly and LCD rear cover

For access, remove these FRUs in order:

- “1010 Battery pack” on page 46
- “1220 LCD unit” on page 75
- “2010 LCD front bezel” on page 80
- “2020 Integrated camera” on page 81
- “2030 LCD panel, LCD cable, and hinges” on page 81

Removal steps of antenna assembly and LCD rear cover

Release the antenna cables from the cable guides of the LCD rear cover assembly and from the hinges in the direction shown by the arrows **1**.



Cable routing: Route the antenna cables along the cable guides and secure the antenna boards with tape. As you route the cables, ensure that they are not subject to any tension. Tension could cause the cables to be damaged by the cable guides, or a wire to be broken.

Chapter 8. Locations

This chapter introduces the location of the hardware components.

Front view

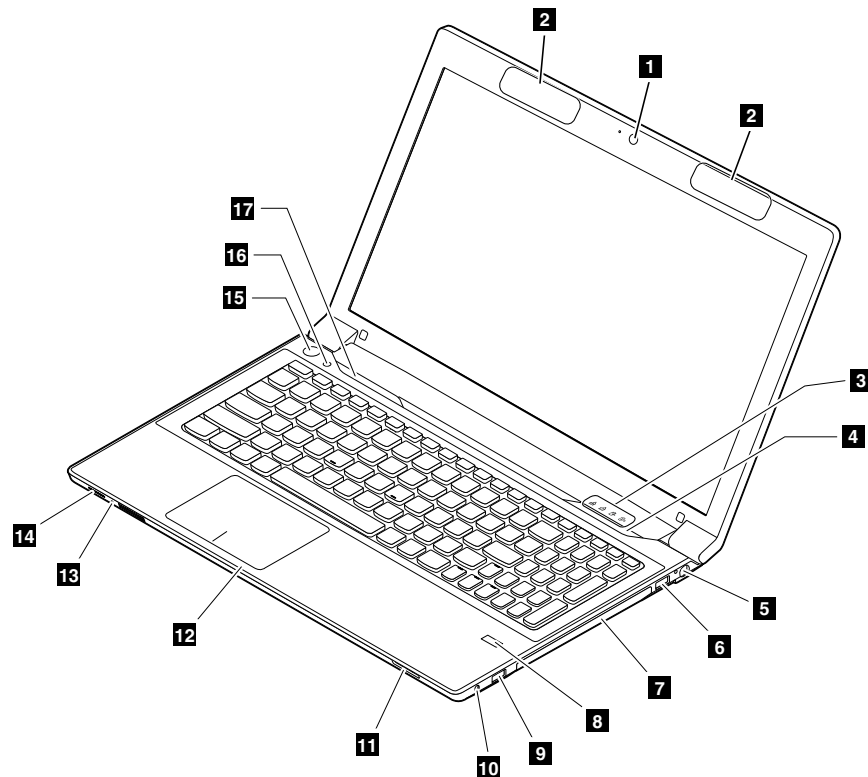


Figure 1. Lenovo V580 front view

- | | |
|--|---|
| 1 Integrated camera (on some models) | 10 Combo audio jack |
| 2 Wireless antennas | 11 Media card reader slot |
| 3 Status indicators ¹ | 12 Touch pad |
| 4 Speaker (right) | 13 Integrated microphone |
| 5 Power jack | 14 Power and battery status indicator ¹ |
| 6 USB connector | 15 Power button |
| 7 Optical drive or blank bezel | 16 Recovery button |
| 8 Fingerprint reader (on some models) | 17 Speaker (left) |
| 9 USB connector | |

¹ For the description of the indicators, see “Status indicators (V580)” on page 38.

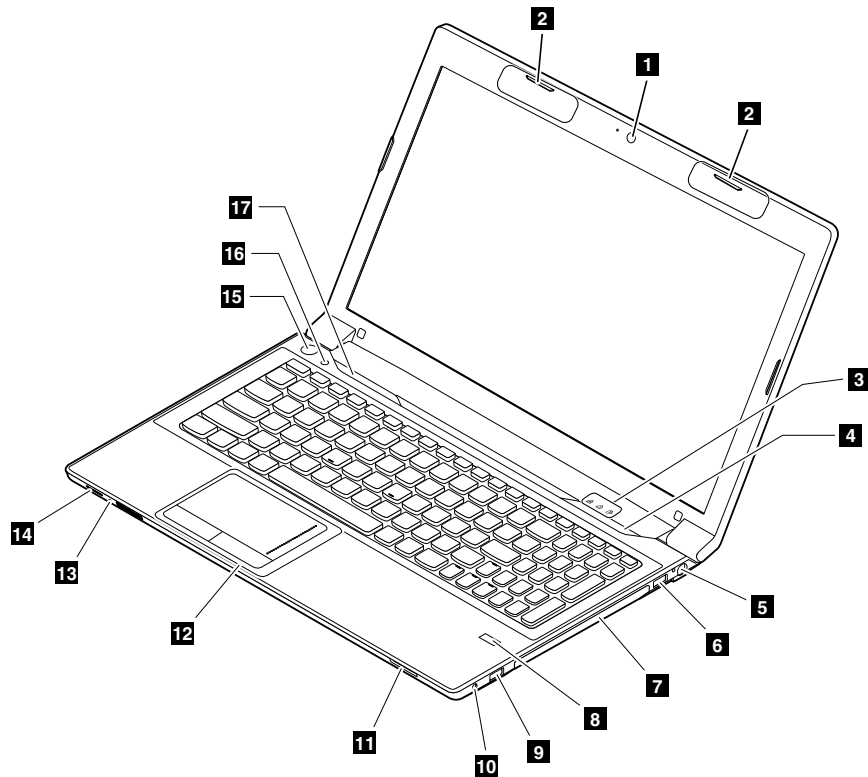


Figure 2. Lenovo V580c front view

- | | |
|--|---|
| 1 Integrated camera (on some models) | 10 Combo audio jack |
| 2 Wireless antennas | 11 Media card reader slot |
| 3 Status indicators ¹ | 12 Touch pad |
| 4 Speaker (right) | 13 Integrated microphone |
| 5 Power jack | 14 Power and battery status indicator ¹ |
| 6 USB connector | 15 Power button |
| 7 Optical drive or blank bezel | 16 Recovery button |
| 8 Fingerprint reader (on some models) | 17 Speaker (left) |
| 9 USB connector | |

¹ For the description of the indicators, see “Status indicators (V580c)” on page 40.

Bottom view

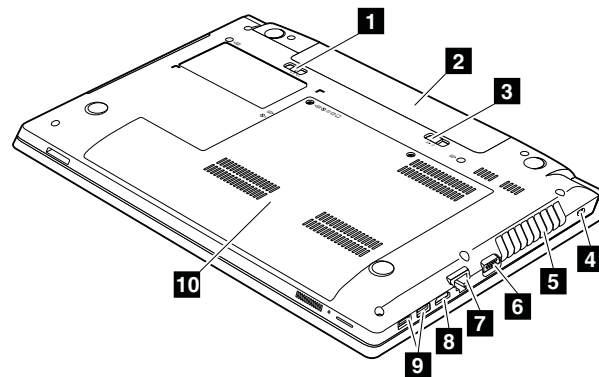


Figure 3. Bottom view

- | | |
|--|--|
| 1 Battery latch (manual) | 6 Monitor connector |
| 2 Battery pack | 7 RJ45 Ethernet connector |
| 3 Battery latch (spring-loaded) | 8 HDMI port |
| 4 Security keyhole | 9 USB 3.0 connectors |
| 5 Fan louvers | 10 Bottom slot cover ¹ |

¹ The memory modules, hard disk drive, and wireless cards are located underneath the bottom slot cover.

Chapter 9. Parts list

This chapter contains following lists of the service parts.

- “Overall” on page 89
- “LCD FRUs” on page 96
- “Keyboard” on page 98
- “Miscellaneous parts” on page 99
- “ac power adapters” on page 100
- “Power cords” on page 101

Notes:

- Each FRU is available for all types or models, unless otherwise specified.
- A CRU is identified by a single asterisk (*) or two asterisks (**) in the **CRU ID** column. An **N** in the **CRU ID** column means that the part is not a CRU. A single asterisk (*) means that the part is a self-service CRU; two asterisks (**) means that the part is an optional-service CRU.

CRU statement for customers:

You can resolve some problems with your product with a replacement part you can install yourself, called a “Customer Replaceable Unit” or “CRU.” Some CRUs are designated as self-service CRUs and others are designated as optional-service CRUs. *Installation of self-service CRUs is your responsibility. For optional-service CRUs, you can either install the CRU yourself or you can request that a Service Provider install the CRU according to the warranty service for your product.* If you intend on installing the CRU, Lenovo will ship the CRU to you. CRU information and replacement instructions are shipped with your product and are available from Lenovo at any time upon request. You can find a list of CRUs for your product in this *Hardware Maintenance Manual*. An electronic version of this manual can be found at <http://www.lenovo.com/UserManuals>. Follow the on-screen instructions to find the manual for your product. You might be required to return the defective CRU. When return is required: (1) return instructions, a prepaid shipping label, and a container will be included with the replacement CRU; and (2) you might be charged for the replacement CRU if Lenovo does not receive the defective CRU within thirty (30) days of your receipt of the replacement CRU. See your Lenovo Limited Warranty documentation for full details.

Lenovo computers contain the following types of CRUs:

- **Self-service CRUs:** These CRUs unplug or are held by no more than two screws. Examples of these types of CRUs include the ac power adapter, power cord, battery, and hard disk drive. Other self-service CRUs depending on product design might include the memory module, wireless card, keyboard, and palm rest with finger print reader and touch pad.
- **Optional-service CRUs:** These CRUs are isolated parts within the computer that are concealed by an access panel that is typically secured by more than two screws. Once the access panel is removed, the specific CRU is visible.

Overall

- “Overall for Lenovo V580 models” on page 90
- “Overall for Lenovo V580c models” on page 93

Overall for Lenovo V580 models

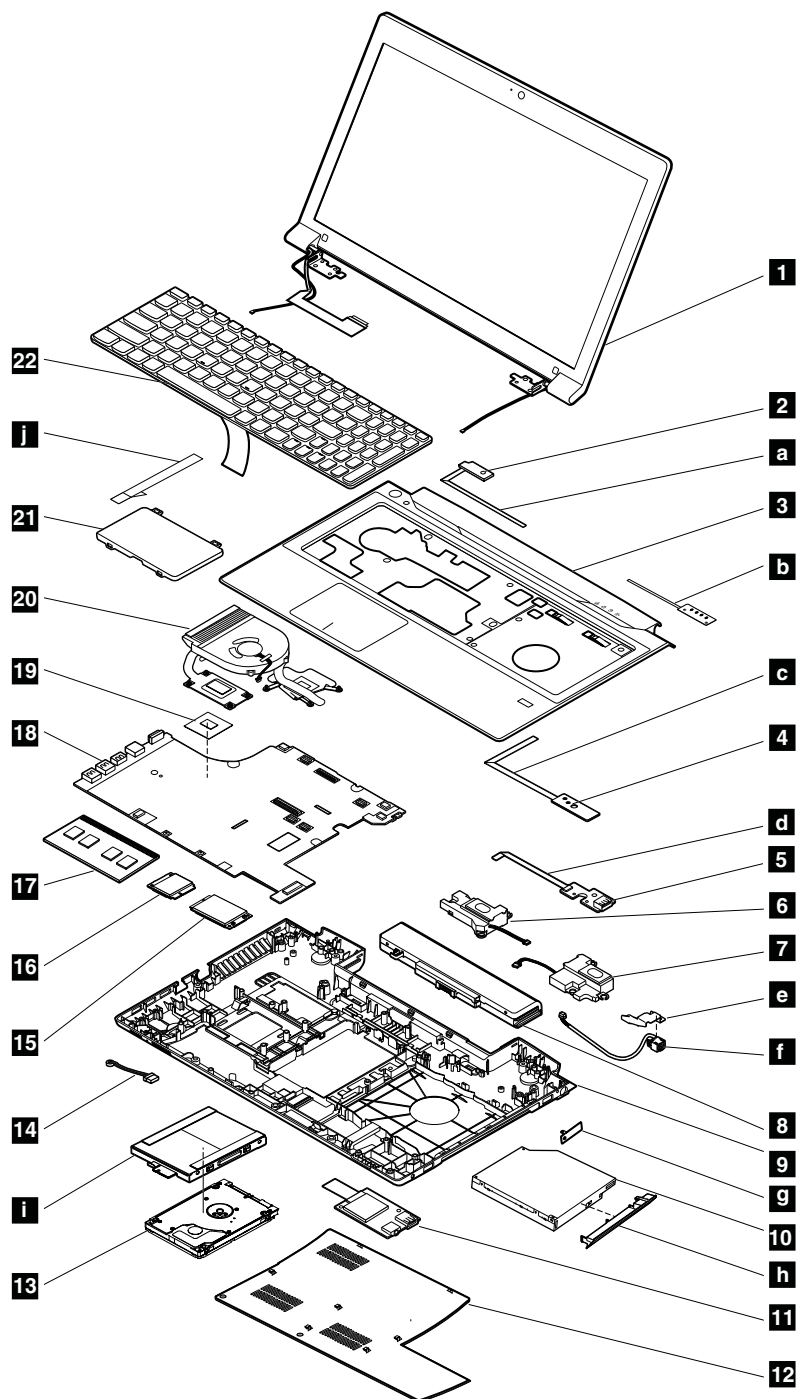


Table 4. Parts list—Overall for Lenovo V580 models

No.	FRU (Overall)	FRU No.	CRU ID
a-j	See “Miscellaneous parts” on page 99		
1	LCD unit (see “LCD FRUs” on page 96)		
2	LA58 Power Board	90000412	N
3	LA58 Upper Case	90201175	N

Table 4. Parts list—Overall for Lenovo V580 models (continued)

No.	FRU (Overall)	FRU No.	CRU ID
4	LA58 FingerPrint Board	90000413	N
5	LA58 USB Board	90000410	N
6	LB58 Speaker L	90200833	N
7	LB58 Speaker R	90200832	N
8	Battery, 6-cell, 2.2 Ah, 48 Wh	121500047 121500049 121500050	*
8	Battery, 6-cell, 2.8 Ah, 62 Wh	121500052 121500053	*
9	LB58 Lower Case	90200822	N
10	Optical drive, 12.7 mm tray-in Rambo, DS-8A8SH	25201487	*
10	Optical drive, 12.7 mm tray-in Rambo, AD-7740H	25201106	*
10	Optical drive, 12.7 mm tray-in Rambo, SN-208AB	25201108	*
10	Optical drive, 12.7 mm tray-in Rambo, GT50N	25201635	*
11	LA58 IO Board	90000411	N
12	LB58 Memory Door	90200816	N
13	SATA hard disk drive, 320 G, 5400 rpm, MN500S	16200097	**
13	SATA hard disk drive, 320 G, 5400 rpm, Toshiba MK3265GSX	16200068	**
13	SATA hard disk drive, 320 G, 5400 rpm, HGST HTS545032A7E380, 7 mm	16005211	**
13	SATA hard disk drive, 320 G, 7200 rpm, WD3200BEKT-08PVM	16200092	**
13	SATA hard disk drive, 320 G, 7200 rpm, TSB MK3261GSY 7200PRM, 9.5 mm	16200099	**
13	SATA hard disk drive, 320 G, 7200 rpm, HTS725032A7E630	16200194	**
13	SATA hard disk drive, 320 G, 7200 rpm, Seagate ST320LT007, 7 mm	16005030	**
13	SATA hard disk drive, 500 G, 5400 rpm, WD5000BPVT-08A1Y	16200118	**
13	SATA hard disk drive, 500 G, 5400 rpm, WD5000BPVT-08HXZ	16200090	**
13	SATA hard disk drive, 500 G, 5400 rpm, Toshiba MK5065GSX	16200098	**
13	SATA hard disk drive, 500 G, 5400 rpm, HGST HTS545050A7E380, 7 mm	16200067	**
13	SATA hard disk drive, 500 G, 7200 rpm, WD5000BPKT-08PK4T	16200124	**
13	SATA hard disk drive, 500 G, 7200 rpm, TSB MK5061GSY, 9.5 mm	16200100	**
13	SATA hard disk drive, 500 G, 7200 rpm, HTS725050A7E630	16200195	**
13	SATA hard disk drive, 750 G, 5400 rpm, WD7500BPVT-08A1Y	16200119	**
13	SATA hard disk drive, 750 G, 5400 rpm, WD7500BPVT-08HXZ	16200121	**
13	SATA hard disk drive, 750 G, 5400 rpm, HTS541075A9E680	16200192	**
13	SATA hard disk drive, 1 TB, 5400 rpm, WD10JPVT-08A1Y	16200120	**
13	SATA hard disk drive, 1 TB, 5400 rpm, HTS541010A9E680	16200193	**
14	LA48 Microphone	90200534	N
15	mSATA solid-state drive, 16 G, U100	16200215	N
15	mSATA solid-state drive, 16 G, LMT-16M3M	16200241	N

Table 4. Parts list—Overall for Lenovo V580 models (continued)

No.	FRU (Overall)	FRU No.	CRU ID
16	Wireless LAN, non-Intel 1x1 11bgn + BT4.0 Combo	20200100 20200101	*
16	Wireless LAN, non-Intel 2x2 11abgn + BT4.0 Combo	20200098 20200099	*
16	Wireless LAN, Intel 2x2 11bgn + BT4.0 Combo	20200078	*
16	Wireless LAN, Non-Intel 1x1 11bgn	20200102 20200016	*
17	Memory module, DDR3 1600, 2 GB, M471B5773DH0-CK0	11200340	*
17	Memory module, DDR3 1600, 2 GB, HMT325S6CFR8C-PB	11200343	*
17	Memory module, DDR3 1600, 2 GB, MT8KTF25664HZ-1G6M1	11200346	*
17	Memory module, DDR3 1600, 2 GB, RMT3150ED58E8W	11200392	*
17	Memory module, DDR3 1600, 2 GB, SM321NH08IAF	11200396	*
17	Memory module, DDR3 1600, 4 GB, M471B5273DH0-CK0	11200341	*
17	Memory module, DDR3 1600, 4 GB, HMT351S6CFR8C-PB	11200344	*
17	Memory module, DDR3 1600, 4 GB, MT16KTF51264HZ-1G6M1	11200347	*
17	Memory module, DDR3 1600, 4 GB, RMT3160ED58E9W	11200393	*
17	Memory module, DDR3 1600, 4 GB, SM322NQ08IAF	11200397	*
18	LA58 MB DIS N13P-GS 2G W/HDMI WO/3G/BT	90000414	N
18	LA58 MB DIS N13P-GS 2G W/HDMI WO/SBA/BT	90000337	N
18	LA58 MB W8 DIS N13P-GS 2G W/HDMI/SBA	90001562	N
18	LA58 MB W8P DIS N13P-GS 2G W/HDMI/SBA	90001563	N
18	LA58 MB W8 DIS N13P-GS 2G W/HDMI WO/SBA	90001564	N
18	LA58 MB W8P DIS N13P-GS 2G W/HDMI WO/SBA	90001565	N
19	Microprocessor, Intel SNB I3-2350M 2.3G 3M J1 PGA	102500018	N
19	Microprocessor, Intel SNB I3-2330M 2.2G 3M J1 PGA	102500017	N
19	Microprocessor, Intel SNB I3-2350M 2.3G 3M J1 PGA	102001065	N
19	Microprocessor, Intel I3-2370M 2.4G J1 3M 2cPGA	102500228	N
19	Microprocessor, Intel I5-2520M 2.5G 3M 2c J1 PGA	102001067	N
19	Microprocessor, Intel I3-2308M 2.1G Q0 3M 2cPGA	102500351	N
19	Microprocessor, Intel I7-3520M 2.9G L1 4M 2cPGA	102500295	N
19	Microprocessor, Intel I5-3320M 2.6G L1 3M 2cPGA	102500299	N
19	Microprocessor, Intel I5-3210M 2.5G L1 3M 2cPGA	102500301	N
19	Microprocessor, Intel I3-3110M 2.3G L1 3M 2cPGA	102500303	N
19	Microprocessor, Intel I7-3612QM 2.1G E1 6M 4cPGA CPU	102500290	N
20	LA58 Thermal Module DIS W/FAN	90201178	N
21	LA58 Touchpad Board	90201168	N
22	Keyboard (see “Keyboard” on page 98)		
—	ac power adapter (see “ac power adapters” on page 100)		

Overall for Lenovo V580c models

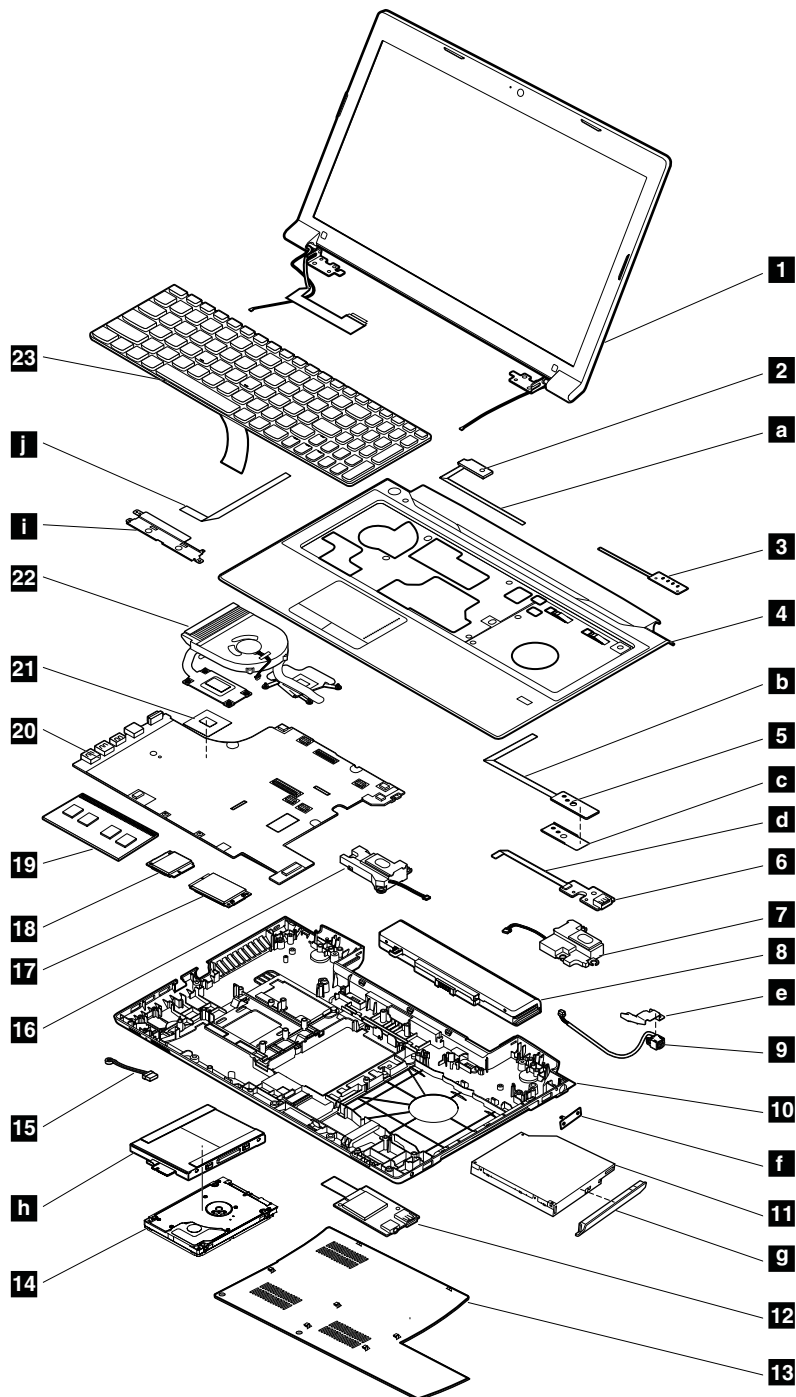


Table 5. Parts list—Overall for Lenovo V580c models

No.	FRU (Overall)	FRU No.	CRU ID
a-j	See “Miscellaneous parts” on page 99		
1	LCD unit (see “LCD FRUs” on page 96)		
2	LA58C Power Board	90000570	N
3	LB58 LED Board W/Cable	90200814	N

Table 5. Parts list—Overall for Lenovo V580c models (continued)

No.	FRU (Overall)	FRU No.	CRU ID
4	LB58 Upper Case W/TP	90200819	N
5	LA58C FingerPrint Board	90000569	N
6	LA58C USB Board	90000571	N
7	LB58 Speaker R	90200832	N
8	Battery, 6-cell, 2.2 Ah, 48 Wh	121500047 121500049 121500050	*
8	Battery, 6-cell, 2.8 Ah, 62 Wh	121500051 121500052 121500053	*
9	LB58 DC-IN Cable	90200811	N
10	LB58 Lower Case	90200822	N
11	Optical drive, 12.7 mm tray-in Rambo, DS-8A8SH	25201487	*
11	Optical drive, 12.7 mm tray-in Rambo, AD-7740H	25201106	*
11	Optical drive, 12.7 mm tray-in Rambo, SN-208AB	25201108	*
11	Optical drive, 12.7 mm tray-in Rambo, GT50N	25201635	*
12	LA58C CardReader Board W/Cable	90000572	N
13	LB58 Memory Door	90200816	N
14	SATA hard disk drive, 320 G, 5400 rpm	16200265 16200097 16200274 16200222 16200068 16005211 16200212	**
14	SATA hard disk drive, 500 G, 5400 rpm	16200118 16200090 16200264 16200098 16200273 16200221 16200067 16200006 16200211	**
14	SATA hard disk drive, 750 G, 5400 rpm	16200119 16200121 16200192 16200220	**
14	SATA hard disk drive, 1 TB, 5400 rpm	16200120 16200193 16200219	**
14	SATA hard disk drive, 320 G, 7200 rpm	16200092 16200099 16200194 16005030	**

Table 5. Parts list—Overall for Lenovo V580c models (continued)

No.	FRU (Overall)	FRU No.	CRU ID
14	SATA hard disk drive, 500 G, 7200 rpm	16200124 16200100 16200195	**
15	LB48 Microphone 23.42384.001	90200766	N
16	LB58 Speaker L	90200833	N
17	mSATA solid-state drive, 16 G, U100	16200215	N
18	Wireless LAN, non-Intel 1x1 11bgn + BT4.0 Combo	20200100 20200101	*
18	Wireless LAN, non-Intel 2x2 11abgn + BT4.0 Combo	20200098 20200099	*
18	Wireless LAN, Intel 2x2 11bgn + BT4.0 Combo	20200078	*
18	Wireless LAN, non-Intel 1x1 11bgn	20200102 20200016	*
19	Memory module, DDR3 1600, 2 GB, M471B5773DH0-CK0	11200340	*
19	Memory module, DDR3 1600, 2 GB, HMT325S6CFR8C-PB	11200343	*
19	Memory module, DDR3 1600, 2 GB, MT8KTF25664HZ-1G6M1	11200346	*
19	Memory module, DDR3 1600, 2 GB, RMT3150ED58E8W	11200392	*
19	Memory module, DDR3 1600, 2 GB, SM321NH08IAF	11200396	*
19	Memory module, DDR3 1600, 4 GB, M471B5273DH0-CK0	11200341	*
19	Memory module, DDR3 1600, 4 GB, HMT351S6CFR8C-PB	11200344	*
19	Memory module, DDR3 1600, 4 GB, MT16KTF51264HZ-1G6M1	11200347	*
19	Memory module, DDR3 1600, 4 GB, RMT3160ED58E9W	11200393	*
19	Memory module, DDR3 1600, 4 GB, SM322NQ08IAF	11200397	*
20	LA58C MB UMA W/SBA/HDMI WO/3G/BT	90000573	N
20	LA58C MB UMA W/HDMI WO/SBA/3G/BT	90000574	N
20	LA58C MB DIS N13M-GE1 1G W/SBA WO/BT/3G	90000575	N
20	LA58C MB DIS N13M-GE1 1G WO/SBA/3G/BT	90000576	N
20	LA58C MB W8 UMA W/SBA/HDMI WO/3G/BT	90001566	N
20	LA58C MB W8P UMA W/SBA/HDMI WO/3G/BT	90001567	N
20	LA58C MB W8 DIS N13M-GE1 1G W/SBA	90001568	N
20	LA58C MB W8P DIS N13M-GE1 1G W/SBA	90001569	N
20	LA58C MB W8 DIS N13M-GE1 1G WO/SBA	90001570	N
20	LA58C MB W8P DIS N13M-GE1 1G WO/SBA	90001571	N
20	LA58C MB W8 UMA W/HDMI WO/SBA/3G/BT	90001572	N
20	LA58C MB W8P UMA W/HDMI WO/SBA/3G/BT	90001573	N
21	Microprocessor, Intel SNB I3-2350M 2.3G 3M J1 PGA	102500018	N
21	Microprocessor, Intel SNB I3-2330M 2.2G 3M J1 PGA	102500017	N
21	Microprocessor, Intel SNB B950 2.1G 2M Q0 PGA	102500016	N
21	Microprocessor, Intel I3-2310M 2.1G 3M 2c J1 PGA	102001065	N

Table 5. Parts list—Overall for Lenovo V580c models (continued)

No.	FRU (Overall)	FRU No.	CRU ID
21	Microprocessor, Intel SNB B960 2.2G 2M 35W PGA	102500133	N
21	Microprocessor, Intel I3-2370M 2.4G J1 3M 2cPGA	102500228	N
21	Microprocessor, Intel I5-2520M 2.5G 3M 2c J1 PGA	102001067	N
21	Microprocessor, Intel B970 2.3G D2 2M 2cPGA	102500230	N
21	Microprocessor, Intel SNB B940 2.0G 2M Q0 PGA	102500015	N
21	Microprocessor, Intel B815 1.6G Q0 2M 2cPGA	102500229	N
21	Microprocessor, Intel SNB B800 1.5G Q0 2M 2c PGA	102500101	N
21	Microprocessor, Intel I3-2308M 2.1G Q0 3M 2cPGA	102500351	N
21	Microprocessor, Intel B820 1.7G Q0 2M 2cPGA	102500350	N
21	Microprocessor, Intel I5-3210M 2.5G L1 3M 2cPGA	102500301	N
21	Microprocessor, Intel I3-3110M 2.3G L1 3M 2cPGA	102500303	N
22	LB58 Thermal Module UMA W/FAN	90200827	N
22	LA58 Thermal Module DIS W/FAN	90201178	N
23	Keyboard (see “Keyboard” on page 98)		
—	ac power adapter (see “ac power adapters” on page 100)		

LCD FRUs

Lenovo V580 and V580c models use a 15.6-inch, high-definition (HD), light-emitting diode (LED), liquid crystal display (LCD).

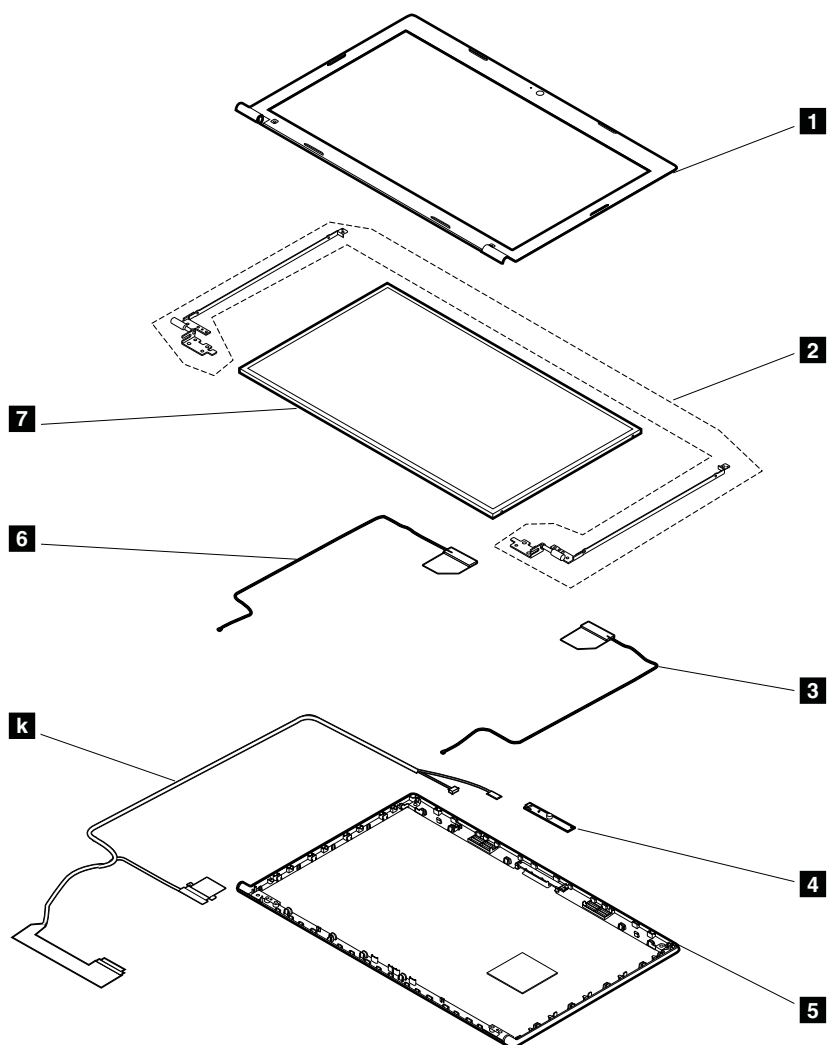


Table 6. Parts list - LCD

No.	FRU	FRU No.	CRU ID
k	See "Miscellaneous parts" on page 99		
1	LA58 LCD Bezel	90201173	N
1	LA58C LCD Bezel W/Camera Hole	90201345	N
2	LA58 Hinge L+R	90201174	N
3	LA58 Antenna R	90201177	N
4	LA48 Camera 1M	90200517	N
5	LA58 LCD Cover	90201172	N
5	LA58C LCD Cover WO/Antenna	90201344	N
6	LA58 Antenna L	90201176	N
7	LCD panel, 15.6-inch, Wedge Glossy	18200114 18200158 18200157	N

Keyboard

Table 7. Parts list - Keyboard (Dafon)

Language	FRU No.	CRU ID
Arabic	25204266 25204356	N
Belgian	25204274 25204364	N
Brazilian Portuguese	25204267 25204357	N
Bulgarian	25204280 25204370	N
French, English	25204260 25204350	N
Czech, Slovak	25204279 25204369	N
Swedish, Finnish, Danish, Norwegian	25204273 25204363	N
Dutch	25204269 25204359	N
French	25204264 25204354	N
German	25204265 25204355	N
Greek	25204270 25204360	N
Hebrew	25204271 25204361	N
Hungarian	25204272 25204362	N
Icelandic	25204275 25204365	N
Indian	25204281 25204371	N
Italian	25204254 25204344	N
Korean	25204261 25204351	N
Latin	25204259 25204349	N
Portuguese	25204258 25204348	N
Russian	25204263 25204353	N
Slovenian	25204276 25204366	N

Table 7. Parts list - Keyboard (Dafon) (continued)

Language	FRU No.	CRU ID
Swiss	25204277 25204367	N
Spanish	25204255 25204345	N
Thai	25204257 25204347	N
Traditional Chinese	25204262 25204352	N
Turkish	25204256 25204346	N
U.K. English	25204253 25204343	N
U.S. English	25204252 25204342	N
U.S. English (International, with a Euro symbol)	25204278 25204368	N

Miscellaneous parts

- “Miscellaneous parts for Lenovo V580 models” on page 99
- “Miscellaneous parts for Lenovo V580c models” on page 100

Miscellaneous parts for Lenovo V580 models

Note: Italicized letters in parentheses are references to the exploded view in “Overall” on page 89.

Table 8. Parts list - System miscellaneous parts

FRU	FRU no.	CRU ID
(e) LB58 DC-IN Bracket	90200821	N
(g) LA48 ODD Bracket	90200518	N
(h) LB58 ODD Bezel Rambo	90200815	N
(i) LA48 HDD Bracket	90200520	N
LA58 LCD Bezel Screw Pad	90201179	N
LB58 Microphone Rubber	90200830	N
LA58 Screw Pack	90201180	N

Table 9. Parts list - Cable miscellaneous parts

FRU	FRU no.	CRU ID
(a) LB58 Power Board Cable	90200809	N
(b) LA58 LED Board Cable	90201170	N
(c) LB58 FP Board Cable	90200810	N
(d) LB58 USB Cable	90000237	N

Table 9. Parts list - Cable miscellaneous parts (continued)

FRU	FRU no.	CRU ID
(f) LB58 DC-IN Cable	90200811	N
(j) LA58 Touchpad Board Cable	90201169	N
(k) LA58 LCD Cable	90201171	N

Miscellaneous parts for Lenovo V580c models

Note: Italicized letters in parentheses are references to the exploded view in “Overall” on page 89.

Table 10. Parts list - System miscellaneous parts

FRU	FRU no.	CRU ID
(c) LB58 FP Bracket	90200818	N
(e) LB58 DC-IN Bracket	90200821	N
(f) LA48 ODD Bracket	90200518	N
(g) LB58 ODD Bezel Rambo	90200815	N
(h) LA48 HDD Bracket	90200520	N
(i) LB58 TP Bracket	90200820	N
LA58 LCD Bezel Screw Pad	90201179	N
LA58C Screw Pack	90201346	N

Table 11. Parts list - Cable miscellaneous parts

FRU	FRU no.	CRU ID
(a) LB58 Power Board Cable	90200809	N
(b) LB58 FP Board Cable	90200810	N
(d) LB58 USB Cable	90000237	N
(j) LB58 TP Cable	90200813	N
(k) LA58 LCD Cable	90201171	N

ac power adapters

Table 12. Parts list—2-pin (65 W) ac power adapters

FRU	FRU no.	CRU ID
2-pin, Eup models	36200090 36200092 36200094	*
2-pin, EPA models	36200143 36200144 36200210	*
2-pin, CS2 plug	36200289 36200291 36200293	*

Table 13. Parts list—2-pin (90 W) ac power adapters

FRU	FRU no.	CRU ID
2-pin, Eup models	36200102 36200101 36200103	*
2-pin, EPA models	36200147 36200149 36200150	*
2-pin, CS2 plug	36200295 36200297 36200299	*

Table 14. Parts list—3-pin (65 W) ac power adapters

FRU	FRU no.	CRU ID
3-pin, Eup models	36200096 36200097 36200098	*
3-pin, EPA models	36200033 36200034 36200212	*
3-pin, CS2 plug	36200288 36200290 36200292	*

Table 15. Parts list—3-pin (90 W) ac power adapters

FRU	FRU no.	CRU ID
3-pin, Eup models	36200106 36200105 36200107	*
3-pin, EPA models	36200030 36200031 36200032	*
3-pin, CS2 plug	36200294 36200296 36200298	*

Power cords

A Lenovo power cord for a specific country or region is usually available only in that country or region.

Table 16. Parts list - 3-pin power cords (Linetek)

Country or region	FRU no.	CRU ID
Argentina • LINETEK LS15+H03VV-F+LP39 1 m	145000599	*
Australia, New Zealand • LINETEK LS15+H03VV-F+LP-23A 1 m	145000589	*
Brazil • LINETEK LS15 H03VV-F LP26A 1 m	145000596	*
European Union • LINETEK LP-34+H03VV-F + LS15 1 m	145000585	*
China • LINETEK PC323+RVV300/300+LS15 1 m	145000600	*
Denmark • LINETEK LS15+H03VV-F+LP-38 1 m	145000598	*
Indian • LINETEK PE-361+ H05VV-F+ LS15 1 m	145000592	*
Israel • LINETEK LS15+H03VV-F+LP-41 1 m	145000595	*
Italy • LINETEK LS15+H03VV-F+PE-336 1 m	145000591	*
Japan • LINETEK LS15+VCTF+LP-54 1 m	145000587	*
Korea • LINETEK LS15+H05VV-F+LP-E04A 1 m	145000590	*
South Africa • LINETEK LS15+H03VV-F+PE-364 1 m	145000586	*
Switzerland • LINETEK LS15+H03VV-F+LP-37 1 m	145000597	*
Taiwan • LINETEK LS15+VCTF+LP-53 1 m	145000588	*
U.K. • LINETEK LP-61L+ H03VV-F+ LS15 1 m	145000593	*
U.S.A • LINETEK LP-30B + SPT-2 + LS15 1 m	145000594	*

Table 17. Parts list - 3-pin power cords (Longwell)

Country or region	FRU no.	CRU ID
Argentina • Longwell LP-24+H03VV-F+LS-18 1 m	145000567	*
Australia, New Zealand • Longwell LP-23A+LFC-3R+LS-18 1 m	145000557	*
Brazil • Longwell LP-46+H03VV-F+LS-18 1 m	145000564	*
European Union • Longwell LP-34A+H03VV-F+LS-18 1 m	145000553	*
China • Longwell LSG-31+RVV300/300+LS-18 1 m	145000568	*
Denmark • Longwell LP-40+H03VV-F+LS-18 1 m	145000566	*
Indian • Longwell LP-67+BIS+LS-18 1 m	145000560	*
Israel • Longwell LP-41+H03VV-F+LS-18 1 m	145000563	*
Italy • Longwell LP-22+H03VV-F+LS-18 1 m	145000559	*
Japan • Longwell LP-54+VCTF+LS-18 1 m	145000555	*
Korea • Longwell LP-486+KTLH03VV-F+LS-5 1 m	145000558	*
South Africa • Longwell LP-39+H03VV-F+LS-18 1	145000554	*
Switzerland • Longwell LP-37+H03VV-F+LS-18 1 m	145000565	*
Taiwan • Longwell LP-71+VCTF+LS-33 1 m	145000556	*
U.K. • Longwell LP-61L+H03VV-F+LS-18 1 m	145000561	*
U.S.A • Longwell LP-30B+SPT-2 18AWG+LS-18 1 m	145000562	*

Table 18. Parts list - 3-pin power cords (Volex)

Country or region	FRU no.	CRU ID
Argentina • VOLEX VA2073+H03VV-F+VAC5S 1 m	145000528	*
Australia, New Zealand • VOLEX AU10S3+H03VV-F+VAC5S 1 m	145000532	*
Brazil • VOLEX CH10S3+H03VV-F+VAC5S 1 m	145000527	*
European Union • VOLEX M2511+H03VV-F+VAC5S 1 m	145000525	*
China • VOLEX GB10S3+RVV 300/500+VAC5S 1 m	145000538	*
Denmark • VOLEX MP233D+H03VV-F+VAC5S 1 m	145000534	*
Indian • VOLEX IA6A3+IS694+VAC5S 1 m	145000536	*
Israel • VOLEX SI16S3+H03VV-F+VAC5S 1 m	145000526	*
Italy • VOLEX IT10S3+H03VV-F+VAC5S 1 m	145000535	*
Japan • VOLEX VAC5S+VCTF+M755 1 m	145000530	*
Korea • VOLEX M2511+KETI IEC+VAC5S 1 m	145000533	*
South Africa • VOLEX SA16A+H03VV-F+VAC5S 1 m	145000529	*
Switzerland • VOLEX MP232+H03VV-F+VAC5S 1 m	145000524	*
Taiwan • VOLEX TW15CS3+VCTF+VAC5S 1 m	145000531	*
U.K. • VOLEX MP5004+H03VV-F+VAC5S 1 m	145000605	*
U.S.A • Volex US15S3+SPT-2 + VAC5S 1 m	145000537	*

Appendix A. Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area. Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service.

Lenovo may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

*Lenovo (United States), Inc.
1009 Think Place - Building One
Morrisville, NC 27560
U.S.A.
Attention: Lenovo Director of Licensing*

LENOVO PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Lenovo may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary.

Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk.

Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

Electronic emissions notices

For electronic emission information on Class B digital devices, refer to the corresponding information in the *User Guide*.



Trademarks

The following terms are trademarks of Lenovo in the United States, other countries or both:

Active Protection System
Lenovo
OneKey

Windows is a trademark of the Microsoft group of companies.

Intel is a trademark of Intel Corporation in the U.S. and/or other countries.

Other company, product, or service names may be trademarks or service marks of others.



Part Number:

Printed in China

(1P) P/N:

