

Contents

Chapter 1. About this manual	1
Important Safety Information	1
Using eSupport.....	2
Important information about replacing RoHS compliant FRUs ..	2
 Chapter 2. Safety information.....	 4
General safety	4
Electrical safety	5
Safety inspection guide	7
Handling electrostatic discharge-sensitive devices	8
Grounding requirements	8
Safety notices.....	9
 Chapter 3. General information.....	 12
Specifications.....	12
 Chapter 4. General Checkout	 13
Problem determination tips	14
 Chapter 5. Using the Setup Utility	 16
Starting the Setup Utility program	16
Viewing and changing settings	16
Using passwords	17
Using Device	19
Selecting a startup device	20
Exiting from the Setup Utility program	21

Chapter 6. Symptom-to-FRU Index.....	22
Hard disk drive boot error	22
Power Supply Problems.....	23
Beep symptoms	24
POST error codes	25
Undetermined problems	27
 Chapter 7. Locations	 28
Locating components and connectors.....	28
 Chapter 8. Replacing hardware	 31
General information	31
Replacing a memory module	32
Removing the computer cover	35
Replacing the power board	38
Replacing the speaker system.....	42
Replacing the hard disk drive	43
Replacing an optical drive.....	47
Replace the Inverter board	49
Replacing the system fan.....	51
Replacing the camera.....	53
Replacing the wireless card	54
Replacing the TV tuner card	55
Replacing the CPU heat sink	57
Replacing the system board.....	59
Replacing the keyboard and mouse	61
Replacing the Mouse	62
Replacing the power cord or power adapter.....	63
Completing the installation	64
 Chapter 9. Additional Service Information.....	 66
Power management	66
 Appendix. Statement	 67

About this manual



This manual contains service and reference information for Lenovo
Lenovo 3000 C computers listed on the cover. It is intended only for
trained servicers who are familiar with Lenovo computer products.

Before servicing a Lenovo product, be sure to read the Safety Information.

This manual includes a complete FRU part number listing for each
machine type and model listed on the cover. If you have internet access,
FRU part numbers are also available at: <http://consumersupport.lenovo.com>.

The description of the TV card in this manual is only used for the machines
which have the TV card. It is invalid for those machines which do not have
TV card.

Important Safety Information

Be sure to read all caution and danger statements in this book before
performing any of the instructions.

Veillez lire toutes les consignes de type DANGER et ATTENTION du
présent document avant d'exécuter les instructions.

Lesen Sie unbedingt alle Hinweise vom Typ "ACHTUNG" oder "VORSICHT"
in dieser Dokumentation, bevor Sie irgendwelche Vorgänge durchführen

Leggere le istruzioni introdotte da ATTENZIONE e PERICOLO presenti nel
manuale prima di eseguire una qualsiasi delle istruzioni

Certifique-se de ler todas as instruções de cuidado e perigo neste manual
antes de executar qualquer uma das instruções

Es importante que lea todas las declaraciones de precaución y de peligro
de este manual antes de seguir las instrucciones.

执行任何说明之前，请确保已阅读本书中的所有警告和危险声明。

Using eSupport

For Key Commodities (Examples - hard disk drive, system board, microprocessor, LCD, and memory)

- eSupport can be used to view the list of key commodities built in a particular machine serial.
- eSupport can be accessed at the following Web site:
<http://consumersupport.lenovo.com>
- To view the key commodities:
 1. Click **Parts information**.
 2. Under Parts information, click **Parts lookup**.
 3. Under Parts lookup, type the model type and serial number; then click **Continue**.

The key commodities are returned in the eSupport record under Parts shipped with your system.

For the remaining FRUs (the complete list of FRUs at the MT Model level)

- eSupport can be used to view the complete list of FRUs for a machine type and model.
- To view the complete list of FRUs for a machine type:
 1. Point your browser to <http://consumersupport.lenovo.com>.
 2. Type the machine type (Example: 8129) in the Use Quick Path field; then click Go.
 3. Under Browse by product, click Continue.
 4. Under Important information, click Parts information.
 5. In the Refine results field, select Service parts; then click the entry for your machine type.

The list of service parts by description, with applicable machine type model and FRU part number is displayed.

Important information about replacing RoHS compliant FRUs

RoHS, The Restriction of Hazardous Substances in Electrical and Electronic Equipment Directive (2002/95/EC) is a European Union legal requirement affecting the global electronics industry. RoHS requirements must be implemented on Lenovo products placed on the market after June 2006. Products on the market before June 2006 are not required to have RoHS compliant parts.

So, if the parts are not compliant originally, replacement parts can also be noncompliant, but in all cases, if the parts are compliant, the replacement parts must also be compliant.

Lenovo plans to transition to RoHS compliance well before the

implementation date and expects its suppliers to be ready to support Lenovo's requirements and schedule. Products sold in 2005, will contain some RoHS compliant FRUs. The following statement pertains to these products and any product Lenovo produces containing RoHS compliant parts.

RoHS compliant Lenovo Lenovo 3000 C parts have unique FRU part numbers. Before or after June, 2006, failed RoHS compliant parts must always be replaced using RoHS compliant FRUs, so only the FRUs identified as compliant in the system HMM or direct substitutions for those FRUs can be used.

Products marketed before June 2006		Products marketed after June 2006	
Current or original part	Replacement FRU	Current or original part	Replacement FRU
Non-RoHS	Can be Non-RoHS	Must be RoHS	Must be RoHS
Non-RoHS	Can be RoHS		
Non-RoHS	Can sub to RoHS		
RoHS	Must be RoHS		

Note: A direct substitution is a part with a different FRU part number that is automatically shipped by the distribution center at the time of order.

Related Web URLs are:

- Lenovo information for Suppliers website:
<http://www-03.ibm.com/procurement/proweb.nsf/ContentDocsByTitle/United+States~Information+for+suppliers>
- RoHS Directive:
http://europa.eu.int/eur-lex/pri/en/oj/dat/2003/L_037/L_03720030213en00190023.pdf
- California Senate Bills 20, 50:
<http://www.ciwmb.ca.gov/HHW/Events/AnnualConf/2004/presentation/MPaparian.pdf>

Safety information

2

This chapter contains the safety information that you need to be familiar with before servicing a computer.

General safety

Follow these rules to ensure general safety:

- Observe good housekeeping in the area of the machines during and after maintenance.
- When lifting any heavy object:
 1. Ensure you can stand safely without slipping.
 2. Distribute the weight of the object equally between your feet.
 3. Use a slow lifting force. Never move suddenly or twist when you attempt to lift.
 4. Lift by standing or by pushing up with your leg muscles; this action removes the strain from the muscles in your back. *Do not attempt to lift any objects that weigh more than 16 kg (35 lb) or objects that you think are too heavy for you.*
- Do not perform any action that causes hazards to the customer, or that makes the equipment unsafe.
- Before you start the machine, ensure that other service representatives and the customer's personnel are not in a hazardous position.
- Place removed covers and other parts in a safe place, away from all personnel, while you are servicing the machine.
- Keep your tool case away from walk areas so that other people will not trip over it.
- Do not wear loose clothing that can be trapped in the moving parts of a machine. Ensure that your sleeves are fastened or rolled up above your elbows. If your hair is long, fasten it.
- Insert the ends of your necktie or scarf inside clothing or fasten it with a nonconductive clip, approximately 8 centimeters (3 inches) from the end.
- Do not wear jewelry, chains, metal-frame eyeglasses, or metal fasteners for your clothing.

Remember: Metal objects are good electrical conductors.

- Wear safety glasses when you are: hammering, drilling soldering, cutting wire, attaching springs, using solvents, or working in any other conditions that might be hazardous to your eyes.
- After service, reinstall all safety shields, guards, labels, and ground wires. Replace any safety device that is worn or defective.
- Reinstall all covers correctly before returning the machine to the customer.

Electrical safety



CAUTION:

Electrical current from power, telephone, and communication cables can be hazardous. To avoid personal injury or equipment damage, disconnect the attached power cords, telecommunication systems, networks, and modems before you open the server/workstation covers, unless instructed otherwise in the installation and configuration procedures.

Observe the following rules when working on electrical equipment.

Important: Use only approved tools and test equipment. Some hand tools have handles covered with a soft material that does not insulate you when working with live electrical currents.

Many customers have, near their equipment, rubber floor mats that contain small conductive fibers to decrease electrostatic discharges. Do not use this type of mat to protect yourself from electrical shock.

- Find the room emergency power-off (EPO) switch, disconnecting switch, or electrical outlet. If an electrical accident occurs, you can then operate the switch or unplug the power cord quickly.
- Do not work alone under hazardous conditions or near equipment that has hazardous voltages.
- Disconnect all power before:
 - Performing a mechanical inspection
 - Working near power supplies
 - Removing or installing main units
- Before you start to work on the machine, unplug the power cord. If you cannot unplug it, ask the customer to power-off the wall box that supplies power to the machine and to lock the wall box in the off position.

- If you need to work on a machine that has exposed electrical circuits, observe the following precautions:
 - Ensure that another person, familiar with the power-off controls, is near you.
Remember: Another person must be there to switch off the power, if necessary.
 - Use only one hand when working with powered-on electrical equipment; keep the other hand in your pocket or behind your back.
Remember: There must be a complete circuit to cause electrical shock. By observing the above rule, you may prevent a current from passing through your body.
 - When using testers, set the controls correctly and use the approved probe leads and accessories for that tester.
 - Stand on suitable rubber mats (obtained locally, if necessary) to insulate you from grounds such as metal floor strips and machine frames.
Observe the special safety precautions when you work with very high voltages; these instructions are in the safety sections of maintenance information. Use extreme care when measuring high voltages.
- Regularly inspect and maintain your electrical hand tools for safe operational condition.
- Do not use worn or broken tools and testers.
- *Never assume* that power has been disconnected from a circuit. First, check that it has been powered-off.
- Always look carefully for possible hazards in your work area. Examples of these hazards are moist floors, nongrounded power extension cables, power surges, and missing safety grounds.
- Do not touch live electrical circuits with the reflective surface of a plastic dental mirror. The surface is conductive; such touching can cause personal injury and machine damage.
- Do not service the following parts with the power on when they are removed from their normal operating places in a machine:
 - Power supply units
 - Pumps
 - Blowers and fans
 - Motor generatorsand similar units. (This practice ensures correct grounding of the units.)
- If an electrical accident occurs:
 - Use caution; do not become a victim yourself.
 - Switch off power.
 - Send another person to get medical aid.

Safety inspection guide

The intent of this inspection guide is to assist you in identifying potentially unsafe conditions on these products. Each machine, as it was designed and built, had required safety items installed to protect users and service personnel from injury. This guide addresses only those items. However, good judgment should be used to identify potential safety hazards due to attachment of features or options not covered by this inspection guide.

If any unsafe conditions are present, you must determine how serious the apparent hazard could be and whether you can continue without first correcting the problem.

Consider these conditions and the safety hazards they present:

- Electrical hazards, especially primary power (primary voltage on the frame can cause serious or fatal electrical shock).
- Explosive hazards, such as a damaged CRT face or bulging capacitor
- Mechanical hazards, such as loose or missing hardware

The guide consists of a series of steps presented in a checklist. Begin the checks with the power off, and the power cord disconnected.

Checklist:

1. Check exterior covers for damage (loose, broken, or sharp edges).
2. Power-off the computer. Disconnect the power cord.
3. Check the power cord for:
 - a. A third-wire ground connector in good condition. Use a meter to measure third-wire ground continuity for 0.1 ohm or less between the external ground pin and frame ground.
 - b. The power cord should be the appropriate type as specified in the parts listings.
 - c. Insulation must not be frayed or worn.
4. Remove the cover.
5. Check for any obvious alterations. Use good judgment as to the safety of any alterations.
6. Check inside the unit for any obvious unsafe conditions, such as metal filings, contamination, water or other liquids, or signs of fire or smoke damage.
7. Check for worn, frayed, or pinched cables.
8. Check that the power-supply cover fasteners (screws or rivets) have not been removed or tampered with.

Handling electrostatic discharge-sensitive devices

Any computer part containing transistors or integrated circuits (ICs) should be considered sensitive to electrostatic discharge (ESD). ESD damage can occur when there is a difference in charge between objects. Protect against ESD damage by equalizing the charge so that the machine, the part, the work mat, and the person handling the part are all at the same charge.

Notes:

1. Use product-specific ESD procedures when they exceed the requirements noted here.
2. Make sure that the ESD protective devices you use have been certified (ISO 9000) as fully effective.

When handling ESD-sensitive parts:

- Keep the parts in protective packages until they are inserted into the product.
- Avoid contact with other people.
- Wear a grounded wrist strap against your skin to eliminate static on your body.
- Prevent the part from touching your clothing. Most clothing is insulative and retains a charge even when you are wearing a wrist strap.
- Use the black side of a grounded work mat to provide a static-free work surface. The mat is especially useful when handling ESD-sensitive devices.
- Select a grounding system, such as those listed below, to provide protection that meets the specific service requirement.

Note: The use of a grounding system is desirable but not required to protect against ESD damage.

- Attach the ESD ground clip to any frame ground, ground braid, or green-wire ground.
- Use an ESD common ground or reference point when working on a double-insulated or battery-operated system. You can use coax or connector-outside shells on these systems.
- Use the round ground-prong of the ac plug on ac-operated computers.

Grounding requirements

Electrical grounding of the computer is required for operator safety and correct system function. Proper grounding of the electrical outlet can be verified by a certified electrician.

Safety notices

The caution and danger safety notices in this section are provided in the the language of English.



DANGER

Electrical current from power, telephone and communication cables is hazardous.

To avoid a shock hazard:

- Do not connect or disconnect any cables or perform installation, maintenance, or reconfiguration of this product during an electrical storm.
- Connect all power cords to a properly wired and grounded electrical outlet.
- Connect to properly wired outlets any equipment that will be attached to this product.
- When possible, use one hand only to connect or disconnect signal cables.
- Never turn on any equipment when there is evidence of fire, water, or structural damage.
- Disconnect the attached power cords, telecommunications systems, networks, and modems before you open the device covers, unless instructed otherwise in the installation and configuration procedures.
- Connect and disconnect cables as described in the following table when installing, moving, or opening covers on this product or attached devices.

To Connect	To Disconnect
1. Turn everything OFF.	1. Turn everything OFF.
2. First, attach all cables to devices.	2. First, remove power cords from outlet.
3. Attach signal cables to connectors.	3. Remove signal cables from connectors.
4. Attach power cords to outlet.	4. Remove all cables from devices.
5. Turn device ON.	



CAUTION:

When replacing the lithium battery, use only Part Number 33F8354 or an equivalent type battery recommended by the manufacturer. If your system has a module containing a lithium battery, replace it only with the same module type made by the same manufacturer. The battery contains lithium and can explode if not properly used, handled, or disposed of.

Do not:

- Throw or immerse into water
- Heat to more than 100°C (212°F)
- Repair or disassemble

Dispose of the battery as required by local ordinances or regulations.



CAUTION:

When laser products (such as CD-ROMs, DVD-ROM drives, fiber optic devices, or transmitters) are installed, note the following:

- Do not remove the covers. Removing the covers of the laser product could result in exposure to hazardous laser radiation. There are no serviceable parts inside the device.
- Use of controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.



DANGER:

Some laser products contain an embedded Class 3A or Class 3B laser diode. Note the following:

Laser radiation when open. Do not stare into the beam, do not view directly with optical instruments, and avoid direct exposure to the beam.



≥ 18 kg (37 lbs)



≥ 32 kg (70.5 lbs)



≥ 55 kg (121.2 lbs)

CAUTION:

Use safe practices when lifting.



CAUTION:

The power control button on the device and the power switch on the power supply do not turn off the electrical current supplied to the device. The device also might have more than one power cord. To remove all electrical current from the device, ensure that all power cords are disconnected from the power source.



2  → 

1  → 



CAUTION:

Do not place any object weighing more than 82 kg (180 lbs.) on top of rack-mounted devices.



General information

3

This chapter provides general information that applies to all machine types supported by this publication.

Specifications

This section lists the physical specifications for your computer.

Type Lenovo 3000 C

This section lists the physical specifications.

Environment

Air temperature:

Operating: 10° to 35°C

Transit: -20° to 55°C

Humidity:

Operating: 35% to 80%

Transit: 20% to 93% (40°C)

Altitude: 86KPa to 106KPa

Electrical input

Input voltage: 220V±22V

Input frequency: 50Hz ±1Hz

General Checkout

4

Attention

The drives in the computer you are servicing might have been rearranged or the drive startup sequence changed. Be extremely careful during write operations such as copying, saving, or formatting. Data or programs can be overwritten if you select an incorrect drive.

General error messages appear if a problem or conflict is found by an application program, the operating system, or both. For an explanation of these messages, refer to the information supplied with that software package.

Notes

- The default is for this computer to boot up in quiet mode (no beep, no memory count and checkpoint code display) when no errors are detected by POST.
- To enable beep, memory count, and checkpoint code display when a successful POST occurs, do the following:
 1. Start the Setup Utility program. See ["Starting the Setup Utility program"](#).
 2. Select **Start Options**.
 3. Set **Power-On Self-Test to Enhanced**.
- Before replacing any FRUs, ensure that the latest level of BIOS is installed on the system. A down-level BIOS might cause false errors and unnecessary replacement of the system board.

Use the following procedure to help determine the cause of the problem:

1. Power-off the computer and all external devices.
2. Check all cables and power cords.
3. Set all display controls to the middle position.
4. Power-on all external devices.

5. Power-on the computer.
 - Look for displayed error codes
 - Listen for beep codes
 - Look for readable instructions or a main menu on the display.If you did not receive the correct response, proceed to step 6.
If you do receive the correct response, proceed to step 7.
6. Look at the following conditions and follow the instructions:
 - If you hear beep codes during POST, go to [“Beep symptoms”](#).
 - If the computer displays a POST error, go to [“POST error codes”](#).
 - If the computer hangs and no error is displayed, continue at step 7.
7. If you cannot continue, replace the last device tested.

Problem determination tips

Due to the variety of hardware and software combinations that can be encountered, use the following information to assist you in problem determination. If possible, have this information available when requesting assistance from Service Support and Engineering functions.

- Machine type and model
- Processor or hard disk upgrades
- Failure symptom
 - Do diagnostics indicate a failure?
 - What, when, where, single, or multiple systems?
 - Is the failure repeatable?
 - Has this configuration ever worked?
 - If it has been working, what changes were made prior to it failing?
 - Is this the original reported failure?
- Diagnostics version
 - Type and version level
- Hardware configuration
 - Print (print screen) configuration currently in use
 - BIOS level
- Operating system software
 - Type and version level

Note: To eliminate confusion, identical systems are considered identical only if they:

1. Are the exact machine type and models
2. Have the same BIOS level
3. Have the same adapters/attachments in the same locations
4. Have the same address jumpers/terminators/cabling
5. Have the same software versions and levels
6. Have the same configuration options set in the system
7. Have the same setup for the operation system control files

Comparing the configuration and software set-up between “working and non-working” systems will often lead to problem resolution.

Using the Setup Utility

5

The Setup Utility program is used to view and change the configuration settings of your computer, regardless of which operating system you are using. However, the operating-system settings might override any similar settings in the Setup Utility program.

Starting the Setup Utility program

To start the Setup Utility program, do the following:

1. If your computer is already on when you start this procedure, shut down the operating system and turn off the computer.
2. Press and hold the F1 key then turn on the computer. When you hear multiple beeps, release the F1 key.

Notes:

- a. If you are using a USB keyboard and the Setup Utility program does not display using this method, repeatedly press and release the F1 key rather than leaving it pressed when turning on the computer.
- b. If a Power-On Password or an administrator password has been set, the Setup Utility program menu is not displayed until you type your password. For more information, see "Using passwords."

Viewing and changing settings

The Setup Utility program menu lists items that identify system configuration topics. To view or change settings, see "Starting the Setup Utility program."

When working with the Setup Utility program menu, you must use the keyboard. The keys used to perform various tasks are displayed on the right side of each screen.

Using passwords

By using the Setup Utility program, you can set passwords to prevent unauthorized persons from gaining access to your computer and data. See “Starting the Setup Utility program.” The following types of passwords are available:

- Administrator Password
- Power-On Password

You do not have to set any passwords to use your computer. However, if you decide to set any passwords, read the following sections.

Password considerations

A password can be any combination of up to 8 or 16 characters (a-z and 0-9) and symbols. For security reasons, it is a good idea to use a strong password that cannot be easily compromised. We suggest the passwords should adhere to the following rules:

- Must have at least seven characters in length
- Contain at least one alphabetic character and one numeric character
- Setup Utility program and hard disk drive passwords are not case sensitive
- Not be your name or your user name
- Not be a common word or a common name
- Be significantly different from your previous password

Administrator password

When a Administrator Password is set, it deters unauthorized persons from changing configuration settings. If you are responsible for maintaining the settings of several computers, you might want to set a Administrator Password.

After you set a Administrator Password, a password prompt is displayed each time you try to access the Setup Utility program.

If both the Administrator and Power-On Password are set, you can type either password. However, to change any configuration settings, you must use your Administrator password.

Setting, changing, and deleting a Administrator password

To set, change, or delete a password, do the following:

Note

A password can be any combination of up to 8 or 16 characters (a-z, and 0-9). For more information, see "Password considerations" on page 17.

1. Start the Setup Utility program (see "Starting the Setup Utility program" on page 16).
2. From Security menu, select **Set Administrator Password** and press Enter.
3. The password dialog box will be displayed. Type the new password, and press Enter.
4. when prompted to confirm the password, type the password again. If you type the password correctly, the password will be installed.

To delete a previously set Administrator password, do the following :

Note: When prompted for a password, you must type your Administrator password.

1. From Security menu, select **Set Administrator Password** and press Enter.
2. The password dialog box will be displayed. Enter Current Password and press Enter. Press Enter in New Password and confirm New Password dialog. A setup notice will display that changes have been saved.
3. Press Enter to continue.

Power-On Password

When a Power-On Password is set, you cannot start the Setup Utility program until a valid password is typed from the keyboard.

Setting, changing, and deleting a Power-On Password

To set, change, or delete a Power-On Password, do the following:

Note

A password can be any combination of up to 8 or 16 characters(a-z, and 0-9).

1. Start the Setup Utility program (See "Starting the Setup Utility program")
2. From the Security menu, select **Set Power-On Password** and press Enter.

3. The password dialog box will be displayed. Type the new password, and press Enter.
4. When prompted to confirm the password, type the password again. If you type the password correctly, the password will be installed.

To delete a previously set Power-On Password, do the following :

1. From the Security menu, select **Set Power-On Password** and press **Enter**.
2. The password dialog box will be displayed. Enter Current Password and press Enter. Press Enter in New Password and confirm New Password dialog. A setup notice will display that changes have been saved.
3. Press Enter to continue.

Using Device

USB Setup

When this feature is set to **Disable**, the device of USB Setup is disabled and will not be displayed in the system configuration.

To set Device, do the following:

1. Start the Setup Utility program (see "Starting the Setup Utility program" on page 16).
2. From the Setup Utility program menu, select **Devices**.
3. Select **USB Setup**.
4. Select **Disabled** or **Enabled** and press Enter.
5. Return to the Setup Utility program menu and press F10 to save configuration changes and exit setup.

Note

If you do not want to save the settings, select **Discard changes and Exit**. You can set others such as **ATA Drives Setup**, **Video Setup**, **Audio Setup**, **Network Setup**. See the information displayed on the right side of the screen.

Selecting a startup device

If your computer does not start up (boot) from a device such as the CD-ROM, diskette, or hard disk as expected, use one of the following procedures to select a startup device.

Selecting a temporary startup device

Use this procedure to startup from any boot device.

Note: Not all CDs, hard disks, and diskettes are bootable.

1. Turn off your computer.
2. Press and hold the F12 key then turn on the computer. When the Startup Device Menu appears, release the F12 key.

Note: If you are using a USB keyboard and the Startup Device Menu does not display using this method, repeatedly press and release the F12 key rather than leaving it pressed when turning on the computer.

3. Select the desired startup device from the Startup Device Menu and press Enter to begin.

Note: Selecting a startup device from the Startup Device menu does not permanently change the startup sequence.

Selecting or changing the startup device sequence

To view or permanently change the configured startup device sequence, do the following:

1. Start the Setup Utility program (see “Starting the Setup Utility program” on page 16).
2. Select **Start Up**.
3. Select **Start Up Sequence**.
4. Select **Primary Boot Sequence**.
5. Select the drives for the 1st Boot Device, the 2nd Boot Device, the 3rd Boot Device and the 4th Boot Device.
6. Press ESC to return the **Primary Boot Sequence**.
7. Press ESC to return the **Start Up** and then **Save changes and Exit**.

If you have changed these settings and want to return to the default settings, select **Load Optimal Defaults** on the Setup Utility menu.

Exiting from the Setup Utility program

When you finish viewing or changing settings, press Esc to return to the Setup Utility program menu (you might have to press Esc several times). If you want to save the new settings, select **Save changes and Exit** before you exit. Otherwise, your changes will not be saved.

Symptom-to-FRU Index

6

The Symptom-to-FRU index lists error symptoms and possible causes. The most likely cause is listed first. Always begin with Chapter 4, "General Checkout," on page 13. This index can also be used to help you decide which FRUs to have available when servicing a computer. If you are unable to correct the problem using this index, go to "Undetermined problems" on page 27.

Notes

- If you have both an error message and an incorrect audio response diagnose the error message first.
- If you cannot run the diagnostic tests or you get a diagnostic error code when running a test but did receive a POST error message diagnose the POST error message first.
- If you did not receive any error message look for a description of your error symptoms in the first part of this index.

Hard disk drive boot error

A hard disk drive boot error (error codes 1962 and I999030X) can have the following causes.

Error	FRU/Action
The start-up drive is not in the boot sequence in configuration.	Check the configuration and ensure the start-up drive is in the boot sequence.
No operating system installed on the boot drive.	Install an operating system on the boot drive.

Error	FRU/Action
The boot sector on the start-up drive is corrupted.	The drive must be formatted do the following: 1. Attempt to back-up the data on the failing hard disk drive. 2. Using the operating systems programs format the hard disk drive.
The drive is defective.	Replace the hard disk drive.

Power Supply Problems

If you suspect a power problem, use the following procedures.

Check/Verify	FRU/Action
Check the following for proper installation. <ul style="list-style-type: none"> • Power Cord • On/Off Switch connector • On/Off Switch Power Supply connector • System Board Power Supply connectors • Microprocessor(s) connection 	Reseat connectors
Check the power cord for continuity.	Power Cord
Check the power-on switch for continuity.	Power-on Switch

Beep symptoms

Beep symptoms are tones or a series of tones separated by pauses (intervals without sound) during POST.

The following tables describes beep symptoms.

Beep Symptom	FRU/Action
1 beep Memory refresh timer error	Reseat the memory, or replace with known good modules.
2 beeps Parity error in base memory (first 64KB block)	
3 beeps Base memory read/write test error	
4 beeps Motherboard timer not operational	Fatal error indicating a serious problem with the system. Consult your system manufacturer. Before declaring the motherboard beyond all hope, eliminate the possibility of interference by a malfunctioning add-in card. Remove all expansion cards except the video adapter. <ul style="list-style-type: none">• If beep codes are generated when all other expansion cards are absent, consult your system manufacturer's technical support.• If beep codes are not generated when all other expansion cards are absent, one of the add-in cards is causing the malfunction. Insert the cards back into the system one at a time until the problem happens again. This will reveal the malfunctioning card.
5 beeps Processor error	
6 beeps 8042 Gate A20 test error (cannot switch to protected mode)	
7 beeps General exception error (processor exception interrupt error)	
8 beeps Display memory error (system video adapter)	If the system video adapter is an add-in card, replace or reseat the video adapter. If the video adapter is an integrated part of the system board, the board may be faulty.

Beep Symptom	FRU/Action
9 beeps Phenix BIOS ROM checksum error	Fatal error indicating a serious problem with the system. Consult your system manufacturer. Before declaring the motherboard beyond all hope, eliminate the possibility of interference by a malfunctioning add-in card. Remove all expansion cards except the video adapter. <ul style="list-style-type: none"> • If beep codes are generated when all other expansion cards are absent, consult your system manufacturer's technical support. • If beep codes are not generated when all other expansion cards are absent, one of the add-in cards is causing the malfunction. Insert the cards back into the system one at a time until the problem happens again. This will reveal the malfunctioning card.
10 beeps CMOS shutdown register read/write error	
11 beeps Cache memory test failed	

POST error codes

Each time you power-on the system, it performs a series of tests that check the operation of the system and some options. This series of tests is called the *Power-On Self-Test*, or *POST*. POST does the following operations.

- Checks some basic system-board operations
- Checks the memory operation
- Starts the video operation
- Verifies that the boot drive is working

If the POST detects a problem, an error message appears on the screen. A single problem can cause several error messages to appear. When you correct the cause of the first error message, the other error messages probably will not appear on the screen the next time you turn on the system.

POST Error Message	Description/Action
CMOS Date/Time Not Set	The CMOS Date and/or Time are invalid. This error can be resolved by readjusting the system time in Phenix BIOS Setup.
CMOS Battery Low	The CMOS battery is no longer functional. Replace the battery.
CMOS Checksum Bad	Checksum of CMOS is incorrect. The computer loads the default configuration settings. This error might indicate that CMOS has become corrupt due to a weak CMOS battery.
Primary Master Hard Disk Error	The IDE/ATAPI device configured as Primary Master/Primary Slave/Secondary Master/Secondary Slave could not be found or initialized. Make sure the hard drive is correctly installed.
Primary Slave Hard Disk Error	
Secondary Master Hard Disk Error	
Secondary Slave Hard Disk Error	
PS2 Mouse not found	PS2 Mouse support is enabled in the BIOS setup but the device is not detected. You can plug PS2 Mouse or set PS2 Mouse support is auto.
Keyboard error	Cannot initialize the keyboard. Make sure the keyboard is properly connected to the computer and that no keys are held pressed during POST. To purposely configure the computer without a keyboard, set keyboardless operation in Setup to Enable. The BIOS then ignores the missing keyboard during POST.
System Halted	The system has been halted. A reset or power cycle is required to reboot the machine. This message appears after a fatal error has been detected.
Press TAB to show POST screen	Pressing the TAB key permits the user to toggle between the default POST display screen and a custom POST display screen.

POST Error Message	Description/Action
Reboot and Select proper Boot device or Insert Boot Media in selected Boot device	The BIOS was unable to find a suitable boot device. Make sure the boot drive is properly connected to the computer. Make sure you have bootable media.

Undetermined problems

If this computer has a parallel ATA hard disk drive, make sure that the hard disk drive is jumpered as a master and the optical drive is jumpered as a slave.

1. Power-off the computer.
2. Remove or disconnect the following components (if installed) one at a time.
 - a. External devices (modem, printer, or mouse)
 - b. Any adapters
 - c. Memory modules
 - d. Extended video memory
 - e. External Cache
 - f. External Cache RAM
 - g. Hard disk drive
 - h. Diskette drive
3. Power-on the computer to re-test the system.
4. Repeat steps 1 through 3 until you find the failing device or adapter.

If all devices and adapters have been removed, and the problem continues, replace the system board.

Locations

7


This section provides illustrations to help locate the various connectors, controls and components of the computer. To remove the computer cover, “refer to Removing the computer cover”.

Locating components and connectors

The following illustrations will help you to locate the various components and connectors in your computer.

Internal components

The following illustration shows the components inside your computer.

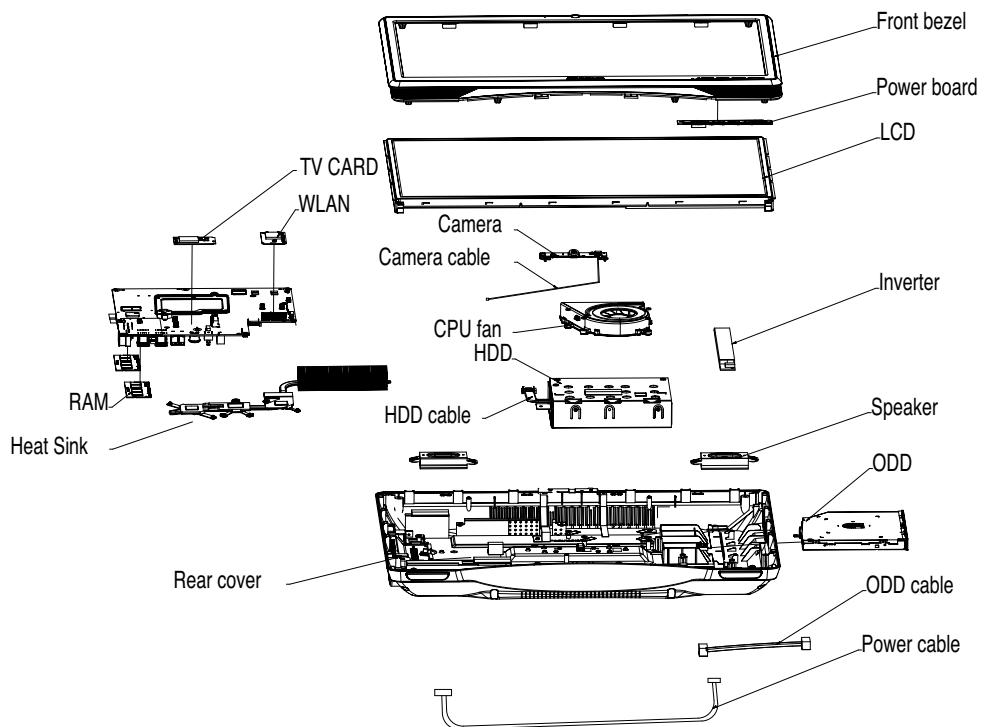


Identifying parts on the system board

The system board (sometimes called the planar or motherboard) is the main circuit board in your computer. It provides basic computer functions and supports a variety of devices that are factory-installed or that you can install later.


The following illustration shows the locations of parts on the system board.

Front view of the system board

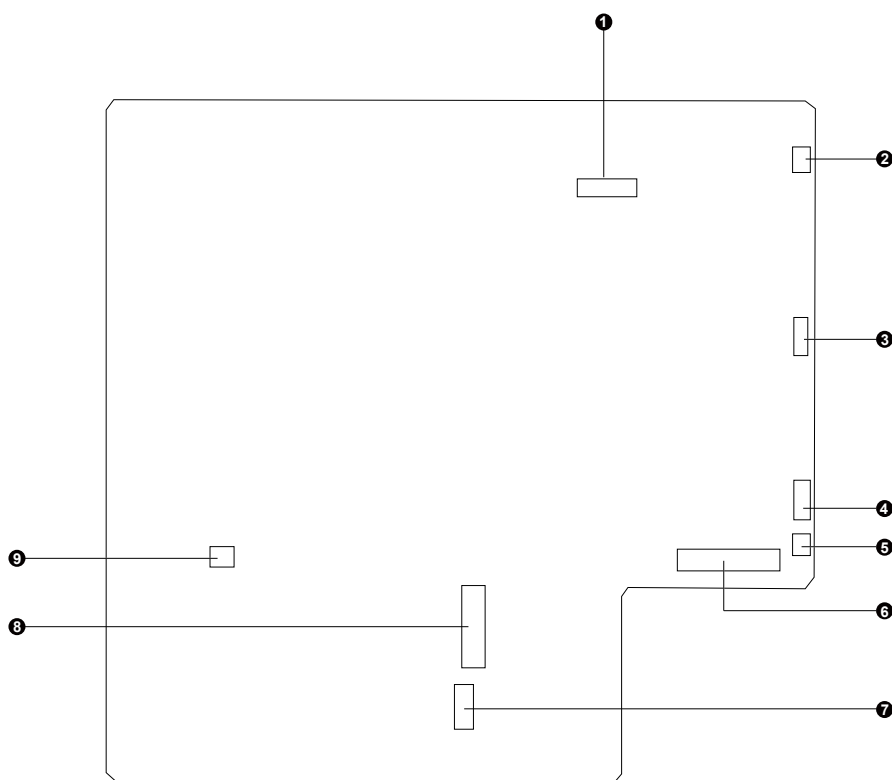

- ❶ LCD panel power cable connector
- ❷ System fan cable connector
- ❸ Camera cable connector
- ❹ Inverter board cable connector
- ❺ HDD fan cable connector
- ❻ WLAN card connector
- ❼ Power board connector
- ❽ TV tuner module connector
- ❾ Speakers cable connector

Back view of the system board

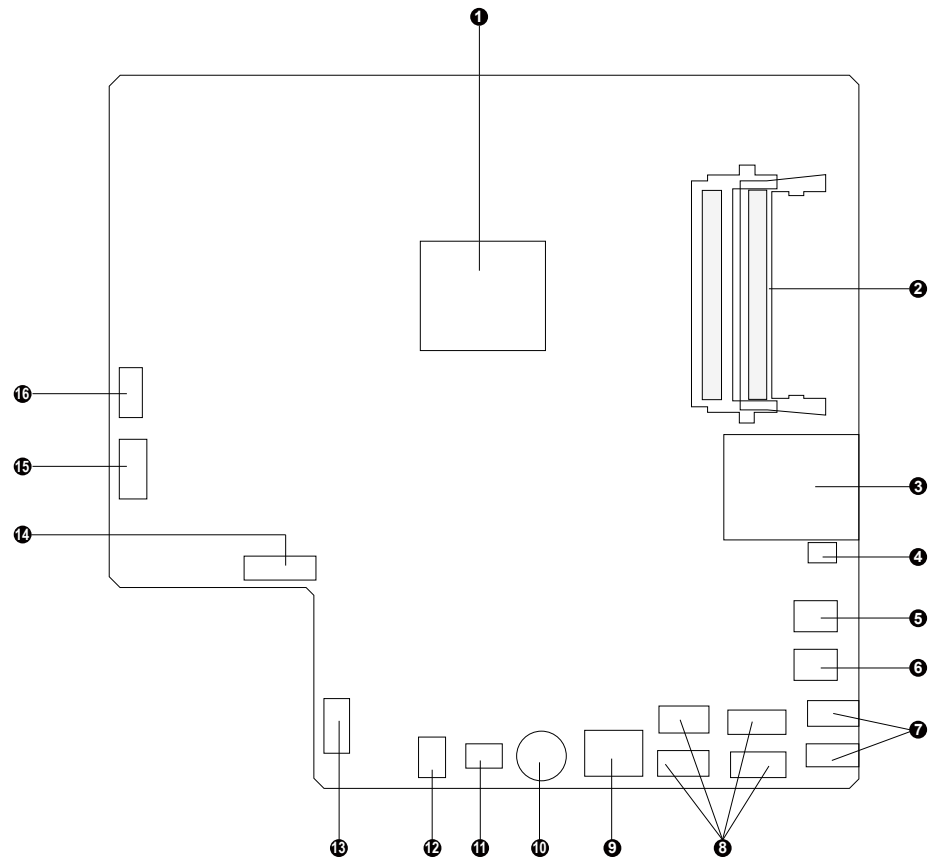

- ❶ Microprocessor
- ❷ Memory slots
- ❸ Memory card reader
- ❹ IEEE 1394 connector
- ❺ Headphone connector
- ❻ Microphone connector
- ❼ USB connectors (2)
- ❽ USB connectors (4)
- ❾ Ethernet connector
- ❿ PS2 Keyboard connector
- ⓫ TV tuner (Select models only)
- ⓬ Power connector
- ⓭ HDD power cable connector
- ⓮ HDD SATA 2 connector
- ⓯ ODD SATA 1 connector
- ⓰ ODD power cable connector

Replacing hardware

8

Attention



Do not remove the computer cover or attempt any repair before reading the “Important safety information” in the *Safety and Warranty Guide* that was included with your computer or in the *Hardware Maintenance Manual* (HMM) for the computer. To obtain copies of the *Safety and Warranty Guide* or *HMM*, go to the Support Web site at: <http://consumersupport.lenovo.com>.

Note



Use only parts provided by Lenovo.

General information

Pre-disassembly instructions

Before proceeding with the disassembly procedure, make sure that you do the following:

1. Turn off the power to the system and all peripherals.
2. Unplug all power and signal cables from the computer.
3. Place the system on a flat, stable surface.

Replacing a memory module

Attention



Turn off the computer and wait 3 to 5 minutes to let the computer cool before removing the computer cover.


To remove the computer cover:

Note




For this procedure, it helps to place the computer face-down on a soft flat surface. Lenovo recommends that you use a blanket, towel, or other soft cloth to protect the touch screen surface from scratches or other damage.


1. Remove any media (diskettes, CDs, or memory cards) from the drives, shut down your operating system, turn off all attached devices, and the computer.
2. Unplug all power cords from electrical outlets.
3. Disconnect all cables attached to the computer. This includes power cords, input/output (I/O) cables, and any other cables that are connected to the computer. Refer to [Locating connectors on the rear of the computer](#).
4. Remove the screw that secures the memory cover to the back of the computer.

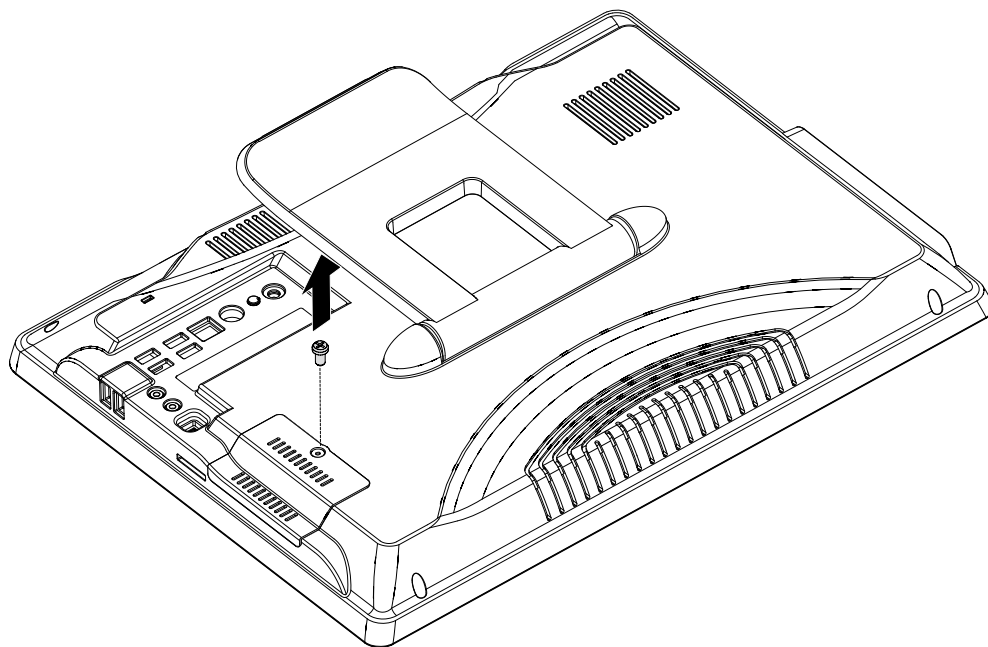


5. Gently slide the cover toward the side of the computer, and then remove it.

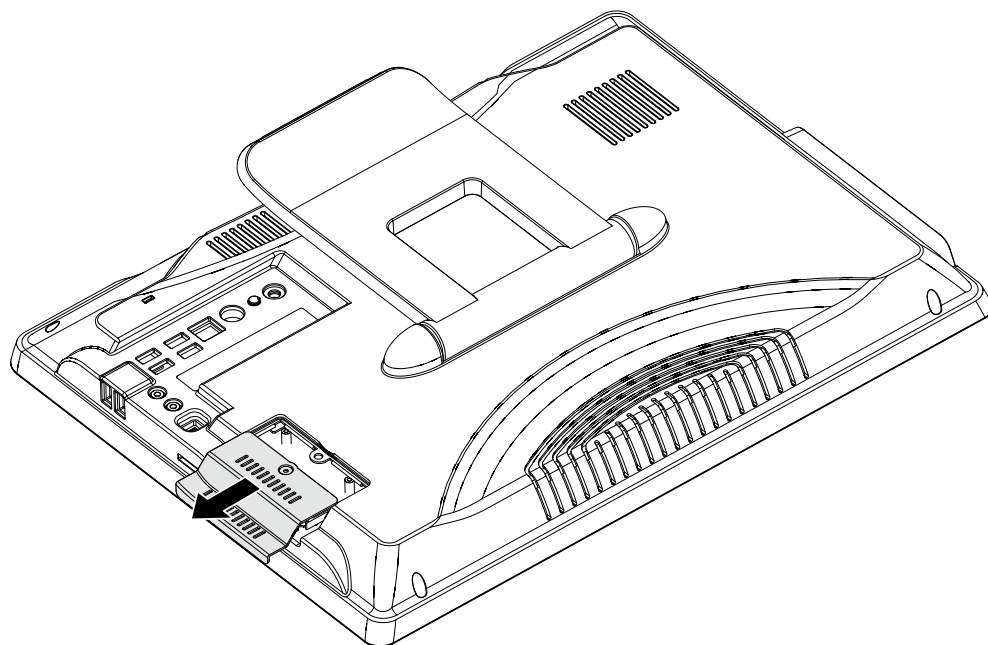

6. Push out the latches on both sides of the memory socket to release the memory module ❶ and gently pull the memory module upward to remove it from its socket ❷. Both memory modules can be removed by using the same procedure.

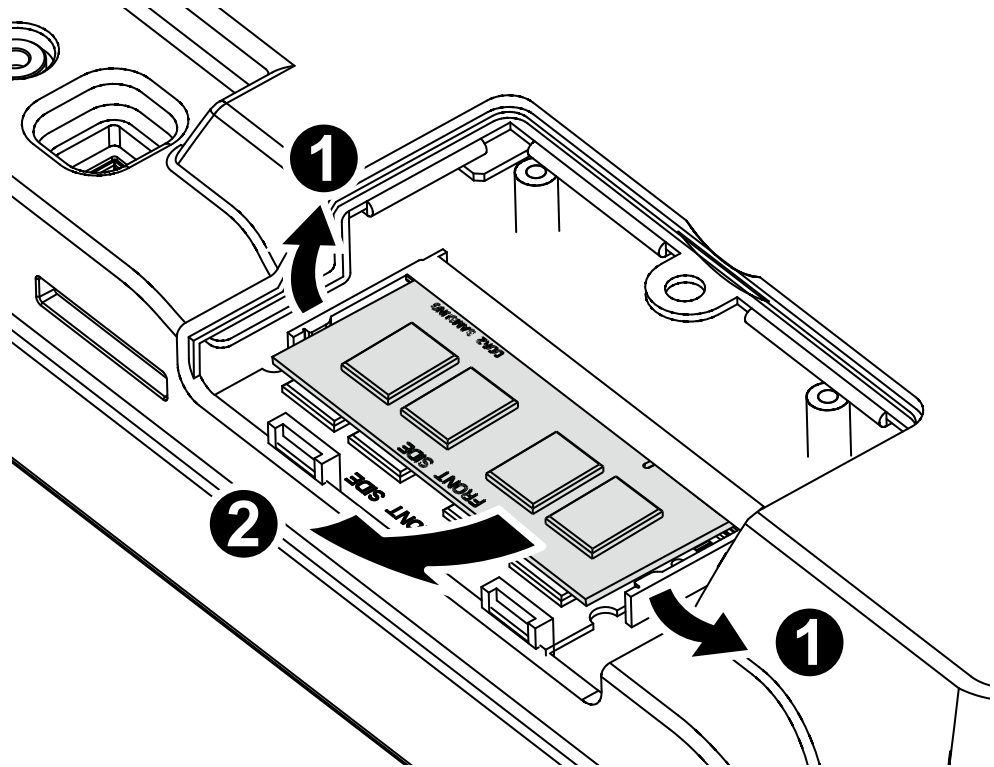

7. Align then insert the new memory module into the socket ❶ and push down on the top edge of the memory module ❷. Make sure the latches lock the memory module in place.

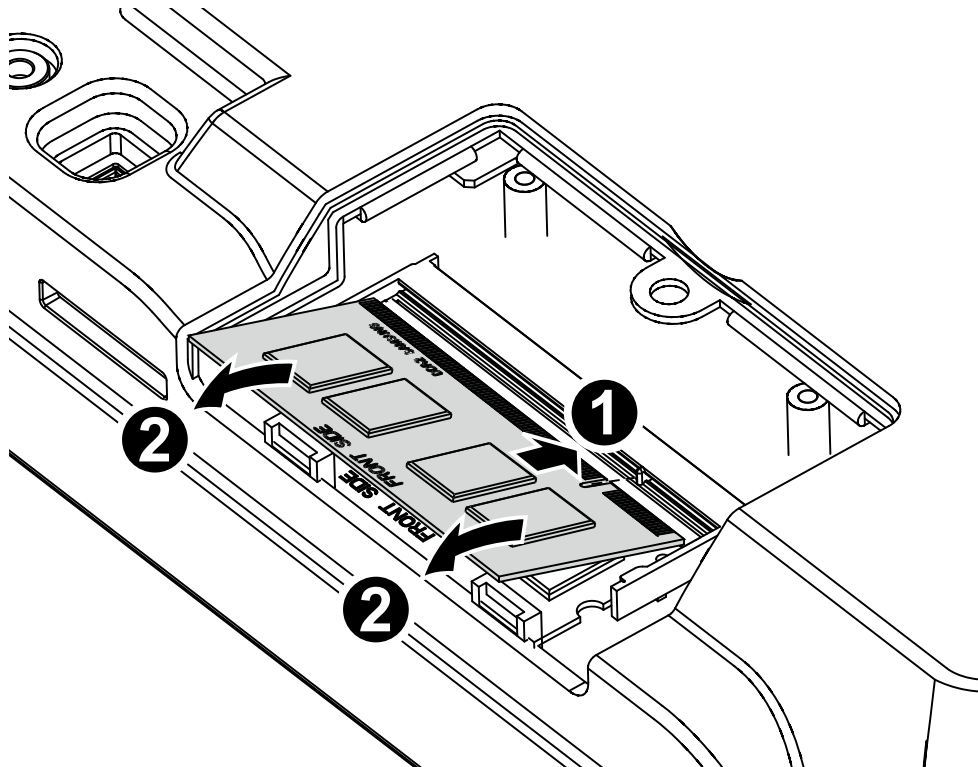

8. Slide the memory cover backward until it snaps into position.
9. Screw back the screw on the memory cover.

Removing the computer cover

Attention:



Turn off the computer and wait 3 to 5 minutes to let the computer cool before removing the computer cover.


To remove the computer cover:

Note





For this procedure, it helps to place the computer face-down on a soft flat surface. Lenovo recommends that you use a blanket, towel, or other soft cloth to protect the touch screen surface from scratches or other damage.

1. Remove any media (diskettes, CDs, or memory cards) from the drives, shut down your operating system, turn off all attached devices, and the computer.
2. Unplug all power cords from electrical outlets.
3. Disconnect all cables attached to the computer. This includes power cords, input/output (I/O) cables, and any other cables that are connected to the computer. Refer to "Locating connectors on the rear of the computer".
4. Remove the six screws that secure the system cover to the chassis.

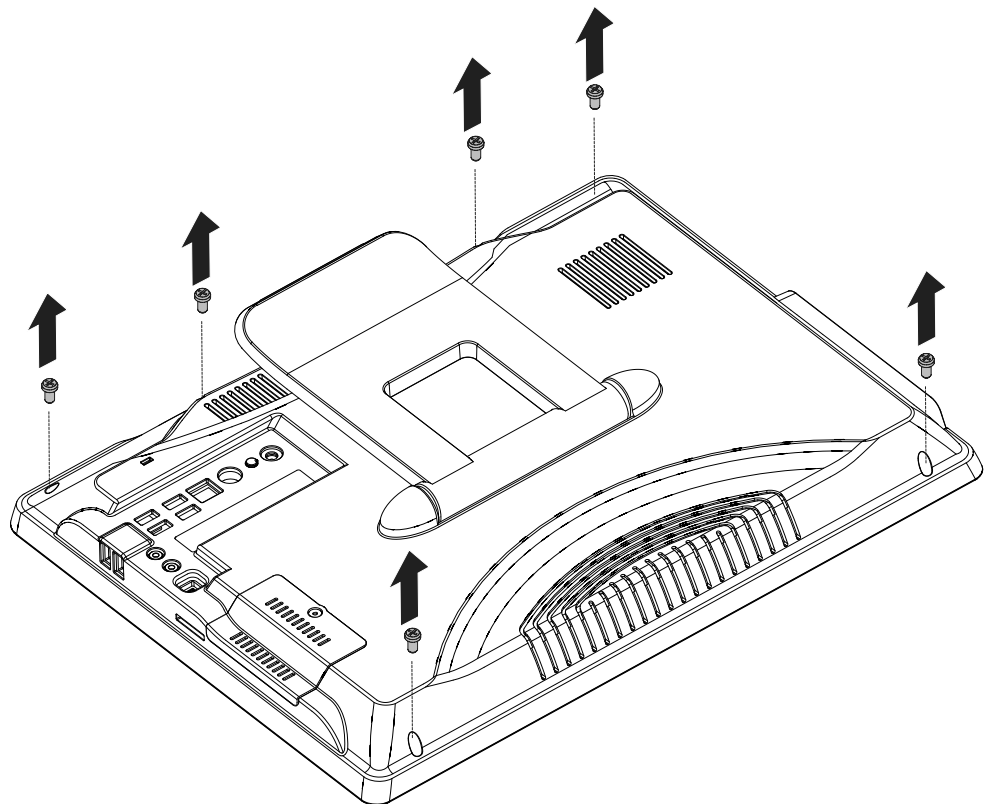

5. Place the computer upside down on the flat surface. Release the left and right tabs from the connector housing, then pull each side of the cover out slightly **1**, release the top tabs from the connector housing, then lift the cover away from the computer **2**.

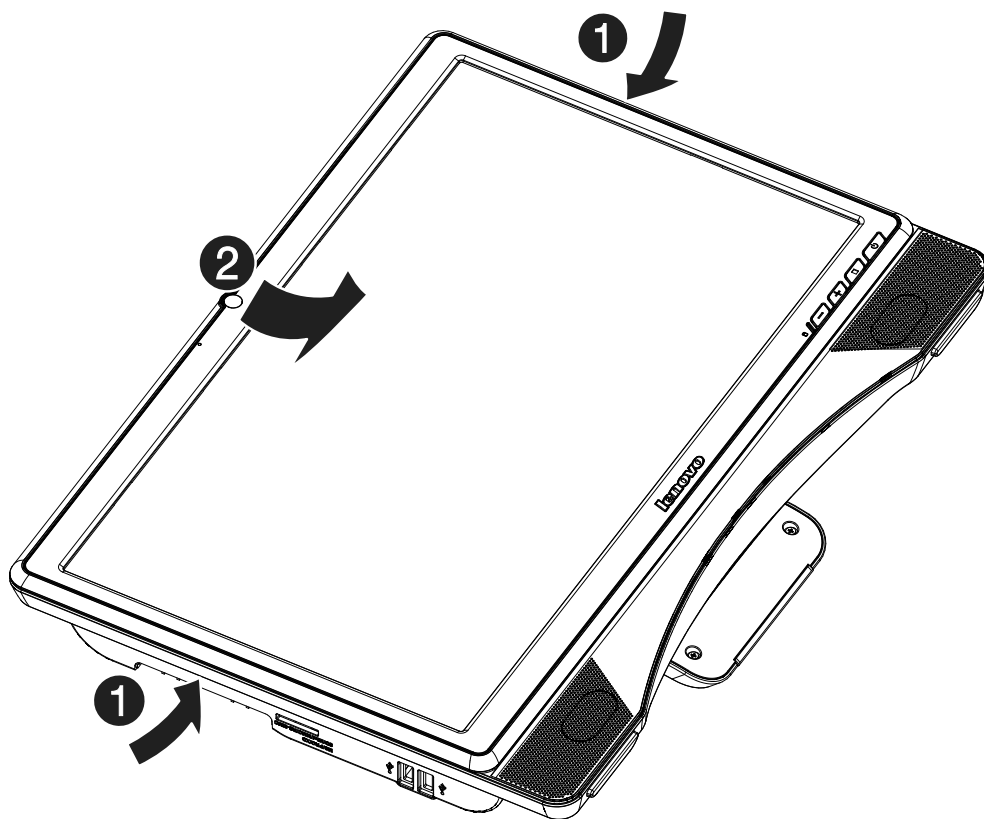


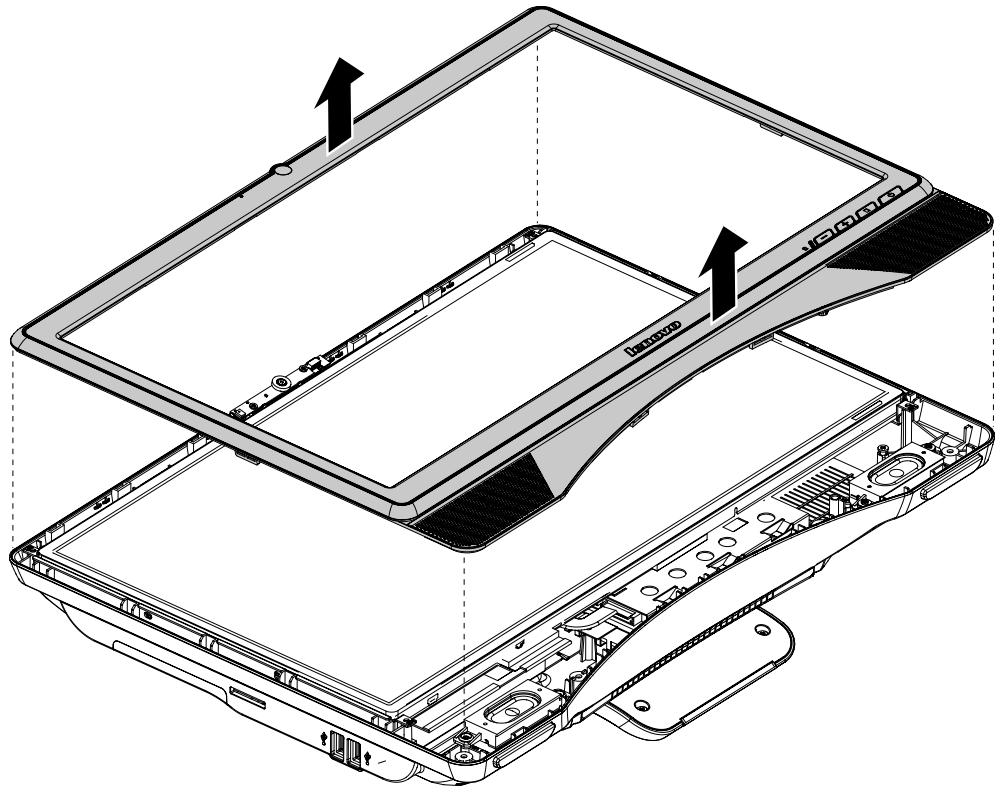


Replacing the power board

To replace the power board

1. Remove the computer cover. Refer to "Removing the computer cover".
2. Place the computer cover upside down on a flat surface.
3. Disconnect the cable from the power board ❶.
4. Remove the two screws that hold the power board to the computer cover ❷.

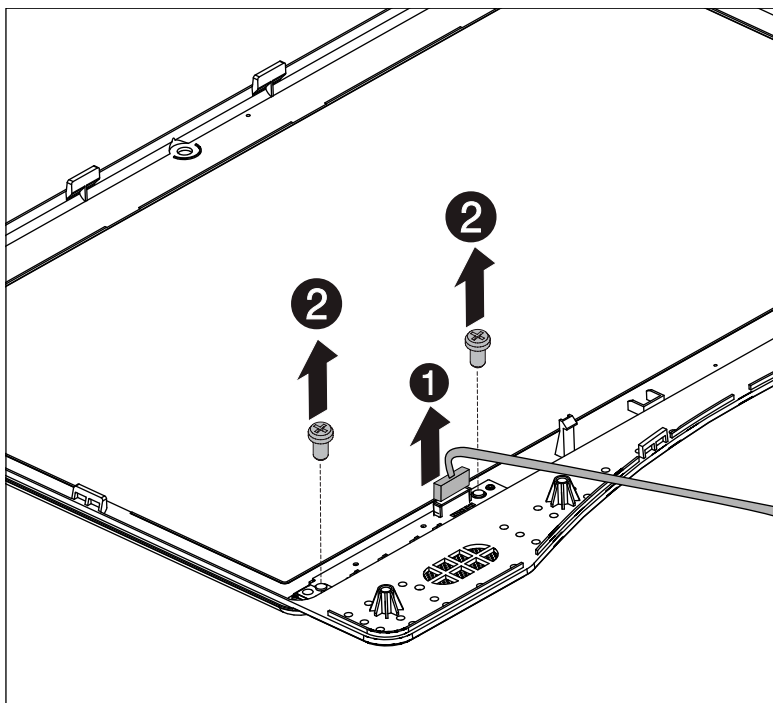

5. Remove the power board.

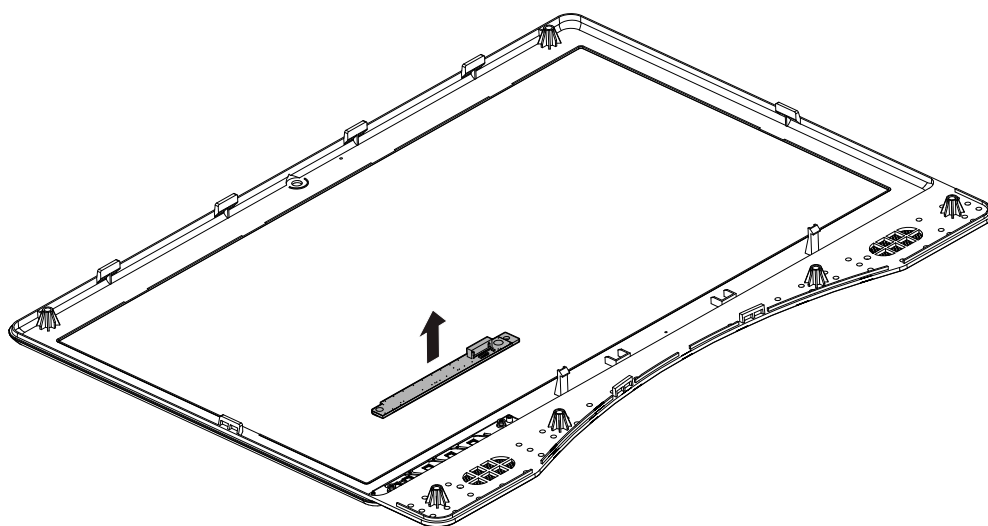


6. Align the screw holes on the power board to the mounting holes on the computer cover.
7. Screw back the two screws on the new power board.
8. Connect the power board cable to the power board.
9. Install the computer cover. Refer to "Completing the installation".



Replacing the LCD panel

To replace the LCD panel


1. Remove the computer cover. Refer to "Removing the computer cover".
2. Remove four screws that hold the LCD panel to the chassis.

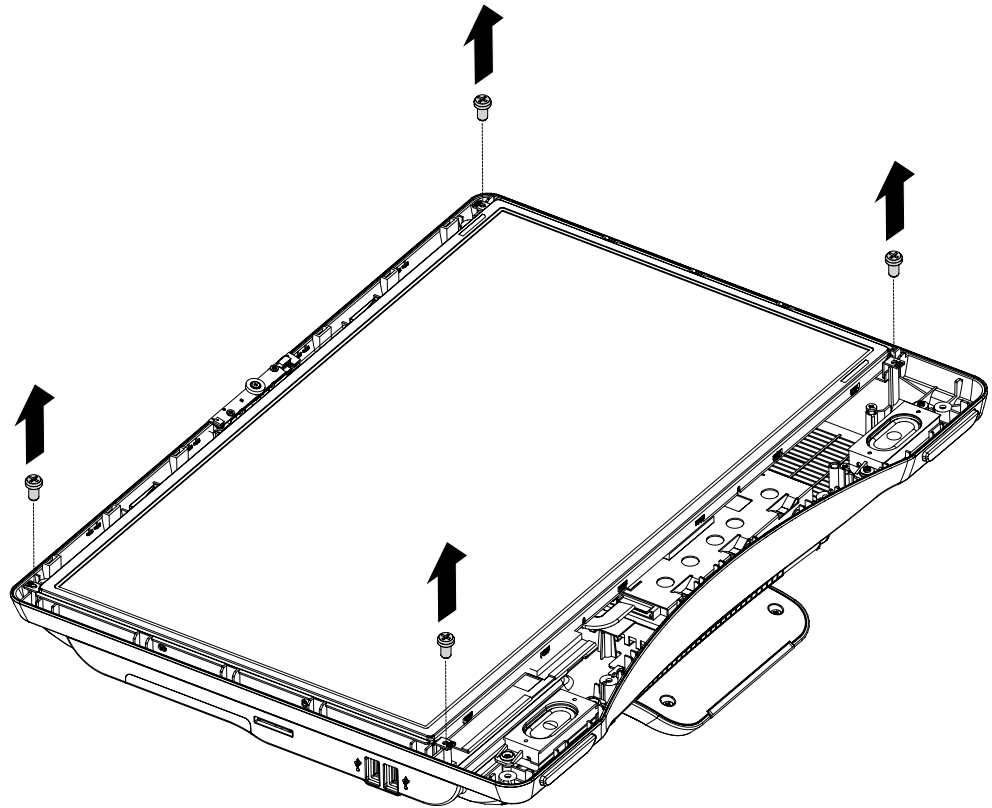

3. Disconnect the LCD panel three cables from the system board ❶ and inverter board ❷.

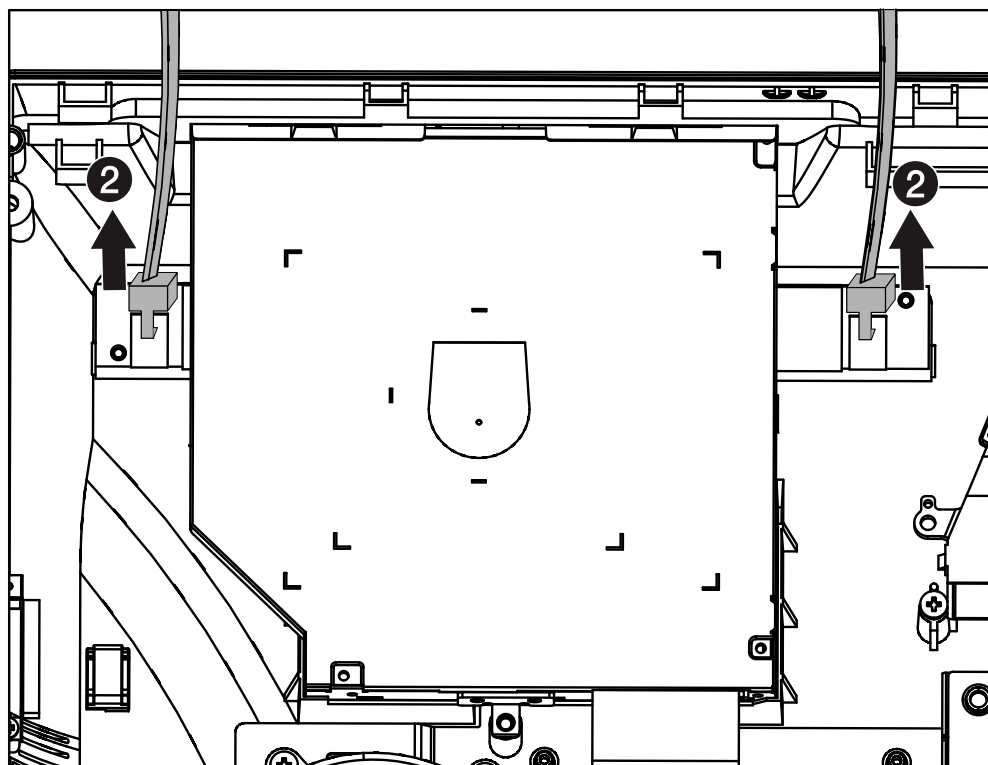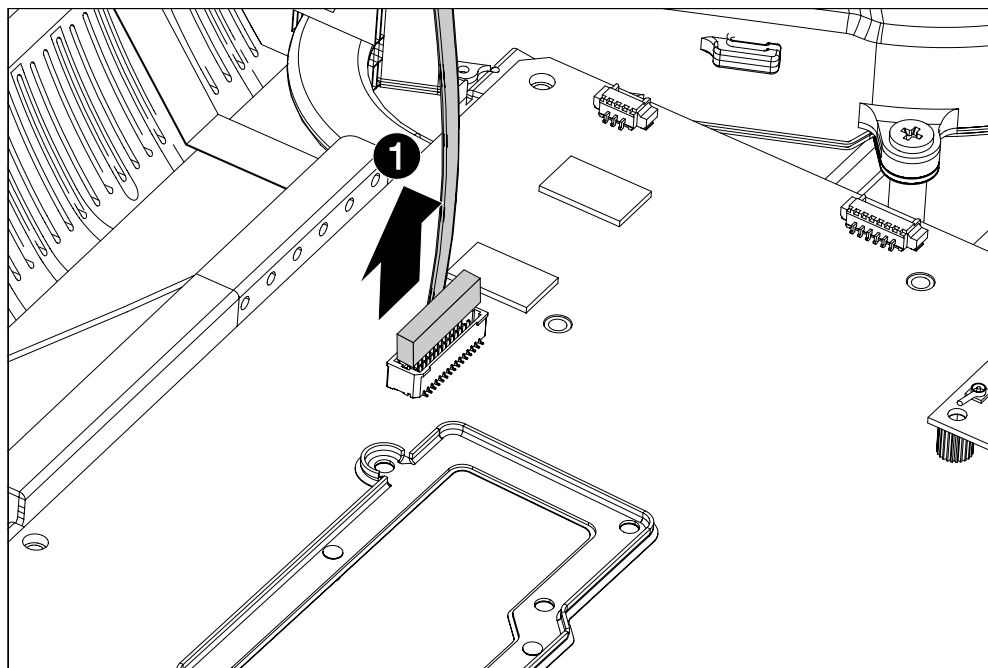

4. Carefully detach the LCD panel from the chassis.

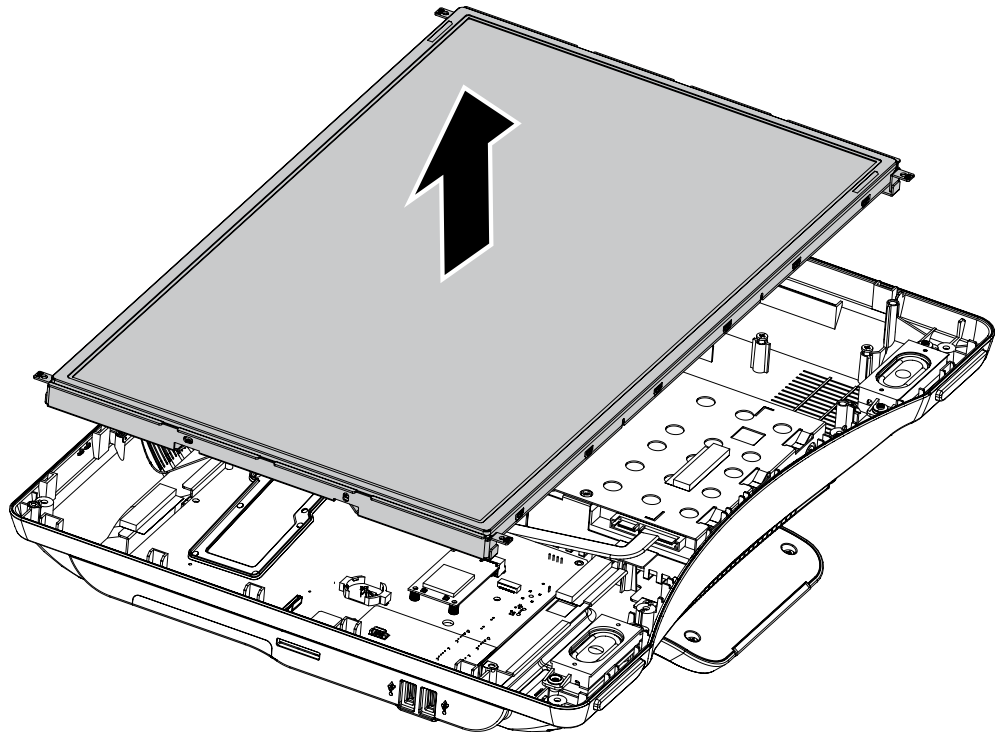

5. Place the new LCD panel to the chassis.

Attention




Use an anti-electrostatic cloth to clean the LCD panel before installing it to the chassis. You may dip a little alcohol if the LCD panel is dirty.

6. Screw back the four screws on the LCD panel.
7. Install the computer cover. Refer to "Completing the installation".


Replacing the speaker system

To replace the left and right speakers

1. Remove the computer cover. Refer to "Removing the computer cover".
2. Remove the LCD panel. Refer to steps 2 to 4 of the Replacing the LCD panel section.
3. Remove the four screws that secure the left and right speakers to the chassis.

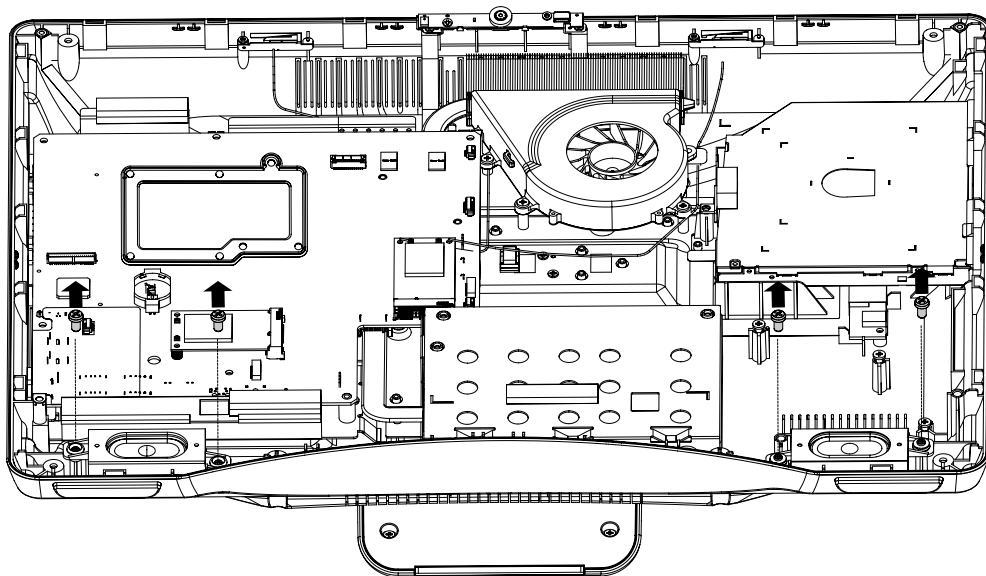

4. Disconnect the speakers cable from the system board ❶, and pull out the left and right speakers from the chassis ❷.

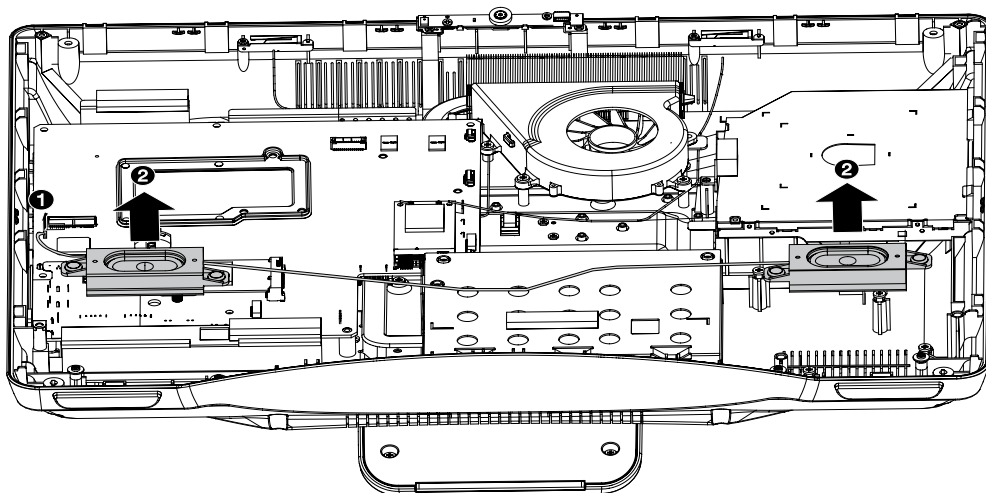


5. Align then insert the new speakers to the chassis.
6. Install the LCD panel. Refer to steps 5 to 6 of the "Replacing the LCD panel" section.
7. Install the computer cover. Refer to "Completing the installation".

Replacing the hard disk drive


To replace the hard disk drive

1. Remove the computer cover. Refer to "Removing the computer cover".
2. Remove the LCD panel. Refer to steps 2 to 4 of the "Replacing the LCD panel" section.


3. Disconnect the data and power cables from the hard disk drive.

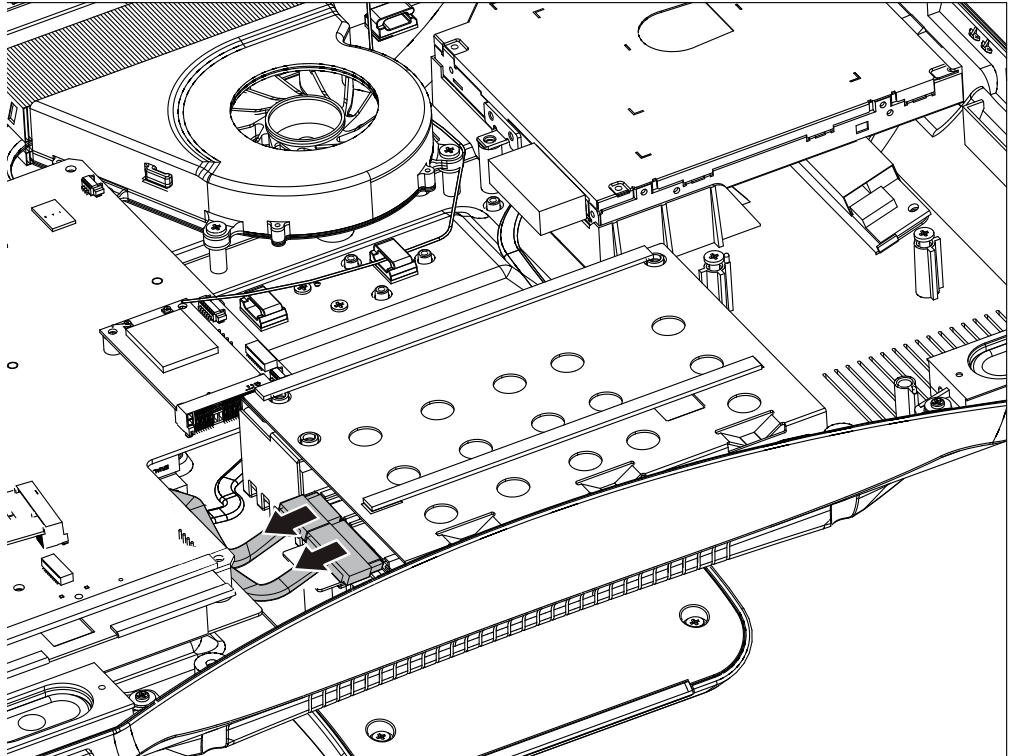


4. Remove the screw that secures the hard disk drive to the chassis.

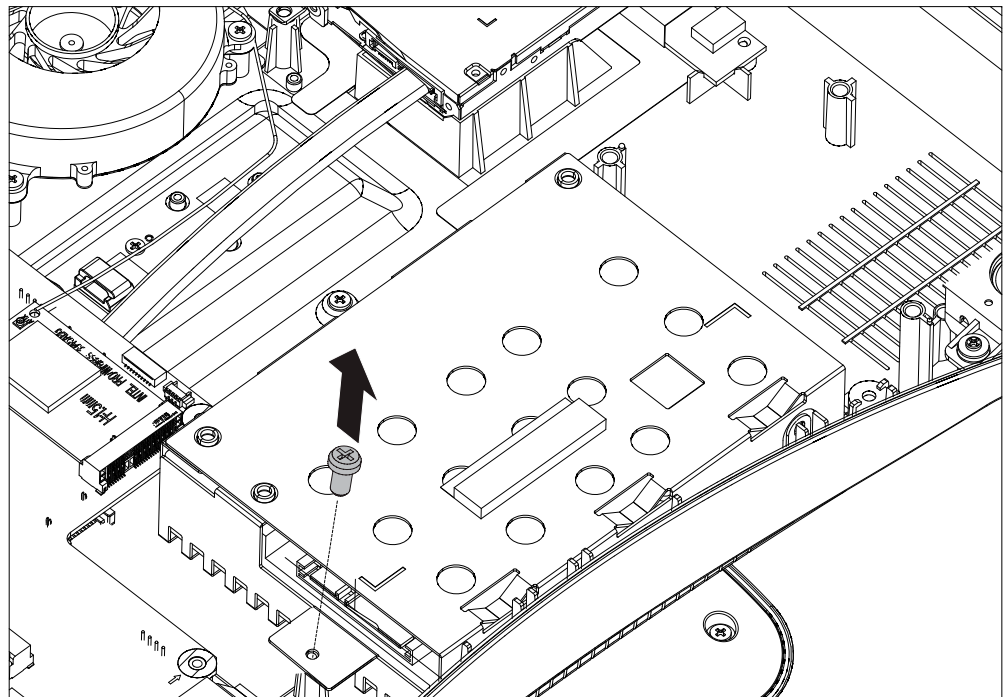


5. Pull out the hard disk drive from the chassis.

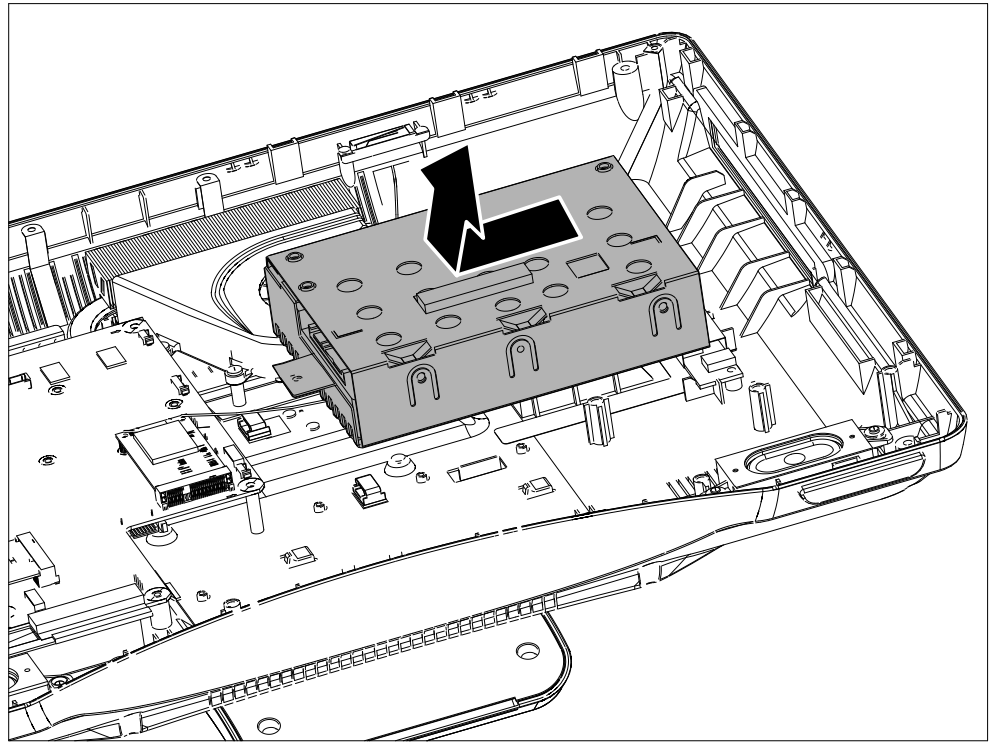

6. Remove the four screws that secure the hard disk drive to the drive bay.

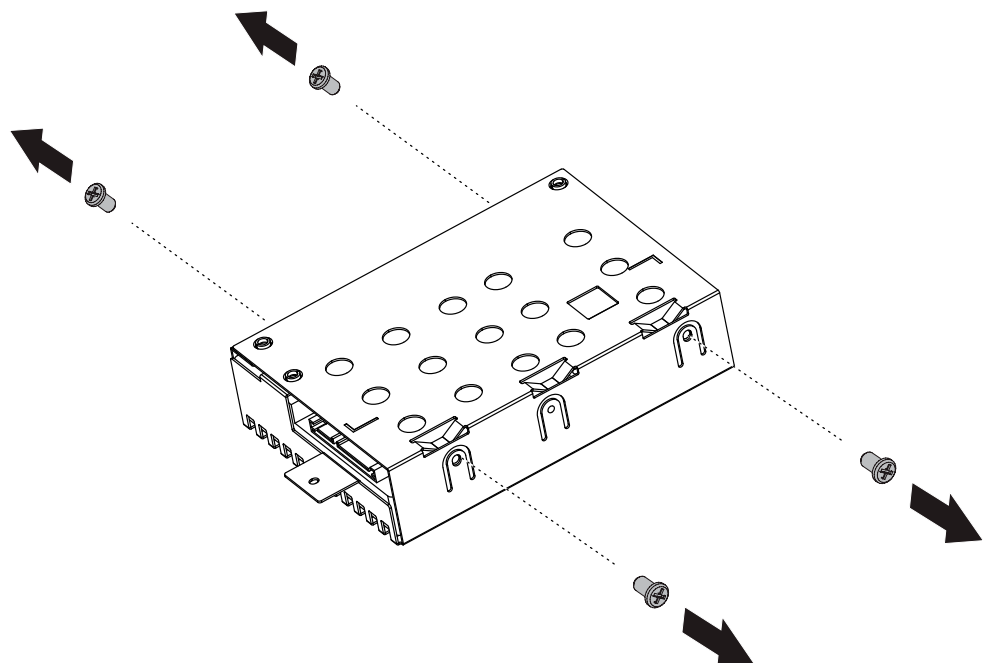

7. Slide the hard disk drive out of the drive bay.

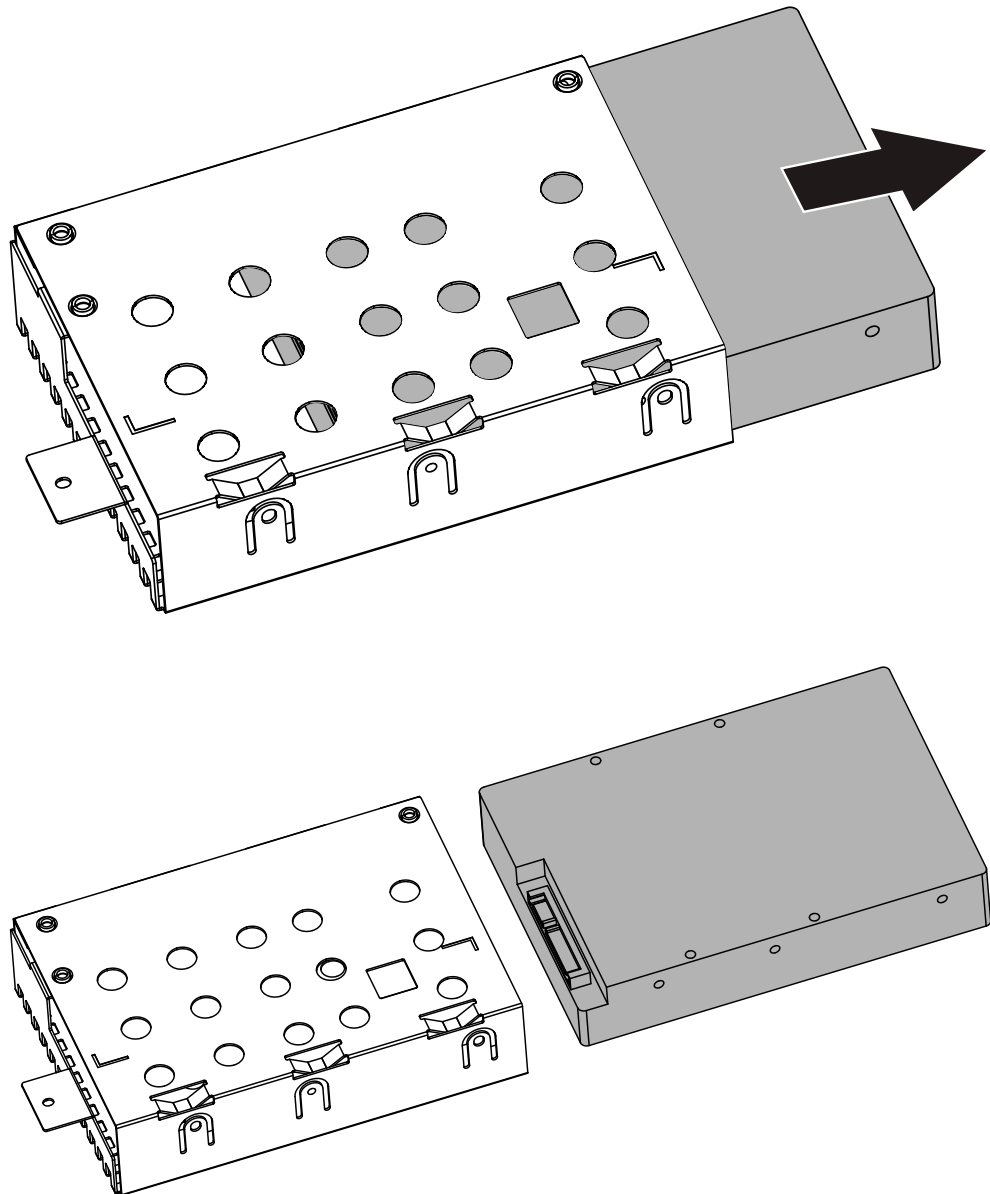


8. Install the new hard disk drive.
 - (1.) Insert the new hard disk drive into the drive bay.
 - (2.) Screw back the four screws on the drive bay.
9. Screw back the hard disk drive bay back to the chassis.
10. Connect the data and power cables back to the hard disk drive.
11. Install the LCD panel. Refer to steps 5 to 6 of the "Replacing the LCD panel" section.
12. Install the computer cover. Refer to "Completing the installation" .


Replacing an optical drive

To replace an optical drive


1. Remove the computer cover. Refer to "Removing the computer cover".
2. Remove the LCD panel. Refer to steps 2 to 4 of the "Replacing the LCD panel" section.
3. Remove the screw that secures the optical drive to the chassis.

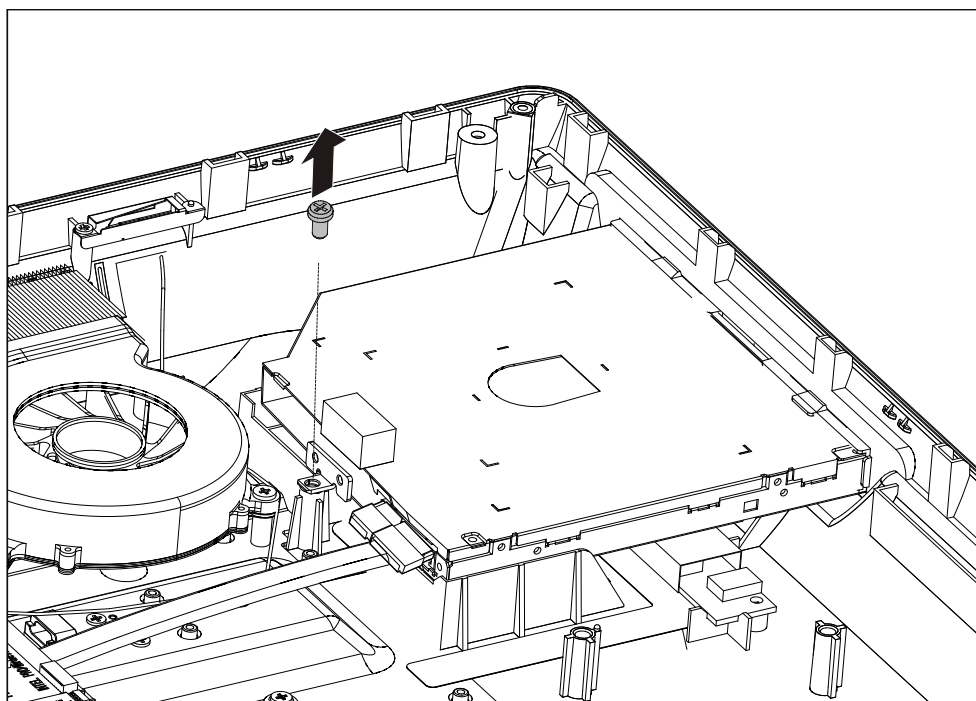


4. Disconnect one end of the ODD data and power cables from the rear of the optical drive.

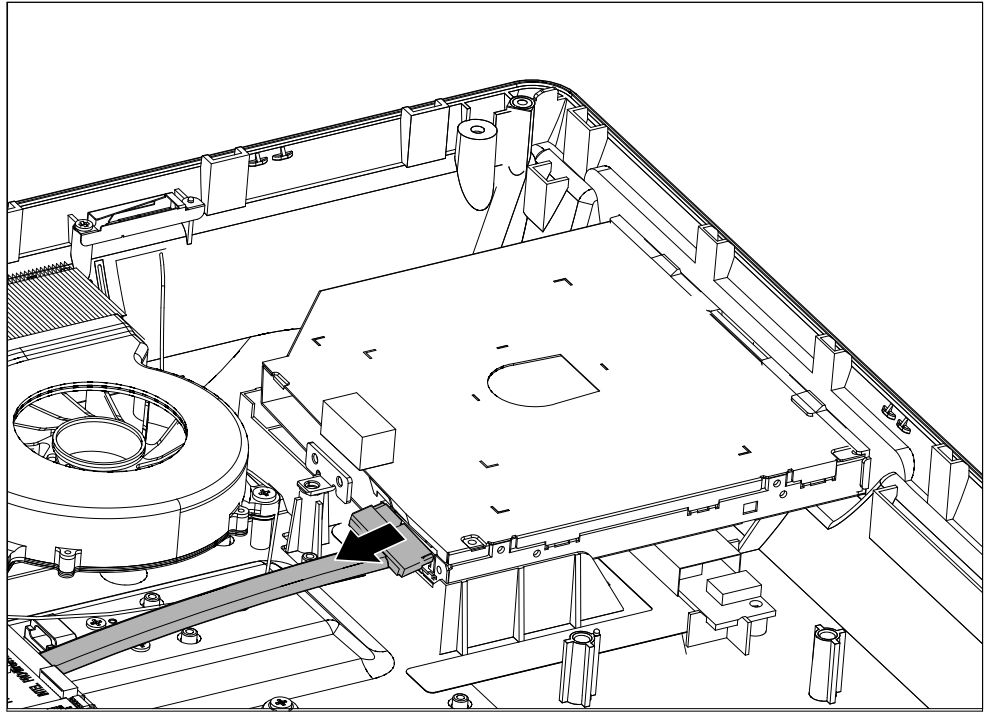

5. Slide the optical drive out of the drive bay.

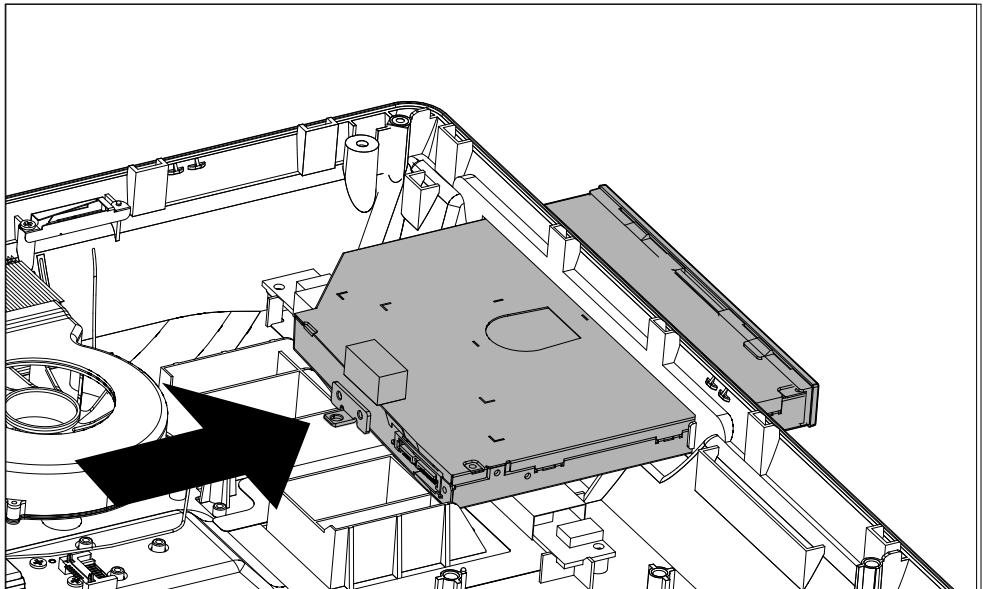

6. Remove the two screws that secure the optical drive to the metal bracket.

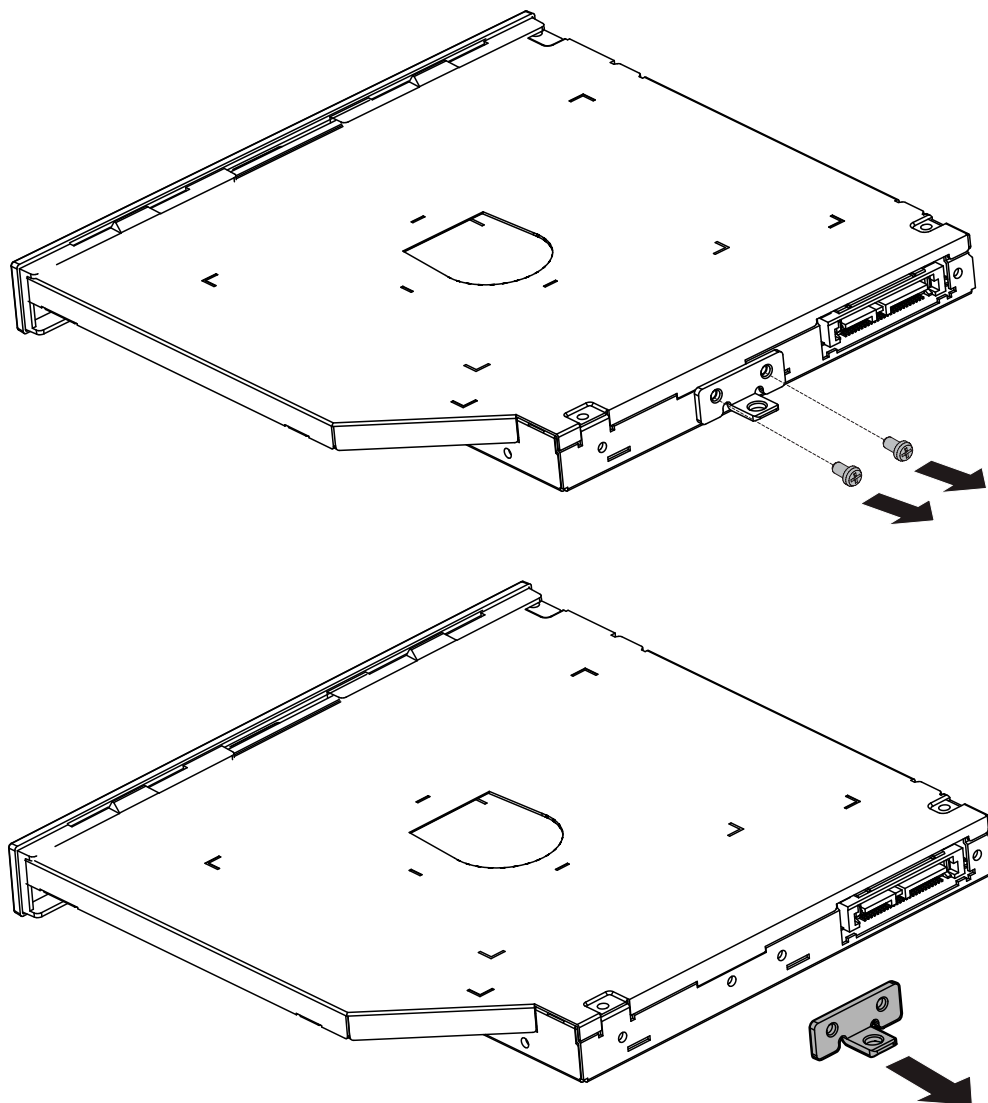

7. Screw back the metal bracket to the new optical drive.
8. Slide the new optical drive into the drive bay and screw the optical drive back to the chassis.
9. Connect the ODD data and power cables to the optical drive.
10. Install the LCD panel. Refer to steps 5 to 6 of the "Replacing the LCD panel" section.
11. Install the computer cover. Refer to "Completing the installation".


Replace the Inverter board

To replace the inverter board


1. Remove the computer cover. Refer to "Removing the computer cover".
2. Remove the LCD panel. Refer to steps 2 to 4 of the "Replacing the LCD

panel" section.

3. Remove the optical drive. Refer to the steps 3 to 5 of the "Replacing the optical drive" section.
4. Disconnect the inverter board cable from the inverter board ❶ and remove the two screws that secure the inverter board to the chassis ❷.

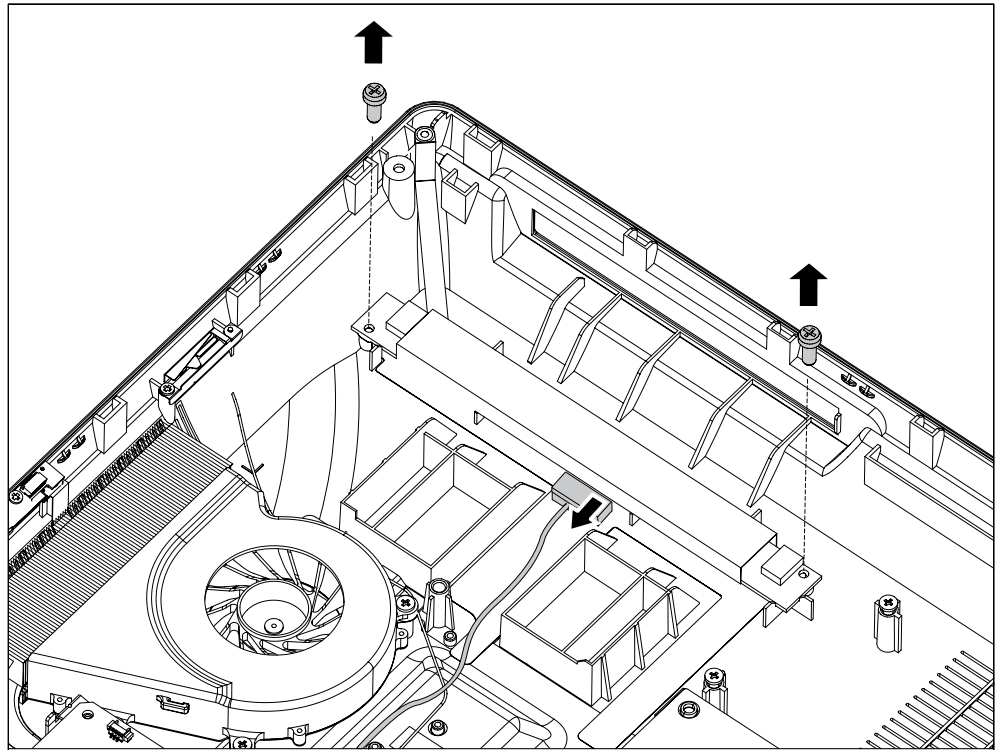

5. Pull the inverter board away from the chassis.

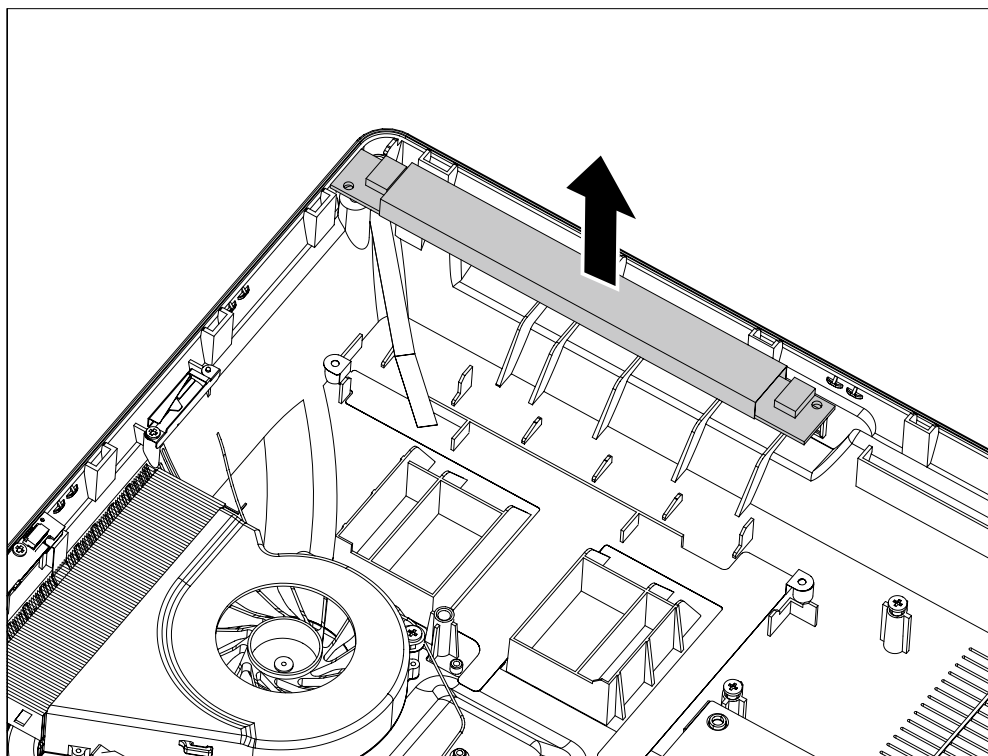


6. Align then insert the new inverter board to the chassis.
7. Screw back the two screws on the inverter board.
8. Connect the inverter board cable to the inverter board.
9. Install the optical drive. Refer to the steps 8 to 9 of the "Replacing the optical drive" section.
10. Install the LCD panel. Refer to steps 5 to 6 of the "Replacing the LCD panel" section.
11. Install the computer cover. Refer to "Completing the installation".


Replacing the system fan

To replace the system fan

1. Remove the computer cover. Refer to "Removing the computer cover".
2. Remove the LCD panel. Refer to steps 2 to 4 of the "Replacing the LCD panel" section.
3. Remove the four screws that secure the system fan to the chassis **1** and disconnect the system fan cable from the system board **2**.

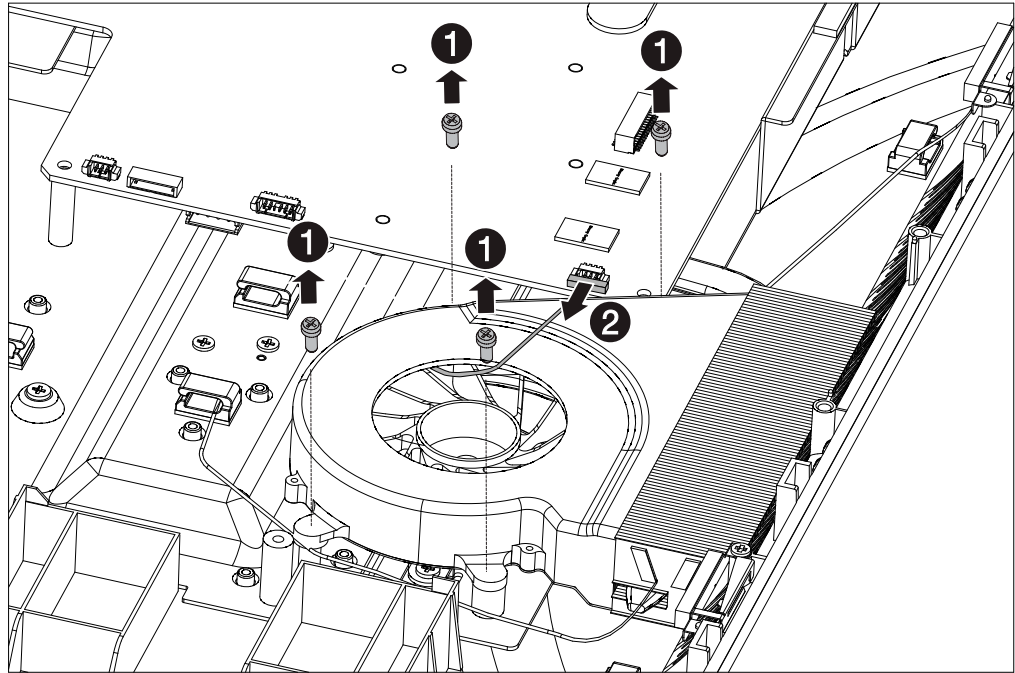

4. Pull the system fan away from the chassis.

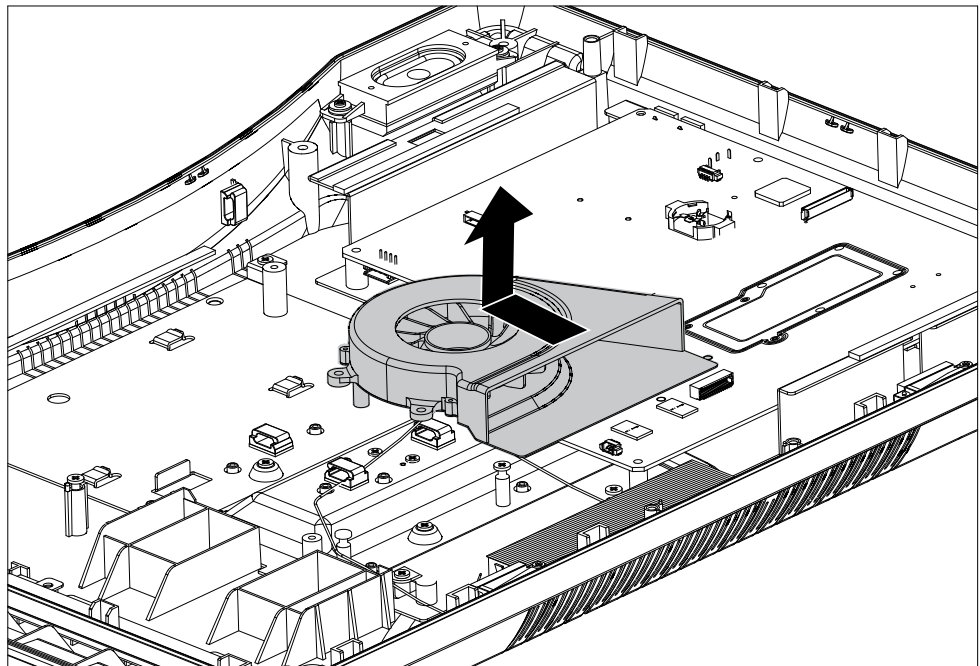

5. Align the four screw holes on the new system fan to the four mounting holes on the chassis.
6. Insert and tighten the four screws to secure the system fan.
7. Connect the system fan cable to the system board.
8. Install the LCD panel. Refer to steps 5 to 6 of the "Replacing the LCD


panel” section.

9. Install the computer cover. Refer to “Completing the installation”.


Replacing the camera

To replace the camera

1. Remove the computer cover. Refer to “Removing the computer cover”.
2. Remove the LCD panel. Refer to steps 2 to 4 of the “Replacing the LCD panel” section.
3. Remove the two screws that secure the camera to the chassis **1** and disconnect one end of the camera cable from the rear of the camera and the other end of the cable from the system board **2**.

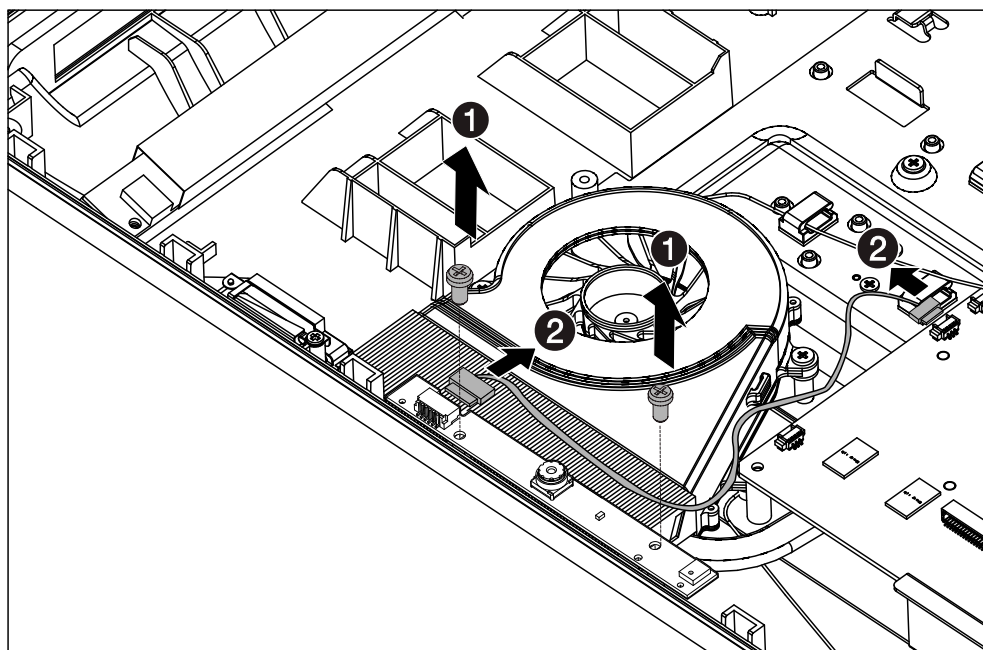

4. Pull the camera away from the chassis.

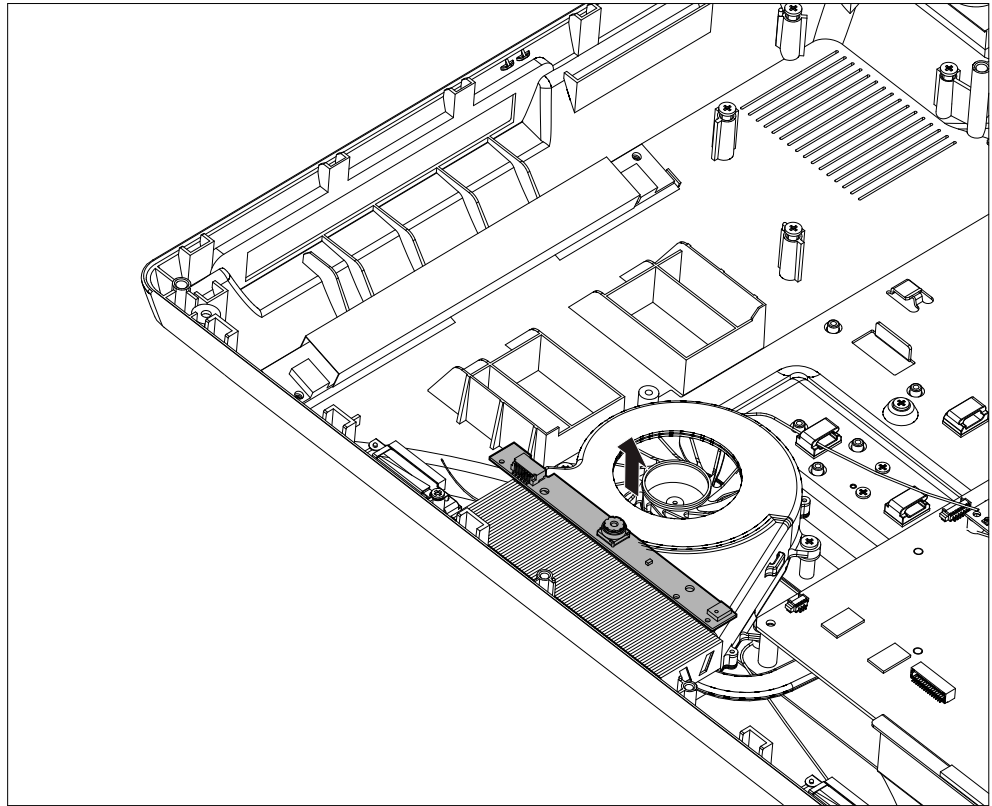


5. Screw back the two screws on the new camera.
6. Connect the camera cable to the camera and the system board.
7. Install the LCD panel. Refer to steps 5 to 6 of the "Replacing the LCD panel" section.
8. Install the computer cover. Refer to "Completing the installation".


Replacing the wireless card

To replace the wireless card

1. Remove the computer cover. Refer to "Removing the computer cover".
2. Remove the LCD panel. Refer to steps 2 to 4 of the "Replacing the LCD panel" section.
3. Disconnect the two antenna cables from the wireless card ❶.
4. Remove the two screws that secure the wireless card to the system board ❷.

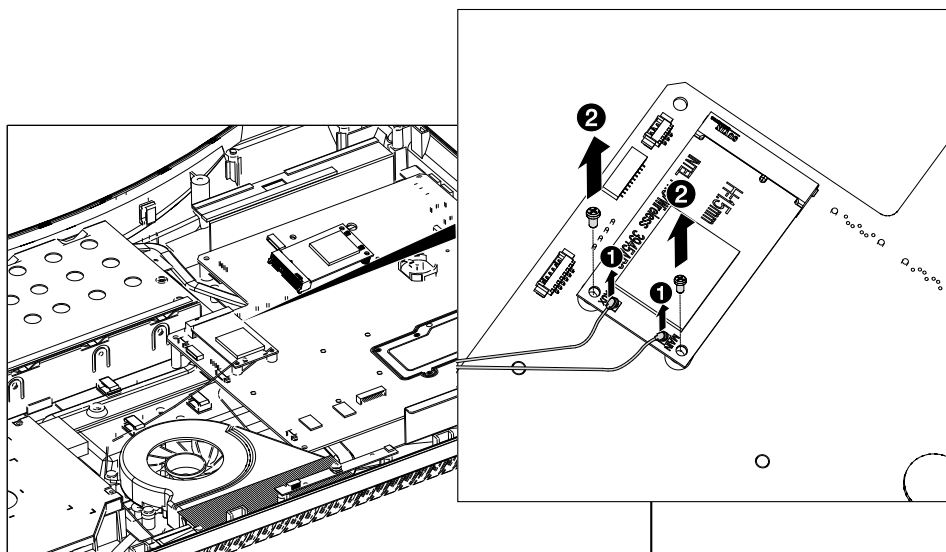

5. Detach the wireless card from the wireless card connector.

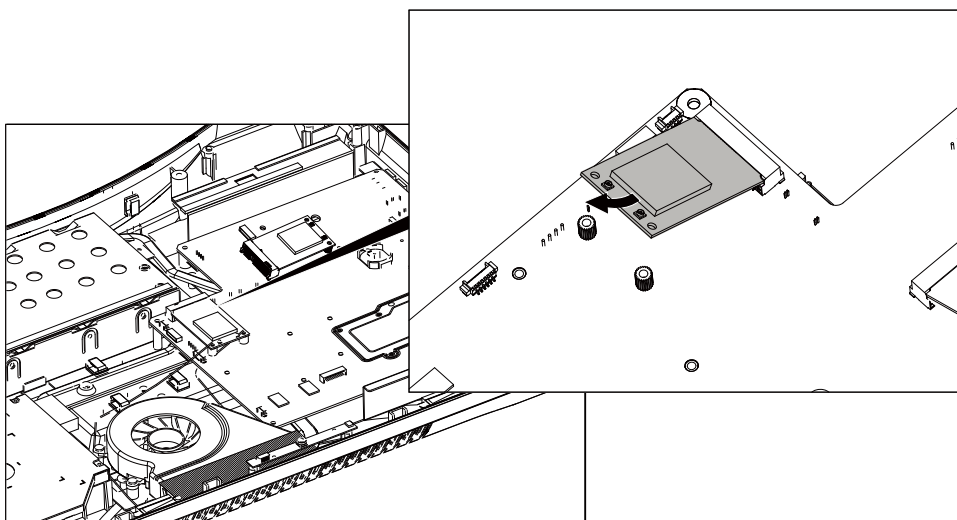


6. Align then insert the new wireless card to the wireless card connector.
7. Screw back the two screws on the wireless card.
8. Connect the two antenna cables to the wireless card.
9. Install the LCD panel. Refer to steps 5 to 6 of the "Replacing the LCD panel" section.
10. Install the computer cover. Refer to "Completing the installation" .

Replacing the TV tuner card


To replace the system board

1. Remove the computer cover. Refer to "Removing the computer cover".

2. Remove the LCD panel. Refer to steps 2 to 4 of the “Replacing the LCD panel” section.
3. Disconnect the antenna cable from the TV tuner card **1**.
4. Remove the two screws that secure the TV tuner card to the system board **2**.

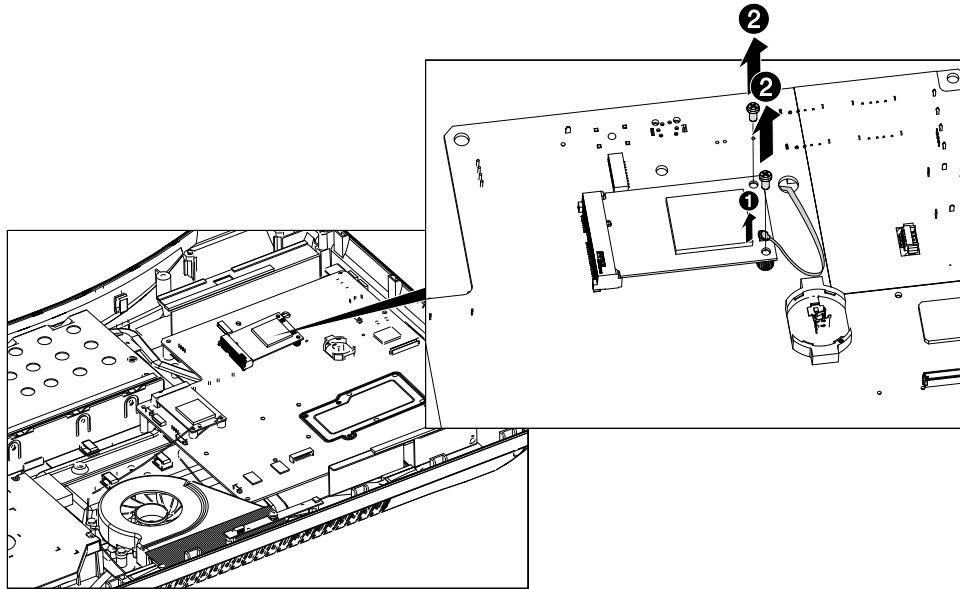

5. Detach the TV tuner card from the TV tuner card connector.

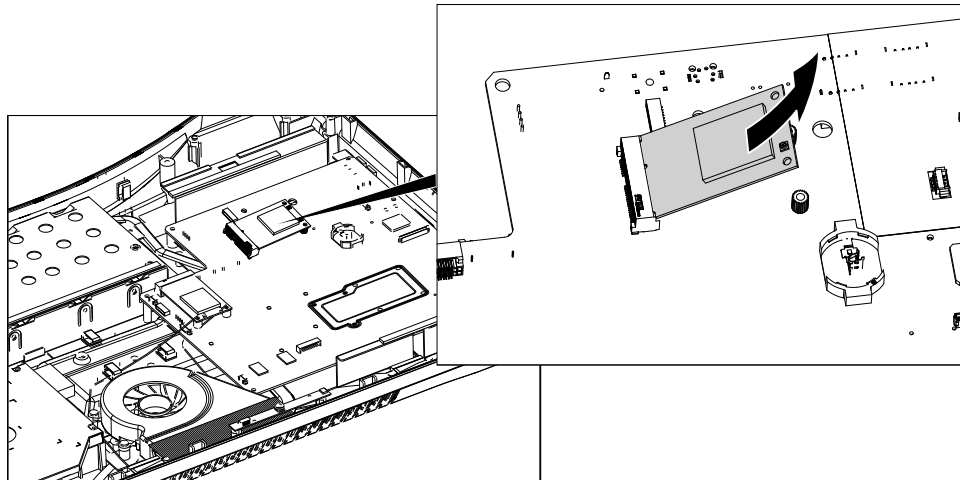


6. Align then insert the new TV tuner card to the TV tuner connector.
7. Screw back the two screws on the TV tuner card.
8. Connect the antenna cable to the TV tuner card.
9. Install the LCD panel. Refer to steps 5 to 6 of the “Replacing the LCD panel” section.
10. Install the computer cover. Refer to “Completing the installation”.


Replacing the CPU heat sink

To replace the CPU heat sink


1. Remove the computer cover. Refer to “Removing the computer cover”.
2. Remove the LCD panel. Refer to steps 2 to 4 of the Replacing the LCD panel section.
3. Disconnect all the cables from the upside of the system board.
4. Remove the eight screws that secure the system board to the chassis.

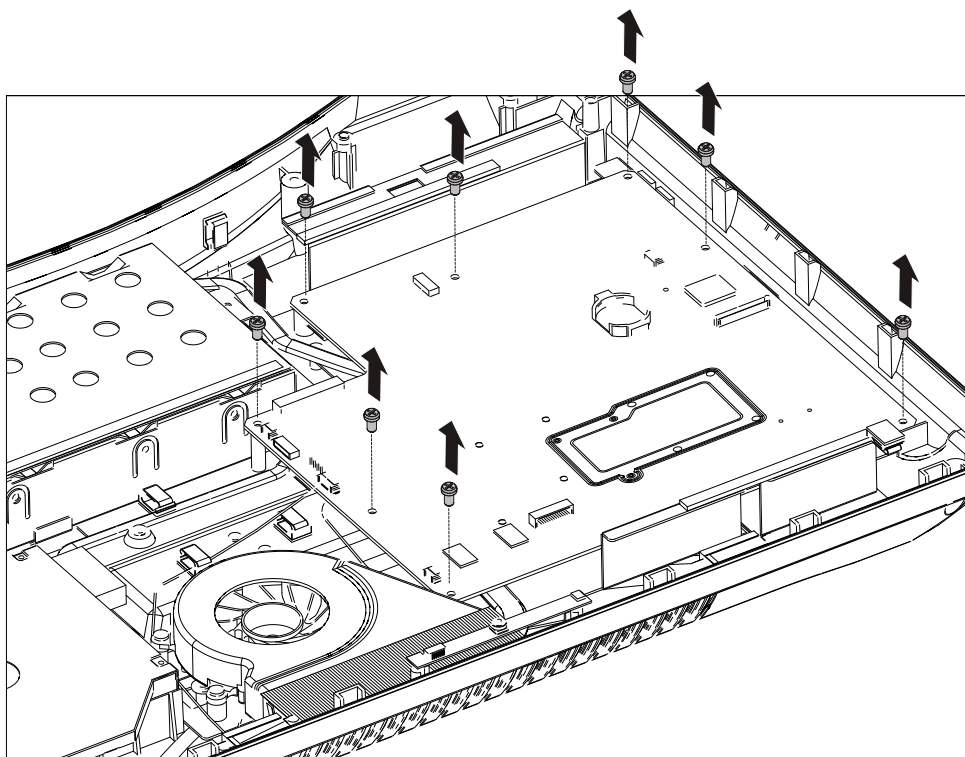


5. Pull the system board away from the chassis and disconnect all the cables away from the underside of the system board.

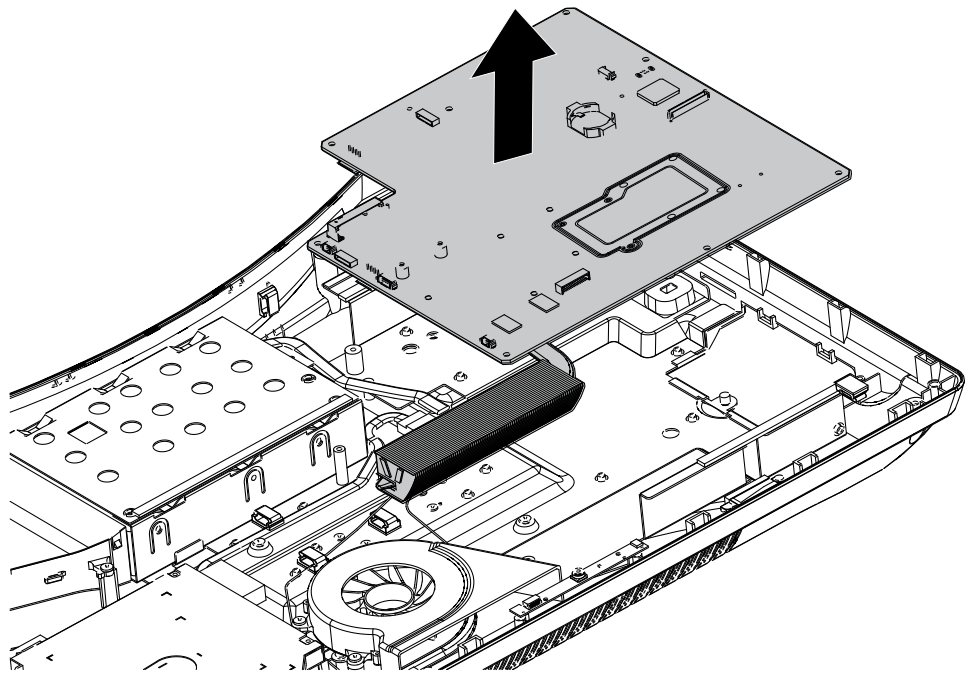

6. Place the system board upside down on a flat surface.
7. Loosen the seven screws that secure the CPU heat sink to the chassis.

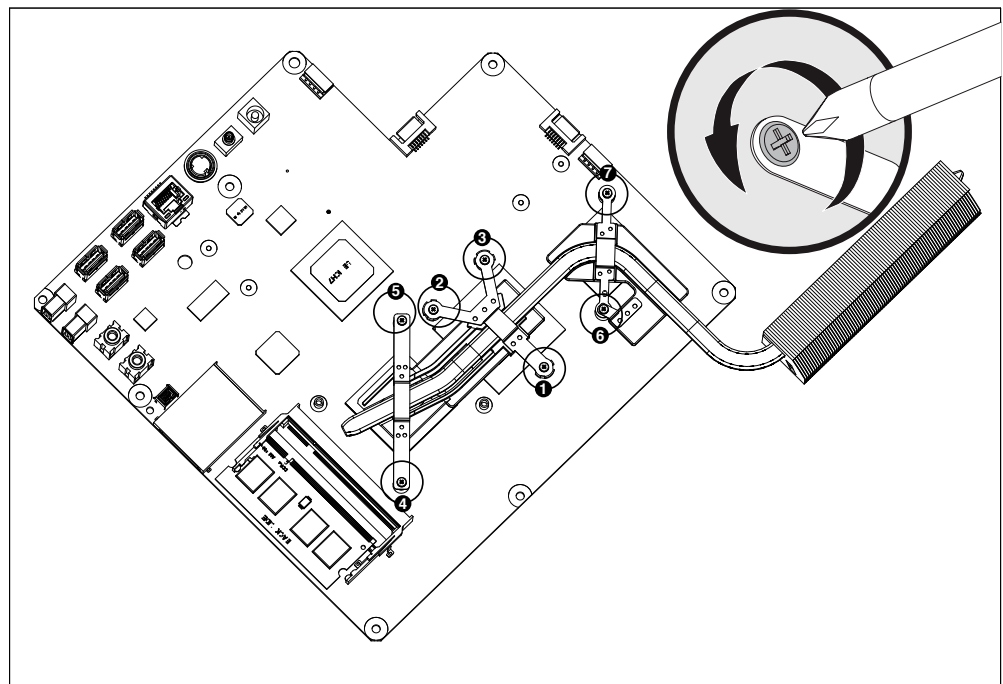

8. Pull out the heat sink from the CPU.

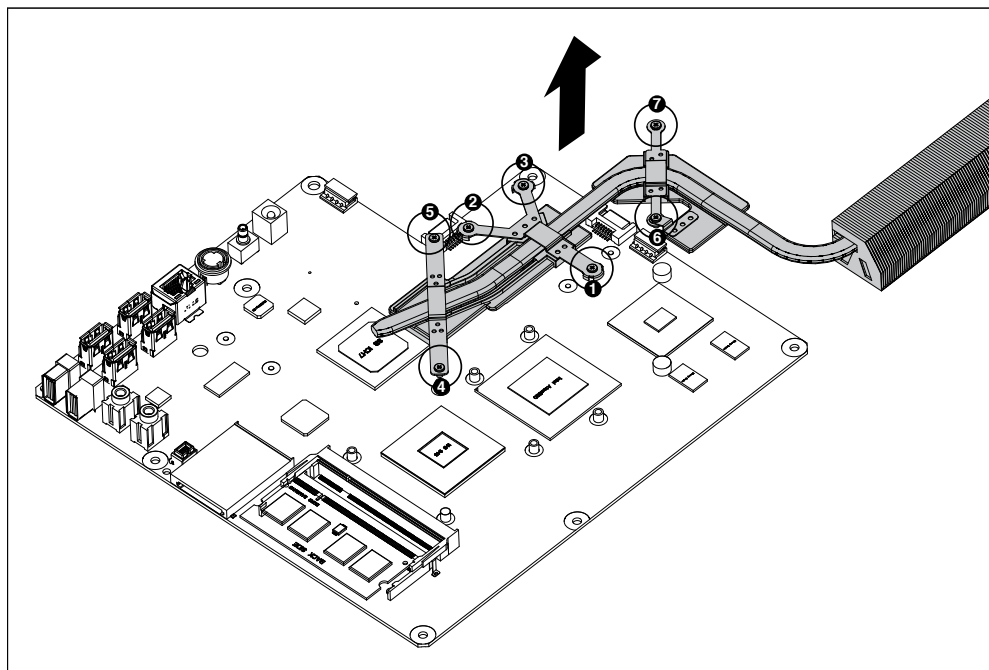


9. Set the new heat sink on the CPU, aligning the seven screws in the heat sink with the screw sockets in the chassis.
10. Tighten the seven screws on the heat sink.
11. Connect related cables to the underside of the system board.
12. Place the system board upside down.
13. Place the system board into the chassis, aligning the screw holes on the system board with the mounting holes on the chassis.
14. Screw back the eight screws on the system board.
15. Connect related cables to the upside of the system board.
16. Install the LCD panel. Refer to steps 5 to 6 of the "Replacing the LCD panel" section.
17. Install the computer cover. Refer to "Completing the installation".

Replacing the system board


To replace the system board

1. Remove the computer cover. Refer to "Removing the computer cover".
2. Remove the LCD panel. Refer to steps 2 to 4 of the "Replacing the LCD panel" section.
3. Remove the wireless card. Refer to the steps 3 to 5 of the "Replacing the wireless card" section.
4. Remove the TV tuner card. Refer to the steps 3 to 5 of the "Replacing the TV tuner card" section.

5. Disconnect all the cables from the upside of the system board.
6. Remove the eight screws that secure the system board to the chassis.

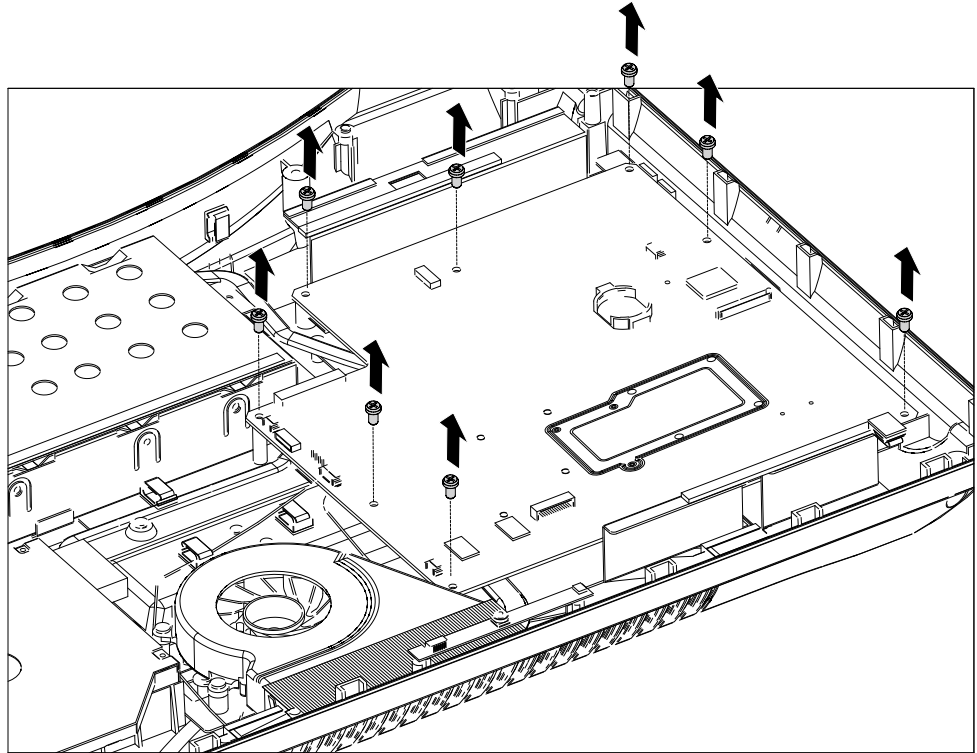

7. Pull the system board away from the chassis and disconnect all the cables away from the underside of the system board.

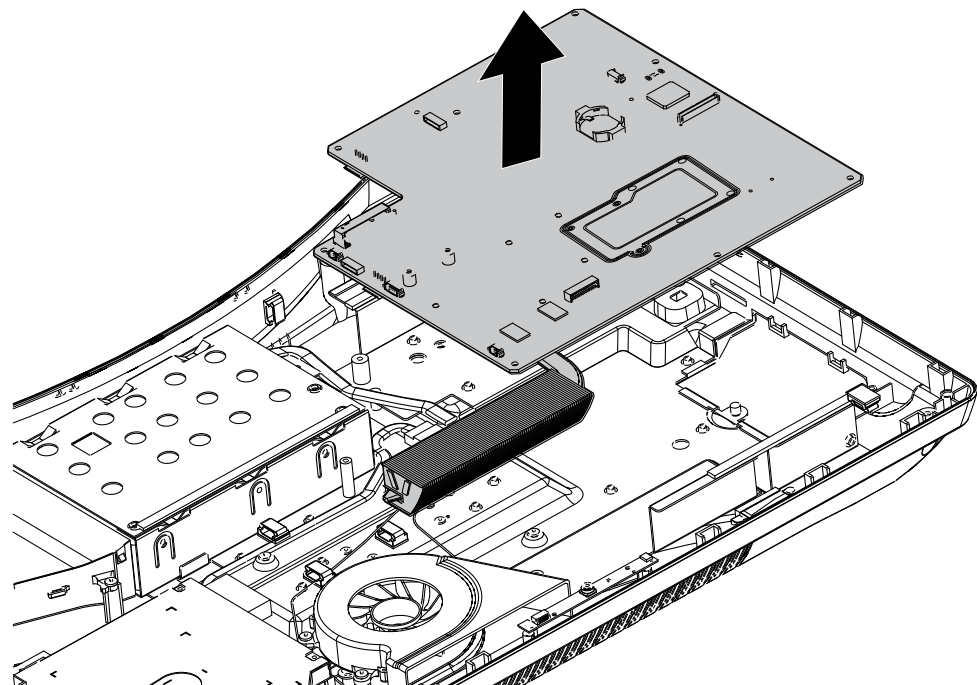

8. Place the system board upside down on a flat surface.
9. Remove the CPU heat sink. Refer to the steps 3 to 8 of the “Replacing the CPU heat sink” section.
10. Remove the memory module. Refer to the step 6 of the “Replacing a memory module” section.
11. Install the memory module on the new system board. Refer to the step 7 of the “Replacing a memory module” section.
12. Install the CPU heat sink on the new system board. Refer to the steps 9 to 10 of the “Replacing the CPU heat sink” section.
13. Connect related cables to the underside of the system board. Place the new system board upside down.
14. Place the new system board into the chassis, aligning the screw holes on the system board with the mounting holes on the chassis.
15. Screw back the eight screws on the new system board.
16. Install the TV tuner card on the upside of the new system board. Refer to the step 6 to 8 of the “Replacing the TV tuner card” section.
17. Install the wireless card on the upside of the new system board. Refer to the step 6 to 8 of the “Replacing the wireless card” section.
18. Connect related cables to the upside of the system board.
19. Install the LCD panel. Refer to steps 5 to 6 of the “Replacing the LCD panel” section.
20. Install the computer cover. Refer to “Completing the installation”.

Replacing the keyboard and mouse

Attention



Do not remove the computer cover or attempt any repair before reading the “Important safety information” in the *Safety and Warranty Guide* that was included with your computer or in the *Hardware Maintenance Manual (HMM)* for the computer. To obtain copies of the *Safety and Warranty Guide* or *HMM*, go to the Support Web site at <http://consumersupport.lenovo.com>.

To replace the keyboard:



1. Remove any media (diskettes, CDs, or memory cards) from the drives, shut down your operating system, and turn off all attached devices and the computer.

2. Unplug all power cords from electrical outlets.
3. Locate the connector for the keyboard. Refer to “Left and right view” and “Rear view”.

Note



Your keyboard might be connected to the standard keyboard connector **1** at the rear of the computer or to a USB connector **2** either side or rear of the computer.

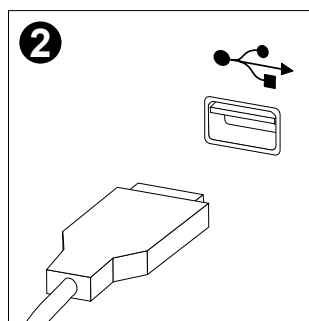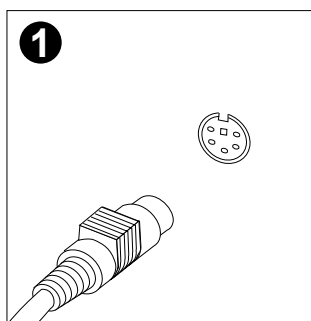

4. Disconnect the failing keyboard cable from the computer and connect the new keyboard cable to the same connector.

Replacing the Mouse

Attention



Do not remove the computer cover or attempt any repair before reading the “Important safety information” in the *Safety and Warranty Guide* that was included with your computer or in the *Hardware Maintenance Manual (HMM)* for the computer. To obtain copies of the *Safety and Warranty Guide* or *HMM*, go to the Support Web site at <http://consumersupport.lenovo.com>.

To replace the Mouse:


1. Remove any media (diskettes, CDs, or memory cards) from the drives, shut down your operating system, and turn off all attached devices

and the computer.

2. Unplug all power cords from electrical outlets.
3. Locate the connector for the mouse. Refer to "Left and right view" and "Rear view".

Note

Your mouse connected to the USB connector at either side or the rear of the computer.

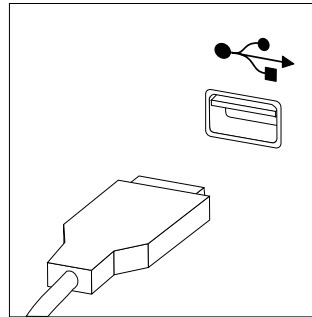

4. Disconnect the failing keyboard cable from the computer and connect the new mouse cable to the same connector.

Replacing the power cord or power adapter

Attention


Do not remove the computer cover or attempt any repair before reading the "Important safety information" in the *Safety and Warranty Guide* that was included with your computer or in the *Hardware Maintenance Manual (HMM)* for the computer. To obtain copies of the *Safety and Warranty Guide* or *HMM*, go to the Support Web site at <http://consumersupport.lenovo.com>.

To replace the power cord and power adapter:

1. Remove any media (diskettes, CDs, or memory cards) from the drives, shut down your operating system, and turn off all attached devices

and the computer.

2. Locate the connector for the power cord. Refer to "Rear view".

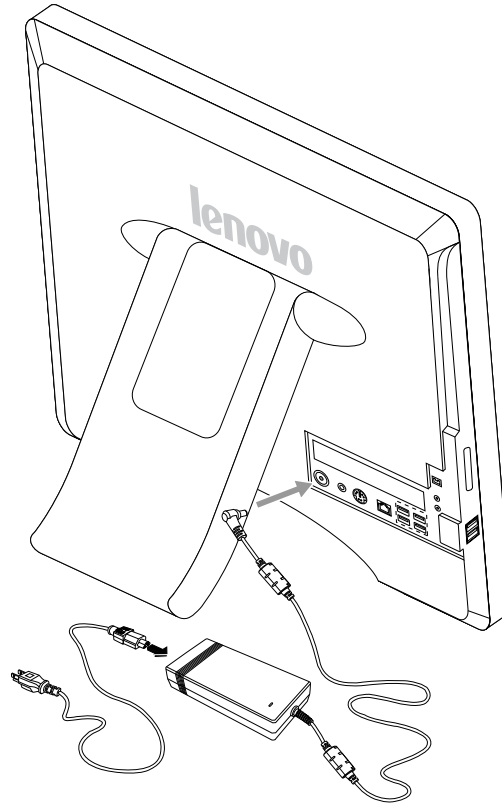

3. Disconnect the failing power cord and adapter from the computer and connect the new power cord and adapter to the same connector.

Completing the installation

After replacing the parts, you need to install the computer cover and reconnect cables, including wired internet and power cords. Also, depending on the parts replaced, you might need to confirm the updated information in the Setup Utility program. Refer to Starting the Setup Utility in the *User Guide* or in the *Hardware Maintenance Manual*.


1. Ensure that all components have been reassembled correctly and that no tools or loose screws are left inside your computer. Refer to "Locating components and connectors" for the location of the various components.
2. Make sure that the cables are routed correctly before replacing the computer cover.

Attention




Keep cables clear of the hinges, sides of the computer chassis.

3. Position the computer cover on the chassis so that the tabs on the cover align with the slots of the chassis.

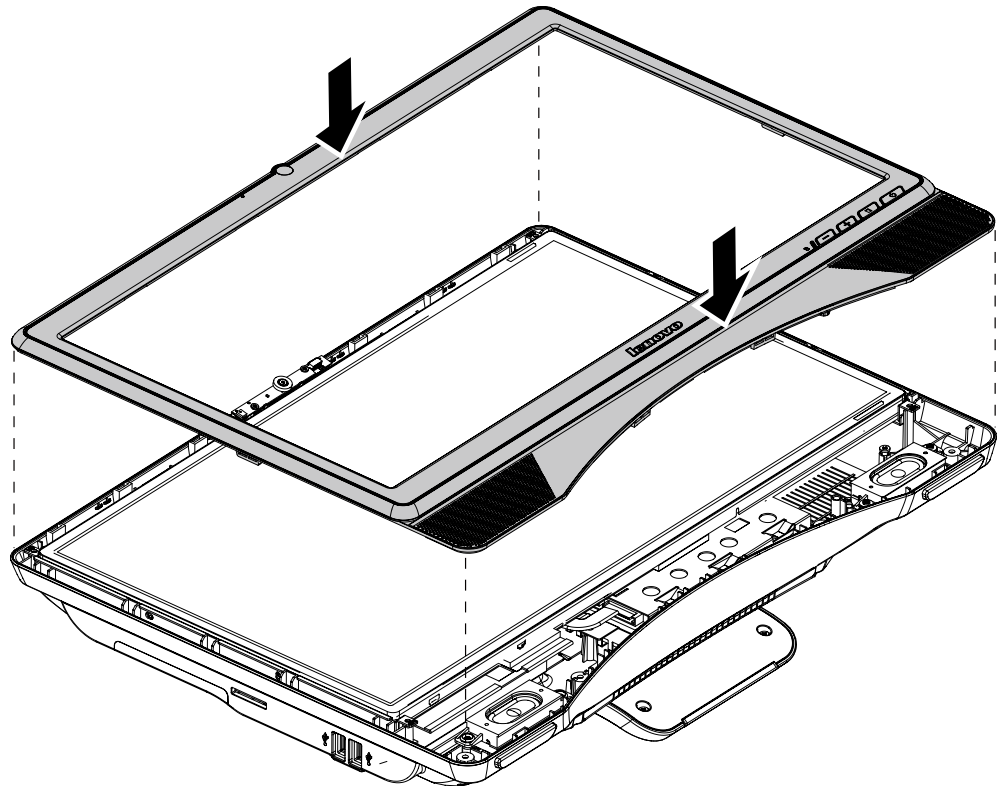

4. Carefully install the cover as shown, until it securely snaps into place.
5. Install and tighten the six screws on the chassis.

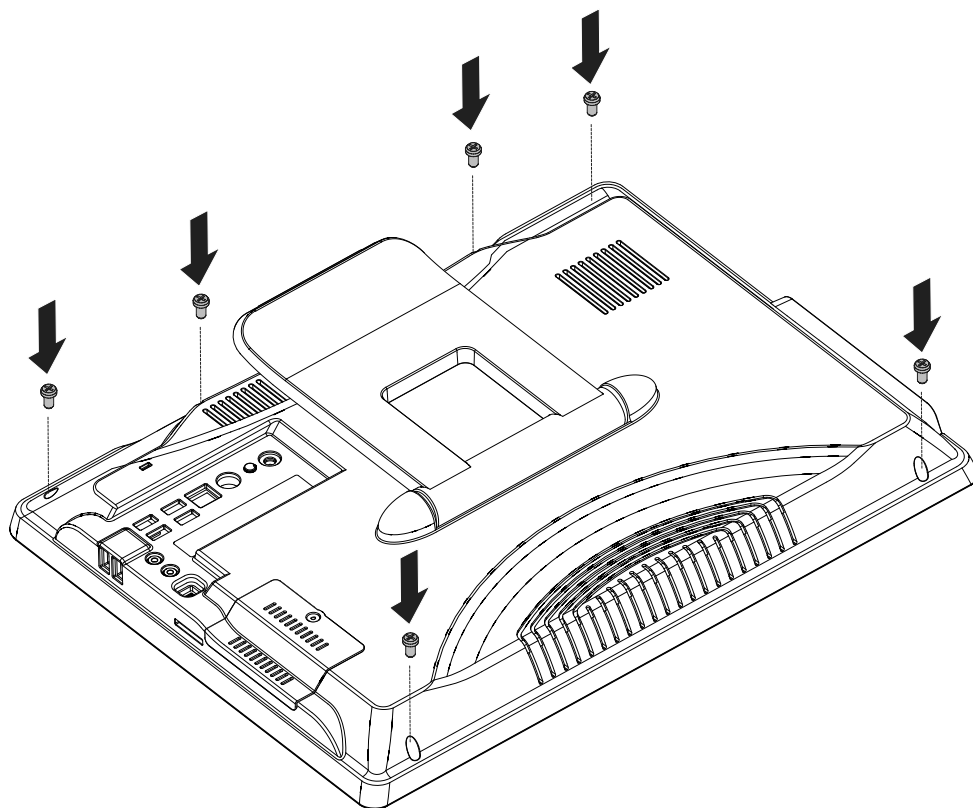

6. Reconnect the external cables and power cords into the computer.
Refer to "Locating components and connectors".

Note



In most areas of the world, Lenovo requires the return of the defective CRU. Information about this will come with the CRU or will come a few days after the CRU arrives.

Additional Service Information



This chapter provides additional information that the service representative might find helpful.

Power management

Power management reduces the power consumption of certain components of the computer such as the system power supply, processor, hard disk drives, and some monitors.

Automatic configuration and power interface (ACPI) BIOS

Being an ACPI BIOS system, the operating system is allowed to control the power management features of the computer and the setting for Advanced Power Management (APM) BIOS mode is ignored. Not all operating systems support ACPI BIOS mode.

Automatic Power-On features

The Automatic Power-On features within the Power Management menu allow you to enable and disable features that turn on the computer automatically.

Wake on LAN: If the computer has a properly configured token-ring or Ethernet LAN adapter card that is Wake on LAN-enabled and there is remote network management software, you can use the Wake on LAN feature. When you set Wake on LAN to Enabled, the computer will turn on when it receives a specific signal from another computer on the local area network (LAN).

Wake Up on Alarm: You can specify a date and time at which the computer will be turned on automatically. This can be either a single event or a daily event.

PCI Wake up: This feature allows PCI cards that support this capability to wake the system.

Statement



Thanks for using Lenovo products.

Carefully read all documents shipped with your computer before you install and use the product for the first time for better use of it. If you fail to operate the product according to instructions and requirements in all the manuals included with your computer, or operate the product inappropriately for reasons such as misunderstanding, Lenovo will not be responsible for any loss caused except those arising from the installation and operations carried out by Lenovo professional service staff.

Lenovo has performed strict collation for all the manuals included with your computer, but we cannot guarantee that it has no mistake and omission.

To provide better service, Lenovo reserves the right to improve and/or modify the products and software programs described in all the manuals included with your computer and the content of the manual at any time without additional notice.

All the manuals included with your computer is provided to help you use Lenovo products appropriately, but it does not represent any description of the software/hardware configuration for the product. For the configuration of the product, refer to related contract (if any), product packing list for the product or consult the distributor for the product sales.

The content of all the manuals included with your computer is protected by copyright laws and rules. All the manuals included with your computer may not be reproduced or transcribed by any means, or transmitted through wired or wireless network in any form, or translated into any language without prior written permission of Lenovo Copyright ©2008 Lenovo All rights reserved.

The software interface and hardware configuration involved in all the manuals included with your computer depends on the actual configuration of the computer you purchase.

Welcome to contact us for any inconsistency between the product and all the manuals included with your computer. For the latest information or any questions or comments, contact or visit Lenovo website:

Service website: <http://consumersupport.lenovo.com>

	Lenovo is the registered trademark of Lenovo (Beijing) Co., Ltd.
	Microsoft is the registered trademark of Microsoft.
	Microsoft Windows XP is the Windows XP-registered trademark of Microsoft Corporation.
	Intel Inside is the registered trademark of Intel.
AMD and the logo, AMD Athlon™, and AMD Opteron™	AMD, the AMD Arrow logo, ATI, the ATI logo, AMD Athlon, AMD LIVE, AMD Opteron, AMD Phenom, AMD Sempron, Avivo, Catalyst, Cool'n'Quiet, CrossFireX, Overdrive, Powerplay, Radeon, The Ultimate Visual Experience, and combinations thereof are trademarks of Advanced Micro Devices, Inc. in the United States and/or other jurisdictions.

This is description of trademarks or registered trademarks of Lenovo and its partners.

Other registered trademarks mentioned in all the manuals included with your computer belong to the specific company respectively.

All rights reserved.

All the manuals included with your computer is protected by copyright laws. Any part of all the manuals included with your computer may not be reproduced or copied by any means without prior written permission of Lenovo.

Names or marks of certain companies mentioned in all the manuals included with your computer or this document are only used to state trademark rights, and they will not necessarily indicate that related software or hardware is included. The concrete configuration of the product depends on the description of packing list.